



**835/855/875/895
TRACTORS
OPERATOR'S MANUAL 1983**

**835 Serial Numbers 83583036769 and on
875 Serial Numbers 87583057906 and on**

42083542

Reprint

International Operator Symbols

























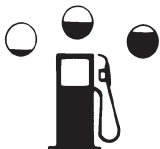



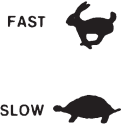


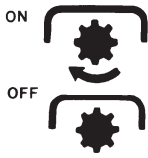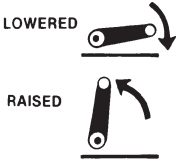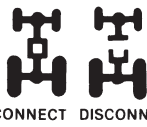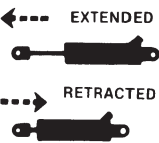

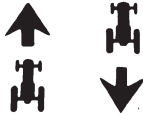







			N		
ENGINE r/min	ENGINE OIL PRESSURE	ENGINE COOLANT TEMPERATURE	NEUTRAL	PARK	SEAT BELT
					
TRANSMISSION OIL TEMPERATURE	TRANSMISSION OIL FILTER	TRANSMISSION	TRANSMISSION OIL PRESSURE	AMMETER OR GENERATOR LIGHT	PARKBRAKE
					
DIFFERENTIAL LOCK	POWER TAKE-OFF	ROCKSHAFT	AXLE DISCONNECT	REMOTE CYLINDER	STARTER CONTROL
					
TOW	FORWARD REVERSE	VERTICAL MOVEMENT	TURN SIGNALS	HORN	ENGINE SHUTOFF CONTROL
					
LIGHTER	FUEL LEVEL	FUEL	DIPSTICK LOCATION	OIL LEVEL	SPEED RANGE
					
PRESSURIZED OPEN SLOWLY	AIR FILTER	CHOKE	WINDSHIELD WIPER	WINDSHIELD DEFROSTER	HYDRAULIC OIL FILTER
					
CONTINUOUSLY VARIABLE LINEAR	HIGH BEAM HEADLIGHT	WORKLIGHT	HAZARD FLASHER	HYDRAULIC OIL PRESSURE	COOLANT PRESSURE

Table of Contents

835/855/875/895 Tractors

**835 Serial Numbers 83583036769 and on
875 Serial Numbers 87583057906 and on**

1	Safety	1
2	Operation	6
3	Lubrication and Maintenance	25
4	Troubleshooting	52
5	Storage	55
6	Specifications and Schematics	57
7	Index	69



Serial Number Location

IMPORTANT


To obtain the fastest service when ordering parts, remember to:

1. Order part by the correct number
2. State machine model and year
3. Include the serial number of the tractor and engine plates

FRAME

Serial number is stamped on the rear left-hand corner of the front frame.

SERIAL

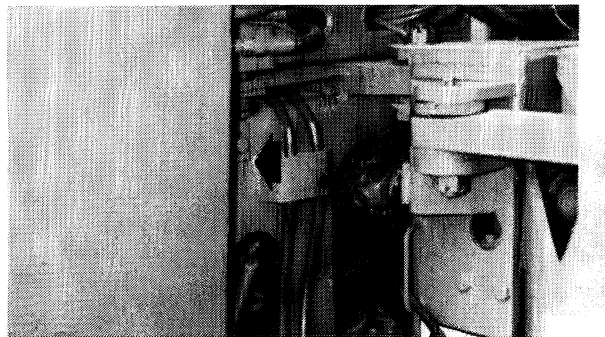


Frame Stamp

TRACTOR

Serial number plate is located at the bottom of the front doorpost.

SERIAL

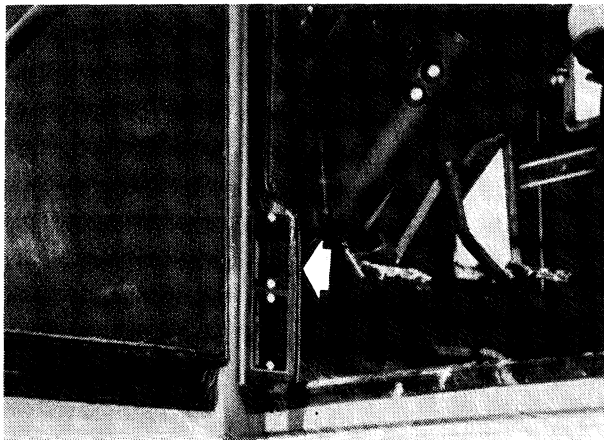


Tractor Plate

ENGINE

Serial plate is located on the engine's left side near the injector pump.

SERIAL

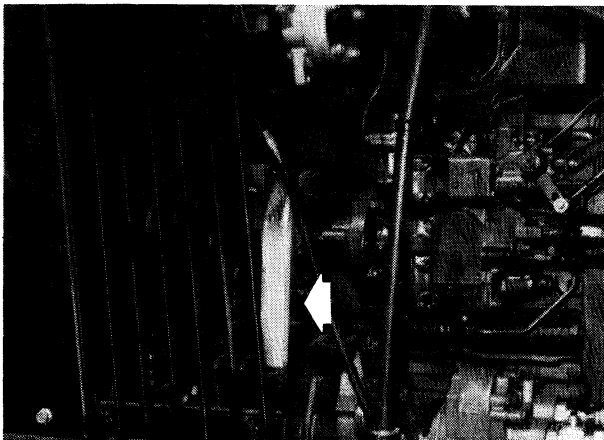

Engine Plate


Introduction

We at Versatile Farm Equipment Company are pleased you have chosen a VERSATILE® 835, 855, 875 or 895 Four-Wheel Drive Tractor for your farming operation. It has evolved through the ideas and suggestions submitted to us by customers such as yourself.

We ask that you study this manual and adopt the preventive maintenance program outlined in it. The suggested schedule has been designed to meet most operating conditions although it may be necessary to adjust your maintenance program to suit your specific operating conditions.

We ask that for engine maintenance not covered by our tractor manual, you follow the instructions given in the Cummin's manual. Before placing the tractor in service, become familiar with all the procedures described in both manuals.

Your Versatile dealer is factory trained to provide you with genuine parts and professional repair service. Consult him for all your service needs.

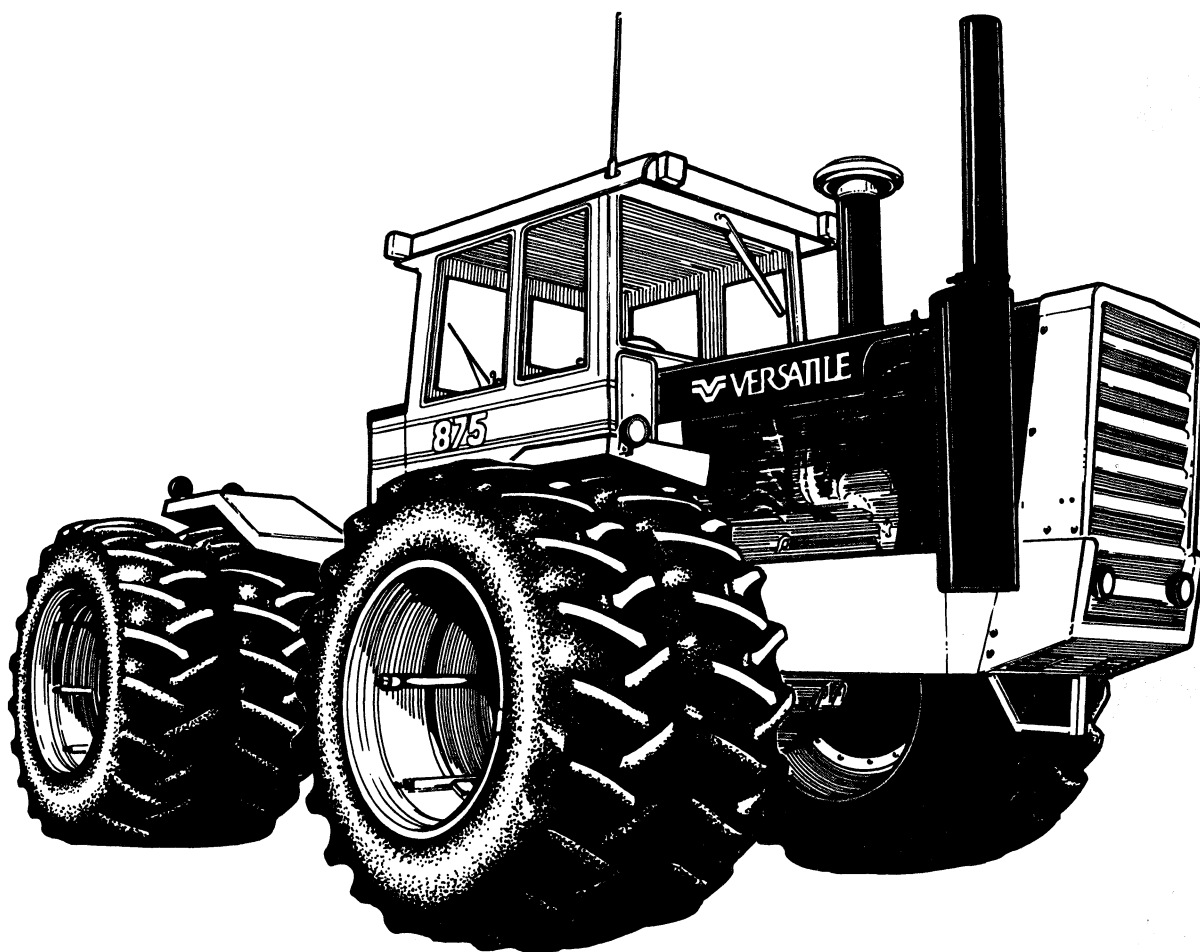



Watch for this symbol. It identifies potential hazards to health or personal safety. It points out safety precautions. It means: ATTENTION – Be Alert. Your safety is involved.



1 Safety

National Safety Council statistics tell us that many people die or suffer serious injury each year as a result of farm accidents.

Don't become a statistic or a victim.

Carefully review the procedures given in this manual with all operators **ANNUALLY**. It is important that all operators be familiar with, **AND FOLLOW**, safety precautions.




Operating instructions must be given to everyone using the tractor before operation and at least once yearly thereafter in compliance with OSHA Regulation 1928.57.

GENERAL SAFETY


1. Never allow an unauthorized driver operate the tractor.
2. Keep a fire extinguisher in the cab. Maintain it and be familiar with its use.



3. Never allow passengers inside or outside the cab.
4. Never operate machine in a closed building.
5. Always keep sleeves, jackets or other clothing relatively tight and belted, since loose clothes might catch in moving parts.
6. Provide a first aid kit for use in case of accident.

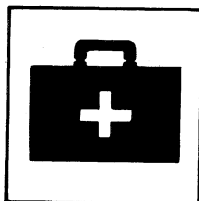


7. Never jump from tractor. There is a danger of catching clothing on protruding parts.
8. Use steps and handholds when mounting and dismounting tractor or for servicing components to high to reach from the ground.
9. Fasten seatbelt before starting engine.

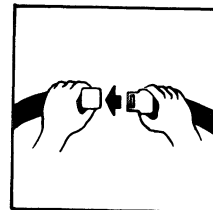

OPERATING SAFETY


1. Always operate tractor from the operator's seat.
2. Lock seat in position before operating tractor.
3. Always start tractor with range select and transmission in neutral and PTO clutch disengaged. This is particularly important during cold weather operation.
4. Always wait until all warning lights and buzzer go out before putting tractor into gear.
5. Never oil, grease or adjust tractor while it is moving. Do not leave engine running while tractor or drawn equipment is being adjusted, repaired or cleaned.
6. Ensure parkbrake is set when tractor is stopped. Tractor can freewheel even when in gear.
7. Avoid abrupt turns, starts or stops.
8. Keep all safety shields in place when operating tractor.

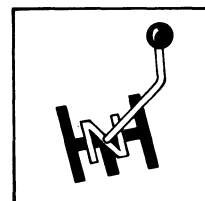

9. Do not operate tractor when you are tired. Take a rest.
10. Never operate machine at high speeds in crowded areas. Damage to machine and injury to operator may result.

SAFE OPERATION IN ROUGH TERRAIN

1. Drive tractor slowly on hillsides and curves to eliminate the danger of tipping. Avoid slopes which are too steep for safe operation.
2. Always drive slowly over rough ground. Drive at speeds slow enough to ensure your safety.
3. Avoid sharp turns on hillsides.
4. When driving out of a ditch, gully or up a steep hillside, engage the clutch slowly.
5. When descending steep grades, select a sufficiently low gear to maintain control with minimum braking.
6. Never drive near the edge of a ditch or gully unless absolutely necessary.
7. Be especially alert when operating tractor at row ends, road slopes and around obstructions.

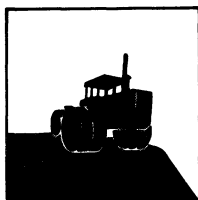

3. Add coolant to the radiator only when engine is stopped and cool. Turn radiator cap slightly to its first stop to relieve pressure before removing.

4. Never refuel tractor when engine is hot or running. Do not smoke while filling fuel tank or servicing fuel system. Use precautions in handling any type of tractor fuel. Vaporized diesel fuel is as dangerous as gasoline. Do not overfill.



5. Do not smoke and avoid open flames when filling batteries.
6. Ether starting fluid is highly flammable. Do not use near fire, sparks, open flames or while engine is running.
7. Remove mud, crop residue, chains and tools from steps and operator's platform. They may interfere with pedal operation or entry/exit from tractor.
8. Turn OFF lever at hydraulic couplers to prevent flow to implements when servicing.
9. Ground fuel tanks to prevent static buildup.
10. Ensure turbocharger is cool before servicing.
11. Keep flammable material away from turbocharger.
12. Never mount a damaged tire. Tire may burst with explosive force.

MAINTENANCE SAFETY

1. Escaping hydraulic oil under pressure can penetrate the skin causing personal injury. Ensure all connections are tight and lines and hoses are undamaged. Before disconnecting hydraulic lines, relieve all pressure. Do not overfill tank.
2. Wear gloves and goggles and use a piece of cardboard or wood as a backstop for spurting fluid when searching for hydraulic leaks.




IMPLEMENT SAFETY

1. Always hitch loads to drawbar or hitch points.
2. When hitching drawn equipment to drawbar, back tractor past clevis then move forward so that in making the connection, tractor will be moving away from equipment.
3. Always lower implements to the ground when not in use and turn OFF lever couplers. Hydraulic pressure can rupture hoses, releasing high pressure oil causing implement damage.

4. Be careful when turning with a towed implement. Lift it from the ground during turns. Side thrust could damage sidewalls.
5. Use transport locks, lower implement to ground or securely block frame before servicing implement.


POWER TAKE-OFF (PTO) SAFETY

1. Never start tractor with PTO engaged.
2. When using PTO in a stationary application, ensure articulation lock is engaged, parkbrake is set and gearshift lever is in neutral. Do not leave tractor unattended. If you must leave area for any reason, stop and lockout tractor.
3. Take special care in hook-up of implement to PTO.
4. Ensure all guards are in place while operating PTO.
5. Stop and lockout tractor before disconnecting or servicing PTO drivelines.

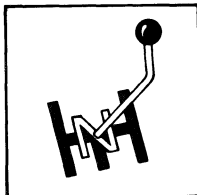

SAFE HIGHWAY OPERATION

1. Equip towed implements with slow moving vehicle (SMV) signs when travelling on public roads.
2. Use extreme caution when pulling heavy loads at road speeds. Avoid hard application of tractor brakes at high speeds.
3. Use hazard warning flashers when transporting or driving tractor on public roads unless prohibited by law in your area. Check with local authorities.
4. Ensure headlights are adjusted so they will not blind the operators of oncoming vehicles.

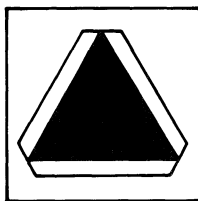


CHEMICAL SAFETY

1. The cab air filters are not designed to filter harmful chemicals. When using agricultural chemicals, follow the manufacturer's instructions carefully.
2. Do not carry harmful chemicals in the cab. Chemicals may rupture the container and the fumes may poison the operator.
3. Wear OSHA approved respiratory protection when working near toxic chemicals. Maintain equipment regularly.



ARTICULATION LOCK

1. Use articulation lock during stationary applications, servicing, jacking or overhaul operations. Do not use when tractor is moving.
2. Before engaging lock, drive tractor to a level surface, put steering straight, engage parkbrake, put gearshift in neutral and stop engine. Remove lock from storage position and insert into holes left of articulation joint. It may be necessary to start engine and articulate frame slightly to engage lockpin.

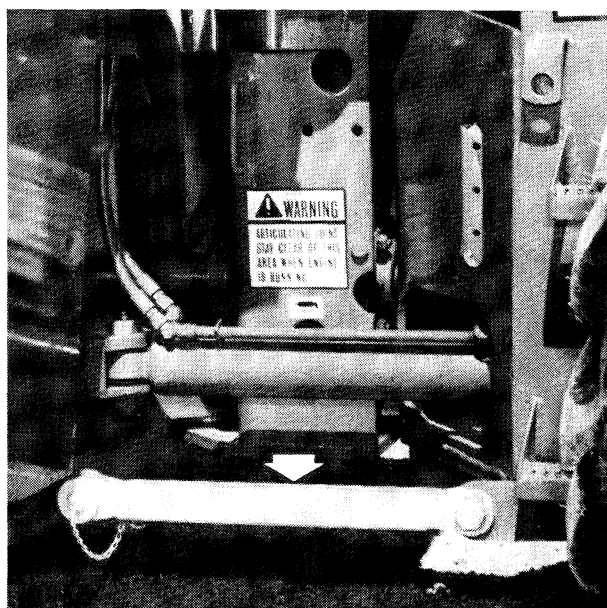

Articulation Lock

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com