 


NEW HOLLAND

1530

1630

OPERATOR'S MANUAL

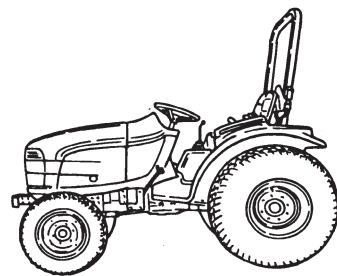

NEW HOLLAND

42153021

 
Reprinted

TO THE OWNER:

This manual contains information concerning the operation, adjustment, and maintenance of the Models 1530 and 1630. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this tractor. Please have all operators read this manual carefully and keep the manual available for ready reference.

Your New Holland dealer will instruct you in the general operation of your tractor. (Refer to the "Delivery Report" at the back of this manual.) Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your tractor.

Your New Holland dealer carries a complete line of genuine New Holland parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts.

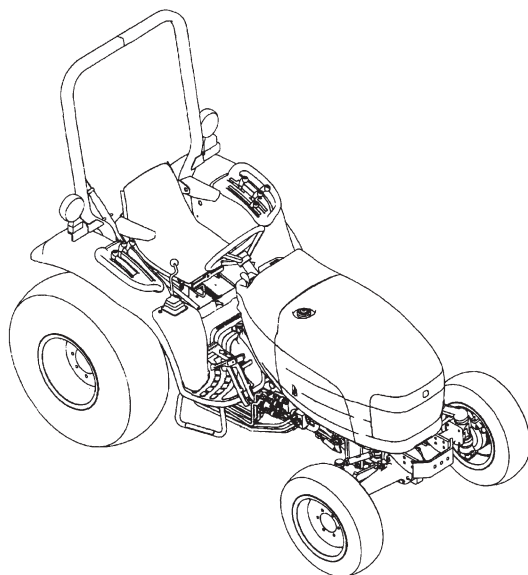

CAUTION: THIS SYMBOL IS USED THROUGHOUT THIS BOOK WHENEVER PERSONAL SAFETY IS INVOLVED. TAKE TIME TO READ AND FOLLOW THE INSTRUCTIONS. BE CAREFUL!

CAUTION: PICTURES IN THIS MANUAL MAY SHOW PROTECTIVE SHIELDING OPEN OR REMOVED TO BETTER ILLUSTRATE A PARTICULAR FEATURE OR ADJUSTMENT.

BE CERTAIN, HOWEVER, TO CLOSE OR REPLACE ALL SHIELDING BEFORE OPERATING THE MACHINE.

IMPROVEMENTS

New Holland North America, Inc. is continually striving to improve its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.



NEW HOLLAND WARRANTY AND LIMITATION OF LIABILITY - AGRICULTURAL PRODUCTS

COVERAGE PROVIDED

New Holland North America, Inc. or New Holland Canada, Ltd., hereinafter called "Company" warrants to the retail purchaser of each new Product (as listed below) that the Selling Dealer will repair or replace any part thereof found to be defective in materials or workmanship within the following periods. This warranty is for the benefit of the original or subsequent purchaser when purchased from an authorized New Holland dealer.

BASIC WARRANTY

Product	Warranty Period (whichever comes first)
— Harvesting, Materials Handling Equipment and Implements	12 Months
— Extended New Holland Engines Warranty for Self Propelled Harvesting Products*	24 Months or 2000 Hours
— Compact Tractors, Model 1530, 1630, 1725 and 1925	24 Months or 1500 Hours
— Extended Power Train Warranty**	36 Months or 1500 Hours
— Tractors, 1000 thru 8000 Series (except as noted), Model 9030 and SP Windrower	12 Months
— Extended Power Train Warranty**	24 Months or 2000 Hours
— Tractors, 8030 and 8070 Series	36 Months or 3000 Hours
— Articulated 4 Wheel Drive Models (except Model 9030) and Auger Headers	24 Months or 2000 Hours
— Replacement Parts	90 days or to end of Basic Warranty (whichever is longer)

*Allison transmissions, Caterpillar, Cummins and Deutz engines are warranted by their respective manufacturers.
**The components covered by extended warranty consists of the following:
ENGINE - The rocker arm cover, crankshaft seals, cylinder head, engine block, crankcase pan and timing gear cover of the engine, and the parts fully enclosed within these units.

TRANSMISSION AND REAR AXLE (Tractors and SP Windrowers) - The clutch housing (excludes clutch), transmission case, dual power housing, differential housing, differential pinion, PTO seals, final drive housings, transfer case, front wheel drive housing, and parts fully enclosed within these housings, including the drive axles. Includes PTO clutch and PTO drop box, hydrostatic pump/motor and high pressure hoses on the Model 9030 tractors and SP Windrowers.

LIMITATIONS, INCLUDING DISCLAIMER OF IMPLIED WARRANTIES AND CONSEQUENTIAL DAMAGES

This warranty gives you specific legal rights and you may also have other rights which vary, depending on state or provincial laws.

New Holland North America, Inc. or New Holland Canada, Ltd. does not authorize any person or dealer to create for it any other obligation or liability in connection with these products. TO THE EXTENT ALLOWED BY LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS APPLICABLE TO THIS PRODUCT IS LIMITED TO THE STATED DURATION OF THIS WRITTEN WARRANTY. NEITHER COMPANY NOR THE SELLING DEALER SHALL BE LIABLE FOR LOSS OF THE USE OF THE PRODUCT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR CONSEQUENTIAL DAMAGES.

Some states and provinces do not allow limitations on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

The remedy of repair or replacement of a defective part during the warranty period herein specified shall be the purchaser's exclusive remedy.

EXTENDED SERVICE PLAN (ESP)

When offered by the Company, the option to purchase an Extended Service Plan has been explained and:

- I accept and have signed the completed registration form
- I decline the Extended Service Plan
- I will consider within 180 days (12 months on 8070 series)

PROTECTIVE EQUIPMENT

Rollover protective structure (ROPS) and seat belts are provided as standard equipment on all New Holland agricultural tractors and we strongly recommend their use. Customers who elect to remove or not use this protection do so at their own risk.

- I acknowledge the existence of OSHA regulations pertaining to ROPS. _____
- A PTO master shield, if applicable, has been installed on the machine. _____
- The correct Operator's Manual has been furnished. _____
- Safety precautions were explained to me by the Selling Dealer. _____

ACKNOWLEDGEMENT/WARRANTY TRANSFER

The blank spaces under "Protective Equipment" have been filled in and are correct, and I acknowledge that I have read and I accept this Warranty and Limitation of Liability.

Purchaser _____	Dealer _____ Code _____
Address _____	Address _____
City _____ State _____ Zip _____	City _____ State _____ Zip _____
Model _____ Serial No. _____	Retail Date _____ / _____ / _____
Attachment Model _____ SN _____	Extended Service Plan Expires on _____ / _____ / _____ (Subject to confirmation by NH)
Attachment Model _____ SN _____	
Purchaser _____ Date _____	Dealer _____ Date _____
Signature	Signature

New Holland Warranty Detail

The warranty period will begin on date of original retail sale or date of original use, whichever is earlier.

- The obligation of Company to the purchaser under this warranty is limited to the repair or replacement of defective parts by an authorized New Holland dealer and will be done free of charge for both parts and labor using genuine New Holland replacement parts. Repair or replacement in accordance with this warranty shall constitute fulfillment of all liabilities of Company and the Selling Dealer in respect to such Products.
- Repairs or replacements will be performed by the Selling Dealer, following delivery of the Product by the purchaser to the Dealer's place of business. When the purchaser has moved a long distance from the Selling Dealer, or the Selling Dealer is no longer in business, any New Holland dealer authorized to sell and service the described Products may perform the repair at its dealership.
- The Selling Dealer shall review these warranty provisions with the purchaser prior to retail sale, secure his acknowledgement of delivery of this warranty and record the date of original retail sale or date of original use.
- To obtain warranty service, the purchaser must (1) report the product defect to an authorized New Holland dealer and request repair within the applicable warranty term and (2) present evidence of the warranty start date.

WHAT IS NOT COVERED BY THE WARRANTY?

This warranty shall NOT apply under the following conditions:

- (i) With respect to vendor warranty items such as Allison transmissions and Deutz, Cummins and Caterpillar engines, or tires, tubes, and attachments which shall be warranted by their manufacturer, or local representative thereof.
- (ii) If the unit has been subject to misapplication, abuse, misuse, negligence of proper maintenance or other negligence, fire or other accident.
- (iii) If parts or attachments other than those made or marketed by New Holland North America, Inc. or New Holland Canada, Ltd., have been used in connection with the unit, and in the sole judgment of Company such use affects its performance, stability or reliability.
- (iv) If the unit has been altered or repaired outside of a New Holland dealership in a manner which, in the sole judgment of Company, affects its performance, stability or reliability.
- (v) Batteries are covered by a separate pro rata adjustment warranty. The pro-rata plan covers the battery fully for the basic product warranty period as indicated, with any remaining warranty pro-rated according to the months of service.
- (vi) The purchaser shall be responsible for payment of dealer travel time to the machine or to deliver the machine to the dealer's service shop for repair. New Holland warranty does not cover delivery charges or travel time.
- (vii) The Company shall have no liability for used equipment sold beyond the specified coverage period.
- (viii) No warranty shall apply to damage resulting from accident or damage caused by environment (such as exposure to corrosive material). The Company shall not be responsible for rental equipment used to replace the equipment being repaired.
- (ix) This warranty shall NOT apply to normal maintenance services (such as tune-ups, fuel injection system cleaning or wheel, brake and clutch adjustments), to normal replacement of service items (such as filters and brake or clutch linings), or to normal deterioration due to use or exposure (such as belts and exterior finish). New Holland shall not be responsible for normal replacement parts such as cutting knives, chains, belts, clutches, filters, oil, or other parts which are worn out, unless they are determined to be defective in material or workmanship.
- (x) This warranty shall NOT apply to any New Holland Product which is retailed or distributed by anyone other than New Holland North America, Inc. or New Holland Canada, Ltd., through its authorized dealers. This warranty shall NOT apply to any Product which is normally operated outside of the United States, and/or Canada.
- (xi) This warranty shall NOT apply if the purchaser, insurance company, or any other entity or individual acting on behalf of the purchaser seeks reimbursement for the dollar value of the repair(s) or replacement(s) covered under this warranty.
- (xii) If the injection pump has been set for fuel delivery above New Holland specifications.

RIGHT TO MAKE DESIGN CHANGES

Company reserves the right to make changes in the design and other changes in its products at any time and from time to time without notice and without incurring any obligation with respect to any product previously ordered from it, sold or shipped by it.

CONTENTS

OWNER ASSISTANCE	0-4
SAFETY	0-5
SECTION 1 – GENERAL INFORMATION	1-1
SECTION 2 – OPERATION	2-1
SECTION 3 – LUBRICATION AND MAINTENANCE	3-1
SECTION 4 – SPECIFICATIONS	4-1
INDEX	4-10
PRE-DELIVERY SERVICE	4-13

OWNER ASSISTANCE

We at New Holland and your New Holland dealer want you to be completely satisfied with your investment. Normally any problems with your equipment will be handled by your dealer's Service Department. Sometimes, however, misunderstanding can occur. If your problem has not been handled to your satisfaction, we suggest the following.

1. Contact the owner or General Manager of the dealership, explain the problem, and request assistance. When additional assistance is needed, your dealer has direct access to our branch office
2. If you cannot obtain satisfaction by doing this, contact the branch office in your area and provide them with:
 - Your name, address, and telephone number
 - Machine model and serial number
 - Dealership name and address
 - Machine purchase date and amount of use
 - Nature of problem

Atlanta

4727 N Royal Atlanta Dr Suite P
Caller Service 105018
Tucker, GA 30085-5018
Telephone: (770) 723-3605
States: AL, FL, GA, KY, MS,
NC, SC, TN, VA

Dallas

1340 Walnut Hill Lane Bldg 2
P.O. Box 167528
Irving, TX 75016-7528
Telephone: (972) 756-4919
States: AR, AZ, CA, CO, HI, KS,
LA, MO, NM, NV, OK, TX, UT

Minneapolis

6301 W Old Shakopee Rd
P.O. Box 386150
Minneapolis, MN 55438-6150
Telephone: (612) 887-4231
States: AK, IA, ID, IL, MN, MT,
ND, NE, OR, SD, WA, WI, WY

New Holland

200 Commerce St.
P.O. Box 527
Mountville, PA 17554-0527
Telephone: (717) 285-8302
States: CT, DE, IN, MA, MD, ME,
MI, NH, NJ, NY, OH, PA, RI, VT,
WV

Calgary

Suite 220
3030 Third Ave. NE
Box 1616, Stn M
Calgary, AB
CANADA T2P 2M7
Telephone: (403) 569-3208

3. If you need further assistance contact:

*Service Department
Mail Station 500
New Holland North America, Inc.
New Holland, PA 17557*

When contacting your branch office or Service Department, be aware that your problem will likely be resolved in the dealership using the dealer's facilities, equipment, and personnel. So it is important that your initial contact be with the dealer.

A Service Publications Catalog & Order Form is available which lists the operator's and service manuals for many prior model and most current model Ford - New Holland - Versatile tractors, equipment, and consumer products. To obtain a copy of this catalog, please call 1-800-635-4913, or use the order form at the end of this manual.

PRECAUTIONARY STATEMENTS

PERSONAL SAFETY

Throughout this manual and on machine decals, you will find precautionary statements (“CAUTION”, “WARNING”, and “DANGER”) followed by specific instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.



CAUTION: THE WORD “CAUTION” IS USED WHERE A SAFE BEHAVIORAL PRACTICE ACCORDING TO OPERATING AND MAINTENANCE INSTRUCTIONS AND COMMON SAFETY PRACTICES WILL PROTECT THE OPERATOR AND OTHERS FROM ACCIDENT INVOLVEMENT.



WARNING: THE WORD “WARNING” DENOTES A POTENTIAL OR HIDDEN HAZARD WHICH HAS A POTENTIAL FOR SERIOUS INJURY. IT IS USED TO WARN OPERATORS AND OTHERS TO EXERCISE EVERY APPROPRIATE MEANS TO AVOID A SURPRISE INVOLVEMENT WITH MACHINERY.



DANGER: THE WORD “DANGER” DENOTES A FORBIDDEN PRACTICE IN CONNECTION WITH A SERIOUS HAZARD.

FAILURE TO FOLLOW THE “CAUTION”, “WARNING”, AND “DANGER” INSTRUCTIONS MAY RESULT IN SERIOUS BODILY INJURY OR DEATH.

MACHINE SAFETY

Additional precautionary statements (“ATTENTION” and “IMPORTANT”) are followed by specific instructions. These statements are intended for machine safety.

ATTENTION: The word “ATTENTION” is used to warn the operator of potential machine damage if a certain procedure is not followed.

IMPORTANT: The word “IMPORTANT” is used to inform the reader of something he needs to know to prevent minor machine damage if a certain procedure is not followed.



SAFETY PRECAUTIONS

A careful operator is the best operator. Most accidents can be avoided by observing certain precautions. To help prevent accidents, read and take the following precautions before operating this tractor. Equipment should be operated only by those who are responsible and instructed to do so.

THE TRACTOR

1. Read the Operator's Manual carefully before using the tractor. Lack of operating knowledge can lead to accidents.
2. Use an approved roll bar and seat belt for safe operation. Overturning a tractor without a roll bar can result in death or injury. If your tractor is not equipped with a roll bar and seat belt, see your New Holland Dealer.
3. Always use the seat belt. The only instance when the seat belt should not be used is if the roll bar has been removed from the tractor.
4. If a front end loader is to be installed, always use a FOPS (Falling Object Protective Structure) canopy to avoid injury from falling objects.
5. Use the handholds and step plates when getting on and off the tractor to prevent falls. Keep steps and platform cleared of mud and debris.
6. Do not permit anyone but the operator to ride on the tractor. There is no safe place for extra riders.
7. Keep all safety decals clean of dirt and grime, and replace all missing, illegible, or damaged safety decals. See the list of decals in the Decal section of this manual.
3. Keep the tractor and equipment, particularly brakes and steering, maintained in a reliable and satisfactory condition to ensure your safety and comply with legal requirements.
4. Keep open flame or cold weather starting aids away from the battery to prevent fires or explosions. Use jumper cables according to instructions to prevent sparks which could cause explosion.
5. Stop the engine before performing any service on the tractor.
6. Escaping hydraulic/diesel fluid under pressure can penetrate the skin causing serious injury. If fluid is injected into the skin, obtain medical attention immediately or gangrene may result.
 - DO NOT use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks.
 - Stop the engine and relieve pressure before connecting or disconnecting lines.
 - Tighten all connections before starting the engine or pressurizing lines.
7. Do not modify or permit anyone else to modify or alter this tractor or any of its components or functions without first consulting a New Holland Dealer.
8. The fuel oil in the injection system is under high pressure and can penetrate the skin. Unqualified persons should not remove or attempt to adjust a pump, injector, nozzle, or any other part of the fuel injection system. Failure to follow these instructions can result in serious injury.
9. Continuous long-term contact with used engine oil may cause skin cancer. Avoid prolonged contact with used engine oil. Wash skin promptly with soap and water.

SERVICING THE TRACTOR

1. The cooling system operates under pressure which is controlled by the radiator cap. It is dangerous to remove the cap while the system is hot. Always turn the cap slowly to the first stop and allow pressure to escape before removing the cap entirely.
2. Keep any type of open flame away from the tractor and do not smoke while refueling. Wait for the engine to cool before refueling.
10. Some components of your tractor, such as gaskets and friction surfaces (brake linings, clutch linings, etc.) may contain asbestos. Breathing asbestos dust is dangerous to your health. You are advised to have any maintenance or repair on such components carried out by an authorized New Holland

Dealer. However, if service operations are to be undertaken on parts that contain asbestos, the essential precautions listed below must be observed:

- Work out of doors or in a well ventilated area.
- Dust found on the tractor or produced during work on the tractor should be removed by extraction, not by blowing.
- Dust waste should be dampened, placed in a sealed container, and marked to ensure safe disposal.
- If any cutting, drilling, etc. is attempted on materials containing asbestos, the item should be dampened and only hand tools or low speed power tools used.

OPERATING THE TRACTOR

1. Before starting the tractor, apply the parking brake, place the PTO lever in the "OFF" position, the lift control lever in the down position, the remote control valve levers in the neutral position, and the transmission in neutral.
2. Always sit in the tractor seat when starting the engine or operating controls. Do not start the engine or operate controls while standing beside the tractor.
3. Do not bypass the neutral start switches. Consult your New Holland Dealer if your neutral start controls malfunction. Use jumper cables only in the recommended manner. Improper use can result in tractor runaway.
4. Avoid accidental contact with the gear shift lever while the engine is running, as this can cause unexpected tractor movement.
5. Before getting off the tractor, disengage the PTO, turn the engine off, and apply the parking brake. Never get off the tractor while it is in motion.
6. Do not park the tractor on a steep incline.
7. Do not operate the tractor engine in an enclosed building without adequate ventilation. Exhaust fumes can cause death or illness.
8. If the power steering or engine ceases operating, stop the tractor immediately.

9. Pull only from the drawbar or the lower link drawbar in the down position. Use only a drawbar pin that locks in place. Pulling from the tractor rear axle or any point above the axle may cause the tractor to upset.
10. If the front end of the tractor tends to rise when heavy implements are attached to the three-point hitch, install front end or front wheel weights. Do not operate the tractor with a light front end.
11. Always set the hydraulic selector lever in position control when attaching or transporting equipment. Ensure hydraulic couplers are properly mounted and will disconnect safely in case of accidental detachment of implement.
12. Do not leave equipment in the raised position.
13. Use the flasher/turn signal lights and SMV signs when traveling on public roads both day and night (unless prohibited by law).
14. When operating at night, adjust lights to prevent blinding oncoming drivers.

DRIVING THE TRACTOR

1. Watch where you are going, especially at row ends, on roads, around trees and low hanging obstacles.
2. To avoid upsets, drive the tractor with care and at a safe speed. Use extra caution when operating over rough ground, when crossing ditches or slopes, and when turning corners.
3. To provide two-wheel braking, lock tractor brake pedals together when transporting on roads.
4. Do not coast or free wheel down hills. Use the same gear when going downhill as is used when going uphill.
5. Any towed vehicle with a total weight exceeding that of the towing tractor should be equipped with brakes for safe operation.
6. If the tractor becomes stuck or the tires become frozen to the ground, back up the tractor to prevent upset.
7. Always check overhead clearance, especially when transporting the tractor.

-
8. When operating at night, adjust lights to prevent blinding oncoming drivers.

OPERATING THE PTO

1. When operating PTO driven equipment, shut off the engine and wait until the PTO stops before getting off the tractor and disconnecting the equipment.
2. Do not wear loose clothing when operating the power take-off or when near rotating equipment.
3. When operating stationary PTO driven equipment, always place both gear shift levers in neutral, apply the tractor parking brake, and block the rear wheels front and back.
4. To avoid injury, do not clean, adjust, unclog, or service PTO driven equipment when the tractor engine is running.
5. Ensure the PTO master shield is installed at all times. Always replace the PTO shield cap when the PTO is not in use.

DIESEL FUEL

1. **UNDER NO CIRCUMSTANCES** should gasoline, alcohol, or blended fuels be added to diesel fuel. These combinations can create an increased fire or explosive hazard. Such blends are more explosive than pure gasoline in a closed container such as a fuel tank. **DO NOT USE THESE BLENDS.**
2. Never remove the fuel cap or refuel with the engine running or hot.
3. Do not smoke while refueling or when standing near fuel.
4. Maintain control of the fuel filler pipe nozzle when filling the tank.
5. Do not fill the fuel tank to capacity. Allow room for expansion.

6. Wipe up spilled fuel immediately.
7. Always tighten the fuel tank cap securely.
8. If the original fuel tank cap is lost, replace it with a New Holland approved cap. A non-approved, proprietary cap may not be safe.
9. Keep equipment clean and properly maintained.
10. Do not drive equipment near open fires.
11. Never use fuel for cleaning purposes.
12. Arrange fuel purchases so that winter grade fuels are not held over and used in the spring.

SAFETY FRAME (ROPS)

Your New Holland tractor is equipped with a safety frame. It must be maintained in a serviceable condition. Be careful when driving through doorways or working in confined spaces with low headroom.

UNDER NO CIRCUMSTANCES should you:

- modify, drill, or alter the safety frame in any way. Doing so may render you liable to legal prosecution.
- attempt to straighten or weld any part of the main frame or retaining brackets which have suffered damage. Doing so may weaken the structure and endanger your safety.
- secure any parts on the main frame or attach your safety frame with anything other than the special high tensile bolts and nuts specified.
- attach chains or ropes to the main frame for pulling purposes.
- take unnecessary risks even though your safety frame affords you the maximum protection possible.



WHEN YOU SEE THIS SYMBOL

IT MEANS:

ATTENTION!

 
BECOME ALERT!

YOUR SAFETY IS INVOLVED!

DECALS

If safety or instruction decals become damaged or illegible, new decals should be obtained from your New Holland Dealer and placed at their original positions.


SAFETY DECALS

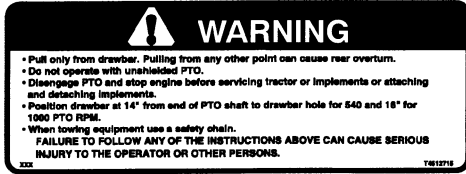

WARNING: Pull Only From Drawbar
 PART NO: 86532904
 LOCATION: PTO Shield



 
WARNING: To Jump Start
 PART NO: 86532905
 LOCATION: Battery Hold Down

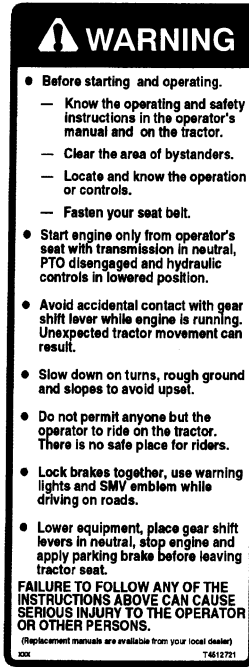


WARNING: Before Starting and Operating
 PART NO: 86532909
 LOCATION: Inside Left-Hand Fender



 WARNING: Rotating Fan and Belts
 PART NO: 86532907
 LOCATION: Both Sides of Radiator

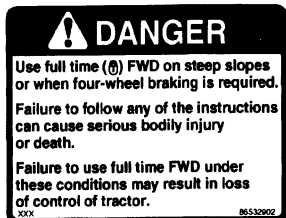

 WARNING: Front-Wheel Drive Usage (Super Steer only)
 PART NO: 86532902
 LOCATION: Inside Left-Hand Fender

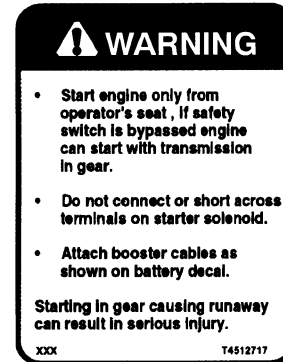

WARNING: Start Engine Only From Operator's Seat
 PART NO: 86532906
 LOCATION: Firewall Above Starter Motor

INSTRUCTION DECALS

Range Selector
Lever
(Manual)
PART NO:
86532912
LOCATION:
Left-Hand POD Top

Range Selector
Lever
(Hydrostatic)
PART NO:
86532896
LOCATION:
Left-Hand POD Top

Position Control
Lever
PART NO:
86532893
LOCATION:
Right-Hand POD Top

Operating Remote
Control
Valve-Single
Spool
PART NO:
86532910
LOCATION:
Right-Hand POD Top

 


Front-Wheel
Drive Control
Lever
PART NO:
86532913
LOCATION:
Left-Hand POD Top
(Super Steer™ Only)

Front-Wheel
Drive Control
Lever
PART NO:
86532900
LOCATION:
Left-Hand POD Top

PTO Control
Lever (Rear)
PART NO:
86532898
LOCATION:
Left-Hand POD Top


PTO Control
Lever (Mid)
PART NO:
86532899
LOCATION:
Left-Hand POD Top

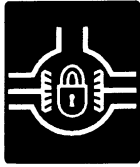

Differential Lock
 PART NO:
 86532901
 LOCATION:
 Above Pedal



 
Starter Switch
 PART NO:
 86532895
 LOCATION:
 Starter Switch,
 Right Side of
 Instrument Panel

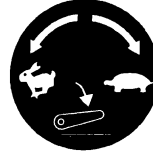

Flow Control Valve
 PART NO:
 86532897
 LOCATION:
 Top of Flow Control
 Knob



 ENGINE
 OIL
 Engine Oil
 PART NO:
 86532916
 LOCATION:
 Engine Oil Filler Cap

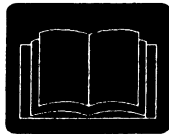


Hyd. Manifold Operation
 (See Operator's Manual)
 PART NO:
 86532914
 LOCATION:
 Right-Hand Side of Hyd.
 Manifold/Air Filter Cap




Coupler-Extending
 PART NO:86532920



 
Coupler-Retracting
 PART NO:86532919

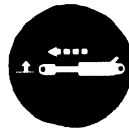

Coupler-Extending
 PART NO:86532921

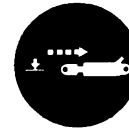 

Coupler-Retracting
 PART NO:86532922

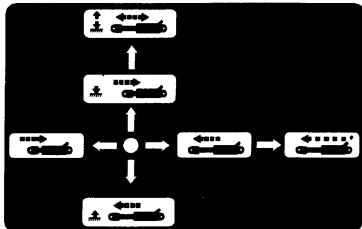 

Operating Remote
 Control Valve-
 Double Spool
 PART NO:
 86532911
 LOCATION:
 Cover of 2-Spool
 Remote Valve



Power Steering Fluid
 PART NO:
 86532903
 LOCATION:
 Top of P.S. Reservoir

Lubrication and
 Maintenance Intervals
 PART NO:
 86532908
 LOCATION:
 Inside of Hood

WATCH YOUR PROOF METER HOURS					
Lubrication and maintenance service intervals					
LUBRICATION AND MAINTENANCE ITEM	CHECK	CLEAN	LUBE	ADJUST	SERVICE INTERVAL
Radiator Coolant	*	*			Every 10 Hours or Daily
Engine Oil level	*	*			Every 10 Hours or Daily
Air Cleaner	*	*			Every 10 Hours or Daily
Transmission Oil Level	*	*			Every 10 Hours or Daily
Power Bearing Oil Level	*	*			Every 10 Hours or Daily
Front Diff Oil Level	*	*			Every 10 Hours or Daily
Front Axle Oil Level	*	*			Every 10 Hours or Daily
Tires	*	*			Every 10 Hours or Daily
Clutch Pedal	*	*			Every 10 Hours or Daily
Battery	*	*			Every 10 Hours or Daily
Lubrication Fittings	*	*			Every 10 Hours or Daily
Steering Linkage	*	*			Every 10 Hours or Daily
2-Wheel Drive King Pins	*	*			Every 10 Hours or Daily
3-point Linkage	*	*			Every 10 Hours or Daily
Pivot Shaft	*	*			Every 10 Hours or Daily
Brake Pedal	*	*			Every 10 Hours or Daily
Drive Shaft Cover	*	*			Every 10 Hours or Daily
H.S.T. Foot Pedal Shaft	*	*			Every 10 Hours or Daily
Power Steering	*	*			Every 10 Hours or Daily
Engine Oil	*	*			Every 100 Hours
Fuel Filter	*	*			Every 200 Hours
Air Cleaner	*	*			Every 200 Hours
Engine Oil Filter	*	*			Every 200 Hours
Fuel Filter	*	*			Every 200 Hours
Fan Belt	*	*			Every 200 Hours
Brakes	*	*			Every 200 Hours
H.S.T. Filter	*	*			Every 300 Hours
Front Axle Oil	*	*			Every 300 Hours
Front Diff Oil	*	*			Every 300 Hours
Hydraulic Filter	*	*			Every 300 Hours
Transmission Oil	*	*			Every 300 Hours
Fuel Injectors	*	*			Every 300 Hours
Valve Clearance	*	*			Every 300 Hours
Front Wheel Bearings	*	*			Every 300 Hours
Power Steering Oil	*	*			Every 300 Hours
Radiator Coolant	*	*			Seasonal
Air Cleaner Element	*	*			Seasonal

Refer to your Operator's Manual
for additional information.

SECTION 1

GENERAL INFORMATION


PLEASE READ CAREFULLY:

For a complete list of the pre-delivery service checks performed by your dealer, refer to the PRE-DELIVERY SERVICE checklist found at the back of this manual. Keep one copy as your record of the service performed. The other copy should be removed from the manual and kept by your dealer. **MAKE SURE THAT BOTH COPIES ARE COMPLETED AND THAT YOU AND THE DEALER SIGN BOTH COPIES.**

A **PRODUCT IDENTIFICATION PLATE** is located on the left-hand side of the transmission housing. The numbers on the plate are important in the event your tractor should require future service. For your convenience, have your dealer record these numbers in the appropriate spaces below.

New Holland North America, Inc. is continually striving to improve its products. We reserve the right to change prices, specification, or equipment at any time without notice.

All data given in this book is subject to production variations. Dimensions and weights are approximate only, and the illustrations do not necessarily depict tractors in standard condition. For exact information about any particular tractor, please consult your New Holland dealer.

 NEW HOLLAND	
TRACTOR NUMBER	MODEL
<input type="text"/>	<input type="text"/>
ENGINE	UNIT
<input type="text"/>	<input type="text"/>
TRANSMISSION	
<input type="text"/>	
NEW HOLLAND NORTH AMERICA, INC.	
CE	MADE IN U.S.A.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com