FORD TRACTOR

42200040



2000 3000 4000 5000 ALL PURPOSE and LCG

Reprinted

PLEASE READ CAREFULLY:

Equipment Dealer pro Because the policy mu	POLICY on page 135 is your assurance that operly inspected and prepared your new st be used whenever you request authorize ep this manual in a safe, convenient place.	tractor for delivery.	OWNER'S NAME
tractor during the war	on page 136 explains the coverage which ranty period. After you read the Warranty h you do not understand.		MAILING ADDRESS
to the PRE-DELIVERY ser record of the service 1	the pre-delivery service checks performed vice report on pages 137 and 137A. The copperformed and the copy on page 137A, where Dealer's record. MAKE SURE THAT YOU A	y on page 137 is your ich is to be removed	CITY
After you have operated your tractor for fifty hours, take this manual and your tractor to your Dealer. He will then perform the factory recommended 50-HOUR SERVICE as listed on pages 139 and 139A—without charge—except for lubricants, hydraulic oil, or filters replaced as part of normal maintenance. MAKE SURE THAT YOU AND THE DEALER SIGN BOTH COPIES.			STATE
			TRACTOR MODEL
IDENTIFICATION CODE N	IUMBERS are located on specific components	of your tractor. These	
numbers will be important should your tractor require future service. Have your Dealer record these numbers in the appropriate space below.			DELIVERY DATE
			ISSUED BY:
ENGINE SERIAL NO. AND ENGINE PRODUCTION CODE	TRANSMISSION PRO-	HYDRAULIC PUMP PRODUCTION CODE	FORD TRACTOR-EQUIPMENT DEALER
	TRACTOR MODEL NO.		CITY
REAR AXLE PRODUCTION CODE	TRACTOR SERIAL NO. AND TRACTOR PRO-	HYDRAULIC POWER LIFT PRODUCTION CODE	
	DUCTION CODE		STATE

ISSUED TO:

FORD TRACTOR

OPERATOR'S MANUAL SUPPLEMENT

4000 and 5000 ROW CROP TRACTORS

FOREWORD

Information in this supplement covers the Ford 4000 and 5000 Row Crop Tractors, and is to be used in conjunction with the Ford All Purpose Tractor Operator's Manual.

For your convenience, the Controls and Instruments Section of the Supplement is complete in itself.

Read your Operator's Manual and this Supplement carefully before operating or performing maintenance on your tractor, and keep it in a convenient location for later reference. If, at any time, you have a service problem concerning your new tractor, remember that your Ford Tractor—Equipment Dealer has factory trained service personnel, genuine Ford parts, and the necessary tools and equipment to best satisfy your service needs.

Service Department Ford Tractor Division Ford Motor Company

TABLE OF CONTENTS

F	Page	1	Paģe
GENERAL INFORMATION	6	8-SPEED TRANSMISSION	
CONTROLS AND INSTRUMENTS	6	AND P.T.O. CONTROLS	. 16
Adjustable Steering Wheel-Ford 5000	6	8-Speed Transmission Gearshift Levers	
Hand Throttle	8	Clutch Pedal	. 16
Gasoline Engine Choke Control	9	HYDRAULIC LIFT SYSTEM CONTROLS	. 17
Diesel Engine Excess Fuel Button	10	Hydraulic Lift Control Lever	
Temperature Gauge	10	Hydraulic Selector Lever	
Engine Oil Pressure Warning Light	11	Flow Control Knob	
Generator Warning Light	11	Remote Control Valve	
Proof-Meter	11	Quick Disconnect Couplers	. 18
Fuel Tank Shut-Off Valve		OPERATION	. 18
		Steering	
DRAKEC AND DEAD ANDE	10	Towing the Tractor	
BRAKES AND REAR AXLE		Hydraulic Lift Linkage	
Brake Pedals Parking Brake Lock		Front Wheel Tread Adjustment	
Differential Lock		Rear Wheel Tread Adjustment	
Differential Lock	10	Tractor Weighting	
		Remote Cylinder Connection	
SELECT-O-SPEED TRANSMISSION		LUBRICATION AND MAINTENANCE	. 27
AND P.T.O. CONTROLS	13	Lubrication	
Select-O-Speed Drive Line		Filling and Purging the	
Disengagement Lever		Power Steering System	. 29
Select-O-Speed Oil Pressure Warning Light		GENERAL MAINTENANCE	
Select-O-Speed Gear Selector Lever	15	Toe-In Adjustment	
Select-O-Speed P.T.O. Control Handle	15	Tire Removal	
Select-O-Speed P.T.O. Speed Shift Lever	15	Throttle Linkage Adjustment—Ford 5000	
Deluxe Select-O-Speed Ground Speed	45	Sealed Beam Lamps	
P.T.O. Shift Lever	15 16	Clutch Adjustment	
Select-O-Speed Inching Pedal	16		
Independent P.T.O. Shift Lever	16	SPECIFICATIONS	. 33

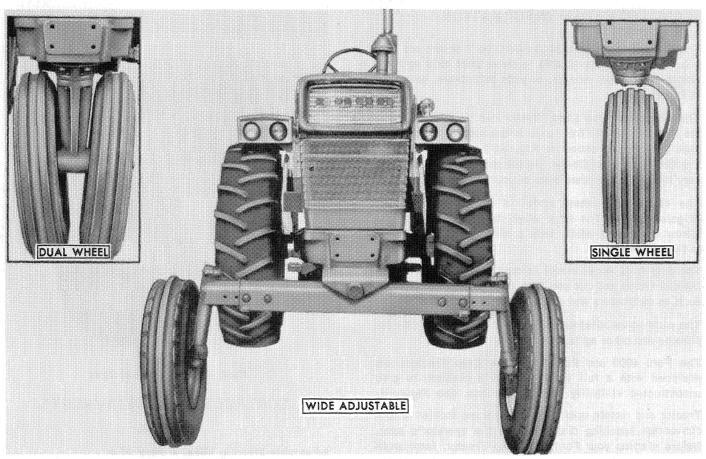


Figure 1
Row Crop Front Axle Options - Ford 5000 Shown

GENERAL INFORMATION

The Ford 4000 and Ford 5000 Row Crop Tractors are high clearance tractors available in three front axle options: single wheel, dual wheels, or wide adjustable, as shown in Figure 1.

The Ford 5000 Row Crop Tractor can be operated with the wide adjustable front axle in the long or short wheel base position as shown in Figures 2 and 3. Your Ford Tractor—Equipment Dealer has the tools and parts necessary to change the wheelbase of your tractor.

The single front wheel model is desirable for use in irrigated fields. The front wheel travels in the narrow furrow and steers easily with a minimum of disturbance to the furrow wall.

The dual front wheel model is most suitable in row crop planted fields and for use with front-mounted equipment such as cultivators and corn pickers.

The wide adjustable front axle model is most suitable for plowing and other agricultural operations.

The Ford 4000 and Ford 5000 Row Crop Tractors are equipped with a full width operator's platform to give unobstructed visibility in all directions. See Figure 4.

Tractor and remote operating controls are located within convenient reaching distance from the operator's seat. Before starting your Ford Row Crop Tractor, familiarize yourself with the location and operation of all controls and instruments as covered in this manual.

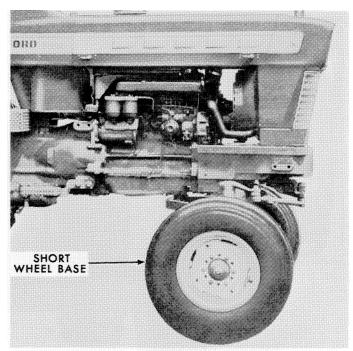


Figure 2
Ford 5000 Short Wheel Base

CONTROLS AND INSTRUMENTS GENERAL

Adjustable Steering Wheel - Ford 5000

The Ford 5000 steering wheel is adjustable to five posi-

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com