


A vehicle identification plate is located under the tractor hood. In addition, if your tractor is equipped with optional four wheel drive, a similar plate is affixed to the rear surface of the front axle housing. For convenience, the numbers shown on the plates should be recorded in the panels below and quoted to your Ford New Holland dealer in the event the tractor requires service.

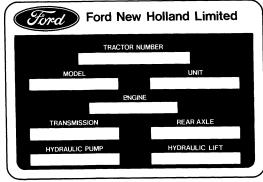

AXLE TYPE S	ERIAL NU		
REF. NUMBER	TOTAL RATIO		
INPUT ROT.	DIF	F. TYPE	
OIL SPECIFIC		LOCATION	
		DIFF.	
		EPIC.	
\bigcirc			

OM1

Vehicle Identification Plate

Front Axle Identification Plate

CONTENTS

Page

.

Tractor identification plates	inside front cover
About this Manual	ii
Introduction	iii
Owner assistance	iv
Warranty forms	v and vii
Safety cab	ix
Safety decals	x – xi
Safety precautions	xii — xiv
Pre-delivery inspection and 50 hour service	xv and xvii
Universal symbols	xviii



CONTROLS, INSTRUMENTS AND OPERATION

Operator's seat	2
Instruments and controls	3
Engine starting/stopping procedure	6
	v
Handbrake and foot controls	8
Transmission	9
Four wheel drive	12
Safety cab	14
Power take-off	19
Three-point linkage	21
Hydraulic system	26
Remote control valves	30
Attaching/detaching equipment	34
Track adjustment	35
Tractor weighting	44
Tire inflation	48

SECTION **B**

LUBRICATION AND MAINTENANCE

Lubrication and maintenance chart	2
Routine servicing	5
General maintenance	29



SPECIFICATIONS

INDEX

ABOUT THIS MANUAL

This Manual has been prepared to assist you in the correct procedure for break-in, operation and maintenance of your new Ford tractor.

Your tractor has been designed and built to give maximum performance, economy and ease of operation under a wide variety of operating conditions. Prior to delivery, the tractor was carefully inspected, both at the factory and by your Ford New Holland dealer to ensure that it reaches you in optimum condition. To maintain this condition and ensure trouble–free operation, it is important that the routine services, as specified in this Manual, are carried out at the recommended intervals.

The upper portion of pages xv and xvii are pre-delivery inspection sheets. The first sheet (page xv) is the dealers' copy and should be removed by the dealer after the inspection has been carried out. The second sheet (page xvii) is your copy of the service performed. Ensure that you and the dealer sign both copies. After you have operated the tractor for 50 hours, take your tractor, together with this Manual, to your dealer. He will then perform the factory recommended 50 hour service as listed on the lower portion of pages xv and xvii. Ensure that you and the dealer sign both copies.

Read this Manual carefully and keep it in a convenient place for future reference. If at any time you require advice concerning your tractor, do not hesitate to contact your authorized Ford New Holland dealer. He has factory trained personnel, genuine Ford parts and the necessary equipment to carry out all your service requirements.

Ford New Holland policy is one of continuous improvement, and the right to change prices, specification or equipment at any time without notice is reserved.

All data given in this book is subject to production variations. Dimensions and weights are approximate only and the illustrations do not necessarily show tractors in standard condition. For exact information about any particular tractor, please consult your Ford New Holland dealer.

INTRODUCTION

DEAR CUSTOMER – PLEASE READ CAREFULLY

The warranty coverage that is extended to your Ford tractor is explained in the Warranty and Limitation of Liability form, a copy of which forms pages v and vi of this book. A further copy will be provided (pages vii and viii) which your dealer will remove from the book and ask you to sign after you have read it. Ask your dealer to explain any points that you do not understand.

Do not modify or alter or permit anyone else to modify or alter this tractor or any of its components or any tractor function without first consulting a Ford New Holland Dealer. If you have any questions regarding tractor modification contact Ford New Holland, Inc., at one of the addresses shown on the following page.

A cab incorporating a Roll Over Protective Structure (ROPS) and seat belt were standard equipment for the tractor at time of factory assembly. If the tractor has been modified and the cab/ROPS removed, it is recommended that you equip your tractor with a Roll Over Protection Structure (ROPS) and seat belt. ROPS/ safety cabs, when used with seat belts, are effective in reducing injuries during tractor overturn accidents. Overturning a tractor without ROPS or safety cab can result in serious injury or death.

If you need information regarding a ROPS/cab and seat belt for your tractor, see your Ford New Holland Dealer.

Safety and instructional decals should be kept clean and replaced if they become damaged, illegible or are missing. Pictures of the safety decals as well as placement instructions are to be found on pages x and xi of this book.

Your safety and the safety of those around you depends upon the care and good judgment you use while operating this equipment. Read the safety precautions carefully.

PARTS AND SERVICE CATALOGUES AVAILABLE!

Ford New Holland is pleased to announce to owners of Ford tractors and equipment the availability of numerous parts and service catalogues.

To obtain these catalogues merely fill out the order form available from your local authorized Ford New Holland Dealer.

OWNER ASSISTANCE

We at Ford New Holland and your Ford New Holland dealer want you to be completely satisfied with your investment. Normally any problems with your equipment will be handled by your dealer's Service Department. Sometimes, however, misunderstanding can occur. If your problem has not been handled to your satisfaction, we suggest the following:

1. Contact the owner or General Manager of the dealership, explain the problem, and request assistance. When additional assistance is needed, your dealer has direct access to our branch office.

2. If you cannot obtain satisfaction by doing this, contact the Ford New Holland branch office in your area and provide them with:

- Your name, address, and telephone number
- Machine model and serial number
- Dealership name and address
- Machine purchase date and amount of use
- Nature of problem

Atlanta

2000 Mountain Ind. Blvd. Tucker, GA 30084 Telephone: (404) 723–3615

New Holland

500 Diller Avenue New Holland, PA 17557 Telephone: (717) 355 3951

Calgary

Box 1616, Main P.O. Calgary, AB CANADA T2P 2M7 Telephone: (403) 569–3208

Dallas

P.O. Box 10227 Dallas, TX 75207 Telephone: (214) 939–4919 **Fairfield** P.O. Box 6100 Fairfield, CA 94533 Telephone: (707) 423–9200 Toronto P.O. Box 3610 Guelph, ON CANADA N1H 6PI Telephone: (519) 767–4824

Kansas City

P.O. Box 14550 Lenexa, KS 66219 Telephone: (913) 894–3387 Troy 1315 Coolidge Avenue Troy, MI 48084 Telephone: (313) 637–9382

Minneapolis

P.O. Box 1342 Minneapolis, MN 55440 Telephone: (612) 887–4232

3. If you need further assistance contact:

Consumer Services Department Mail Station 500 Ford New Holland, Inc. New Holland, PA 17557 Telephone: (717) 355–1545

Before contacting Ford New Holland's branch office or Consumer Services Department, be aware that your problem will likely be resolved in the dealership using the dealer's facilities, equipment and personnel. So it is important that your initial contact be with the dealer.



FORD NEW HOLLAND INC. AND FORD NEW HOLLAND CANADA LTD.

WARRANTY AND LIMITATION OF LIABILITY - 3430, 3930, 4630 and 4830 TRACTORS

COVERAGE PROVIDED

Ford New Holland Inc. or Ford New Holland Canada Ltd., hereinafter called the "Company" warrants to the retail purchaser of each new Ford brand Product (as listed below) that the Selling Dealer will repair or replace any part thereof found to be defective in materials or workmanship within the following period:

BASIC WARRANTY

Warranty Period

Agricultural Tractor, Models 3430, 3930, 4630 and 4830 12 Months

Extended Power Train Warranty

Selected power train components are covered for a period of 24 months provided that the tractor has not been used more than a total of 1,500 hours. The power train components covered by this warranty consist of the following:

ENGINE – The rocker arm cover, cylinder head, engine block, crankcase pan and timing gear cover of the engine, and the parts fully enclosed within these units.

TRANSMISSION AND REAR AXLE – The clutch housing, transmission case, dual power housing, differential housing, final drive housings, transfer case, front wheel drive housing and parts fully enclosed within these housings, including the drive axles, but excluding the hydraulic lift cover and its components.

The warranty period will begin on date of original retail sale or date of original use, whichever is earlier.

- The obligation of the Company to the purchaser under this warranty is limited to the repair or replacement of defective parts, which will be made free of charge for both parts and labor using Ford New Holland service parts. Repair or replacement in accordance with this warranty shall constitute fulfillment of all liabilities of the Company and the selling dealer in respect of such products.
- Repairs or replacements will be performed by the Selling Dealer, following delivery of the Product by the purchaser to the Selling Dealer's place of business.
- If the purchaser has moved a long distance from the Selling Dealer, any Ford New Holland dealer authorized to sell and service Ford brand Products may perform the repair at its dealership.
- The Selling Dealer shall review these warranty provisions with the purchaser prior to retail sale, secure his acknowlegement of delivery of this warranty and record the date of original retail sale or date of original use.

WHAT IS NOT COVERED BY THE WARRANTY

- 1. This warranty shall NOT apply under the followng conditions:
 - (i) With respect to vendor warranty items such as tires, tubes and attachments.
 - (ii) If the unit has been subject to misapplication, abuse, misuse, negligence of proper maintenance or other negligence, fire or other accident.
 - (iii) If parts other than those made or marketed by Ford New Holland Inc. or Ford New Holland Canada Ltd., have been used in connection with the unit and in the sole judgment of the Company such use affects its performance, stability or reliability.
 - (iv) If the unit has been altered or repaired outside of a Ford New Holland dealership in a manner which, in the sole judgment of the Company, affects its performance, stability or reliability.
 - (v) With respect to batteries which are covered by a separate pro rata adjustment warranty.

- 2. This warranty shall NOT apply to normal maintenance services (such as tune-ups, fuel injection system cleaning and wheel, brake and clutch adjustments), to normal replacement of service items (such as filters and brake or clutch linings), or to normal deterioration due to use or exposure (such as belts and exterior finish).
- 3. This warranty shall **NOT** apply to any Product which is distributed by anyone other than Ford New Holland Inc. or Ford New Holland Canada Ltd., through its authorized dealer. This warranty shall **NOT** apply to any Product which is normally operated outside of the United States and/or Canada.

LIMITATIONS, INCLUDING DISCLAIMER OF IMPLIED WARRANTIES AND CONSEQUENTIAL DAMAGES

This warranty gives you specific legal rights and you may also have other rights which vary according to state and provincial law.

Ford New Holland Inc. or Ford New Holland Canada Ltd., does not authorize any person to create for it any other obligation or liability in connection with these products. TO THE EXTENT ALLOWED BY LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS APPLICABLE TO THIS PRODUCT IS LIMITED TO THE STATED DURATION OF THIS WRITTEN WARRANTY. NEITHER THE COMPANY NOR THE SELLING DEALER SHALL BE LIABLE FOR LOSS OF THE USE OF THE PRODUCT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR CONSEQUENTIAL DAMAGES.

Some states and/or provinces do not allow limitations on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

The remedy of repair or replacement of a defective part during the warranty period herein specified shall be the purchaser's exclusive remedy.

RIGHT TO MAKE DESIGN CHANGES

The Company reserves the right to make changes in the design and other changes in its products at any time and from time to time without notice and without incurring any obligation with respect to any product previously ordered from it, sold or shipped by it.

EXTENDED SERVICE PLAN (ESP)

The optional Extended Service Plan is available: Yes No

When available, the Extended Service Plan has been explained to me and:

I accept and have signed the completed registration form

□ I decline the Extended Service Plan

PROTECTIVE EQUIPMENT

A Roll Over Protective Structure (ROPS) and seat belt are provided as standard equipment on all Ford brand agricultural tractors and we strongly recommend their use. Customers who elect to remove or not use this equipment do so at their own risk.

- I acknowledge the existence of OSHA regulations pertaining to ROPS.
- A PTO master shield has been furnished with delivery of the machine.
- The correct Operator's Manual has been furnished. ______
- Safety precautions were explained to me by the selling dealer. ______



FORD NEW HOLLAND INC. AND FORD NEW HOLLAND CANADA LTD.

WARRANTY AND LIMITATION OF LIABILITY - 3430, 3930, 4630 and 4830 TRACTORS

COVERAGE PROVIDED

Ford New Holland Inc. or Ford New Holland Canada Ltd., hereinafter called the "Company" warrants to the retail purchaser of each new Ford brand Product (as listed below) that the Selling Dealer will repair or replace any part thereof found to be defective in materials or workmanship within the following period:

BASIC WARRANTY

Warranty Period

Agricultural Tractor, Models 3430, 3930, 4630 and 4830 12 Months

Extended Power Train Warranty

Selected power train components are covered for a period of 24 months provided that the tractor has not been used more than a total of 1,500 hours. The power train components covered by this warranty consist of the following:

ENGINE – The rocker arm cover, cylinder head, engine block, crankcase pan and timing gear cover of the engine, and the parts fully enclosed within these units.

TRANSMISSION AND REAR AXLE – The clutch housing, transmission case, dual power housing, differential housing, final drive housings, transfer case, front wheel drive housing and parts fully enclosed within these housings, including the drive axles, but excluding the hydraulic lift cover and its components.

The warranty period will begin on date of original retail sale or date of original use, whichever is earlier.

- The obligation of the Company to the purchaser under this warranty is limited to the repair or replacement of defective parts, which will be made free of charge for both parts and labor using Ford New Holland service parts. Repair or replacement in accordance with this warranty shall constitute fulfillment of all liabilities of the Company and the selling dealer in respect of such products.
- Repairs or replacements will be performed by the Selling Dealer, following delivery of the Product by the purchaser to the Selling Dealer's place of business.
- If the purchaser has moved a long distance from the Selling Dealer, any Ford New Holland dealer authorized to sell and service Ford brand Products may perform the repair at its dealership.
- The Selling Dealer shall review these warranty provisions with the purchaser prior to retail sale, secure his acknowlegement of delivery of this warranty and record the date of original retail sale or date of original use.

WHAT IS NOT COVERED BY THE WARRANTY

- 1. This warranty shall NOT apply under the followng conditions:
 - (i) With respect to vendor warranty items such as tires, tubes and attachments.
 - (ii) If the unit has been subject to misapplication, abuse, misuse, negligence of proper maintenance or other negligence, fire or other accident.
 - (iii) If parts other than those made or marketed by Ford New Holland Inc. or Ford New Holland Canada Ltd., have been used in connection with the unit and in the sole judgment of the Company such use affects its performance, stability or reliability.
 - (iv) If the unit has been altered or repaired outside of a Ford New Holland dealership in a manner which, in the sole judgment of the Company, affects its performance, stability or reliability.
 - (v) With respect to batteries which are covered by a separate pro rata adjustment warranty.

- 2. This warranty shall NOT apply to normal maintenance services (such as tune-ups, fuel injection system cleaning and wheel, brake and clutch adjustments), to normal replacement of service items (such as filters and brake or clutch linings), or to normal deterioration due to use or exposure (such as belts and exterior finish).
- 3. This warranty shall NOT apply to any Product which is distributed by anyone other than Ford New Holland Inc. or Ford New Holland Canada Ltd., through its authorized dealer. This warranty shall NOT apply to any Product which is normally operated outside of the United States and/or Canada.

LIMITATIONS, INCLUDING DISCLAIMER OF IMPLIED WARRANTIES AND CONSEQUENTIAL DAMAGES

This warranty gives you specific legal rights and you may also have other rights which vary according to state and provincial law.

Ford New Holland Inc. or Ford New Holland Canada Ltd., does not authorize any person to create for it any other obligation or liability in connection with these products. TO THE EXTENT ALLOWED BY LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS APPLICABLE TO THIS PRODUCT IS LIMITED TO THE STATED DURATION OF THIS WRITTEN WARRANTY. NEITHER THE COMPANY NOR THE SELLING DEALER SHALL BE LIABLE FOR LOSS OF THE USE OF THE PRODUCT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR CONSEQUENTIAL DAMAGES.

Some states and/or provinces do not allow limitations on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

The remedy of repair or replacement of a defective part during the warranty period herein specified shall be the purchaser's exclusive remedy.

RIGHT TO MAKE DESIGN CHANGES

The Company reserves the right to make changes in the design and other changes in its products at any time and from time to time without notice and without incurring any obligation with respect to any product previously ordered from it, sold or shipped by it.

EXTENDED SERVICE PLAN (ESP)

The optional Extended Service Plan is available: $Yes \square$ No \square When available, the Extended Service Plan has been explained to me and:

I accept and have signed the completed registration form

□ I decline the Extended Service Plan

PROTECTIVE EQUIPMENT

A Roll Over Protective Structure (ROPS) and seat belt are provided as standard equipment on all Ford brand agricultural tractors and we strongly recommend their use. Customers who elect to remove or not use this equipment do so at their own risk.

- I acknowledge the existence of OSHA regulations pertaining to ROPS.
- A PTO master shield has been furnished with delivery of the machine. ______
- The correct Operator's Manual has been furnished.
- Safety precautions were explained to me by the selling dealer.

ACKNOWLEDGEMENT

The blank spaces under "Protective Equipment" have been filled in and are correct, and I acknowledge that I have read and accept this Warranty and Limitation of Liability.

Purchaser		Model	
	SIGNATURE		
Date		Serial No.	

ROPS



Ford Safety Cab (ROPS)

SAFETY CAB/ROPS

A safety cab incorporating a Roll Over Protective Structure (ROPS) and seat belt were standard equipment for the tractor at time of factory assembly. The seat belt, when used by the operator, maximises the protection offered by the ROPS. Always use your seat belt when the ROPS is installed – seat belts save lives when they are used. Do not use your seat belt if the ROPS is not installed on the tractor.

If the tractor has been modified and the cab/ROPS removed, it is recommended that you equip your tractor with a Roll Over Protective Structure and seat belt. ROPS, when used with a seat belt, are effective in reducing injuries during tractor overturn accidents. Overturning a tractor without a ROPS can result in serious injury or death.

Information regarding the safety cab/Roll Over Protective Structure and seat belt are available from your Ford New Holland dealer.

ROPS MAINTENANCE AND INSPECTION

After the first 20 hours of operation and every 300 hours of operation (or six months, whichever comes first):

1. Check the torque of the ROPS/safety cab mounting bolts. Tighten, if necessary, to 180 - 220 lbf.ft. (244 - 298 Nm).

2. Check the operator's seat mounting bolts and the seat belt mounting points. Tighten bolts to torque and replace any worn or damaged parts.

DAMAGE TO THE SAFETY CAB/ROPS

If the tractor has rolled over or the safety cab/ROPS has been damaged (such as striking an overhead object during transport), it must be replaced to provide the original protection.

After an accident, check for damage to the (1) ROPS/cab, (2) operator's seat, (3) seat belt and seat belt mountings. Before you operate the tractor, replace all damaged parts.

DO NOT TRY TO WELD OR STRAIGHTEN THE ROPS.


WARNING: Never attach chains, ropes or cables to the ROPS/cab for pulling purposes; this will cause the tractor to tip backwards. Always pull from the tractor drawbar. Be careful when driving through door openings or under low overhead objects. Make sure there is sufficient overhead clearance for the ROPS/cab.

WARNING: If the ROPS/cab is removed or replaced, make certain that the proper hardware is used to replace the ROPS and the recommended torque values are applied to the attaching bolts.

WARNING: Always wear your seat belt if the tractor is equipped with a ROPS/cab. Do not use the seat belt if the ROPS/ cab is removed from the tractor.

SAFETY DECALS

Replace all missing, damaged or illegible decals.

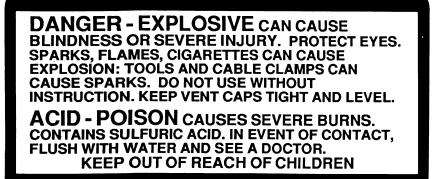

Part No. E9NN-10K694-DA Location: Top of battery

WARNING

• Start engine only from operators seat. If safety start switch is bypassed engine can start with transmission in gear.

 Do not connect or short across terminals on starter solenoid.

 Attach booster cables as shown on battery decal and operators manual.

Starting in gear causing runaway can result in serious injury.

EINN-16A901-EA

Part No. E1NN-16A901-EA Location: Starting motor



Part No. E4NN–7Z273–DA Location: Left–hand window

WARNING

- Before starting and operating
 - Know the operating and safety instruction in the operator's manual and on the tractor.
 - Clear the area of bystanders.
 - Locate and know operation of controls.
 - Fasten your seat belt.
- Start engine only from operators seat with transmission in neutral, PTO disengaged and hydraulic controls in lowered position.
- Avoid accidental contact with gear shift lever while the engine is running. Unexpected tractor movement can result.
- Slow down on turns, rough ground and slopes to avoid upset.
- Do not permit anyone but the operator to ride on the tractor. There is no safe place for riders.
- Lock brakes together, use warning lights and SMV emblem while driving on roads.
- Lower equipment, place gear shift levers in neutral, stop engine and apply parking brake before leaving tractor seat.

FAILURE TO FOLLOW ANY OF THE INSTRUCTIONS ABOVE CAN CAUSE SERIOUS INJURY TO THE OPERATOR OR OTHER PERSONS.

(Replacement manuals are available from your Ford New Holland dealer or from Ford New Holland service publications - 500 Diller Avenue - New Holland, Pennsylvania 17557)

FONN-16A901-AA

Part No. F0NN-16A901-AA Location: Right-hand 'B' pillar



Part No. E1NN-16A901-BA Location: Rear axle housing – right-hand side

ATTENTION

Do not tow tractor unless Shuttle and Main levers are in NEUTRAL and range lever is in High

Part No. E9NN-16A901-JA Location: Right-hand 'B' pillar

9NN-16A901



Part No. D2NN-2K106-A Location: Handbrake lever



Part No. E9NN-10661-BA Location: Top of battery



Part No. D8NN-8653-AB Location: Both sides of radiator shroud

SAFETY PRECAUTIONS

A careful operator is the best operator. Most accidents can be avoided by observing certain precautions. To help prevent accidents, read and take the following precautions before operating the tractor. Equipment should be operated only by those who are responsible and instructed to do so.

THE TRACTOR

1. Read the Operator's Manual carefully before using the tractor. Lack of operating knowledge can lead to accidents.

2. Only allow properly trained and qualified persons to operate the tractor.

3. Use an approved roll bar and seat belt for safe operation. Overturning a tractor can result in death or injury. If your tractor is not equipped with a ROPS and seat belt, see your Ford New Holland dealer.

4. If a front end loader is to be installed, a FOPS canopy is recommended to avoid injury from falling objects.

5. To prevent falls, use the handholds and step plates when getting on and off the tractor. Keep steps and platform clear of mud and debris.

6. Do not permit anyone but the operator to ride on the tractor unless a passenger seat is fitted. There is no safe place for extra riders otherwise.

7. Replace all missing, illegible or damaged safety decals.

8. Keep safety decals free of dirt or grime.

SERVICING THE TRACTOR

1. The cooling system operates under pressure which is controlled by the radiator cap. It is dangerous to remove the cap while the system is hot. Always turn the cap slowly to the first stop and allow the pressure to escape before removing the cap entirely.

2. Do not smoke while refuelling the tractor. Keep any type of open flame away. Wait for the engine to cool before refuelling.

3. Keep the tractor and equipment, particularly brakes and steering, maintained in a reliable and satisfactory condition to ensure your safety and comply with legal requirements.

4. To prevent fire or explosion, keep open flames away from battery or cold weather starting aids. To prevent sparks which could cause explosion, use jumper cables according to instructions.

5. Stop the engine before performing any service on the tractor.

6. Escaping diesel/hydraulic fluid under pressure can penetrate the skin causing serious injury.

• **DO NOT** use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks.

• Stop the engine and relieve pressure before connecting or disconnecting lines.

• Tighten all connections before starting the engine or pressurizing lines.

• If fluid is injected into the skin obtain medical attention immediately or gangrene may result.

7. Do not modify or alter or permit anyone else to modify or alter the tractor or any of its components or any tractor function without first consulting a Ford New Holland dealer.

8. The fuel oil in the injection system is under high pressure and can penetrate the skin. Unqualified persons should not remove or attempt to adjust a pump, injector, nozzle or any other part of the fuel injection system. Failure to follow these instructions can result in serious injury.

9. Continuous long term contact with used engine oil may cause skin cancer. Avoid prolonged contact with used engine oil. Wash skin promptly with soap and water.

10. Tractor wheels are very heavy. Handle with care and ensure, when stored, that they cannot topple and cause injury.

11. Some components on your tractor, such as gaskets and friction surfaces (brake linings, clutch linings, etc.), may contain asbestos. Breathing asbestos dust is dangerous to your health. You are, therefore, advised to have any maintenance or repair operations on such components carried out by an authorized Ford New Holland dealer. If, however, service operations are to be under–

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com