


# FORD

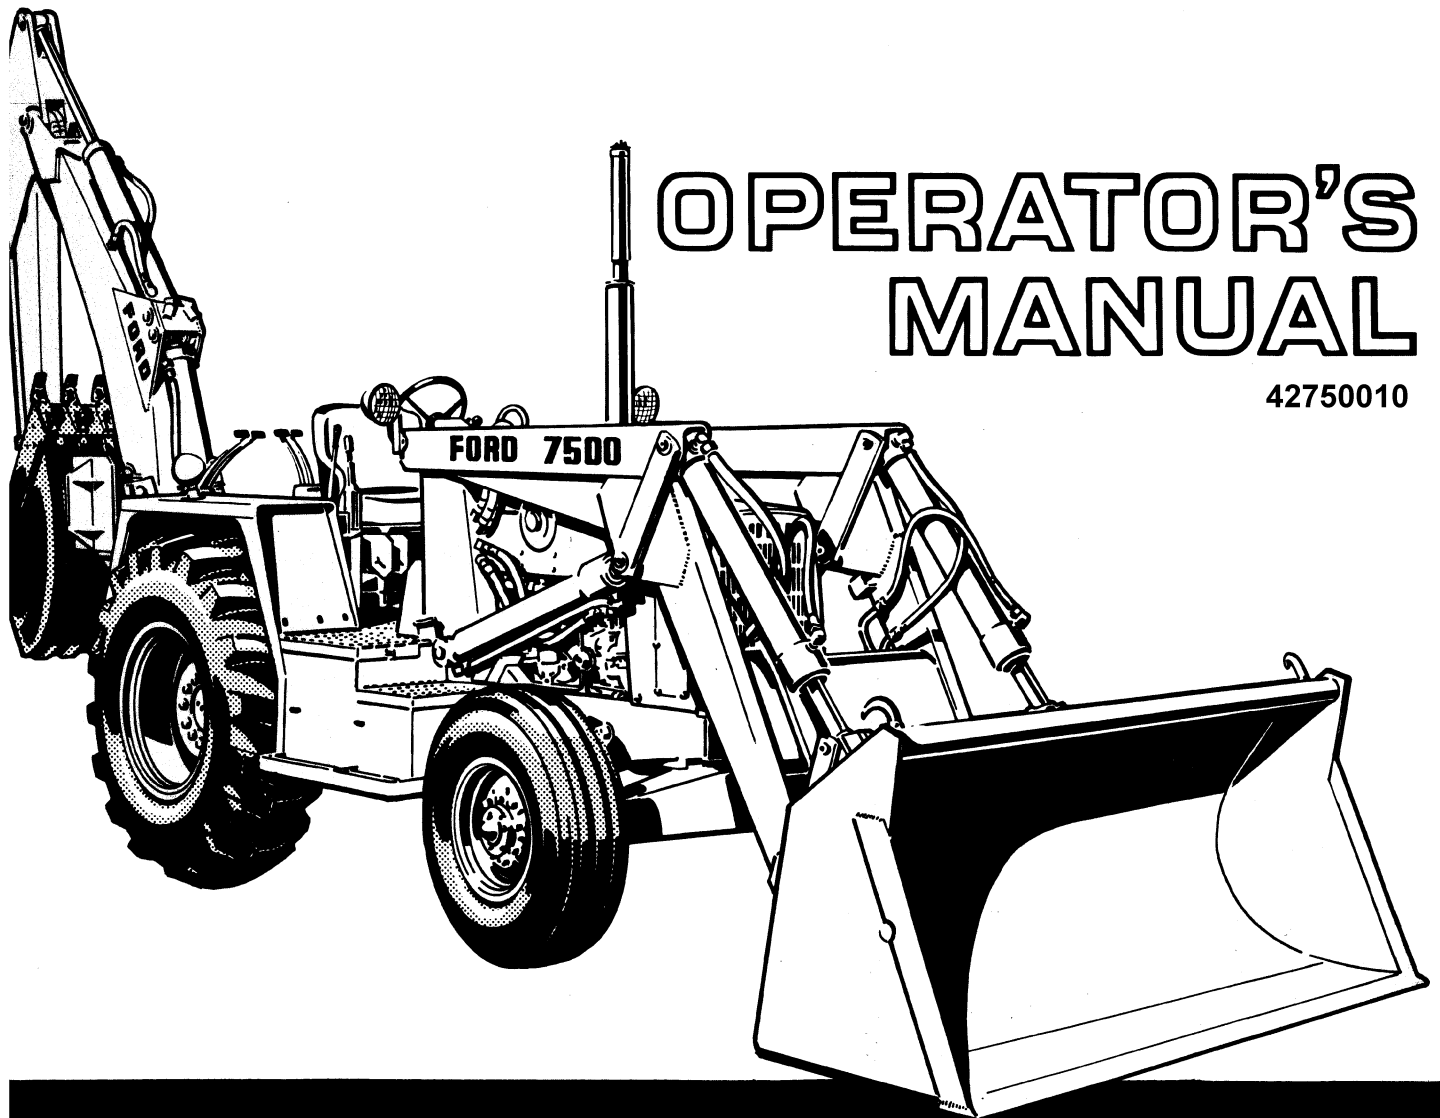

## OPERATOR'S MANUAL

42750010

# 7500

TRACTOR-LOADER-BACKHOE

Reprint

# FOREWORD

This manual has been prepared to assist you in the proper break-in, daily care, and operation of your new Ford 7500 Tractor-Loader-Backhoe. It contains specific information on its many features; the attachments that are available; instructions for making minor repairs and adjustments; safety precautions; general specifications; suggested operating techniques; and your Tractor Warranty.

Your Ford 7500 has been carefully inspected before leaving the factory and also by your Ford Tractor-Equipment Dealer, prior to delivery, to see that it is "ready to go." To keep it in this "ready to go" condition, it is important to follow regularly scheduled service periods as recommended in this manual.

Any references to right, left, front or rear, when referring to the loader or tractor portions of the Ford 7500, is as viewed from the operator's seat when the seat is facing forward for forward travel. When referring to the backhoe portion of the Ford 7500, all references to left and right are viewed from the operator's seat while facing rearward, which is normal for backhoe operation.

When ordering parts, whether they be for the tractor, loader, or backhoe portion of the Ford 7500, left and right is established as viewed from behind the entire unit.

The Ford 7500 serial number is important should your unit require future service. Have your Dealer record this number, along with the other information called for in the spaces below.

Read this manual carefully before operating your Ford 7500 and keep it in a convenient location for future reference. If, at any time, you have a service problem concerning your new Ford 7500, remember that your Ford Tractor-Equipment Dealer has factory trained service personnel, genuine Ford parts, and the necessary tools and equipment to best satisfy your service needs.

Ford Tractor Operations

Ford Motor Company

ISSUED TO:

ISSUED BY:

\_\_\_\_\_  
Owner's Name

\_\_\_\_\_  
Ford Tractor-Equipment Dealer

\_\_\_\_\_  
Mailing Address

\_\_\_\_\_  
City

\_\_\_\_\_  
City

\_\_\_\_\_  
State

\_\_\_\_\_  
State

\_\_\_\_\_  
Delivery Date

\_\_\_\_\_  
Ford 7500 Serial Number


## PLEASE READ CAREFULLY

The Warranty on page ii explains the coverage that is extended to your Ford 7500 during the warranty period. After you read the warranty ask your dealer to explain any points that you may not understand.

For a complete list of the pre-delivery service checks performed by your dealer, refer to PRE-DELIVERY SERVICE on the upper portion of pages 71 and 73. The copy on page 71 is your record of the service performed, and the copy on page 73, which is to be removed from the manual, is your dealer's record. MAKE SURE THAT YOU AND THE DEALER SIGN BOTH COPIES.

After you have operated your tractor for fifty hours, take the manual and your tractor to your dealer. He will then perform the factory recommended 50-HOUR SERVICE as listed on the lower portion of pages 71 and 73—without charge—except for lubricants, hydraulic oil, or filters replaced as part of normal maintenance. MAKE SURE THAT YOU AND THE DEALER SIGN BOTH COPIES.

A vehicle identification plate is located on the inside of the tool box. The numbers on the plate are important should your tractor require future service. For your convenience, have your dealer record the numbers in the appropriate space below.

	
TRACTOR NUMBER	
<input type="text"/>	
MODEL	UNIT
<input type="text"/>	<input type="text"/>
ENGINE	
<input type="text"/>	
TRANSMISSION	REAR AXLE
<input type="text"/>	<input type="text"/>
HYDRAULIC PUMP	HYDRAULIC LIFT
<input type="text"/>	<input type="text"/>



## Warranty and Limitation of Liability Ford Tractors and Equipment

### COVERAGE PROVIDED

Ford Motor Company and the Selling Dealer jointly warrant to the original purchaser with respect to each Ford Tractor, Ford Implement or piece of Ford Equipment that for the periods specified herein, the Selling Dealer will repair or replace any part that is found to be defective in factory materials or workmanship.

Tractors designated for agricultural use .....	12 Months
Self-propelled combines and attachments .....	12 Months
Garden tractors, rider mowers and related attachments .....	12 Months
Except commercial usage in which case coverage is .....	90 Days
Tractors and related equipment designated for industrial usage .....	6 Months
Agricultural implements except self-propelled combines and attachments .....	6 Months

- The warranty period will begin on the date of original retail delivery or date of original use, whichever is earlier.
- The obligation of Ford and the Selling Dealer under this warranty is limited to repairs or replacements which will be made free of charge for both parts and labor using Ford service parts.
- The repairs or replacements will be performed by the Selling Dealer following delivery of the unit by the customer to the dealer's place of business in the United States.
- If the owner is traveling or has moved a long distance from the Selling Dealer, any authorized Ford Tractor and Equipment Dealer will perform the repairs.
- The Selling Dealer shall review these warranty provisions with his customer, secure his customer's acknowledgement of delivery of this warranty and record the date of original retail delivery.

### WHAT IS NOT COVERED BY THE WARRANTY

1. This warranty shall NOT apply to any Ford Tractor, Ford Implement or Ford Equipment:
  - (i) With respect to vendor warranted items such as tires and tubes and attachments, or to batteries which are covered by the Ford Parts and Accessories Warranty.
  - (ii) With respect to vendor warranted items on the Series 340 Compact Loader which includes engine, battery, tires and tubes and attachments.
  - (iii) If it has been subject to misapplication, abuse, misuse, negligence, or fire or other accident, or
  - (iv) If parts not made or supplied by Ford have been used in connection with it if, in the sole judgment of Ford, such use affects its performance, stability or reliability, or
  - (v) If it has been altered or repaired outside of a Ford location in a manner which, in the sole judgment of Ford, affects its performance, stability or reliability.
2. This warranty shall NOT apply to normal maintenance services (such as tune-ups, fuel system cleaning and wheel, brake and clutch adjustments) or to normal replacement of service items (such as filters and brake or clutch linings) or to normal deterioration due to use and exposure (such as belts and exterior finish).
3. This warranty shall NOT apply to any Ford unit which is distributed by anyone other than Ford Tractor and Equipment Operations - North America through its dealers in the United States. This warranty shall NOT apply to any Ford unit which is normally operated outside of the United States.

### DISCLAIMER OF IMPLIED WARRANTIES

Except for personal injuries proven to have been caused by a defect, **THIS WARRANTY, to the extent allowed by law, IS EXPRESSLY IN LIEU OF any other express or implied warranty, condition or guarantee agreement or representation by any person with respect to any Ford Tractor, Ford Implement or Ford Equipment or any part thereof, including ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS.**

- Ford Motor Company and its authorized dealers will not assume any responsibility under this warranty for any loss of use of the unit, loss of time, inconvenience, commercial loss or consequential damages.
- No person is authorized to make any representations beyond those expressed herein.

### RIGHT TO MAKE DESIGN CHANGES

Ford Motor Company reserves the right to make changes in the design of and other changes in its products at any time and from time to time without notice and without incurring any obligation with respect to any product previously ordered from it or sold or shipped by it.

# CONTENTS

<b>Safety precautions</b>	<b>2</b>
<b>Controls and instruments</b>	<b>3</b>
general	4
brake and rear axle controls	8
transmission controls	9
loader controls	11
backhoe controls	11
<b>Operation</b>	<b>15</b>
break-in procedures	16
starting the engine	16
weighting limitations	20
loader operation	21
backhoe operation	27
loader and backhoe attachments	34
<b>Lubrication and maintenance</b>	<b>39</b>
lubrication and maintenance chart	40
fuels and lubricants	41
fuel and lubricant service procedures	43
general maintenance	52
hydraulic hoses and tubing	62
storing the Ford 7500	63
<b>Specifications</b>	<b>65</b>
pre-delivery and 50-hour service	66

# SAFETY PRECAUTIONS

A careful operator is the best operator. Most accidents can be avoided by observing certain precautions to prevent the possibility of injury or damage. The following precautions are suggested to help prevent accidents. Read them carefully before operating your new Ford 7500.

1. Read this manual carefully to acquaint yourself with the Ford 7500. Working with unfamiliar equipment can lead to accidents.
2. Use the hand holds when getting on and off the Ford 7500.
3. For safe operation, observe proper maintenance and repair of all pivot pins, hydraulic cylinders, hoses, snap rings, and main attaching bolts prior to each day's operation.
4. If the unit is equipped with a rollbar or safety cab, always fasten the seat belt before starting the engine.
5. Keep the operator's platform free of debris.
6. Do not bypass the safety starter switch. Consult your Ford Tractor-Equipment Dealer if your safety starter controls are malfunctioning.
7. Always be sure of water, gas, sewage, and electrical line locations before you start to dig.
8. Never start the engine while standing beside the unit. Always start the engine while sitting in the operator's seat.
9. Never run the engine in a closed building without adequate ventilation, as the exhaust fumes are very dangerous.
10. Do not permit anyone to ride on the Ford 7500 with the operator.
11. Operate the loader or backhoe controls only when properly seated at the control consoles.
12. Never attempt to lift loads in excess of loader or backhoe capacity.
13. Never allow anyone to get under the loader or backhoe buckets, or reach through the lift arms when the buckets are raised.
14. Always be watchful of bystanders when operating the loader, when lowering the stabilizers, or when operating the backhoe.
15. Use care when operating on steep grades to maintain proper stability, also drive at speeds compatible with safety, especially when operating over rough ground, crossing ditches, slopes, or when turning.
16. To prevent upsets, avoid full reach and swinging a loaded backhoe bucket to the downhill side when operating on a slope.
17. Watch out for overhead and underground high-voltage electrical lines when operating the backhoe.
18. Exercise caution when operating the loader with a raised loaded bucket or fork.
19. Always carry the loader bucket low for maximum stability and visibility, whether the bucket is loaded or empty.
20. Always use the headlamps and work lamps for night work.
21. Always lower the loader and backhoe buckets to the ground, shut off the engine and apply the hand brake before getting off the unit. Never get off the unit while it is in motion.
22. Always apply the hand brake and remove the starter key when leaving the unit parked or unattended.
23. Never leave the unit when it is parked on an incline. Always park the unit on level ground where possible. If the unit is to be parked on an incline, always lower the buckets so that the cutting lips contact the ground, apply the hand brake, and securely block the wheels.
24. Always check overhead clearance, especially when transporting the unit.
25. Always attach the backhoe transport chains before transporting the Ford 7500.
26. Never attach chains, ropes, or cables to the rollbar for pulling purposes, as the unit can tip rearward.
27. When necessary to tow the Ford 7500, do not exceed 5 mph (8.0 kph).
28. When traveling on public roads, use accessory lights and devices for adequate warning to operators of other vehicles.
29. Do not lubricate or make mechanical adjustments while the unit is in motion or when the engine is running. However, if minor engine adjustments must be made, apply the hand brake, securely block the wheels, and use extreme caution.
30. Never make repairs or tighten hydraulic hoses or fittings when the system is under pressure, when the engine is running, or when the loader or backhoe cylinders are under a load.
31. Never refuel the Ford 7500 while smoking or when the engine is hot or running.
32. Always keep the brakes and power steering system in good operating condition.


Whenever you see this symbol



it means:

**ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!**

# CONTROLS and INSTRUMENTS

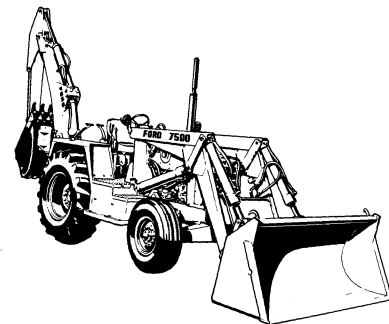

The controls on your new Ford 7500 are designed for efficient operation and are located within comfortable reach of the operator, thereby reducing operation fatigue.

All instruments are centrally located so that you can tell at a glance whether the unit is operating properly. The instruments also warn you of possible trouble before it becomes serious.

Before attempting to start or operate your new Ford 7500, familiarize yourself with the location and function of all controls and instruments as described on the following pages.

Know your controls and instruments  
 to assure Safe Operation. 

# —CONTROLS AND INSTRUMENTS—

## GENERAL

### OPERATOR'S SEAT

Your new Ford 7500 is equipped with a "turnabout" type seat, Figure 1. It can be adjusted forward or rearward a maximum of seven inches (17.8 cm) by moving the seat release lever. The height can also be changed two inches (5.0 cm) to suit the operator by loosening the height adjustment knob.

Once the seat is adjusted for operator comfort, in the loader operating position, it can be turned to the backhoe position by releasing the seat release lever. See Figures 2 and 3. Once the seat is adjusted for loader operation it will usually suit the operator for backhoe operation without additional adjustments.

### ROLL OVER PROTECTIVE FRAMES (OPTIONAL)

The Ford 7500 is available with a safety frame cab and seat belt, Figure 4, or a 4-post protective frame and seat belt. Remember, the safety offered by the protective frames will be minimized if your seat belt is not buckled. Always use your seat belt — they save lives. DO NOT use the seat belt if the safety frame cab or 4-post protective frame has been removed from the tractor.

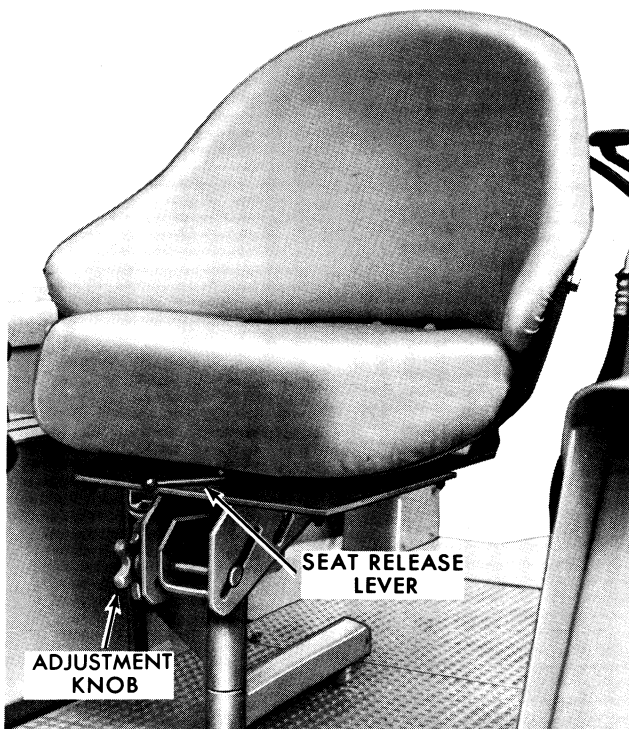


Figure 1  
Operator's Seat

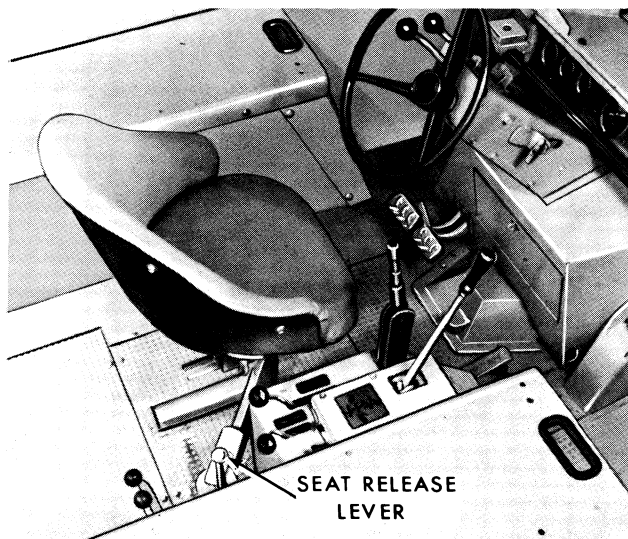


Figure 2  
Operator's Seat—Traveling and Loader Position



**CAUTION:** Never attach chains, ropes, or cables to the roll over protective frames for pulling purposes. This is very dangerous, as the tractor will tip backward. Always pull from the tractor drawbar or from a point below the rear axle. Be careful when driving through door openings or under low overhead objects. Make sure there is sufficient clearance for the roll over protective frames to clear the structure or object.

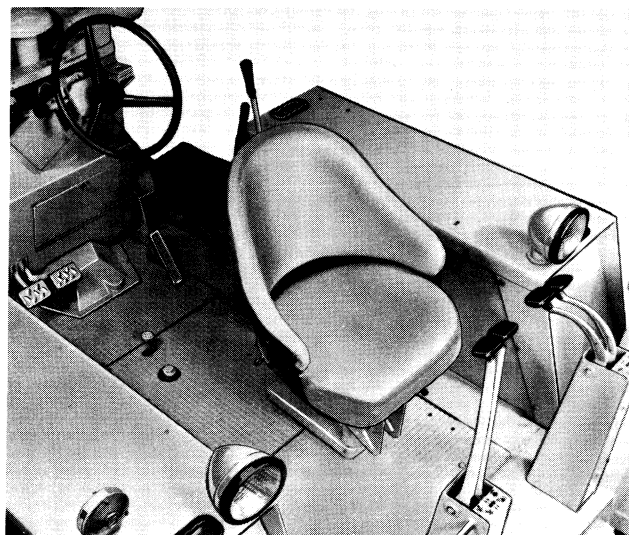


Figure 3  
Operator's Seat—Backhoe Position



Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)