

**Magnum 235
Magnum 260
Magnum 290
Magnum 315
Magnum 340**

Tractor

from PIN ZCRD05700 and after

OPERATOR'S MANUAL

Part number 47378333

1st edition English
June 2012



Contents

1 GENERAL INFORMATION

Your tractor	1-1
Declaration of conformity	1-2
Tractor intended use	1-4
Engine tampering	1-4
Electro-Magnetic Compatibility (EMC)	1-5
Manual scope	1-6
Manual storage	1-7
Product identification	1-8
Machine orientation	1-10
Component location	1-11

2 SAFETY INFORMATION

Safety rules	2-1
Safety rules - General	2-2
Safety rules - Air conditioning system	2-2
Safety rules - Basic operating	2-3
Safety rules - Battery	2-3
Safety rules - Driving on public roads	2-4
Safety rules - Electrical storm safety	2-4
Safety rules - Fire prevention	2-4
Safety rules - Front end loader	2-5
Safety rules - General maintenance	2-5
Safety rules - Hazardous chemicals	2-6
Safety rules - Implements, tools and trailers	2-7
Safety rules - Instructional seat	2-7
Safety rules - Mounting and dismounting	2-7
Safety rules - Operator presence system	2-8
Safety rules - Power Take-Off (PTO) operation	2-8
Safety rules - Roll over and tip over	2-8
Safety rules - Utility power lines	2-9
Safety rules - Vehicle vibration	2-9
Safety rules - Wheels and tires	2-10
Roll Over Protective Structure (ROPS)	2-11
Cab protection	2-12
Noise levels	2-13
Vehicle vibration levels	2-14
Fire extinguisher	2-15
Emergency exit	2-15
Wheel wedges	2-16
Safety signs	2-17
Selective Catalytic Reduction (SCR) decal	2-30
Ecology and the environment	2-31
Safety aspects	2-32

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Tractor access	3-1
Lower step	3-2

OPERATOR'S SEAT

Overview	3-3
Control identification	3-4

INSTRUCTOR'S SEAT

Overview	3-7
----------------	-----

FORWARD CONTROLS

Steering column	3-8
Front console	3-11
Pedal controls	3-13

LEFT-HAND SIDE CONTROLS

Emergency brake lever	3-15
-----------------------------	------

RIGHT-HAND SIDE CONTROLS

Armrest console	3-16
Multi function handle	3-17
Control panel	3-21
Remote valve controls	3-29
Joystick	3-30
Armrest compartment	3-32
Adjusting the armrest console	3-34

REARWARD CONTROLS

Fender console	3-35
Automatic temperature controls	3-38
Automatic temperature control system	3-41
Ventilation	3-42

OVERHEAD CONTROLS

Interior lamps	3-44
----------------------	------

EXTERIOR CONTROLS

Rear fender controls	3-45
Front hitch	3-47

INSTRUMENT CLUSTER

Overview	3-48
Gauges	3-49
Status and warning icons	3-50

Upper display	3-53
Lower display	3-55
Keypad	3-57
Setup menu.....	3-59
Rear tire radius chart	3-65
Adjust menu	3-66
Performance instrumentation.....	3-73

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Before starting the engine	4-1
----------------------------------	-----

STARTING THE UNIT

Normal engine starting	4-3
Cold starting aids	4-7
Cold temperature operation	4-9

STOPPING THE UNIT

Stopping the engine	4-11
---------------------------	------

MOVING THE UNIT

Powershift transmission	4-12
Best practices for prolonged transmission life.....	4-13
Inching pedal and throttle.....	4-14
Transmission controls	4-15
Upper display.....	4-18
Driving the vehicle.....	4-20
Setting default gears	4-25
Automatic Productivity Management (APM).....	4-27
Mechanical Front Drive (MFD)	4-34
Suspended axle	4-38
Ride control.....	4-46
Constant engine speed.....	4-48
Electronic end of row system.....	4-51

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Tractor warning lamps	5-1
Safe transport speed	5-3

SHIPPING TRANSPORT

Securing the tractor for shipping	5-4
---	-----

RECOVERY TRANSPORT

Safety rules	5-5
Towing the tractor	5-6

6 WORKING OPERATIONS

GENERAL INFORMATION

Overview	6-1
----------------	-----

REAR POWER TAKE-OFF (PTO)

Safety rules	6-2
Connecting the Power Take-Off (PTO)	6-6
Interchangeable Power Take-Off (PTO) shaft	6-7
Rear Power Take-Off (PTO) operation	6-13
Power Take-Off (PTO) fender switch operation	6-17
Auto Power Take-Off (PTO) operation	6-18

FRONT POWER TAKE-OFF (PTO)

Overview	6-21
Front Power Take-Off (PTO) operation	6-22

REAR HITCH

Identification	6-25
Link adjustment	6-26
Hitch high clearance adjustment	6-30
Hydraulic links	6-33
Sway limiter adjustment	6-35
Automatic telescoping stabilizers	6-36
Lower link block adjustment	6-38
Mechanical float adjustment	6-40
Hitch operation	6-41
Hitch remote switch operation	6-46
Load control operation	6-48
Hitch set point	6-50

FRONT HITCH

Overview	6-52
Front hitch operation	6-53

DRAWBARS AND TOWING ATTACHMENTS

Drawbars and towing hitches - Safety rules	6-59
Drawbar capacity/position	6-61
Adjusting the drawbar	6-63

TRAILER HITCHES

Clevis and special drawbars	6-65
Automatic trailer hitch	6-67

Auto pickup hitch operation	6-70
Manual trailer hitch	6-72

AUXILIARY POWER CONNECTIONS

Auxiliary power and lighting	6-74
Cab power connections	6-76

HYDRAULIC REMOTE CONTROL VALVES

Valve couplers and connections	6-78
Motor return circuit	6-81
Power beyond circuit	6-82
Flow capacity	6-83
Hydraulic transport lock	6-84
Operating the controls	6-85
Remote valve display screens	6-89
Remote hydraulic auto mode	6-93
Auto depth control	6-95
Joystick operation	6-97

BALLASTING THE TRACTOR

Guidelines	6-100
Tire load and inflation charts	6-104
Weights, cast metal and liquid	6-105
Wheel slip and power hop performance	6-113

MECHANICAL FRONT DRIVE (MFD) AXLES

Tire combinations and tread positions	6-116
Steering and oscillation stops	6-121
Tread and fender settings - standard axles	6-124
Tread and fender settings - heavy duty axles	6-125
Tread and fender settings - heavy duty class 5 axles	6-126
Tread and fender settings - heavy duty class 5 suspended axles	6-127
Tread and fender settings - scissors suspended axles	6-129

REAR AXLE

Rear wheel installation	6-130
Rear wheel tread settings	6-132

7 MAINTENANCE

GENERAL INFORMATION

Safety rules	7-1
Opening the hood	7-3
Closing the hood	7-4
Filling the fuel tank	7-5
Battery access and service	7-6
Tire and rim service	7-8

Tractor jacking points	7-10
Capacities	7-12
Consumables - Engine oil	7-14
Consumables - Diesel fuel	7-16
Consumables - Coolant solutions	7-17
Electrical component location	7-18
Lamps and bulbs	7-23
Maintenance chart notes	7-24

MAINTENANCE CHART

Maintenance Chart	7-25
-------------------------	------

At warning message display

Air filter service icon/message	7-27
Fuel filter water separator	7-28
Transmission oil filter switch	7-29
Hydraulic oil filter switch	7-31

First 10 to 50 hours

Differential and planetary oil	7-33
Wheel bolt torque	7-33
Weight bolt torque	7-33

Every 10 hours or daily

Engine oil level	7-34
Transmission oil level	7-35
Engine coolant level	7-35
Engine auxiliary fuel filter	7-36
Air reservoir	7-36
Rear hitch and front axle	7-36

Every 50 hours or weekly

Engine fuel pre-filter	7-37
------------------------------	------

Every 100 hours

Front hitch	7-38
Front Power Take-Off (PTO) drive shaft	7-40

Every 300 hours

Battery water level (Note E)	7-41
Engine air intake hoses	7-43
Engine coolant level - deaeration tank	7-45
Wheel bolt torque	7-46
Weight bolt torque	7-46
Front axle (Note A)	7-47
Rear hitch (Note A)	7-55

Fuel tank.....	7-57
Differential and planetary oil level (Note B).....	7-58
Transmission oil pressure	7-60
Front Power Take-Off (PTO) oil level.....	7-61
Every 400 hours	
Cab air filter.....	7-62
Every 600 hours	
Engine oil and filter	7-65
Engine coolant antifreeze protection	7-67
Engine coolant hoses and clamps.....	7-67
Engine primary fuel filter.....	7-69
Engine fuel pre-filter	7-72
Fuel system bleeding.....	7-75
Changeable Power Take-Off (PTO) internal splines.....	7-77
Front Power Take-Off (PTO) oil and filter.....	7-78
Every 1000 hours or annually	
Pneumatic brake system dryer	7-80
Every 1200 hours or annually	
Differential and planetary oil.....	7-81
Engine air filters	7-86
Engine air precleaner.....	7-90
Every 1500 hours	
Transmission oil	7-92
Transmission oil filter	7-94
Regulated transmission filter	7-95
Engine crankcase filter	7-96
Every 2000 hours	
Engine coolant.....	7-100
Every 3000 hours	
Emergency steering system.....	7-103
Engine valve adjustment (Note C).....	7-103
As required	
Vehicle fire prevention	7-104
Engine primary air filter.....	7-105
Grille screen and radiator area	7-108
Fuel tank vent filter	7-110
Transmission clutch and accumulator.....	7-110

Tire pressure	7-110
Fan belt.....	7-111
Cab suspension, if equipped	7-115
Remote valve collection bottle.....	7-116
Emergency brake lever.....	7-117
Engine auxiliary fuel filter.....	7-118
Cab fabric and carpet.....	7-120
Seat belt	7-120

STORAGE

Tractor storage	7-121
Removal from storage	7-122

ELECTRICAL SYSTEM

Radio or audio system.....	7-123
Battery removal and installation	7-124
Auxiliary battery connections	7-126
Headlight	7-127
Flood and work light	7-130
Fender tail light and warning light	7-132
Roof front warning and work light	7-134
Rear roof warning light	7-137
High intensity work light	7-139
Side turn indicator light	7-141
Rotating beacon light	7-143
Number plate light	7-144
Interior light	7-145

8 TROUBLESHOOTING

ALARM(S)

Display warnings overview	8-1
Display warnings - Level 1	8-2
Display warnings - Level 2	8-5
Display warnings - Level 3	8-8
Display warnings - Level 4	8-10

SYMPTOM(S)

Engine symptoms	8-12
Transmission symptoms	8-14
Hydraulic symptoms	8-15
Hitch symptoms	8-16
Brake symptoms.....	8-17
Cab environment symptoms.....	8-18
Electrical power system symptoms.....	8-19

9 SPECIFICATIONS


Engine specifications	9-1
Power train specifications	9-2
Operating speeds.....	9-5
Vehicle dimensions and shipping weight	9-12
Maximum operating weight.....	9-15

10 ACCESSORIES

Front wheel fenders	10-1
Farming system displays	10-7
Chemical tank mounting.....	10-8
Loader connection and operation	10-10
Trailer brake connections.....	10-11
General accessories.....	10-14

1 - GENERAL INFORMATION

Your tractor

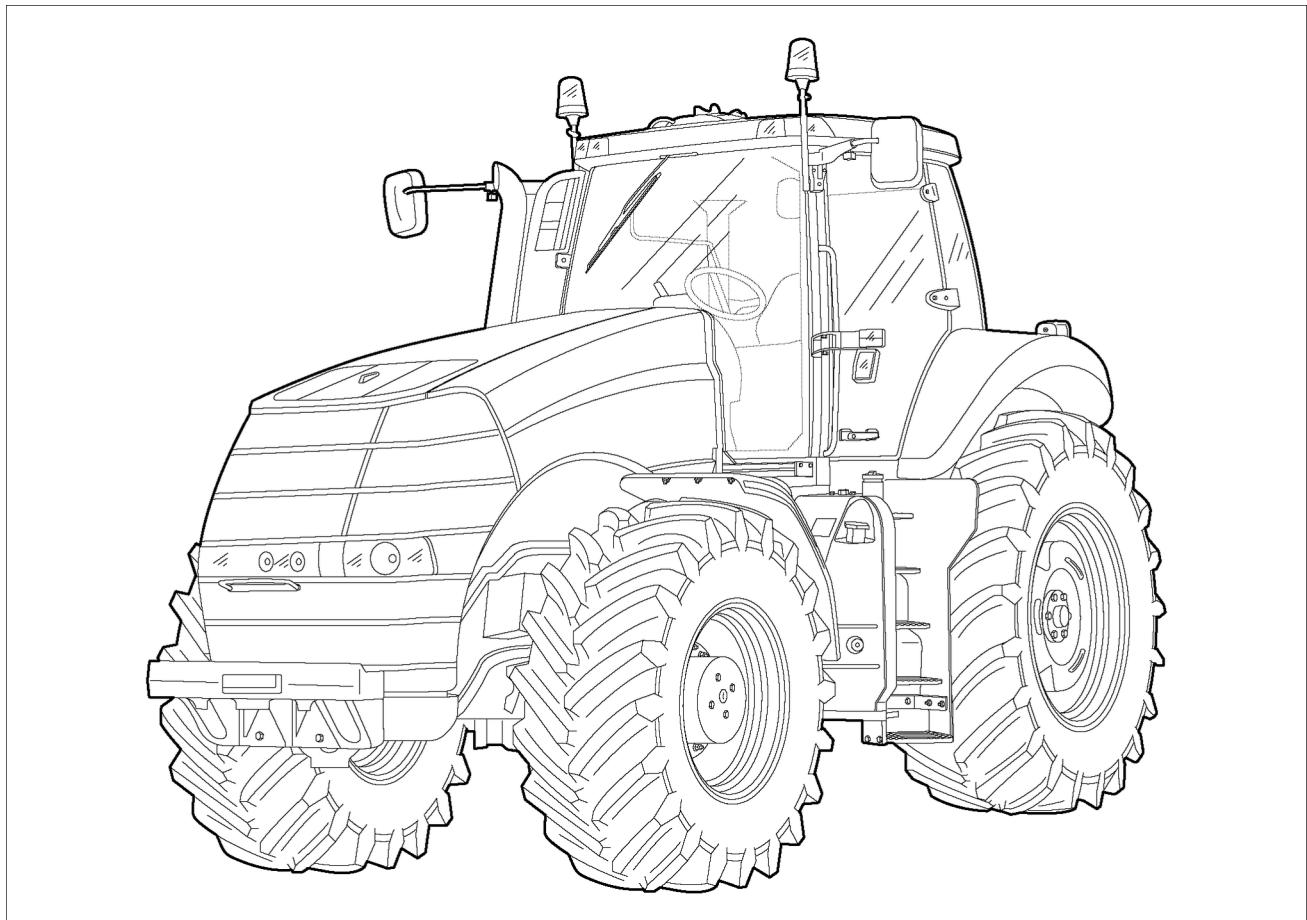


RCPH11CCH001GAA 1



CNH America LLC
Racine, WI
U.S.A.

Dealer stamp

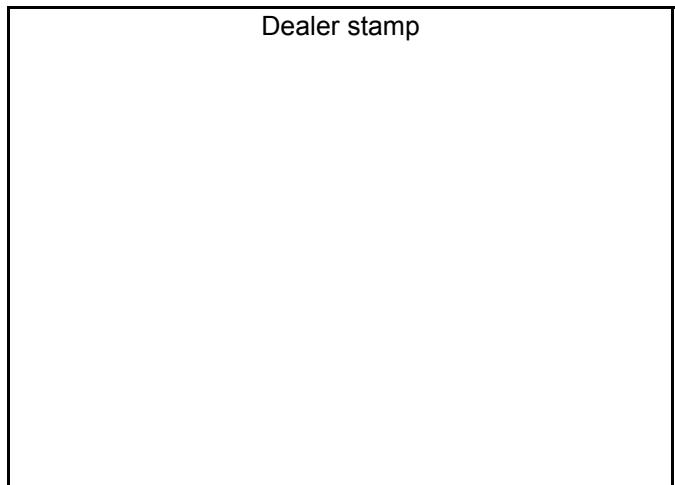

1 - GENERAL INFORMATION

Declaration of conformity

In the literature package, you will find an EC Declaration of Conformity (2006/42/EC) specific to your tractor in your native language. This document is the manufacturer's declaration about vehicle compliance with relevant EU provisions.

Keep this original document in a safe place. Local authorities may require you to show this document to prove compliance of the vehicle.

Clause of 2006/42/EC Annex II	BG Декларация ЕС за съответствие според Директива 2006/42/ЕС	CE Prohlášení o shodě ES Podle směrnice 2006/42/EU	DA EU-eurovýrobenísmesérkling I henholds til diskretion 2006/42/EU	DE EG - Konformitätserklärung Taut Richtlinie 2006/42/EG	EL Διάκρισης για την Οδός 2006/42/ΕΚ		
1.A.1 Ню, [1]	Zastupujeme Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	My,[1]	VL,[1]	Wz,[1]	Ejárás, [1]		
1.A.2 Представляемо ги Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	reprezentujeme Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg			vereinigen durch Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	előiratunkon keresztül Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg		
1.A.3 Декларация, показващи член спортност, че продукт Спецкоснотски трактор Търковско име: [2] Модел: [3] Тип: [4] Серийен номер: [5] за които се описах настоящата декларация, е съобразена с изискванията на Директива 2006/42/ЕС, включително и на специфични западни норми: [6]	Prøvhældning nu vistslit godkendelse, at denne produkt er i overensstemmelse med EU-direktivens krav om teknisk og teknologisk overensstemmelse af produkten.			erklären, daß der eigentliche Antragsteller Landwirtschaftliche Zugmaschine Handelsbeschreibung: [2] Modell: [3] Typ: [4] Seriennummer: [5]	konfigurieren, um eine entsprechende Produktbeschreibung zu erstellen: Landwirtschaftliche Zugmaschine Handelsbeschreibung: [2] Modell: [3] Typ: [4] Seriennummer: [5]		
1.A.4 Декларация, показваща член спортност, че продукт специален трактор Търковско име: [2] Модел: [3] Тип: [4] Удостоверено: [5]	na kterio se toti prohlásil vztahem, odpovídajúci ustanoveniam Smernice 2006/42/EU, a zároveň základném zneniu:			hvorstille denne erklæring herover, opfyldes alle de relevante krav i direktivet 2006/42/EU, dvs. vedet ved: [6]	erfolgt durch diese Erklärung bezieht, allen einschlägigen Bestimmungen der Richtlinie 2006/42/EU entspricht abgestimmt ist.		
1.A.7 За реализация на изискванията от Директива 2006/42/ЕС и пропускен следнико (хармонизиран) стандарт	• ISO 26322-1 / část 1 až 2 Ostatní normy: viz Návod po použití a upozornění.			Folgende standardisatorische (standarder er anvendt for opfyldelse af kravene i direktivet:	ISO 26322-1 / Teil 1 oder 2 Andere standarder: siehe in der Gebräuchs- und Wartungsanleitung.		
1.A.9 Место и дата на декларации: [7]	Misto a datum prohlásení: [7]			Sted og dato for erklæringen: [7]	Ort und Datum der Erklärung: [7]		
1.A.10 Имя и подпись на уполномоченного лица: [8]	Jméno a podpis pověřené osoby: [8]			Bemyndigedes navn og underskrift: [8]	Name und Unterschrift des Befugten: [8]		
Clause of 2006/42/EC Annex III	EN EC Declaration of conformity According to Directive 2006/42/EC.	ES Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE.	ET EU vastutusdeklaratsioon Vastavalt direktiivile 2006/42/EU	FI EY-vastuumustunnustusvaakaus direktiivin 2006/42/EY mukaan	F Déclaration CE de conformité selon la Directive 2006/42/CE.		
1.A.1 We, [1]	Nosotros, [1]	Me, [1]	Me, [1]	Les soussignés, [1]			
1.A.2 Represented by Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	representationi Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	Esindutuome Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	edustajanaanme Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	repräsentiert durch Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg			
1.A.3 declare under our sole responsibility, that the product: Apparatus/tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]	declaramos, bajo nuestra exclusiva responsabilidad, que el producto: Aparato/tractor Denominación comercial: [2] Modelo: [3] Tipo: [4] Número de serie: [5]	deklarieren, unter unserer alleinigen Verantwortung, dass das Produkt: Maschine/Traktor Handelsname: [2] Modell: [3] Typ: [4] Seriennummer: [5]	kyönämme omala vastuullamme, että tuote: Pöllötarvikkeet Äänimalli: [2] Malli: [3] Tyyppi: [4] Sarjanumero: [5]	vereinbarmasse omala vastuullamme, ettu tuote: Maitotaloustuotteet Kauhailman nimi: [2] Malli: [3] Tyyppi: [4] Sarjanumero: [5]	deklariere unter unserer alleinigen Verantwortung, dass das Produkt: Landwirtschaftliche Zugmaschine Handelsname: [2] Modell: [3] Typ: [4] Nummer der Serie: [5]		
1.A.4 to which this declaration relates, fulfills all the relevant provisions of the Directive 2006/42/EC, amended by: [6]	al a la que se refiere la presente declaración, cumple con las disposiciones pertinentes de la Directiva 2006/42/EC, modificada por: [6]	mitteile käsorelta deklaration viittaa, tässäkin kohdassa annetuista direktiivin rajanpidosta järjestävästä ja selle panostuksesta: [6]	mitteile käsorelta deklaration viittaa, tässäkin kohdassa annetuista direktiivin rajanpidosta järjestävästä ja selle panostuksesta: [6]	mitteile käsorelta deklaration viittaa, tässäkin kohdassa annetuista direktiivin rajanpidosta järjestävästä ja selle panostuksesta: [6]	zu der die vorliegende Erklärung gehört, welche die entsprechenden Bestimmungen der Richtlinie 2006/42/EC, geändert durch: [6]		
1.A.7 For the relevant implementation of the provisions of the Directive, the following (harmonized) standards have been applied: • ISO 26322-1 / part 1 až 2 Other standards: see Operators Manual and Maintenance.	Para la implementación de las disposiciones de la Directiva, las siguientes (estándares armonizados) se han aplicado: • ISO 26322-1 / parte 1 a Otros estándares: véase el Manual de Uso y Mantención.	Directive riutte asjakohas täitatakse ja rakendatakse järgnevaid (harmoniseeritud) standardeid:	Directive riutte asjakohas täitatakse ja rakendatakse järgnevaid (harmoniseeritud) standardeid:	Directive riutte asjakohas täitatakse ja rakendatakse järgnevaid (harmoniseeritud) standardeid:	Directive riutte asjakohas täitatakse ja rakendatakse järgnevaid (harmoniseeritud) standardeid:		
1.A.9 Place and date of the declaration: [7]	Lugar y fecha de la declaración: [7]	Deklaratsiooni väljandimis jaoks ja kuupäev: [7]	Vakuumataks väljandimis ja kuupäev: [7]	Vakuumataks väljandimis ja kuupäev: [7]	Luogu e data della dichiarazione: [7]		
1.A.10 Name and signature of the authorized person: [8]	Nom y firma de la persona autorizada: [8]	Vakuumataks väljandimis ja kuupäev: [8]	Vakuumataks väljandimis ja kuupäev: [8]	Vakuumataks väljandimis ja kuupäev: [8]	Nom e datazione della dichiarazione: [8]		
Clause of 2006/42/EC Annex II	HU EK Megfelelőségi nyilatkozat a 2006/42/EK irányelv szerint	IT Dichiarazione CE di conformità Secondo la direttiva 2006/42/CE	LT EB atliktiesis deklaracija Atliktiesiųjų: direktiivje 2006/42/CE	LV EK reģistrētā deklarācija Atliktiesiņu: direktiivā 2006/42/CE	NL CE Conformiteitsverklaring Overeenkomstig de Richtlijn 2006/42/EG	NO CE samsvarerklæring I henhold til direktiv 2006/42/EF	PL Deklaracja zgodności WE zgodnie z dyrektywą 2006/42/WE
1.A.1 Alulirottak, [1]	Női, [1]	Mes, [1]	Meis, [1]	Wij, [1]	Firma, [1]		
1.A.2 Akiket képviseli Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	Rappresentati da Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	Astovatjane Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	Güvenlikte Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	vertegenwoordigd door Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	kölcsönözött Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg		
1.A.3 kizárolásnak felelősnek tulajdonított kijelentjük, hogy az alábbi termék: Traktor/Agróberendezés	dichiariamo, sotto la nostra esclusiva responsabilità, che il prodotto: Trattore Agricolo	atliktiesi kai pateikame, kad įmanymis traktorius arba žemės ūkio įranga: komercinis komercinis: [2] Modelis: [3] Tipas: [4] Sorūpinimas: [5]	kyoname, okio traktorius komercinis komercinis: [2] Modelis: [3] Tipas: [4] Serijos numeris: [5]	lai realizētu direktīvas noteikumiem, ir izmaksoti šādi (harmonizēti) standarti: • ISO 26322-1 / daļa 1 val 2 Citi standarti: Zviedrijas valsts standarti: [6]	lai realizētu direktīvas noteikumiem, ir izmaksoti šādi (harmonizēti) standarti: • EN ISO 26322-1 / daļa 1 val 2 Citi standarti: skaitiet operatora norogrāmā.	for implementering af de bestemmelser i direktivet • EN ISO 26322-1 / del 1 og 2 Andre standarder: se bruger ved udarbejdshåndbogen.	Do implementacji wymagać zgodność z dyrektywą: • ISO 26322-1 części 1 i 2
1.A.4 körülbelül megfelelőnek tekinthetők az alábbi (harmonizált) szabványok körülbelül megfelelőnek tekinthetők	• ISO 26322-1 / rész 1 és 2 Egyéb szabványok: lásd a Fogyasztói és Kerti kezelési szabványokat.	• ISO 26322-1 / daļa 1 až 2 Citiešu standarti: Zviedrijas valsts standarti: [6]	• ISO 26322-1 / daļa 1 val 2 Citi standarti: skaitiet operatora norogrāmā.	• ISO 26322-1 / daļa 1 val 2 Citi standarti: skaitiet operatora norogrāmā.	• ISO 26322-1 / del 1 val 2 Andre standarder: se bruger ved udarbejdshåndbogen.	For implementering af bestemmelser bestemmelser har følgende harmoniserede standarder bl.a. følgende:	
1.A.7 Az általunk kiadott nyilatkozat teljesítéséhez a következőkkel kell hozzájárulni: • ISO 26322-1 / rész 1 és 2 Egyéb szabványok: lásd a Fogyasztói és Kerti kezelési szabványokat.	• ISO 26322-1 / rész 1 és 2 Egyéb szabványok: lásd a Fogyasztói és Kerti kezelési szabványokat.	• ISO 26322-1 / daļa 1 až 2 Citiešu standarti: Zviedrijas valsts standarti: [6]	• ISO 26322-1 / daļa 1 val 2 Citi standarti: skaitiet operatora norogrāmā.	• ISO 26322-1 / daļa 1 val 2 Citi standarti: skaitiet operatora norogrāmā.	• ISO 26322-1 / del 1 val 2 Andre standarder: se bruger ved udarbejdshåndbogen.	Do implementacji wymagać zgodność z dyrektywą: • ISO 26322-1 części 1 i 2	
1.A.9 A nyilatkozat kiállításának helye és dátuma: [7]	Luogo e data della dichiarazione: [7]	Deklaracijas izdejotā vieta un datums: [7]	Deklaracijas izdejotā vieta un datums: [7]	Deklaracijas izdejotā vieta un datums: [7]	Deklaracijas izdejotā vieta un datums: [7]	Miejsce i data złożenia deklaracji: [7]	
1.A.10 A meghatalmazott nevére, valamely neve alakjában: [8]	Nomina e della persona della autorizzata: [8]	Společnost: somers vards, paravérde alparakts: [8]	Společnost: somers vards, paravérde alparakts: [8]	Naam en handtekening van de geaccrediteerde persoon: [8]	Naam en handtekening van de geaccrediteerde persoon: [8]	Toszamosság i podpis osoby upoważnionej: [8]	
Clause of 2006/42/EC Annex III	PT Declaração de conformidade CE segundo a Directiva 2006/42/CE	RO Deklarare de Conformitate CE In conformitate cu Directiva 2006/42/CE	SK Vyhlasenie o zhode ES Podľa smernice 2006/42/ES	EL Izjava o skladnosti ES v skladu s direktívou 2006/42/EC	SV EG-förskräck om överensstämmelse enligt direktiv 2006/42/EG	TR 2006/42/AT Yeterlilikli uygunluk CE Uygunluk Beyanname	
1.A.1 Női, [1]	Női, [1]	My,[1]	ML,[1]	VL,[1]	Biz,[1]		
1.A.2 representated by Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	representatari Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	Zastupujeme Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	ki vás zastupa Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	representierte durch Giuseppe Gavoli, CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	Giuseppe Gavoli tanúsított temelj eddien CNI Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg		
1.A.3 declaramos que a ressa exclusiva responsabilidade, que o produtor: tractor/agricultural	declaramos que a ressa exclusiva responsabilidade, que o produtor: tractor/agricultural	attributioni părtății, că producătorul: tractor/agricultural	attributioni părtății, că producătorul: tractor/agricultural	erklären, daß der eigentliche Antragsteller Landwirtschaftliche Zugmaschine Handelsbeschreibung: [2] Modell: [3] Typ: [4] Seriennummer: [5]	erklären, daß der eigentliche Antragsteller Landwirtschaftliche Zugmaschine Handelsbeschreibung: [2] Modell: [3] Typ: [4] Seriennummer: [5]	erklären, daß der eigentliche Antragsteller Landwirtschaftliche Zugmaschine Handelsbeschreibung: [2] Modell: [3] Typ: [4] Seriennummer: [5]	
1.A.4 a que se refere esta declaração, é em conformidade com as disposições pertinentes da directiva 2006/42/EC, ame-	a que se refere esta declaração, é em conformidade com as disposições pertinentes da directiva 2006/42/EC, ame-	na ktoru, na ktoru se toti prohlásil vztahem, odpovídajúci ustanoveniam Smernice 2006/42/EU, a zároveň základnému zneniu:	na ktoru, na ktoru se toti prohlásil vztahem, odpovídajúci ustanoveniam Smernice 2006/42/EU, a zároveň základnému zneniu:	erklären, daß der eigentliche Antragsteller Landwirtschaftliche Zugmaschine Handelsbeschreibung: [2] Modell: [3] Typ: [4] Seriennummer: [5]	erklären, daß der eigentliche Antragsteller Landwirtschaftliche Zugmaschine Handelsbeschreibung: [2] Modell: [3] Typ: [4] Seriennummer: [5]	erklären, daß der eigentliche Antragsteller Landwirtschaftliche Zugmaschine Handelsbeschreibung: [2] Modell: [3] Typ: [4] Seriennummer: [5]	
1.A.7 Outras normas: referência ao Manual de Uso e Manutenção.	Outras normas: referência ao Manual de Uso e Manutenção.	Ostatne normy: Viz Návod o použití a údržbe.	Ostatne normy: Viz Návod o použití a údržbe.	• ISO 26322-1 / parte 1 až 2 Outras normas: referência ao Manual de Utilização e Intervenção.	• ISO 26322-1 / parte 1 až 2 Outras normas: referência ao Manual de Utilização e Intervenção.	• ISO 26322-1 / partie 1 et 2 Autres normes: voir Notice d'utilisation et d'entretien.	
1.A.9 Local e data da declaração: [7]	Locaçao e data da declaração: [7]	Kraj a datum izjave: [7]	Kraj a datum izjave: [7]	Ort und Datum der Erklärung: [7]	Ort und Datum der Erklärung: [7]	Yerliki kişiin ad ve tarih: [7]	
1.A.10 Nome e assinatura da pessoa autorizada: [8]	Nome e assinatura da pessoa autorizada: [8]	Ime a podpis oprávnejnej osoby: [8]	Ime a podpis oprávnejnej osoby: [8]	Název a podepis schváleného osoby: [8]	Název a podepis schváleného osoby: [8]	Yerliki kişiin ad ve imza: [8]	

Clause of 2006/42/EC Annex II	EC Declaration of conformity According to Directive 2006/42/EC.	[1]  CNH America LLC Racine WI 53404 (U.S.A.)
1.A.1	We, [1]	[2] CASE IH..... [3] [4] [5]
1.A.2	Represented by Giuseppe Gavioli, CNH Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg	
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]	
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6].	[6]
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual.	[7] Luxembourg.....
1.A.9	Place and date of the declaration: [7]	
1.A.10	Name and signature of the authorised person: [8]	[8]  Giuseppe Gavioli

RCIL09CCH801HAA 2

The original text of the declaration is reproduced here with some notes to assist your understanding. The health and safety related standards which apply to your vehicle are summarized below:

- Tractor safety is compliant with ISO 26322-1.
- The cab Roll Over Protection System (ROPS) is certified to EN 15694.
- Tractor does not provide a type approved, Falling Object Protection System (FOPS).

- Cab is certified category 2 according to EN 15695-1.
- Noise emission levels are rated according to 77/311/EEC and 74/151/EEC.

NOTE: Refer to the relevant sections in chapter 2 for additional information.

Tractor intended use

Magnum series tractors with standard equipment and authorized attachments, are intended to be used for customary farming, land leveling and related agriculture operations (intended use). Installation of utility (dozer) blades, tile plows, or push bars on the tractor is not recommended. Any tractor damage resulting from the installation and/or use of such equipment is not covered by the tractor warranty.

Consult an authorized dealer or CNH America LLC on changes, additions or modifications that can be required for this machine to comply with various regulations and safety requirements. Unauthorized modifications will cause serious injury or death. Anyone making such unauthorized modifications is responsible for the consequences.

Engine tampering

The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators, and users is strictly prohibited by law.

Failure to comply could result in government fines, rework charges, invalid warranty, legal action, and possible con-

The tractor is not designed for light/heavy forestry applications; usage is prohibited for forestry applications.

Do not use this machine for any purpose or in any manner other than as described in the manual, decals, or other product safety information provided with the machine. These materials define the machine's intended use.

Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for any damage or injury resulting from this misuse and these risks must be born solely by the user.

fiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!

Thank you so much for reading.

**Please click the “Buy Now!”
button below to download the
complete manual.**

Buy Now



After you pay.

**You can download the most
perfect and complete manual in
the world immediately.**

Our support email:

ebooklibonline@outlook.com