

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1

OPERATOR'S MANUAL

T7.220

T7.235

T7.250

T7.260

T7.270

Sidewinder II™

Auto Command - Power Command Tractor

Part number 47457099

5th edition English

March 2013





OPERATOR'S MANUAL



**T7.220 AutoCommand , T7.220 Power Command , T7.235 AutoCommand ,
T7.235 Power Command , T7.250 AutoCommand , T7.250 Power Command ,
T7.260 AutoCommand , T7.260 Power Command , T7.270 AutoCommand**

Contents

1 GENERAL INFORMATION

CE DECLARATION OF CONFORMITY	1-1
METRIC AND IMPERIAL UNITS ABBREVIATIONS	1-3
TO THE OWNER	1-5
OPERATOR'S MANUAL STORAGE	1-7
PRODUCT IDENTIFICATION	1-8
ENGINE IDENTIFICATION	1-9
DRIVELINE IDENTIFICATION	1-10
Part identification	1-10
CAB IDENTIFICATION	1-10
PRODUCT IDENTIFICATION PLATE	1-11
ECOLOGY AND THE ENVIRONMENT	1-12
NOISE LEVEL	1-13
PROGRAMMING TRACTOR FUNCTIONS	1-13
BEFORE OPERATING THE TRACTOR	1-14
INTERNATIONAL SYMBOLS	1-15
VIBRATION LEVEL INFORMATION SHEET	1-16
MACHINE STABILITY	1-17
PASSENGER'S SEAT	1-21
SELECTIVE CATALYTIC REDUCTION (SCR) SYSTEM	1-22

2 SAFETY INFORMATION

SAFETY DECALS	2-1
SAFETY PRECAUTIONS	2-9
BEFORE DRIVING THE TRACTOR	2-10
DRIVING THE TRACTOR	2-11
OPERATING THE TRACTOR	2-12
OPERATING THE P.T.O.	2-14
OPERATING THE EXTERNAL CONTROLS	2-14
SERVICING THE TRACTOR	2-15
PREVENTION OF FIRE OR EXPLOSION	2-18
DIESEL FUEL	2-19
FIRE EXTINGUISHER	2-20
PROTECTION OFFERED BY THE TRACTOR	2-21
INTENDED USE STATEMENT	2-24
SAFETY ASPECTS	2-26

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

INTRODUCTION	3-1
Cab - Localisation overview	3-5
CAB AIR FILTERS	3-7
IN CAB STORAGE (where fitted)	3-8
CABLE AND WIRING ROUTING	3-9
MOBILE TELEPHONE USAGE	3-10
IMPLEMENT MONITOR INSTALLATION	3-11
CAB AIR PRESSURISATION MONITOR (where fitted)	3-11

OPERATOR'S SEAT

AIR SUSPENSION SEAT	3-13
---------------------------	------

AIR SUSPENSION SEAT DELUXE	3-15
ARMREST CONTROLS	3-20
SEAT BELT	3-21

INSTRUCTOR'S SEAT

PASSENGER'S SEAT	3-22
------------------------	------

FORWARD CONTROLS

KEY- START SWITCH	3-23
HAZARD WARNING LIGHT SWITCH	3-23
LIGHT-/ TURN LEVER	3-24
FOLLOW ME HOME LIGHTS	3-24
WINDSHIELD WIPER AND WASHER CONTROLS	3-25
ELECTRONIC PARK BRAKE	3-26
ANTI-LOCK BRAKING SYSTEM ABS Operation	3-30
FOOT BRAKES	3-38
EXHAUST BRAKE (where fitted)	3-39
STEERING COLUMN	3-40
ADJUSTABLE AIR VENTS	3-40

LEFT-HAND SIDE CONTROLS

HANDBRAKE	3-41
-----------------	------

RIGHT-HAND SIDE CONTROLS

INTEGRATED CONTROL PANEL	3-42
INTEGRATED CONTROL PANEL	3-43
HAND THROTTLE	3-44
MULTI FUNCTION HANDLE	3-44

REARWARD CONTROLS

SWITCHES ON C-PILLAR	3-45
HYDRAULIC MASTER SWITCH	3-46
HEATED SCREENS (where fitted)	3-47
FAST STEERING SYSTEM (where fitted)	3-48
BATTERY ISOLATOR SWITCH	3-50
CLIMATE CONTROLS	3-51
MANUAL TEMPERATURE CONTROL	3-53
AUTOMATIC TEMPERATURE CONTROL (ATC)	3-54

OVERHEAD CONTROLS

SWITCH PANEL WORKLIGHTS	3-56
RADIO/CASSETTE/CD PLAYER (where fitted)	3-57
INTERIOR LIGHT	3-58

INSTRUMENT CLUSTER

ANALOGUE/ DIGITAL INSTRUMENT CLUSTER	3-59
GAUGES	3-59
INDICATOR AND WARNING LIGHTS	3-60
DISPLAYS	3-62
KEYPAD ENHANCED	3-64
SELECTING OR CHANGING THE DISPLAY SETTINGS	3-66

GROUND SPEED CALIBRATION.....	3-67
PERFORMANCE MONITOR.....	3-70
ARMREST COLOUR DISPLAY.....	3-77
POP- UP SCREENS ON COLOUR DISPLAY.....	3-79
PERFORMANCE MONITOR ON COLOUR DISPLAY.....	3-85
PROGRAMMING THE DISPLAYS.....	3-88
ALARM FUNCTIONS.....	3-91
ACCESSING STORED ERROR CODES.....	3-93
WARNING AND ADVISORY SYMBOLS.....	3-94
WARNING AND ADVISORY SYMBOLS.....	3-104

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

TRACTOR REFUELLING.....	4-1
-------------------------	-----

STARTING THE UNIT

STARTING THE ENGINE.....	4-3
GRID HEATER COLD START AID (where fitted).....	4-5
FUEL HEATER (where fitted).....	4-5
COOLANT IMMERSION HEATER (where fitted).....	4-5
TRANSMISSION OIL HEATER (where fitted).....	4-7
Transmission - Operating Cold weather.....	4-8
BOOSTING THE BATTERY.....	4-9

STOPPING THE UNIT

STOPPING THE ENGINE.....	4-10
AUTOMATIC ENGINE SHUTDOWN.....	4-10
AUTOMATIC ENGINE SHUTDOWN WITH ENHANCED KEYPAD (where fitted)....	4-11

MOVING THE UNIT

OPERATING IN COLD TEMPERATURES.....	4-12
REVERSIBLE ENGINE FAN.....	4-14

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

CARRYING THE TRACTOR ON A TRANSPORTER.....	5-1
SECURE THE HIGH VISIBILITY ROOF PANEL.....	5-1

RECOVERY TRANSPORT

FREEING A STUCK TRACTOR.....	5-1
TOWING THE TRACTOR.....	5-3

6 WORKING OPERATIONS

GENERAL INFORMATION

VARIABLE ENGINE POWER MANAGEMENT.....	6-1
---------------------------------------	-----

CONSTANT ENGINE SPEED.....	6-3
DIFFERENTIAL LOCK	6-7
FOUR WHEEL DRIVE	6-9
FRONT AXLE SUSPENSION (where fitted)	6-11
AUTOMATED HEADLAND FUNCTIONS	6-12
QUICK GUIDE.....	6-12
RECORDING AND RE-PLAYING	6-14
EXPLANATION OF SYMBOLS.....	6-18
RECORDING A SEQUENCE	6-19
RE-PLAYING A SEQUENCE.....	6-21
HEADLAND FUNCTION AND COLOUR DISPLAY SCREENS.....	6-25
DELETING A SEQUENCE WITH COLOUR DISPLAY.....	6-28

TRANSMISSION

FULL POWERSHIFT TRANSMISSION.....	6-29
CLUTCH/ INCHING PEDAL.....	6-29
FOOT THROTTLE PEDAL	6-29
TRANSMISSION OPERATION.....	6-30
POWERSHIFT CONTROL	6-31
SHUTTLE LEVER	6-32
TRANSMISSION DISPLAY.....	6-35
DRIVING THE TRACTOR.....	6-36
AUTO SHIFT FUNCTION	6-38
SPEED MATCHING	6-42
PROGRAMMING REVERSE GEAR RATIOS.....	6-43
CREEPER GEARS (where fitted)	6-44
ERROR CODES.....	6-45
GROUND SPEED CHART POWERSHIFT TRANSMISSION Ground speeds ...	6-46
CONTINUOUSLY VARIABLE TRANSMISSION (CVT)	6-51
TRANSMISSION OPERATION.....	6-51
ANTI JACK KNIFE	6-52
STATIONARY CONTROL	6-53
ENGINE SPEED CONTROL	6-54
SHUTTLE LEVER	6-55
TRANSMISSION CONTROLS	6-57
DRIVE PEDAL.....	6-59
PROGRAMME THE MAXIMUM SPEED	6-60
TRANSMISSION DISPLAY.....	6-63
MANUAL MODE.....	6-65
AUTOMATIC MODE.....	6-66
CRUISE MODE.....	6-68
P.T.O. MODE	6-71
SPEED MATCHING	6-71
ERROR CODES.....	6-72

REAR POWER TAKE-OFF

P.T.O. OPERATING PRECAUTIONS.....	6-73
CHANGING THE P.T.O. OUTPUT SHAFT	6-73
ATTACHING P.T.O. DRIVEN EQUIPMENT	6-74
P.T.O. OPERATION.....	6-75
TWO-SPEED P.T.O. SYSTEM	6-80
MULTI-SPEED, SHIFTABLE P.T.O.	6-82
ELECTRONIC P.T.O. SYSTEM Electronic (where fitted)	6-85
EXTERNAL P.T.O. CONTROLS.....	6-86
Auto PTO operation	6-88

FRONT POWER TAKE OFF

P.T.O. OPERATION.....	6-91
AUTO P.T.O. OPERATION	6-93
FRONT HITCH FRONT HITCH MANAGEMENT	6-95

REAR HITCH

ELECTRONIC DRAFT CONTROL	6-99
SETTINGS AND DISPLAY	6-103
ELECTRONIC DRAFT CONTROL OPERATION	6-105
EXTERNAL HITCH CONTROLS.....	6-110

FRONT HITCH

SETTINGS AND ADJUSTMENTS	6-112
HITCH OPERATION.....	6-115
AUXILIARY FRONT COUPLERS (where fitted).....	6-121
EXTERNAL HITCH CONTROLS	6-123

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

REMOTE CONTROL VALVES	6-124
SETTINGS AND ADJUSTMENTS	6-131
SETTING THE REMOTE VALVE PRIORITY.....	6-136
CREATING TIMER PROGRAMMES.....	6-137
CONNECTING REMOTE CYLINDERS	6-144
OPERATING WITH REMOTE VALVES	6-146
JOYSTICK OPERATION WITH A FRONT LOADER.....	6-148
MID MOUNT REMOTE VALVES	6-152
EXTERNAL EHR CONTROLS	6-153
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT	6-154

HYDRAULIC POWER BEYOND PORT

HYDRAULIC POWER BEYOND PORT FOR EXTERNAL SERVICES	6-156
Power beyond valve - Static description	6-156
ISO POWER BEYOND COUPLINGS	6-158

THREE POINT HITCH

ATTACHING THREE-POINT HITCH EQUIPMENT	6-159
LIFT ROD ADJUSTMENT	6-161
TOP LINK ADJUSTMENT	6-163
FLEXIBLE LINK END ADJUSTMENT	6-165
QUICK HITCH	6-166
LINKAGE STABILISER ADJUSTMENT	6-168

DRAWBARS AND TOWING ATTACHMENTS

DRAWBARS AND TOWING ATTACHMENTS	6-172
SWINGING DRAWBARS.....	6-174
AUTOMATIC PICK-UP HITCH	6-177
REAR TOW HITCH.....	6-180

TRAILER BRAKING SYSTEMS

AIR-OPERATED TRAILER BRAKES	6-186
AIR-OPERATED TRAILER BRAKES (Italy only).....	6-190
TRAILER BRAKE BIAS CONTROL	6-191
AUXILIARY AIR SUPPLY CONNECTOR (where fitted).....	6-191
HYDRAULIC TRAILER BRAKES	6-192
HYDRAULIC TRAILER BRAKES (Italy only).....	6-193

WHEEL TRACK ADJUSTMENT

FRONT WHEEL TRACK ADJUSTMENT	6-194
FRONT WHEEL ALIGNMENT	6-197
STEERING STOPS	6-198
FRONT AXLE OSCILLATION STOPS	6-198
FRONT FENDER.....	6-199
REAR WHEEL TRACK ADJUSTMENT	6-201
FLANGE TYPE AXLE (where fitted)	6-201
BAR TYPE AXLE (where fitted)	6-205

BALLASTING AND TYRES

BALLASTING AND TYRES	6-211
IRON WEIGHTS (where fitted).....	6-214
LIQUID BALLAST	6-216
TYRE INFLATION	6-218
TYRE PRESSURES AND PERMISSIBLE LOADS	6-219

AUXILIARY POWER CONNECTIONS

DIAGNOSTIC SOCKET	6-221
TRAILER SOCKET ELECTRICAL	6-221
ELECTRICAL POWER CONNECTORS	6-222
INTERNAL POWER CONNECTORS	6-222
EXTERNAL POWER CONNECTORS	6-224

7 MAINTENANCE

GENERAL INFORMATION

INTRODUCTION	7-1
FUEL REQUIREMENT	7-2
BIODIESEL FUEL	7-4
ENGINE OIL CHANGE.....	7-6
PROTECTIVE DEVICES	7-7
LUBRICANTS AND COOLANTS.....	7-9
TRACTOR JACKING POINTS	7-11
GENERAL SPECIFICATIONS.....	7-12
CAPACITIES	7-13

MAINTENANCE CHART

Maintenance Chart	7-14
-------------------------	------

WHEN THE WARNING LAMP LIGHTS

CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT	7-16
DRAIN FUEL SYSTEM WATER SEPARATOR.....	7-17
CHECK BRAKE FLUID LEVEL.....	7-18

EVERY 10 HOURS OR EACH DAY

CHECK ENGINE COOLANT LEVEL	7-19
CHECK ENGINE OIL LEVEL	7-20
CHECK REMOTE CONTROL VALVE DRAIN BOTTLES	7-20
CHECK WINDSCREEN WASHER RESERVOIR	7-21
DRAIN AIR RESERVOIR ON AIR OPERATED TRAILER BRAKE	7-21

FIRST 50 HOURS

SERVICE OPERATIONS	7-22
--------------------------	------

EVERY 50 HOURS

CLEAN THE CAB AIR FILTER	7-24
CLEAN THE SCR COVER AIR DUCTS	7-26
CLEAN THE COOLER SECTION	7-27
ALL GREASE FITTINGS	7-28
CHECK FRONT AND REAR WHEEL NUTS	7-35
CHECK TYRE PRESSURES AND TYRE CONDITION	7-35

EVERY 100 HOURS

INSPECT POLY V-BELT	7-36
INSPECT COMPRESSOR DRIVE BELT	7-36

EVERY 300 HOURS

CHECK BATTERY FLUID LEVEL	7-37
CHECK TRANSMISSION/REAR AXLE AND HYDRAULIC OIL LEVEL	7-39
ADJUST HANDBRAKE	7-40
CHECK FRONT P.T.O. GEARBOX OIL LEVEL	7-40
CHECK 4WD FRONT AXLE DIFFERENTIAL AND HUBS OIL LEVEL	7-41

EVERY 600 HOURS

CHANGE ENGINE OIL AND FILTER	7-42
CHANGE FUEL PRE-FILTER AND FUEL FILTER ELEMENT	7-44
CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT	7-45
CHANGE CHARGE PUMP OIL FILTER	7-46
CHANGE CHARGE PUMP AND GEAR PUMP OIL FILTER	7-47
CHECK ENGINE AIR INTAKE CONNECTIONS	7-48
CHECK TRANSMISSION OIL COOLER PIPE COUPLINGS	7-49
CLEAN DEF/ AdBlue INLINE FILTER	7-49

EVERY 1200 HOURS OR ANNUALLY

CHANGE CAB AIR FILTERS	7-50
CHANGE MAIN OIL FILTER CARTRIDGE	7-51
CHANGE TRANSMISSION/ REAR AXLE AND HYDRAULIC OIL	7-52
CHANGE 4WD DIFFERENTIAL OIL	7-53
CHANGE 4WD PLANETARY HUB OIL	7-54
CHANGE FRONT P.T.O. GEARBOX OIL	7-54
GREASE REAR AXLE SHAFT BEARING	7-55

EVERY 1200 HOURS OR EVERY 2 YEARS

CHECK BATTERY FLUID LEVEL	7-56
---------------------------------	------

CHANGE DEF/ AdBlue INLINE FILTER.....	7-57
CHANGE ENGINE AIR CLEANER INNER ELEMENT.....	7-58
CHECK VALVE TAPPET CLEARANCE.....	7-59
CHANGE ENGINE COOLANT FLUID.....	7-60
CHANGE AIR BRAKE DRIER RESERVOIR.....	7-64
CHANGE POLY V-BELTS.....	7-65

EVERY 1800 HOURS OR EVERY 2 YEARS

CHANGE ENGINE BREATHER FILTER.....	7-66
------------------------------------	------

EVERY 3600 HOURS OR EVERY 2 YEARS

CHANGE DEF/ AdBlue MAIN FILTER.....	7-67
-------------------------------------	------

EVERY 36 MONTHS

SERVICE THE AIR CONDITIONER SYSTEM.....	7-67
CHECK BATTERY FLUID LEVEL.....	7-69

GENERAL MAINTENANCE

CLEANING THE TRACTOR.....	7-71
FUEL SYSTEM PRE- FILTER AND WATER TRAP.....	7-73
BLEEDING THE FUEL INJECTION SYSTEM.....	7-73
CHECK BRAKE PEDAL LATCHING/UNLATCHING.....	7-74
ADJUST CAB SUSPENSION (where fitted).....	7-75
ADJUST AUTOMATICK PICK- UP HITCH.....	7-76
TRANSMISSION CLUTCH CALIBRATION.....	7-77
Transmission - Check.....	7-78
HEADLIGHT AND WORKLAMP ADJUSTMENT.....	7-83
BULB REPLACEMENT.....	7-84
FUSES AND RELAYS.....	7-88
PROTECTING THE ELECTRONIC AND ELECTRICAL SYSTEMS DURING BATTERY CHARGING OR WELDING.....	7-93
BATTERY REMOVAL AND INSTALLATION.....	7-94

STORAGE

TRACTOR STORAGE.....	7-95
PREPARATION FOR USE AFTER STORAGE.....	7-96

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

INTRODUCTION.....	8-1
-------------------	-----

ALARM(S)

FAULT CODES AND SYMBOLS.....	8-2
------------------------------	-----

SYMPTOM(S)

ENGINE.....	8-4
TRANSMISSION.....	8-5
HYDRAULICS.....	8-5

THREE POINT HITCH	8-6
BRAKES.....	8-6
CAB.....	8-7
ELECTRICAL SYSTEM	8-7

9 SPECIFICATIONS

GENERAL DIMENSIONS	9-1
Frame - General specification	9-1
CAPACITIES	9-4
Transmission - Capacity	9-5
Front axle system - Capacity	9-5
ENGINE	9-6
TRANSMISSION	9-7
REAR POWER TAKE-OFF	9-8
FRONT POWER TAKE OFF	9-8
HYDRAULIC SYSTEM	9-9
THREE POINT HITCH	9-12
REMOTE CONTROL VALVES	9-13
THREE POINT HITCH FRONT	9-13
BRAKES.....	9-14
STEERING	9-14
ELECTRICAL EQUIPMENT	9-15
MINIMUM HARDWARE TIGHTENING TORQUES	9-16

10 ACCESSORIES

EXTERNAL REAR VIEW MIRRORS.....	10-1
AUXILIARY HEADLIGHTS	10-3
ROTATING BEACON.....	10-4
FRONT- END LOADER FIXATION POINTS	10-5

11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy	11-3
Service record 1st 50 hour, Dealer copy	11-5

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes.

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Guiseppe Gavioli CNH Europe Holding S.A. 24, Boulevard Royal L- 2449 Luxembourg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6]
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorised person: [8]

HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- PASSENGER SEAT is certified according to **EN 15694**.
- FOPS level on your tractor cab is certified according to **OECD Code 10**.
- HVAC (Heating, ventilation Air Conditioning) CAB is certified Category 1 according to **EN 15695-1**.
- HV (Heating, ventilation) cab is certified Category 1 according to **EN 15695-1**.
- NOISE EMISSION LEVELS are rated according to **2009/76/EC** and **2009/63/EC**.
- VIBRATION LEVELS are rated according to **78/764/EEC**.

NOTE: See safety section 2 in this manual for further explanation and details on above mentioned standards and specific terminology.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com