

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1

Puma 170
Puma 185
Puma 200
Puma 215
Tractor

OPERATOR'S MANUAL



Part number 47457148

5th edition English

March 2013





OPERATOR'S MANUAL



PUMA 170
PUMA 185
PUMA 200
PUMA 215

Contents

1 GENERAL INFORMATION

CE DECLARATION OF CONFORMITY	1-1
METRIC AND IMPERIAL UNITS ABBREVIATIONS	1-3
TO THE OWNER	1-5
OPERATOR'S MANUAL STORAGE	1-7
PRODUCT IDENTIFICATION	1-8
ENGINE IDENTIFICATION	1-9
DRIVELINE IDENTIFICATION	1-10
CAB IDENTIFICATION	1-10
PRODUCT IDENTIFICATION PLATE	1-11
ECOLOGY AND THE ENVIRONMENT	1-12
NOISE LEVEL	1-13
PROGRAMMING TRACTOR FUNCTIONS	1-13
BEFORE OPERATING THE TRACTOR	1-14
INTERNATIONAL SYMBOLS	1-15
VIBRATION LEVEL INFORMATION SHEET	1-16
MACHINE STABILITY	1-17
PASSENGER'S SEAT	1-21
SELECTIVE CATALYTIC REDUCTION (SCR) SYSTEM	1-22

2 SAFETY INFORMATION

SAFETY DECALS	2-1
SAFETY PRECAUTIONS	2-9
BEFORE DRIVING THE TRACTOR	2-10
DRIVING THE TRACTOR	2-11
OPERATING THE TRACTOR	2-12
OPERATING THE P.T.O.	2-14
OPERATING THE EXTERNAL CONTROLS	2-14
SERVICING THE TRACTOR	2-15
PREVENTION OF FIRE OR EXPLOSION	2-18
DIESEL FUEL	2-19
FIRE EXTINGUISHER	2-20
PROTECTION OFFERED BY THE TRACTOR	2-21
INTENDED USE STATEMENT	2-24
SAFETY ASPECTS	2-26

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

INTRODUCTION	3-1
Cab - Localisation overview	3-5
CAB AIR FILTERS	3-7
IN CAB STORAGE (where fitted)	3-8
CABLE AND WIRING ROUTING	3-9
MOBILE TELEPHONE USAGE	3-10
IMPLEMENT MONITOR INSTALLATION	3-11
CAB AIR PRESSURISATION MONITOR (where fitted)	3-11

OPERATOR'S SEAT

AIR SUSPENSION SEAT	3-13
AIR SUSPENSION SEAT DELUXE	3-15

ARMREST CONTROLS.....	3-20
SEAT BELT.....	3-21
INSTRUCTOR'S SEAT	
PASSENGER'S SEAT.....	3-22
FORWARD CONTROLS	
KEY- START SWITCH.....	3-23
HAZARD WARNING LIGHT SWITCH.....	3-23
LIGHT-/ TURN LEVER.....	3-24
FOLLOW ME HOME LIGHTS.....	3-24
WINDSHIELD WIPER AND WASHER CONTROLS.....	3-25
ELECTRONIC PARK BRAKE.....	3-26
ANTI-LOCK BRAKING SYSTEM ABS Operation.....	3-30
FOOT BRAKES.....	3-38
EXHAUST BRAKE (where fitted).....	3-39
STEERING COLUMN.....	3-40
ADJUSTABLE AIR VENTS.....	3-40
LEFT-HAND SIDE CONTROLS	
HANDBRAKE.....	3-41
RIGHT-HAND SIDE CONTROLS	
INTEGRATED CONTROL PANEL.....	3-42
HAND THROTTLE.....	3-43
REARWARD CONTROLS	
SWITCHES ON C-PILLAR.....	3-44
HYDRAULIC MASTER SWITCH.....	3-45
HEATED SCREENS (where fitted).....	3-46
FAST STEERING SYSTEM (where fitted).....	3-47
BATTERY ISOLATOR SWITCH.....	3-49
CLIMATE CONTROLS.....	3-50
MANUAL TEMPERATURE CONTROL.....	3-52
AUTOMATIC TEMPERATURE CONTROL (ATC).....	3-53
OVERHEAD CONTROLS	
SWITCH PANEL WORKLIGHTS.....	3-55
RADIO/CASSETTE/CD PLAYER (where fitted).....	3-56
INTERIOR LIGHT.....	3-57
INSTRUMENT CLUSTER	
INTEGRATED CONTROL UNIT.....	3-58
GAUGES.....	3-58
INDICATOR AND WARNING LIGHTS.....	3-59
DISPLAYS.....	3-62
KEYPAD BASIC.....	3-63
KEYPAD ENHANCED.....	3-64
SELECTING OR CHANGING THE DISPLAY SETTINGS.....	3-66
ADJUST MENU.....	3-67
CONFIGURE MENU.....	3-69

PERFORMANCE MONITOR	3-72
ARMREST COLOUR DISPLAY	3-77
POP- UP SCREENS ON COLOUR DISPLAY.....	3-79
PERFORMANCE MONITOR ON COLOUR DISPLAY	3-85
PROGRAMMING THE DISPLAYS	3-88
ALARM FUNCTIONS.....	3-91
ACCESSING STORED ERROR CODES	3-93
WARNING AND ADVISORY SYMBOLS	3-94
WARNING AND ADVISORY SYMBOLS	3-105

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

TRACTOR REFUELLING	4-1
--------------------------	-----

STARTING THE UNIT

STARTING THE ENGINE	4-3
GRID HEATER COLD START AID (where fitted)	4-5
FUEL HEATER (where fitted)	4-5
COOLANT IMMERSION HEATER (where fitted)	4-5
TRANSMISSION OIL HEATER (where fitted).....	4-7
Transmission - Operating Cold weather	4-8
BOOSTING THE BATTERY	4-9

STOPPING THE UNIT

STOPPING THE ENGINE.....	4-10
AUTOMATIC ENGINE SHUTDOWN	4-10
AUTOMATIC ENGINE SHUTDOWN WITH ENHANCED KEYPAD (where fitted)	4-11

MOVING THE UNIT

OPERATING IN COLD TEMPERATURES	4-12
REVERSIBLE ENGINE FAN	4-13

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

CARRYING THE TRACTOR ON A TRANSPORTER.....	5-1
SECURE THE HIGH VISIBILITY ROOF PANEL.....	5-1

RECOVERY TRANSPORT

FREEING A STUCK TRACTOR.....	5-1
TOWING THE TRACTOR.....	5-3

6 WORKING OPERATIONS

GENERAL INFORMATION

VARIABLE ENGINE POWER MANAGEMENT	6-1
CONSTANT ENGINE SPEED.....	6-3

DIFFERENTIAL LOCK	6-6
FOUR WHEEL DRIVE	6-8
FRONT AXLE SUSPENSION (where fitted)	6-10
AUTOMATED HEADLAND FUNCTIONS	6-11
QUICK GUIDE.....	6-11
RECORDING AND RE-PLAYING	6-13
EXPLANATION OF SYMBOLS.....	6-16
RECORDING A SEQUENCE	6-17
RE-PLAYING A SEQUENCE.....	6-19
HEADLAND FUNCTION AND COLOUR DISPLAY SCREENS.....	6-23
DELETING A SEQUENCE WITH COLOUR DISPLAY.....	6-26

TRANSMISSION

FULL POWERSHIFT TRANSMISSION	6-27
CLUTCH/ INCHING PEDAL.....	6-27
FOOT THROTTLE PEDAL	6-27
TRANSMISSION OPERATION.....	6-28
POWERSHIFT CONTROL	6-29
SHUTTLE LEVER	6-30
TRANSMISSION DISPLAY.....	6-32
DRIVING THE TRACTOR.....	6-33
AUTO SHIFT FUNCTION	6-35
SPEED MATCHING	6-39
PROGRAMMING REVERSE GEAR RATIOS	6-40
CREEPER GEARS (where fitted)	6-41
ERROR CODES.....	6-42
GROUND SPEED CHART POWERSHIFT TRANSMISSION Ground speeds ...	6-43

REAR POWER TAKE-OFF

P.T.O. OPERATING PRECAUTIONS.....	6-48
CHANGING THE P.T.O. OUTPUT SHAFT	6-48
ATTACHING P.T.O. DRIVEN EQUIPMENT	6-49
P.T.O. OPERATION.....	6-50
TWO-SPEED P.T.O. SYSTEM	6-55
MULTI-SPEED, SHIFTABLE P.T.O.	6-57
ELECTRONIC P.T.O. SYSTEM Electronic (where fitted)	6-60
EXTERNAL P.T.O. CONTROLS.....	6-61
Auto PTO operation	6-63

FRONT POWER TAKE OFF

P.T.O. OPERATION.....	6-66
AUTO P.T.O. OPERATION	6-68
Front hitch - Operating	6-70

REAR HITCH

ELECTRONIC DRAFT CONTROL	6-76
SETTINGS AND DISPLAY	6-80
ELECTRONIC DRAFT CONTROL OPERATION	6-82
EXTERNAL HITCH CONTROLS.....	6-88

FRONT HITCH

SETTINGS AND ADJUSTMENTS	6-90
--------------------------------	------

HITCH OPERATION	6-93
AUXILIARY FRONT COUPLERS (where fitted).....	6-99
EXTERNAL HITCH CONTROLS	6-101

HYDRAULIC REMOTE CONTROL VALVES

REMOTE CONTROL VALVES	6-102
OPERATING WITH REMOTE VALVES	6-105
CONNECTING REMOTE CYLINDERS	6-108

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

REMOTE CONTROL VALVES	6-110
SETTINGS AND ADJUSTMENTS	6-117
SETTING THE REMOTE VALVE PRIORITY.....	6-123
CREATING TIMER PROGRAMMES	6-125
CONNECTING REMOTE CYLINDERS	6-132
OPERATING WITH REMOTE VALVES	6-134
JOYSTICK OPERATION WITH A FRONT LOADER.....	6-136
MID MOUNT REMOTE VALVES	6-140
EXTERNAL EHR CONTROLS	6-142
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT	6-143

HYDRAULIC POWER BEYOND PORT

HYDRAULIC POWER BEYOND PORT FOR EXTERNAL SERVICES	6-145
Power beyond valve - Static description	6-145
ISO POWER BEYOND COUPLINGS	6-147

THREE POINT HITCH

ATTACHING THREE-POINT HITCH EQUIPMENT	6-148
LIFT ROD ADJUSTMENT	6-150
TOP LINK ADJUSTMENT	6-152
FLEXIBLE LINK END ADJUSTMENT	6-154
QUICK HITCH	6-155
LINKAGE STABILISER ADJUSTMENT	6-157

DRAWBARS AND TOWING ATTACHMENTS

DRAWBARS AND TOWING ATTACHMENTS	6-161
SWINGING DRAWBARS.....	6-163
AUTOMATIC PICK-UP HITCH	6-166
REAR TOW HITCH.....	6-169

TRAILER BRAKING SYSTEMS

AIR-OPERATED TRAILER BRAKES	6-175
AIR-OPERATED TRAILER BRAKES (Italy only).....	6-178
TRAILER BRAKE BIAS CONTROL	6-179
AUXILIARY AIR SUPPLY CONNECTOR (where fitted).....	6-179
HYDRAULIC TRAILER BRAKES	6-180
HYDRAULIC TRAILER BRAKES (Italy only).....	6-181

WHEEL TRACK ADJUSTMENT

FRONT WHEEL TRACK ADJUSTMENT	6-182
------------------------------------	-------

FRONT WHEEL ALIGNMENT	6-185
STEERING STOPS	6-186
FRONT AXLE OSCILLATION STOPS	6-186
FRONT FENDER	6-187
REAR WHEEL TRACK ADJUSTMENT	6-189
FLANGE TYPE AXLE (where fitted)	6-189
BAR TYPE AXLE (where fitted)	6-193

BALLASTING AND TYRES

BALLASTING AND TYRES	6-199
IRON WEIGHTS (where fitted)	6-202
LIQUID BALLAST	6-205
TYRE INFLATION	6-207
TYRE PRESSURES AND PERMISSIBLE LOADS	6-208

AUXILIARY POWER CONNECTIONS

DIAGNOSTIC SOCKET	6-210
TRAILER SOCKET ELECTRICAL	6-210
ELECTRICAL POWER CONNECTORS	6-211
INTERNAL POWER CONNECTORS	6-211
EXTERNAL POWER CONNECTORS	6-213

7 MAINTENANCE

GENERAL INFORMATION

INTRODUCTION	7-1
FUEL REQUIREMENT	7-2
BIODIESEL FUEL	7-4
ENGINE OIL CHANGE	7-6
PROTECTIVE DEVICES	7-7
LUBRICANTS AND COOLANTS	7-9
TRACTOR JACKING POINTS	7-11
GENERAL SPECIFICATIONS	7-12
CAPACITIES	7-13

MAINTENANCE CHART

Maintenance Chart	7-14
-------------------------	------

WHEN THE WARNING LAMP LIGHTS

CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT	7-16
DRAIN FUEL SYSTEM WATER SEPARATOR	7-17
CHECK BRAKE FLUID LEVEL	7-18

EVERY 10 HOURS OR EACH DAY

CHECK ENGINE COOLANT LEVEL	7-19
CHECK ENGINE OIL LEVEL	7-20
CHECK REMOTE CONTROL VALVE DRAIN BOTTLES	7-20
CHECK WINDSCREEN WASHER RESERVOIR	7-21
DRAIN AIR RESERVOIR ON AIR OPERATED TRAILER BRAKE	7-21

FIRST 50 HOURS

SERVICE OPERATIONS	7-22
--------------------------	------

EVERY 50 HOURS

CLEAN THE CAB AIR FILTER	7-24
CLEAN THE SCR COVER AIR DUCTS	7-26
CLEAN THE COOLER SECTION	7-27
ALL GREASE FITTINGS	7-28
CHECK FRONT AND REAR WHEEL NUTS	7-35
CHECK TYRE PRESSURES AND TYRE CONDITION	7-35

EVERY 100 HOURS

INSPECT POLY V-BELT	7-36
INSPECT COMPRESSOR DRIVE BELT	7-36

EVERY 300 HOURS

CHECK BATTERY FLUID LEVEL	7-37
CHECK TRANSMISSION/REAR AXLE AND HYDRAULIC OIL LEVEL	7-39
ADJUST HANDBRAKE	7-40
CHECK FRONT P.T.O. GEARBOX OIL LEVEL	7-40
CHECK 4WD FRONT AXLE DIFFERENTIAL AND HUBS OIL LEVEL	7-41

EVERY 600 HOURS

CHANGE ENGINE OIL AND FILTER	7-42
CHANGE FUEL PRE-FILTER AND FUEL FILTER ELEMENT	7-44
CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT	7-45
CHANGE CHARGE PUMP OIL FILTER	7-46
CHECK ENGINE AIR INTAKE CONNECTIONS	7-47
CHECK TRANSMISSION OIL COOLER PIPE COUPLINGS	7-48
CLEAN DEF/ AdBlue INLINE FILTER	7-48

EVERY 1200 HOURS OR ANNUALLY

CHANGE CAB AIR FILTERS	7-49
CHANGE MAIN OIL FILTER CARTRIDGE	7-50
CHANGE TRANSMISSION/ REAR AXLE AND HYDRAULIC OIL	7-51
CHANGE 4WD DIFFERENTIAL OIL	7-52
CHANGE 4WD PLANETARY HUB OIL	7-53
CHANGE FRONT P.T.O. GEARBOX OIL	7-53
GREASE REAR AXLE SHAFT BEARING	7-54

EVERY 1200 HOURS OR EVERY 2 YEARS

CHECK BATTERY FLUID LEVEL	7-55
CHANGE DEF/ AdBlue INLINE FILTER	7-56
CHANGE ENGINE AIR CLEANER INNER ELEMENT	7-57
CHECK VALVE TAPPET CLEARANCE	7-58
CHANGE ENGINE COOLANT FLUID	7-59
CHANGE AIR BRAKE DRIER RESERVOIR	7-63
CHANGE POLY V-BELTS	7-64

EVERY 1800 HOURS OR EVERY 2 YEARS

CHANGE ENGINE BREATHER FILTER	7-65
-------------------------------------	------

EVERY 3600 HOURS OR EVERY 2 YEARS

CHANGE DEF/ AdBlue MAIN FILTER	7-66
--------------------------------------	------

EVERY 36 MONTHS

SERVICE THE AIR CONDITIONER SYSTEM	7-66
CHECK BATTERY FLUID LEVEL	7-68

GENERAL MAINTENANCE

CLEANING THE TRACTOR	7-70
FUEL SYSTEM PRE- FILTER AND WATER TRAP	7-72
BLEEDING THE FUEL INJECTION SYSTEM	7-72
CHECK BRAKE PEDAL LATCHING/UNLATCHING	7-73
ADJUST CAB SUSPENSION (where fitted)	7-74
ADJUST AUTOMATIC PICK- UP HITCH	7-75
TRANSMISSION CLUTCH CALIBRATION	7-76
HEADLIGHT AND WORKLAMP ADJUSTMENT	7-79
BULB REPLACEMENT	7-80
FUSES AND RELAYS	7-84
PROTECTING THE ELECTRONIC AND ELECTRICAL SYSTEMS DURING BATTERY CHARGING OR WELDING	7-89
BATTERY REMOVAL AND INSTALLATION	7-90

STORAGE

TRACTOR STORAGE	7-91
PREPARATION FOR USE AFTER STORAGE	7-92

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

INTRODUCTION	8-1
--------------------	-----

ALARM(S)

FAULT CODES AND SYMBOLS	8-2
-------------------------------	-----

SYMPTOM(S)

ENGINE	8-4
TRANSMISSION	8-5
HYDRAULICS	8-5
THREE POINT HITCH	8-6
BRAKES	8-6
CAB	8-7
ELECTRICAL SYSTEM	8-7

9 SPECIFICATIONS

GENERAL DIMENSIONS	9-1
Frame - General specification	9-1

Transmission - Capacity	9-4
Front axle system - Capacity	9-4
ENGINE	9-5
TRANSMISSION	9-6
REAR POWER TAKE-OFF	9-7
FRONT POWER TAKE OFF	9-7
HYDRAULIC SYSTEM	9-8
THREE POINT HITCH	9-9
REMOTE CONTROL VALVES	9-10
THREE POINT HITCH FRONT	9-10
BRAKES.....	9-11
STEERING	9-11
ELECTRICAL EQUIPMENT	9-12
MINIMUM HARDWARE TIGHTENING TORQUES	9-13

10 ACCESSORIES

EXTERNAL REAR VIEW MIRRORS.....	10-1
AUXILIARY HEADLIGHTS	10-3
ROTATING BEACON.....	10-4
FRONT- END LOADER FIXATION POINTS	10-5

11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy	11-3
Service record 1st 50 hour, Dealer copy	11-5

1 - GENERAL INFORMATION
CE DECLARATION OF CONFORMITY

Table with 13 columns representing different languages: BG, CZE, DA, DE, EL, EN, ES, ET, FI, FR, HU, IT, LV, LT, NL, NO, PL, PT, RO, SK, SL, SV, TR. Each column contains technical specifications and regulatory references for the CE Declaration of Conformity.

Here above is provided copy of the "EC" Declaration of Conformity (EC Declaration of Conformity acc to 2006/42/EC).

The EC Declaration of Conformity is the manufacturer's declaration about equipment compliance to relevant EU provisions.

Please keep the original document in a safe place. Local authorities may require you to show this document in order to assure compliance of your equipment.

Translation of this declaration in your own country language is provided on the original document.

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes.

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Guiseppe Gavioli CNH Europe Holding S.A. 24, Boulevard Royal L- 2449 Luxembourg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6]
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorised person: [8]

HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- PASSENGER SEAT is certified according to **EN 15694**.
- FOPS level on your tractor cab is certified according to **OECD Code 10**.
- HVAC (Heating, ventilation Air Conditioning) CAB is certified Category 1 according to **EN 15695-1**.
- HV (Heating, ventilation) cab is certified Category 1 according to **EN 15695-1**.
- NOISE EMISSION LEVELS are rated according to **2009/76/EC** and **2009/63/EC**.
- VIBRATION LEVELS are rated according to **78/764/EEC**.

NOTE: See safety section 2 in this manual for further explanation and details on above mentioned standards and specific terminology.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com