

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1

# OPERATOR'S MANUAL

---

**T4.75**

**T4.85**

**T4.95**

**T4.105**

**T4.115**

Tractor

**Part number 47537010**

1<sup>st</sup> edition English  
May 2013



# Contents

---

## 1 GENERAL INFORMATION

Note to the Owner .....	1-1
EC Declaration of Conformity .....	1-2
Commission directive 2010/52/EU .....	1-4
Noise level .....	1-11
Electro-magnetic interference (EMC).....	1-12
International symbols .....	1-13
Introduction .....	1-15
Operator's manual storage .....	1-16
Tractor intended use.....	1-17
Ecology and the Environment .....	1-19
Identification plates .....	1-20
Approval data plate .....	1-22
Component Identification .....	1-23

## 2 SAFETY INFORMATION

Safety rules .....	2-1
Safety information .....	2-2
Air conditioning safety regulations.....	2-6
Vehicle vibration levels .....	2-7
Cab guard .....	2-8
Machine stability.....	2-10
Personal protective equipment (PPE) .....	2-12
Tractor jacking points.....	2-13
Hazardous chemicals.....	2-14
Burn prevention.....	2-15
Fire or explosion prevention.....	2-16
Getting in and out of the machine .....	2-17
Emergency exit.....	2-18
Safety signs .....	2-19

## 3 CONTROLS/INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

General information .....	3-1
Cab .....	3-2

### OPERATOR'S SEAT

Mechanically-adjusted operator seat - Adjust .....	3-6
Pneumatically-adjusted operator seat - Adjust .....	3-7
Seat belt .....	3-9

### PASSENGER'S SEAT

Passenger seat.....	3-10
---------------------	------

---

## FORWARD CONTROLS

Instrument cluster .....	3-11
Console Front console - Localisation overview.....	3-16

## LEFT-HAND SIDE CONTROLS

Cableless version .....	3-20
Version with cab .....	3-21
Handbrake.....	3-22

## RIGHT-HAND SIDE CONTROLS

Cableless version .....	3-23
Version with cab .....	3-24
HI-LO version with cab .....	3-25
Console Right-hand console - Localisation overview .....	3-26
Heating, ventilation or air-conditioning control .....	3-27

## EXTERIOR CONTROLS

Trailer electrical socket .....	3-29
---------------------------------	------

## DISPLAY SETTINGS

Programmable display.....	3-30
Adjusting the dashboard/display brightness.....	3-31
Calibrating speed .....	3-33
Calibrating tool width .....	3-35
Programming maintenance work .....	3-36
Activating/deactivating buzzer .....	3-38
Setting units of measurement .....	3-39
Regenerating the diesel particulate filter (DPF) automatically/manually .....	3-40
Resetting the oil change counter .....	3-45
Viewing error codes .....	3-46

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

Basic operating safety rules .....	4-1
------------------------------------	-----

### STARTING THE UNIT

Starting the Engine .....	4-3
Machine movement start-up.....	4-5

### STOPPING THE UNIT

Stopping the engine .....	4-6
Battery disconnect switch .....	4-7

### MOVING THE UNIT

Transmission operation.....	4-8
-----------------------------	-----

---

12 x 12 transmission speed table .....	4-12
Speed table for 12 x 12 gearbox with additional reducer (20 x 12).....	4-14
Speed table for 12 x 12 gearbox with additional reducer (20 x 20).....	4-16
Transmission speed table 12 x 12 with "HI-LO" (24 x 24).....	4-18

## 5 TRANSPORT OPERATIONS

### ROAD TRANSPORT

Transporting the machine .....	5-1
--------------------------------	-----

### RECOVERY TRANSPORT

Towing the tractor.....	5-2
-------------------------	-----

## 6 WORKING OPERATIONS

### FOUR WHEEL DRIVE (4WD)

Four-wheel drive with electro-hydraulic control.....	6-1
--	-----

### DIFFERENTIAL LOCK

Mechanical differential lock.....	6-2
Electrohydraulic differential lock.....	6-3

### REMOTE CONTROL VALVES

Safety rules.....	6-4
Rear remote control valve(s).....	6-5
Single/double action hydraulic valves.....	6-7

### REAR POWER TAKE-OFF (PTO)

Safety rules.....	6-8
General.....	6-9
Speed adjustment.....	6-9
Electrohydraulically controlled power take-off.....	6-10
Mechanically controlled power take-off.....	6-12
Power take-off speeds.....	6-14
Power Take-Off (PTO) fender switch operation.....	6-15

### FRONT POWER TAKE-OFF (PTO)

Safety rules.....	6-17
Front Power Take-Off (PTO).....	6-18

### REAR HYDRAULIC LIFT

General safety and precautions.....	6-19
Hydraulic lift with mechanical control.....	6-19
Lift-O-Matic® control - Operating.....	6-21

Hydraulic lift with electronic control .....	6-22
Hydraulic lift external controls .....	6-28

## FRONT HYDRAULIC LIFT

Safety rules .....	6-31
Front hydraulic lift .....	6-31

## REAR 3-POINT HITCH

Three-point linkage .....	6-32
Three-point linkage dimensions .....	6-34
Quick coupler .....	6-35
Additional equipment attachment points .....	6-37

## FRONT 3-POINT HITCH

Front lift with standard axle support .....	6-39
Front lift with multifunction axle support .....	6-41
Quick hitch .....	6-43

## TOWBAR

General safety rules .....	6-44
Swinging drawbar .....	6-45

## REAR TOW HITCH

General safety rules .....	6-46
Towing hitch .....	6-47

## WHEELS AND TIRES

Wheels and tyres .....	6-52
Tyre dimensions .....	6-56

## WHEEL TRACK ADJUSTMENT

Adjustment of the front tracks .....	6-58
Adjustment of the front mudguards .....	6-60
Adjustment of the steering angles .....	6-62
Front tracks diagram .....	6-63
Rear tracks diagram .....	6-65

## BALLAST

Safety rules .....	6-66
Front ballast .....	6-67
Rear Ballast .....	6-67
Wheels - Ballast .....	6-68

## TRAILER BRAKING SYSTEM

Hydraulic valve for trailer brakes .....	6-72
Mechanical trailer brake bracket .....	6-74

---

## 7 MAINTENANCE

### GENERAL INFORMATION

General safety before you service.....	7-1
Introduction.....	7-3
Running-in period.....	7-4
Fuel supply.....	7-5
Biodiesel fuel - Biodiesel Fuels.....	7-6
Body maintenance.....	7-7
Opening the hood.....	7-9
Fluids and lubricants.....	7-10

### MAINTENANCE CHART

Maintenance Chart.....	7-11
------------------------	------

#### As required

Radiator expansion tank.....	7-13
Windshield washer reservoir.....	7-13
Air conditioning - Dehydration filter.....	7-13
Distributor oil recovery pan.....	7-14
Radiator - Check.....	7-14
Brakes - Adjust.....	7-14
Machine lights.....	7-15
Tire pressure.....	7-15
Clutch pedal adjustment.....	7-16

#### AT WARNING MESSAGE DISPLAY

Dry air filter - External cartridge.....	7-17
Brake fluid level.....	7-18
Fuel filter water drain.....	7-18

#### Every 10 hours or daily

Engine oil level.....	7-19
-----------------------	------

#### Every 50 hours

Rear three-point hitch - Grease.....	7-20
Front axle.....	7-20
Rear tow hitch.....	7-21
Front hitch - Grease.....	7-22

#### Every 100 hours

Air conditioning condenser.....	7-23
Transmission oil heat exchanger.....	7-23
Intercooler.....	7-23
Cab air filters.....	7-24
Cab recirculated air filter.....	7-24

---

Alternator belt.....	7-25
Compressor belt.....	7-25

### Every 300 hours

Hydraulic circuit oil filter .....	7-26
Auxiliary services oil filter.....	7-26
Dry air filter - External cartridge .....	7-27
Transmission and hydraulic lift .....	7-27
Front Axle Oil .....	7-28
Front axle final drives.....	7-28
Front axle spindle.....	7-28

### Every 600 hours

Change engine oil and filter .....	7-29
Replacing the fuel filters .....	7-30
Fuel prefilter .....	7-30
Wheel bolt torque.....	7-31

### Every 1200 hours or annually

Rear wheel hub.....	7-32
Replacing cab air filters.....	7-32
Replacing air filters .....	7-32
Fuel tank drain.....	7-33
Blow-by filter.....	7-33

### Every 1200 hours or two years

Replacing front axle oil .....	7-34
Replacing front axle final drive oil .....	7-34
Replacing transmission oil.....	7-34
Washing cooling system.....	7-36

### 1800 hours Service

Fuel injectors - Check .....	7-38
------------------------------	------

### Every 3000 hours

Diesel particulate filter (DPF).....	7-38
--------------------------------------	------

### ELECTRICAL SYSTEM

Battery service.....	7-39
Fuses and relay box.....	7-41
Fuse and relay locations .....	7-43
Light adjustments.....	7-53
Hood lamp replacement .....	7-54

---

## STORAGE

Tractor storage .....	7-55
-----------------------	------

## CALIBRATION

Clutch calibration .....	7-56
Clutch calibration .....	7-59
Electronic lift calibration .....	7-62

## 8 TROUBLESHOOTING

### FAULT CODE RESOLUTION

TRUBLESHOOTING ENGINE .....	8-1
Electrical system - Troubleshooting ELECTRICAL SYSTEM .....	8-3
Hydraulic systems - Troubleshooting HYDRAULIC SYSTEM .....	8-4
Rear three-point hitch - Troubleshooting HYDRAULIC LIFT AND 3-POINT LINKAGE .....	8-5
Hydraulic service brakes - Troubleshooting .....	8-6
Cab climate control - Troubleshooting .....	8-7

### ALARM(S)

Alarms .....	8-8
Display warnings overview .....	8-9

### SYMPTOM(S)

Viewing error codes .....	8-13
Error code identification .....	8-13
Fault code of digital instrument .....	8-15

## 9 SPECIFICATIONS

Dimensions and weights .....	9-1
Maximum permitted loads on front and rear axle .....	9-4
Maximum permitted loads on drawbar .....	9-5
Maximum permitted loads on towing hitch .....	9-5
Technical data .....	9-6

## 10 ACCESSORIES

Radio .....	10-1
Joystick and Electric Hydraulic (EH) control - Operating .....	10-9

---



# 1 - GENERAL INFORMATION

## Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

Your NEW HOLLAND AGRICULTURE dealer will instruct you in the general operation of your new equipment. Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your machine.

Your NEW HOLLAND AGRICULTURE dealer carries a complete line of genuine NEW HOLLAND AGRICULTURE service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model:
Product Identification Number (PIN):



This is the safety alert symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

### WARNING

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.  
Replace all shields before operating the machine.  
Failure to comply could result in death or serious injury.**

W0012A

### Engine tampering statement:

**NOTICE:** *The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

EC Declaration of Conformity

Table with 18 columns representing different languages and the EC Declaration of Conformity text in each language. The languages include BG, CE, DA, DE, EL, EN, ES, ET, FI, FR, HU, IT, LT, LV, NL, NO, PL, PT, RO, SK, SL, SV, and TR. Each cell contains the translated text of the declaration.

DCAPLNEGB01751C 1

Here above is provided copy of the "EC" Declaration of Conformity (EC Declaration of Conformity acc to 2006/42/EC). The EC Declaration of Conformity is the manufacturer's declaration about equipment compliance to relevant EU provisions.

Please keep the original document in a safe place. Local authorities may require you to show this document in order to assure compliance of your equipment. Translation of this declaration in your own country language is provided on the original document

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Giuseppe Gavioli, CNH Europe Holding S.A. 24, Boulevard Royal L – 2449 Luxemburg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6].
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322–1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorised person: [8]

## HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- FOPS level on your tractor cab is certified according to OECD Code 10.
- The CAB is Category 2 approved in accordance with EN 15695-1.
- NOISE EMISSION LEVELS have been measured in accordance with directives 2009/76/EC • 2009/63/EC.
- VIBRATION LEVELS are rated according to 78/764/EEC.
- ROPS PROTECTION is certified according to EN 15694.

**NOTE:** See safety section 1 in this manual for further explanation and details on above mentioned standards and specific terminology.

## Commission directive 2010/52/EU

### Aspects concerning safety of directive 2010/52/EU

#### Section 4.1

##### A | Ergonomic position of the driver seat.

Adjust the driver seat correctly in the most comfortable, ergonomic position before using the machine. This reduces the risks and effects of the vibrations transmitted to the whole body. Please refer to **3-6 — 3-7** for specific adjustment instructions. See **2-7** for further information on the effects and risks of vibration transmitted to the whole body.

##### B | Heating, ventilation and air-conditioning.

Carefully read and comprehend the instructions for using and operating the air-conditioning, heating and ventilation system, given on **3-27**. Only a correct use of the cab ventilation and filtration system provides protection against dust and that the minimum differential pressure is ensured. The necessary filtration of the outside air can be accomplished only by using the air-conditioner and setting the fan on the highest speed with the doors, windows and canopy closed.

##### C | Starting and shutting down the engine.

To be able to use the machine safely, it is recommended to read and fully understand all the information on engine start-up and shutdown and likewise safety for use and operation. Please refer to **4-3** and **4-6**.

##### D | Emergency exit.

The tractor's rear window can be used as an emergency exit, as indicated by a special safety sign. See **2-18**.

##### E | Getting on and off the tractor.

#### **▲ WARNING**

##### **Fall hazard!**

**Jumping on or off the machine could cause an injury. Always face the machine, use the handrails and steps, and get on or off slowly. Maintain a three-point contact to avoid falling: both hands on the handrails and one foot on the step, or one hand on the handrail and both feet on the steps. Failure to comply could result in death or serious injury.**

W0141A

See **2-17**.

##### F | Articulated tractors.

#### **▲ WARNING**

##### **Uncontrolled equipment movement!**

**Moving the articulated tractor steering wheel can swing or move attached equipment. Do not move the steering wheel until everyone is clear of the equipment. Failure to comply could result in death or serious injury.**

W0906A

There is no space for people when the tractor steers.

To prevent personal injury:

- Keep at a distance from the tractor articulation zone when the engine is running.
- Switch off the engine before working in the tractor articulation zone.
- Install the articulation cylinder retaining blocks before lifting the tractor or transporting it with another means, performing maintenance work in the articulation zone or activating static implements driven by the Power Take-Off (PTO). Take care to remove the retaining blocks before driving the tractor.
- Keep the transmission guards in position.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)