

ORIGINAL INSTRUCTIONS

# OPERATOR'S MANUAL

---

## T4.115

Tractor

**Part number 47537107**

1<sup>st</sup> edition English

May 2013



# Contents

---

## 1 GENERAL INFORMATION

Note to the Owner .....	1-1
Proposition 65 .....	1-2
Electro-magnetic interference (EMC).....	1-3
International symbols .....	1-4
Introduction .....	1-6
Operator's manual storage .....	1-7
Tractor intended use.....	1-8
Ecology and the Environment .....	1-10
Identification plates .....	1-11
Component Identification .....	1-13

## 2 SAFETY INFORMATION

Safety rules and signal word definitions .....	2-1
Safety information .....	2-2
Air conditioning safety regulations.....	2-6
Vehicle vibration levels .....	2-7
Cab guard .....	2-8
Machine stability.....	2-10
Personal protective equipment (PPE).....	2-12
Tractor jacking points.....	2-13
Hazardous chemicals.....	2-14
Burn prevention.....	2-15
Fire or explosion prevention .....	2-16
Getting in and out of the machine .....	2-17
Emergency exit .....	2-18
Safety signs .....	2-19

## 3 CONTROLS/INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

General information .....	3-1
Cab .....	3-2

### OPERATOR'S SEAT

Mechanically-adjusted operator seat - Adjust .....	3-5
Pneumatically-adjusted operator seat - Adjust .....	3-6
Seat belt .....	3-8

### INSTRUCTOR'S SEAT

Instructional seat - Localisation overview .....	3-9
--	-----

### FORWARD CONTROLS

Instrument cluster .....	3-9
Console Front console - Localisation overview.....	3-15

---

## LEFT-HAND SIDE CONTROLS

Cableless version .....	3-19
Version with cab .....	3-20
Handbrake .....	3-21

## RIGHT-HAND SIDE CONTROLS

Cableless version .....	3-22
Version with cab .....	3-23
Console Right-hand console - Localisation overview .....	3-24
Heating, ventilation or air-conditioning control .....	3-25

## EXTERIOR CONTROLS

Trailer electrical socket .....	3-27
---------------------------------	------

## DISPLAY SETTINGS

Programmable display .....	3-27
Adjusting the dashboard/display brightness .....	3-29
Calibrating speed .....	3-31
Calibrating tool width .....	3-33
Programming maintenance work .....	3-34
Activating/deactivating buzzer .....	3-36
Setting units of measurement .....	3-37
Regenerating the diesel particulate filter (DPF) automatically/manually .....	3-38
Resetting the oil change counter .....	3-43
Viewing error codes .....	3-44

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

Basic operating safety rules .....	4-1
------------------------------------	-----

### STARTING THE UNIT

Starting the Engine .....	4-3
Machine movement start-up .....	4-5

### STOPPING THE UNIT

Stopping the engine .....	4-6
---------------------------	-----

### MOVING THE UNIT

Transmission operation .....	4-7
12 x 12 transmission speed table .....	4-10
Speed table for 12 x 12 gearbox with additional reducer (20 x 12) .....	4-12
Speed table for 12 x 12 gearbox with additional reducer (20 x 20) .....	4-14

---

## 5 TRANSPORT OPERATIONS

### ROAD TRANSPORT

Transporting the machine .....	5-1
--------------------------------	-----

### RECOVERY TRANSPORT

Towing the tractor.....	5-2
-------------------------	-----

## 6 WORKING OPERATIONS

### FOUR WHEEL DRIVE (4WD)

Four-wheel drive with electro-hydraulic control.....	6-1
--	-----

### DIFFERENTIAL LOCK

Mechanical differential lock.....	6-2
Electrohydraulic differential lock.....	6-3

### REMOTE CONTROL VALVES

Safety rules.....	6-4
Rear remote control valve(s) .....	6-5
Single/double action hydraulic valves .....	6-7

### REAR POWER TAKE-OFF (PTO)

Safety rules.....	6-8
General .....	6-9
Speed adjustment .....	6-10
Electrohydraulically controlled power take-off .....	6-11
Mechanically controlled power take-off.....	6-12
Power take-off speeds.....	6-13

### FRONT POWER TAKE-OFF (PTO)

Safety rules.....	6-14
-------------------	------

### REAR HYDRAULIC LIFT

Hydraulic lift with mechanical control.....	6-15
---	------

### REAR 3-POINT HITCH

Three-point linkage .....	6-17
Three-point linkage dimensions .....	6-19
Additional equipment attachment points .....	6-20

### FRONT 3-POINT HITCH

Front lift with standard axle support .....	6-22
---	------

---

## TOWBAR

General safety rules .....	6-24
Swinging drawbar .....	6-25

## REAR TOW HITCH

General safety rules .....	6-26
----------------------------	------

## WHEELS AND TIRES

Wheels and tyres .....	6-27
Tyre dimensions .....	6-31

## WHEEL TRACK ADJUSTMENT

Adjustment of the front tracks .....	6-32
Adjustment of the front mudguards .....	6-34
Adjustment of the steering angles .....	6-36
Front tracks diagram .....	6-37
Rear tracks diagram .....	6-39

## BALLAST

Safety rules .....	6-40
Front ballast .....	6-41
Rear Ballast .....	6-41
Wheels - Ballast .....	6-42

## 7 MAINTENANCE

### GENERAL INFORMATION

General safety before you service .....	7-1
Introduction .....	7-3
Running-in period .....	7-4
Fuel supply .....	7-5
Biodiesel fuel - Biodiesel Fuels .....	7-6
Body maintenance .....	7-7
Opening the hood .....	7-9
Fluids and lubricants .....	7-10

### MAINTENANCE CHART

Maintenance Chart .....	7-11
-------------------------	------

### As required

Radiator expansion tank .....	7-13
Winshield washer reservoir .....	7-13
Air conditioning - Dehydration filter .....	7-13
Distributor oil recovery pan .....	7-14
Radiator - Check .....	7-14
Brakes - Adjust .....	7-14

---

Machine lights .....	7-15
Tire pressure .....	7-15
Clutch pedal adjustment .....	7-16

## AT WARNING MESSAGE DISPLAY

Dry air filter - External cartridge .....	7-17
Brake fluid level .....	7-18
Fuel filter water drain .....	7-18

## Every 10 hours or daily

Engine oil level .....	7-19
------------------------	------

## Every 50 hours

Rear three-point hitch - Grease .....	7-20
Front axle .....	7-20

## Every 100 hours

Air conditioning condenser .....	7-21
Transmission oil heat exchanger .....	7-21
Intercooler .....	7-21
Cab air filters .....	7-22
Cab recirculated air filter .....	7-22
Alternator belt .....	7-23
Compressor belt .....	7-23

## Every 300 hours

Hydraulic circuit oil filter .....	7-24
Auxiliary services oil filter .....	7-24
Dry air filter - External cartridge .....	7-25
Transmission and hydraulic lift .....	7-25
Front Axle Oil .....	7-26
Front axle final drives .....	7-26
Front axle spindle .....	7-26

## Every 600 hours

Change engine oil and filter .....	7-27
Replacing the fuel filters .....	7-28
Fuel prefilter .....	7-28
Wheel bolt torque .....	7-29

## Every 1200 hours or annually

Rear wheel hub .....	7-30
Replacing cab air filters .....	7-30
Replacing air filters .....	7-30
Fuel tank drain .....	7-31
Blow-by filter .....	7-31

---

## Every 1200 hours or two years

Replacing front axle oil .....	7-32
Replacing front axle final drive oil .....	7-32
Replacing transmission oil.....	7-32
Washing cooling system.....	7-34

## 1800 hours Service

Fuel injectors - Check .....	7-36
------------------------------	------

## Every 3000 hours

Diesel particulate filter (DPF).....	7-36
--------------------------------------	------

## ELECTRICAL SYSTEM

Battery service.....	7-37
Fuses and relay box .....	7-39
Fuse and relay locations .....	7-41
Light adjustments.....	7-51
Hood lamp replacement .....	7-52

## STORAGE

Tractor storage .....	7-53
-----------------------	------

## CALIBRATION

Clutch calibration .....	7-54
--------------------------	------

## 8 TROUBLESHOOTING

### FAULT CODE RESOLUTION

TROUBLESHOOTING ENGINE .....	8-1
Electrical system - Troubleshooting ELECTRICAL SYSTEM .....	8-3
Hydraulic systems - Troubleshooting HYDRAULIC SYSTEM .....	8-4
Rear three-point hitch - Troubleshooting HYDRAULIC LIFT AND 3-POINT LINKAGE .....	8-5
Hydraulic service brakes - Troubleshooting .....	8-6
Cab climate control - Troubleshooting.....	8-7

### ALARM(S)

Alarms .....	8-8
Display warnings overview .....	8-9

### SYMPTOM(S)

Viewing error codes .....	8-13
Error code identification .....	8-13

---

Fault code of digital instrument.....	8-15
---------------------------------------	------

## 9 SPECIFICATIONS

Dimensions and weights .....	9-1
Maximum permitted loads on front and rear axle.....	9-4
Maximum permitted loads on drawbar .....	9-4
Technical data .....	9-5

## 10 ACCESSORIES

Radio .....	10-1
Joystick and Electric Hydraulic (EH) control - Operating .....	10-9
Front loader and bucket - Operating .....	10-10



# 1 - GENERAL INFORMATION

## Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

Your NEW HOLLAND AGRICULTURE dealer will instruct you in the general operation of your new equipment. Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your machine.

New Holland Top Service is also available. Call 1-866-NEWHLND (1-866-639-4563) or email: [na.topservice@cnh.com](mailto:na.topservice@cnh.com).

Your NEW HOLLAND AGRICULTURE dealer carries a complete line of genuine NEW HOLLAND AGRICULTURE service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model:
Product Identification Number (PIN):



This is the safety alert symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

### **⚠ WARNING**

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.  
Replace all shields before operating the machine.  
Failure to comply could result in death or serious injury.**

W0012A

### Engine tampering statement:

**NOTICE:** The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!

### Improvements

CNH America LLC is continually striving to improve its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)