

**Steiger® 400**

**Steiger® 450**

**Steiger® 500**

**Steiger® 550**

**Steiger® 600**

**Quadtrac® 450**

**Quadtrac® 500**

**Quadtrac® 550**

**Quadtrac® 600**

**Tier 2**

**Tractor**

*PIN ZDF100001 and above*

# OPERATOR'S MANUAL

**Part number 47538872**

2<sup>nd</sup> edition English

August 2013

*Replaces part number 47421810*



# Contents

---

## 1 GENERAL INFORMATION

|  |      |
|--|------|
| Read the Operator's Manual .....           | 1-1  |
| Note to the owner.....                     | 1-1  |
| Electro-Magnetic Compatibility (EMC) ..... | 1-2  |
| CNH America LLC technical manuals.....     | 1-3  |
| Tractor intended use.....                  | 1-4  |
| Manual storage .....                       | 1-5  |
| Product identification .....               | 1-6  |
| Machine orientation.....                   | 1-10 |
| Component location .....                   | 1-12 |

## 2 SAFETY INFORMATION

|  |      |
|--|------|
| Safety rules .....                         | 2-1  |
| Safety rules .....                         | 2-2  |
| Ecology and the enviroment.....            | 2-13 |
| Noise levels.....                          | 2-14 |
| Vehicle vibration levels .....             | 2-15 |
| ROPS and FOPS.....                         | 2-16 |
| Hazardous substances .....                 | 2-17 |
| Emergency exit .....                       | 2-18 |
| Safety signs .....                         | 2-19 |
| Articulation cylinder locking blocks ..... | 2-29 |
| Wheel chocks (Germany only) .....          | 2-30 |

## 3 CONTROLS/INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

|                      |     |
|----------------------|-----|
| Tractor access ..... | 3-1 |
|----------------------|-----|

### OPERATOR'S SEAT

|                             |     |
|-----------------------------|-----|
| Overview .....              | 3-3 |
| Control identification..... | 3-4 |

### INSTRUCTOR'S SEAT

|                |     |
|----------------|-----|
| Overview ..... | 3-7 |
|----------------|-----|

### FORWARD CONTROLS

|                       |      |
|-----------------------|------|
| Steering column ..... | 3-9  |
| Front console .....   | 3-12 |
| Pedal controls .....  | 3-13 |
| Ventilation .....     | 3-15 |
| Front sun shade ..... | 3-15 |

### RIGHT-HAND SIDE CONTROLS

|                             |      |
|-----------------------------|------|
| Armrest console .....       | 3-16 |
| Multi Function Handle ..... | 3-17 |

---

|                                     |      |
|-------------------------------------|------|
| Control panel .....                 | 3-20 |
| Remote valve controls .....         | 3-27 |
| Joystick .....                      | 3-28 |
| Armrest compartment .....           | 3-29 |
| Adjusting the armrest console ..... | 3-31 |

## REARWARD CONTROLS

|                      |      |
|----------------------|------|
| Rear sun shade ..... | 3-32 |
|----------------------|------|

## OVERHEAD CONTROLS

|   |      |
|---|------|
| Overview .....                                      | 3-33 |
| Automatic Temperature Control (ATC) .....           | 3-35 |
| Automatic Temperature Control (ATC) operation ..... | 3-39 |
| Center panel controls .....                         | 3-41 |
| Radio (if equipped) .....                           | 3-45 |
| Interior and access lights .....                    | 3-46 |

## EXTERIOR CONTROLS

|                              |      |
|------------------------------|------|
| Exterior hitch control ..... | 3-48 |
|------------------------------|------|

## INSTRUMENT CLUSTER

|                                     |      |
|-------------------------------------|------|
| Overview .....                      | 3-49 |
| Gauges .....                        | 3-49 |
| Status and warning icons .....      | 3-50 |
| Upper display .....                 | 3-53 |
| Lower display .....                 | 3-54 |
| Keypad .....                        | 3-56 |
| Instrumentation - setup menu .....  | 3-58 |
| Instrumentation - adjust menu ..... | 3-65 |
| Performance instrumentation .....   | 3-72 |

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

|                                  |     |
|----------------------------------|-----|
| Before starting the engine ..... | 4-1 |
|----------------------------------|-----|

### STARTING THE UNIT

|                                  |     |
|----------------------------------|-----|
| Normal engine starting .....     | 4-5 |
| Cold temperature operation ..... | 4-7 |

### STOPPING THE UNIT

|                           |     |
|---------------------------|-----|
| Stopping the engine ..... | 4-9 |
|---------------------------|-----|

### MOVING THE UNIT

|   |      |
|---|------|
| Powershift transmission .....                 | 4-11 |
| Automatic Productivity Management (APM) ..... | 4-19 |

---

|  |      |
|--|------|
| Differential lock system .....               | 4-28 |
| Constant engine speed .....                  | 4-29 |
| Electronic end of row system .....           | 4-32 |
| Engine compression brake (if equipped) ..... | 4-42 |

## 5 TRANSPORT OPERATIONS

### ROAD TRANSPORT

|   |     |
|---|-----|
| Tractor warning lamps .....               | 5-1 |
| Operating the tractor warning lamps ..... | 5-2 |
| Safe transport speed .....                | 5-3 |
| Implement warning lamps .....             | 5-4 |
| Safety chain .....                        | 5-5 |

### SHIPPING TRANSPORT

|   |     |
|---|-----|
| Securing the tractor for shipping ..... | 5-6 |
|---|-----|

### RECOVERY TRANSPORT

|                          |      |
|--------------------------|------|
| Safety rules .....       | 5-7  |
| Towing the tractor ..... | 5-8  |
| Towing the tractor ..... | 5-11 |

## 6 WORKING OPERATIONS

### GENERAL INFORMATION

|                        |     |
|------------------------|-----|
| Product overview ..... | 6-1 |
|------------------------|-----|

### REAR POWER TAKE-OFF (PTO)

|   |     |
|---|-----|
| Safety rules .....                        | 6-2 |
| Connecting the Power Take-Off (PTO) ..... | 6-4 |
| Power Take-Off (PTO) operation .....      | 6-5 |

### THREE POINT HITCH

|  |      |
|--|------|
| Identification .....                     | 6-7  |
| Link adjustment .....                    | 6-8  |
| Sway block adjustment .....              | 6-11 |
| Mechanical float adjustment .....        | 6-12 |
| Hitch quick coupler - Category IVN ..... | 6-13 |
| Transport lock .....                     | 6-17 |
| Hitch operation .....                    | 6-18 |
| Rear remote hitch switch .....           | 6-22 |
| Position control operation .....         | 6-23 |
| Slip control operation .....             | 6-25 |

---

## DRAWBARS AND TOWING ATTACHMENTS

|                         |      |
|-------------------------|------|
| Safety rules .....      | 6-27 |
| Scraper operation ..... | 6-28 |

## TRAILER BRAKE COUPLER

|                                 |      |
|---------------------------------|------|
| Safety rules .....              | 6-29 |
| Trailer brake connections ..... | 6-29 |

## AUXILIARY POWER CONNECTIONS

|   |      |
|---|------|
| External power and lighting connections ..... | 6-30 |
| Cab power connections .....                   | 6-32 |

## HYDRAULIC REMOTE CONTROL VALVES

|   |      |
|---|------|
| Valve couplers and connections .....        | 6-35 |
| Optional circuits .....                     | 6-42 |
| Hydraulic remote valve transport lock ..... | 6-43 |
| Operating the controls .....                | 6-44 |
| Remote valve display screens .....          | 6-48 |
| Joystick operation .....                    | 6-51 |
| Auto auxiliary mode operation .....         | 6-56 |
| Auto depth control operation .....          | 6-59 |

## BALLASTING THE TRACTOR

|                                      |      |
|--------------------------------------|------|
| Guidelines .....                     | 6-62 |
| Weights, cast metal and liquid ..... | 6-66 |
| Wheel slip and power hop .....       | 6-72 |

## FRONT AND REAR AXLE

|  |       |
|--|-------|
| Tire safety .....                          | 6-73  |
| Pressure and load ratings .....            | 6-74  |
| Wheel installation .....                   | 6-81  |
| Wheel tread settings on flange axles ..... | 6-89  |
| Wheel tread settings on bar axles .....    | 6-90  |
| Track preconditioning .....                | 6-101 |

## 7 MAINTENANCE

### GENERAL INFORMATION

|   |     |
|---|-----|
| General information .....                 | 7-1 |
| Engine hood .....                         | 7-2 |
| Engine side shields .....                 | 7-3 |
| Opening the right-hand service door ..... | 7-4 |
| Power cut-off switch .....                | 7-5 |
| Filling the fuel tank .....               | 7-6 |
| Fuel tank capacity .....                  | 7-7 |
| Tire and rim service .....                | 7-8 |

---

|   |      |
|---|------|
| Tractor jacking points .....                | 7-10 |
| Lubricants and capacities .....             | 7-12 |
| Consumables - Engine oil .....              | 7-13 |
| Consumables - Diesel fuel .....             | 7-15 |
| Consumables - Biodiesel fuels .....         | 7-16 |
| Organic Acid Technology (OAT) coolant.....  | 7-18 |
| Electrical specifications and service ..... | 7-19 |
| Electrical specifications and service ..... | 7-21 |
| Fuse and relay locations .....              | 7-23 |
| Maintenance chart notes .....               | 7-31 |

## MAINTENANCE CHART

|                         |      |
|-------------------------|------|
| Maintenance Chart ..... | 7-32 |
|-------------------------|------|

### At warning message display

|                           |      |
|---------------------------|------|
| Air cleaner .....         | 7-34 |
| Primary fuel filter ..... | 7-34 |

### Every 10 hours or daily

|   |      |
|---|------|
| Engine oil level .....                        | 7-35 |
| Wheel bolt torque .....                       | 7-35 |
| Wheel weight bolt torque .....                | 7-35 |
| Transmission oil level.....                   | 7-36 |
| Hydraulic/axle oil level.....                 | 7-37 |
| Engine coolant level .....                    | 7-37 |
| Fuel level .....                              | 7-38 |
| General tractor inspection (see Note 1) ..... | 7-38 |

### Every 50 hours

|   |      |
|---|------|
| Fuel tank and fuel filter .....                             | 7-39 |
| Articulation hinge - upper front .....                      | 7-41 |
| Oscillation hinge - rear .....                              | 7-41 |
| Articulation hinge - lower .....                            | 7-41 |
| Articulation cylinder - front, left-hand, right-hand .....  | 7-42 |
| Articulation cylinder - rear, left-hand and right-hand..... | 7-42 |
| Hitch cylinder pin - upper, left-hand and right-hand .....  | 7-43 |
| Hitch cylinder pin - lower, left-hand and right-hand.....   | 7-43 |
| Hitch rockshaft - left-hand and right-hand .....            | 7-44 |
| Hitch lift links and top link.....                          | 7-44 |
| Driveshaft carrier bearing.....                             | 7-45 |

### Every 250 hours

|   |      |
|---|------|
| Cab air filter, outside (see Note 2)..... | 7-46 |
| Cab recirculation filter .....            | 7-47 |
| Windshield washer fluid level.....        | 7-47 |

---

## Every 500 hours

|  |      |
|--|------|
| Air tubing - engine .....                  | 7-48 |
| Alternator - water pump belt .....         | 7-48 |
| Battery electrolyte level .....            | 7-49 |
| Power Take Off (PTO) carrier bearing ..... | 7-50 |
| Power Take Off (PTO) slip joint .....      | 7-50 |
| Radiator and coolers .....                 | 7-52 |
| Saddle tanks .....                         | 7-54 |

## Every 600 hours

|  |      |
|--|------|
| Engine oil and filter (see note 5) ..... | 7-55 |
| Engine fuel filter (see note 6) .....    | 7-58 |
| Engine fuel pre-filter .....             | 7-62 |
| Fuel tank vent (see note 8) .....        | 7-67 |

## Every 1200 hours

|  |      |
|--|------|
| Engine crankcase breather filter ..... | 7-68 |
|--|------|

## Every 1500 hours

|  |      |
|--|------|
| Engine air tubing .....                        | 7-70 |
| Engine air filters (see Note 3) .....          | 7-71 |
| Hydraulic oil and filters (see note 6) .....   | 7-77 |
| Hydraulic reservoir breather .....             | 7-79 |
| Transmission oil and filter (see note 6) ..... | 7-80 |
| Transmission vent .....                        | 7-81 |
| Idler/roller wheel oil (see Note 7) .....      | 7-82 |
| Cab air filter, outside (see Note 2) .....     | 7-83 |
| Door lock and hinges (see Note 4) .....        | 7-84 |

## Every 2000 hours or every two years

|                                      |      |
|--------------------------------------|------|
| Engine coolant drain and flush ..... | 7-85 |
|--------------------------------------|------|

## As required maintenance

|  |      |
|--|------|
| Vehicle fire prevention .....          | 7-88 |
| Pressure cooling system hoses .....    | 7-89 |
| Hydraulic system hoses .....           | 7-89 |
| Tire pressure .....                    | 7-89 |
| Engine fan belt .....                  | 7-89 |
| Viscous fan drive .....                | 7-90 |
| Track inspection and bolt torque ..... | 7-90 |
| Track tension release .....            | 7-92 |
| Track alignment .....                  | 7-94 |
| Cab fabric and carpet .....            | 7-96 |
| Seat belt .....                        | 7-96 |

---

## STORAGE

|                            |      |
|----------------------------|------|
| Placing in storage .....   | 7-97 |
| Removing from storage..... | 7-98 |

## Electrical system

|   |       |
|---|-------|
| Battery removal and installation .....    | 7-99  |
| Auxiliary battery connections .....       | 7-100 |
| Flood and work lamp replacement .....     | 7-102 |
| Rotating beacon lamp replacement .....    | 7-107 |
| Interior lights lamp replacement .....    | 7-108 |
| Road lamps.....                           | 7-111 |
| Front amber turn and position lamps ..... | 7-113 |
| Marker/position lamp .....                | 7-115 |
| Rear amber turn/tail/stop lamps .....     | 7-116 |
| License plate lamp .....                  | 7-117 |

## 8 TROUBLESHOOTING

### FAULT CODE RESOLUTION

|                            |     |
|----------------------------|-----|
| Fault code retrieval ..... | 8-1 |
|----------------------------|-----|

### ALARM(S)

|   |      |
|---|------|
| Display warnings .....                              | 8-4  |
| Transmission disengages; neutral icon flashes ..... | 8-12 |

## 9 SPECIFICATIONS

|  |      |
|--|------|
| Engine specifications .....                  | 9-1  |
| Power train and hydraulics .....             | 9-3  |
| Speed charts .....                           | 9-6  |
| Vehicle dimensions and shipping weight ..... | 9-8  |
| Maximum tractor operating weights .....      | 9-12 |

## 10 ACCESSORIES

|                               |      |
|-------------------------------|------|
| Farming system displays ..... | 10-1 |
| Chemical tank mounting.....   | 10-2 |
| General accessories.....      | 10-5 |

---



# 1 - GENERAL INFORMATION

## Read the Operator's Manual



Improper operation of this vehicle can cause death or serious injury. Before using the vehicle, make certain that every operator:

- Is instructed in safe and proper use of the machine.
- Reads and understands the manual(s) pertaining to the machine.
- Reads and understands all safety decals on the machine.

- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow CNH America LLC instructions on machine operation and maintenance.

## Note to the owner

This manual contains important information about the safe operation, adjustment and routine maintenance of your tractor. The manual is divided into ten chapters as outlined in the table of contents. Refer to the index at the end of this manual for locating specific items about your tractor.

Do NOT operate or permit anyone to operate or service this machine until you or the other persons have read this manual. Use only trained operators who have demonstrated the ability to operate and service this machine correctly and safely.

This Operator's Manual is to be stored in the manual compartment behind the operator's seat in the vehicle. Make sure this manual is in good condition. Contact your dealer to obtain additional manuals. Contact your dealer for any further information or assistance about your machine. Your dealer has approved service parts. Your dealer has technicians with special training that know the best methods of repair and maintenance for your tractor.

## Electro-Magnetic Compatibility (EMC)

This machine complies strictly with the European Regulations on electro-magnetic emissions. However, interference may arise as a result of add-on equipment which may not necessarily meet the required standards. As such interference can result in serious malfunction of the unit and/or create unsafe situations, you must observe the following:

- Ensure that each piece of non- CASE IH equipment fitted to the machine bears the CE mark.
- The maximum power of emission equipment (radio, telephones, etc.) must not exceed the limits imposed by the national authorities of the country where you use the machine.
- The electro-magnetic field generated by the add-on system should not exceed **24 V/m** at any time and at any location in the proximity of electronic components.

Failure to comply with these rules will render the CASE IH warranty null and void.

## CNH America LLC technical manuals

Manuals are available from your dealer for your machine. Your dealer can expedite your order for operator manuals and parts catalogs.

Always give the machine name, model and P.I.N. (product identification number) of your machine so your dealer can provide the correct manuals for your machine.

The company is continually striving to improve its products and therefore reserves the right to make improvements and changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

### Manual scope and required training level

This manual provides information on the intended use of your tractor under the conditions foreseen by the manufacturer during normal operation, routine service and maintenance and periodic service and maintenance.

Normal operation is use of the tractor for the purpose intended by the manufacturer by an owner/operator who is familiar with the tractor and the mounted or towed equipment, and who is complying with the information on operation and safe practices, provided in this manual and by the decals on the tractor and the equipment.

Normal operation includes such actions as preparing the tractor for storage and removing the tractor from storage, adding or removing ballast, connecting and disconnecting mounted or towed equipment, raising and lowering components into or out of work position, adjusting tractor settings for specific field or crop settings, etc.

Routine service and maintenance are those actions which must be performed daily to maintain proper tractor function by an owner/operator who is familiar with tractor characteristics, and who is complying with the information on routine service and safe practices in this manual and in the decals on the tractor.

Routine service and maintenance includes such actions as fueling, cleaning, washing, topping off fluid levels, greasing, and replacing consumable articles such as lamp bulbs.

Periodic service and maintenance are those actions which must be performed at regularly defined intervals

All data given in this manual is subject to production variations.

**NOTICE:** *Operating and service messages displayed on the electronic operating panel may vary from what is shown in the manual. If this occurs, heed the latest instructions on the electronic operating panel.*

Dimensions and weights are approximate only and the illustrations do not necessarily show the machine in standard condition. For exact information about any particular machine, please consult your dealer.

to maintain proper tractor function by an owner/operator who is familiar with tractor characteristics, and who is complying with the information on periodic service and safe practices in this manual and in the decals on the tractor.

Periodic service and maintenance includes such actions as checking, cleaning and changing air filters, changing engine oil and filters, changing transmission oil and filters, changing front axle and wheel hub fluids, changing coolant, etc.

Some actions in the periodic service and maintenance chart are beyond the knowledge and skills of the owner/operator: for example, engine valve adjustment, fuel injector nozzles. For these actions, the manual instructs the owner/operator to have the action performed by their authorized dealer.

This manual does not contain all the information related to periodical service and maintenance, converting and repairs to be carried out by professional service personnel. These actions require special facilities, technical skills, and/or tools which are not supplied with the machine.

Converting is changing the tractor configuration for a specific crop or soil condition and requires rebuilding or adding components to the vehicle: for example, installation of dual wheels. Repairing is the disassembly and assembly of the tractor to restore proper operation after a component failure or degradation of performance.

## Tractor intended use

Steiger series tractors with standard equipment and authorized attachments, are intended to be used for customary farming, land leveling and related agriculture operations (intended use). This tractor is not intended for forestry use or for use with loaders. The cab on this tractor does not offer sufficient protection for forestry work.

The cab on this tractor is a Category 2 cab (EN 15695-1) and the application of plant protection products is not part of the intended use of this tractor, unless the manufacturer of the chemical product recommends the use of personal protective equipment as appropriate and sufficient protection with respect to their product.

Installation of utility (dozer) blades, tile plows, front loaders or push bars on the tractor is not approved. Any tractor damage resulting from the installation and/or use of such equipment is not covered by the tractor warranty.

Consult an authorized dealer or CNH America LLC on changes, additions or modifications that can be required for this machine to comply with various regulations and safety requirements. Unauthorized modifications will cause serious injury or death. Anyone making such unauthorized modifications is responsible for the consequences.

Do not use this machine for any purpose or in any manner other than as described in the manual, decals, or other product safety information provided with the machine. These materials define the machine's intended use.

Use in any other way is considered as contrary to the intended use. The manufacture accepts no liability for

any damage or injury resulting from this misuse and these risks must be born solely by the user.

Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

All persons who will be operating this machine shall possess a valid local vehicle operating permit and/or other applicable local age work permits.


This tractor must be operated, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention).

The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Any arbitrary modifications carried out on the tractor will relieve the manufacturer of all liability for any resulting damage or injury.

**ATTENTION:** *The engine and fuel system on your machine is designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is complete. Engine service and/or repairs must be done by a certified technician only!*

## Manual storage

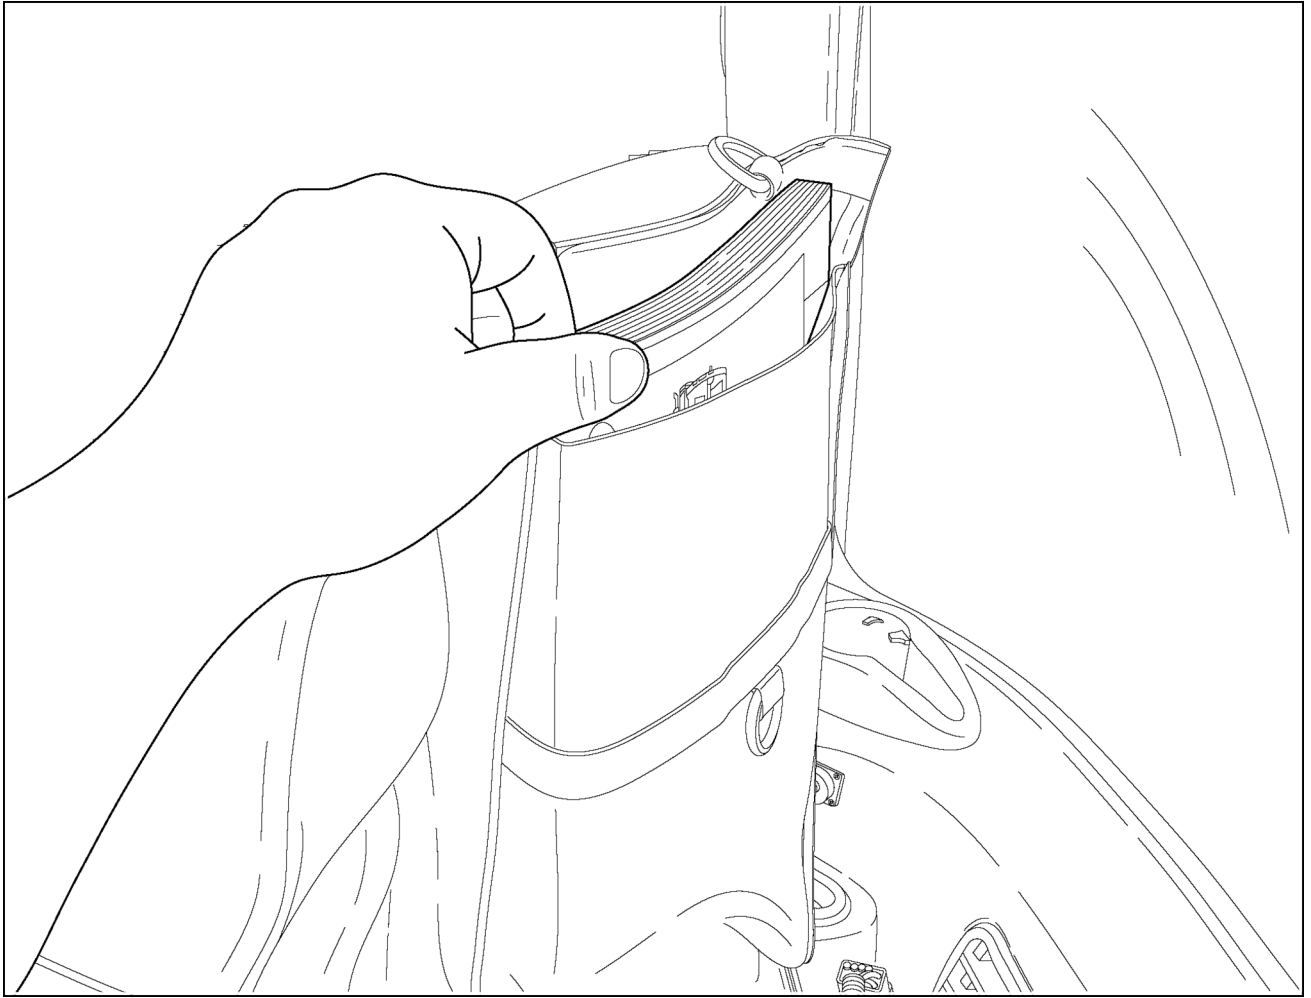

RCPH10FWD665GAM 1

Keep the Operator's Manual in the storage compartment located on the rear of the seat on your tractor. The Operator's Manual must be available for use by all operators.

The right hand and left hand side of the tractor used in this manual are the same as your right hand and left hand when sitting in the tractor seat looking forward.

## Product identification

### Tractor model and product identification number

Write your model number, Product Identification Number (PIN) or serial number of major components on the lines provided. If needed, give these numbers to your dealer when you need parts or information for your machine.


|  |   |   |           |
|--|---|---|-----------|
| <b>CNH AMERICA LLC</b>   |   | <b>CASE IH</b><br>AGRICULTURE   |           |
| Type<br>Typ<br>Type<br>Type  | Designation<br>Bezeichnung<br>Designation<br>Designazione | Racine, WI 53404 U.S.A.   |           |
| Type approval number<br>Numéro réception<br>Nr. Omologazione<br>Product ID Number (PIN)<br>Identifizierungsnummer<br>Numero D'Identificazione<br>Título Nr.              |   | Made in U.S.A.  |           |
| Total permissible mass<br>Zulässiges Gesamtgewicht<br>Masse totale admissible (PTAC)<br>Masse max. admessa   | kg  | Bar Code  |           |
| Permissible front axle load<br>Zulässige Achslast vorn<br>Charge admissible sur l'essieu Avant<br>Masse l'avant  | kg  | Unladen mass<br>Leergewicht<br>Poids vide<br>Masse a vuoto  | kg        |
| Permissible rear axle load<br>Zulässige Achslast hinten<br>Charge admissible sur l'essieu Arrière<br>Masse l'arrière   | kg  | Drawbar load<br>Stützlast<br>Charge crochets d'attelage<br>Masse sull'occhiello                   | kg        |
| Permissible towable mass<br>Masse remorquable non freinée<br>Masse carrelli non frenati  | kg  | Permissible road train mass<br>PTMA   | kg        |
| Independently braked towable mass<br>Anhangslast für unabhängige Bremsung<br>Masse remorquable à freinage indépendant<br>Masse carrelli a freno indipendente             | kg  | Rated net power<br>Nennleistung<br>Potenza netta nominale (ECE R120)                              | kW        |
| Interlocked towable mass<br>Aufschießbremste Anhangslast<br>Masse remorquable freinée par inertie<br>Masse carrelli con freno a inerzia                                  | kg  | Model Year<br>Modell Jahr<br>Année Modèle<br>Modello  | <b>CE</b> |
| Towable mass with assisted braking system<br>Hydraulisch/pneumatisch gebremste Anhangslast<br>Masse remorquable à freinage assisté<br>Masse carrelli con freno assistito | kg  | Year of Construction<br>Baujahr<br>Année de Construction<br>Anno di Costruzione (2008-02/EC 17.3) |           |

RCPH11FWD347EAM 1

Model :

PIN:

**NOTE:** Located on the right front side plate in front of front axle.

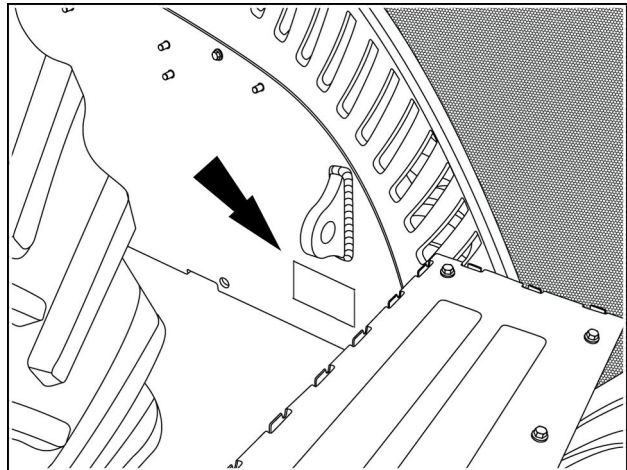

RCPH11FWD114BAM 2



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)