

# OPERATOR'S MANUAL

---

**T8.275**

**T8.300**

**T8.330**

**T8.360**

**T8.390**

**T8.420**

Tractor

*PIN ZDRC06500 and above*

**Part number 47596160**

1<sup>st</sup> edition English

September 2013



# Contents

---

## 1 GENERAL INFORMATION

Note to the owner.....	1-1
Engine tampering.....	1-1
Tractor intended use.....	1-1
Electro-magnetic compatibility (EMC).....	1-2
Product identification.....	1-3
Manual storage.....	1-6
Machine orientation.....	1-7
Component identification.....	1-8
Selective Catalytic Reduction (SCR) system.....	1-10

## 2 SAFETY INFORMATION

Safety rules.....	2-1
Safety rules - General.....	2-2
Safety rules - General maintenance safety.....	2-4
Safety rules - Wheels and tires.....	2-4
Safety rules - Driving on public roads and general transportation safety.....	2-4
Safety rules - Fire and explosion prevention.....	2-5
Safety rules - General battery safety.....	2-5
Safety rules - Instructional seat safety.....	2-6
Safety rules - Operator presence system.....	2-6
Safety rules - Power Take-Off (PTO).....	2-6
Safety rules - Reflectors and warning lights.....	2-6
Safety rules - Seat belts.....	2-7
Safety rules - Roll Over Protective Structure (ROPS).....	2-7
Safety rules - Cab protection.....	2-8
Safety rules - Air conditioning system.....	2-8
Safety rules - Personal Protective Equipment (PPE).....	2-9
Safety rules - Do Not Operate tag.....	2-9
Safety rules - Hazardous chemicals.....	2-9
Safety rules - Utility safety.....	2-9
Safety rules - Electrical storm safety.....	2-10
Safety rules - Mounting and dismounting.....	2-10
Safety rules - Working at heights.....	2-10
Safety rules - Lifting and overhead loads.....	2-10
Safety rules - Implements, tools and trailers.....	2-11
Safety rules - Roll over and tip over.....	2-11
Proposition 65.....	2-12
Ecology and the environment.....	2-13
Safety signs.....	2-14
Selective Catalytic Reduction (SCR) decal.....	2-24

---

### 3 CONTROLS/INSTRUMENTS

#### ACCESS TO OPERATOR'S PLATFORM

Cab - Access/Exit.....	3-1
Lower step.....	3-1

#### OPERATOR'S SEAT

Overview .....	3-2
Control identification.....	3-3

#### INSTRUCTOR'S SEAT

Instructional seat .....	3-6
--------------------------	-----

#### FORWARD CONTROLS

Steering column .....	3-7
Front console .....	3-10
Pedal controls .....	3-12

#### LEFT-HAND SIDE CONTROLS

Pneumatic trailer brake.....	3-15
------------------------------	------

#### RIGHT-HAND SIDE CONTROLS

Armrest console .....	3-16
Multi function handle .....	3-17
Engine speed control .....	3-23
Control panel .....	3-24
Remote valve controls.....	3-32
Joystick .....	3-33
Rear hitch controls .....	3-35
Armrest compartment .....	3-37
Adjusting the armrest console.....	3-39

#### REARWARD CONTROLS

Fender console .....	3-40
Automatic temperature controls .....	3-43
Automatic temperature control system .....	3-46
Ventilation .....	3-47

#### OVERHEAD CONTROLS

Interior lamps .....	3-49
----------------------	------

#### EXTERIOR CONTROLS

Rear fender.....	3-50
Front hitch .....	3-51

#### INSTRUMENT CLUSTER

Overview .....	3-52
----------------	------

---

Gauges .....	3-53
Status and warning icons .....	3-54
Upper display .....	3-57
Lower display .....	3-61
Keypad .....	3-63
Setup menu .....	3-64
Rear tire radius chart .....	3-70
Adjust menu .....	3-71
Performance instrumentation .....	3-78

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

Before starting the engine .....	4-1
----------------------------------	-----

### STARTING THE UNIT

Normal engine starting .....	4-4
Cold starting aids .....	4-8
Cold temperature operation .....	4-10

### STOPPING THE UNIT

Stopping the engine .....	4-12
---------------------------	------

### MOVING THE UNIT

FULL POWERSHIFT TRANSMISSION .....	4-14
Powershift transmission .....	4-14
Best practices for prolonged transmission life .....	4-15
Inching pedal and throttle .....	4-16
Powershift transmission controls .....	4-17
Upper display - Powershift transmission .....	4-20
Driving the Powershift vehicle .....	4-22
Setting default gears .....	4-27
Ground Speed Management (GSM) .....	4-29
CONTINUOUSLY VARIABLE TRANSMISSION (CVT) .....	4-36
Auto Command brake, pedal and throttle operation .....	4-36
Auto Command controls .....	4-41
Upper display .....	4-46
Auto Command operation .....	4-48
Driving the Auto Command transmission .....	4-54
Auto calibration, if equipped .....	4-59
Transmission messages .....	4-61
POWERSHIFT AND CVT TRANSMISSIONS .....	4-63
Selective Catalytic Reduction (SCR) system .....	4-63
Selective Catalytic Reduction (SCR) inducement strategy .....	4-65
Mechanical Front Drive (MFD) .....	4-68
Differential lock system .....	4-72
Suspended axle .....	4-75
Ride control .....	4-82

---

Suspended cab .....	4-84
Constant engine speed .....	4-85
Engine power boost .....	4-87
Headland management system .....	4-88

## PARKING THE UNIT

Automatic park lock .....	4-94
---------------------------	------

## 5 TRANSPORT OPERATIONS

### ROAD TRANSPORT

Tractor warning lamps and Slow Moving Vehicle (SMV) symbol .....	5-1
Wide transport marker light .....	5-2
Tractor warning lamps .....	5-4
Safe transport speed .....	5-5
Implement warning lamps and Slow Moving Vehicle (SMV) symbol .....	5-6
Safety chain .....	5-7

### SHIPPING TRANSPORT

Securing the tractor for shipping .....	5-8
-----------------------------------------	-----

### RECOVERY TRANSPORT

Safety rules .....	5-9
Towing the tractor .....	5-10

## 6 WORKING OPERATIONS

### GENERAL INFORMATION

Overview .....	6-1
----------------	-----

### REAR POWER TAKE-OFF (PTO)

Safety rules .....	6-2
Connecting the Power Take-Off (PTO) .....	6-5
Interchangeable Power Take-Off (PTO) shaft .....	6-6
Rear Power Take-Off (PTO) operation .....	6-12
Power Take-Off (PTO) fender switch operation .....	6-16
Auto Power Take-Off (PTO) operation .....	6-17

### FRONT POWER TAKE-OFF (PTO)

Overview .....	6-20
Front Power Take-Off (PTO) operation .....	6-21

### REAR HITCH

Identification .....	6-24
----------------------	------

Link adjustment .....	6-25
Hitch high clearance adjustment .....	6-29
Hydraulic links .....	6-32
Sway limiter adjustment .....	6-34
Lower link block adjustment .....	6-35
Mechanical float adjustment .....	6-37
Hitch quick coupler - Category III/IIIN .....	6-38
Hitch quick coupler - Category IVN .....	6-43
Hitch operation .....	6-47
Hitch remote switch operation .....	6-52
Position control operation .....	6-53
Load control operation .....	6-55
Slip control operation .....	6-57
Hitch set point .....	6-59

## FRONT HITCH

Overview .....	6-61
Front hitch operation .....	6-62

## DRAWBARS AND TOWING ATTACHMENTS

Safety rules .....	6-69
Drawbar capacity/position .....	6-69
Adjusting the drawbar .....	6-74

## AUXILIARY CONNECTIONS

Auxiliary power and lighting .....	6-76
Cab power connections .....	6-78
Radar connection .....	6-80

## HYDRAULIC REMOTE CONTROL VALVES

Valve couplers and connections .....	6-81
Motor return circuit .....	6-84
Power beyond circuit .....	6-85
Flow capacity .....	6-86
Hydraulic transport lock .....	6-87
Operating the controls .....	6-88
Remote valve display screens .....	6-92
Remote hydraulic auto mode .....	6-96
Auto depth control .....	6-98
Joystick operation .....	6-100

## BALLASTING THE TRACTOR

Guidelines .....	6-104
Tire load and inflation charts .....	6-114
Weights, cast metal .....	6-124
Wheel slip and power hop performance .....	6-138

---

## MECHANICAL FRONT DRIVE (MFD) AXLES

Tire combinations and tread positions .....	6-141
Steering and oscillation stops .....	6-149
Tread and fender settings - New Holland 4.5 fixed front axles .....	6-151
Tread and fender settings - New Holland 4.75 and 5.0 fixed front axles .....	6-160
Tread and fender settings - New Holland 4.75 and 5.0 saddle suspended front axles .....	6-168
Front fenders - New Holland front axles - Narrow fenders, fixed or saddle suspended .....	6-175

## REAR AXLE

Rear wheel installation .....	6-180
Rear wheel tread settings .....	6-183

## 7 MAINTENANCE

### GENERAL INFORMATION

Safety rules .....	7-1
Dealer service and parts .....	7-1
Maintenance guidelines .....	7-2
Opening the hood .....	7-3
Closing the hood .....	7-5
Filling the fuel tank .....	7-6
Filling the Diesel Exhaust Fluid (DEF)/AdBlue® tank .....	7-7
Battery access and service .....	7-8
Tire and rim service .....	7-10
Tractor jacking points .....	7-12
Capacities .....	7-14
Consumables - Engine oil .....	7-17
Consumables - Transmission/hydraulic system fluid .....	7-18
Consumables - Diesel fuel .....	7-19
Consumables - Biodiesel fuels .....	7-20
Consumables - Diesel exhaust fluid (DEF)/AdBlue® .....	7-22
Consumables - Coolant solutions .....	7-24
Consumables - Coolant solution for Tier 4b engines .....	7-25
Electrical component location .....	7-26
Lamps and bulbs .....	7-31
Maintenance chart notes .....	7-32

### MAINTENANCE CHART

Maintenance Chart .....	7-33
-------------------------	------

### At warning message display

Air filter service icon/message .....	7-35
Fuel filter water separator .....	7-36
Hydraulic oil filter switch .....	7-37
Transmission oil filter switch .....	7-40

---

## First 10 to 50 hours

Differential and planetary oil .....	7-43
Wheel bolt torque .....	7-44
Weight bolt torque .....	7-44

## Every 10 hours or daily

Engine oil level .....	7-45
Transmission oil level .....	7-46
Engine coolant level .....	7-47
Engine auxiliary fuel filter .....	7-48
Air reservoir .....	7-49
Rear hitch and front axle .....	7-49

## Every 50 hours or weekly

Engine primary fuel filter .....	7-50
----------------------------------	------

## Every 100 hours

Front hitch .....	7-51
Front Power Take-Off (PTO) drive shaft .....	7-53

## Every 300 hours

Battery water level (Note E) .....	7-54
Engine air intake hoses .....	7-56
Engine coolant level - deaeration tank .....	7-58
Wheel bolt torque .....	7-59
Weight bolt torque .....	7-59
Front axle (Note A) .....	7-60
Rear hitch (Note A) .....	7-62
Fuel tank .....	7-64
Differential and planetary oil level (Note B) .....	7-65
Transmission oil pressure .....	7-66
Front Power Take-Off (PTO) oil level .....	7-67

## Every 400 hours

Cab air filter .....	7-68
----------------------	------

## Every 600 hours

Engine oil and filter .....	7-71
Engine coolant antifreeze protection .....	7-74
Engine coolant hoses and clamps .....	7-74
Engine primary fuel filter .....	7-77
Engine fuel pre-filter .....	7-80
Bleeding the fuel system .....	7-82
Changeable Power Take-Off (PTO) internal splines .....	7-83
Diesel Exhaust Fluid (DEF)/AdBlue® in-line filter .....	7-84

---



Front Power Take-Off (PTO) oil and filter.....	7-86
<b>Every 1000 hours or annually</b>	
Pneumatic brake system dryer .....	7-88
<b>Every 1200 hours or annually</b>	
Differential and planetary oil.....	7-89
Engine air filters .....	7-93
Engine air precleaner.....	7-97
<b>Every 1500 hours</b>	
Transmission oil .....	7-99
Hydraulic oil filter .....	7-102
Transmission oil filter .....	7-103
Engine crankcase filter .....	7-104
<b>Every 2000 hours</b>	
Engine coolant.....	7-108
<b>Every 3000 hours</b>	
Engine valve adjustment (Note C).....	7-110
<b>Every 3600 hours</b>	
Diesel Exhaust Fluid (DEF)/AdBlue® supply module filter .....	7-111
<b>As required</b>	
Vehicle fire prevention .....	7-111
Cab air filter.....	7-112
Engine primary air filter.....	7-115
Grille screen and radiator area .....	7-118
Fuel tank vent filter .....	7-120
Transmission clutch and accumulator .....	7-121
Tire pressure .....	7-122
Fan belt .....	7-123
Remote valve collection bottle.....	7-129
Engine auxiliary fuel filter.....	7-130
Cab fabric and carpet.....	7-132
Seat belt .....	7-133
<b>STORAGE</b>	
Preparing for storage .....	7-134
Removing from storage.....	7-135
<b>ELECTRICAL SYSTEM</b>	
Radio or audio system.....	7-136

---

Battery removal and installation .....	7-137
Auxiliary battery connections .....	7-139
Headlight .....	7-140
Flood and work light .....	7-144
Grille work light .....	7-146
Fender tail light and warning light .....	7-148
Roof warning light .....	7-150
Roof work light.....	7-152
Belt line, roof or fender work light .....	7-154
High intensity work light .....	7-156
Wide transport marker light.....	7-158
Rotating beacon light.....	7-159
Interior light .....	7-160

## 8 TROUBLESHOOTING

### FAULT CODE RESOLUTION

Display warnings overview .....	8-1
Display warnings - Level 1 .....	8-2
Display warnings - Level 2 .....	8-5
Display warnings - Level 3 .....	8-8
Display warnings - Level 4 .....	8-10

### SYMPTOM(S)

Engine symptoms .....	8-12
Transmission symptoms.....	8-14
Hydraulic symptoms .....	8-15
Hitch symptoms .....	8-16
Brake symptoms.....	8-16
Cab environment symptoms.....	8-16
Electrical power system symptoms.....	8-17

## 9 SPECIFICATIONS

Engine specifications .....	9-1
Power train specifications .....	9-2
Operating speeds.....	9-5
Vehicle dimensions and shipping weight .....	9-13
Maximum operating weight.....	9-18

 
## 10 ACCESSORIES

Farming system displays .....	10-1
Chemical tank mounting.....	10-2
Loader connection and operation .....	10-4
Trailer brake connections.....	10-5
General accessories.....	10-7

---

## 11 FORMS AND DECLARATIONS

Delivery report - owner copy .....	11-1
Delivery report - dealer copy .....	11-2
First service - owner copy .....	11-4
First service - dealer copy .....	11-6



Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)