

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1

OPERATOR'S MANUAL

T4.75

T4.85

T4.95

T4.105

T4.115

Tractor

Part number 47604403

2nd edition English

September 2013



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
Note to the Owner	1-3
EC Declaration of Conformity	1-5
Commission directive 2010/52/EU	1-7
Noise level	1-14
Electro-magnetic interference (EMC)	1-15
International symbols	1-16
Introduction	1-18
Operator's manual storage	1-19
Tractor intended use	1-20
Ecology and the Environment	1-22
Identification plates	1-23
Approval data plate	1-25
Component Identification	1-26

2 SAFETY INFORMATION

Safety rules	2-1
Safety information	2-2
Air conditioning safety regulations	2-6
Vehicle vibration levels	2-7
Cab guard	2-8
Machine stability	2-10
Personal protective equipment (PPE)	2-12
Tractor jacking points	2-13
Hazardous chemicals	2-14
Burn prevention	2-15
Fire or explosion prevention	2-16
Getting in and out of the machine	2-17
Emergency exit	2-18
Safety signs	2-19

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

General information	3-1
Cab	3-2

OPERATOR'S SEAT

Mechanically-adjusted operator seat - Adjust	3-6
Pneumatically-adjusted operator seat - Adjust	3-7
Seat belt	3-9

PASSENGER'S SEAT

Passenger seat	3-10
----------------------	------

FORWARD CONTROLS

Instrument cluster	3-11
Console Front console - Localisation overview.....	3-16

LEFT-HAND SIDE CONTROLS

Cableless version	3-20
Version with cab	3-20
Handbrake.....	3-21

RIGHT-HAND SIDE CONTROLS

Cableless version	3-22
Version with cab	3-23
HI-LO version with cab	3-24
Console Right-hand console - Localisation overview	3-25
Heating, ventilation or air-conditioning control	3-26

EXTERIOR CONTROLS

Trailer electrical socket	3-28
---------------------------------	------

DISPLAY SETTINGS

Programmable display.....	3-29
Adjusting the dashboard/display brightness.....	3-30
Calibrating speed	3-32
Calibrating tool width	3-34
Programming maintenance work	3-35
Activating/deactivating buzzer	3-37
Setting units of measurement	3-38
Regenerating the diesel particulate filter (DPF) automatically/manually	3-39
Resetting the oil change counter	3-44
Viewing error codes	3-45

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Basic operating safety rules	4-1
------------------------------------	-----

STARTING THE UNIT

Starting the Engine	4-3
Machine movement start-up.....	4-5

STOPPING THE UNIT

Stopping the engine	4-6
Battery disconnect switch	4-7

MOVING THE UNIT

Transmission operation.....	4-8
-----------------------------	-----

12 x 12 transmission speed table	4-12
Speed table for 12 x 12 gearbox with additional reducer (20 x 12).....	4-14
Speed table for 12 x 12 gearbox with additional reducer (20 x 20).....	4-16
Transmission speed table 12 x 12 with "HI-LO" (24 x 24).....	4-18

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Transporting the machine	5-1
--------------------------------	-----

RECOVERY TRANSPORT

Towing the tractor.....	5-2
-------------------------	-----

6 WORKING OPERATIONS

FOUR WHEEL DRIVE (4WD)

Four-wheel drive with electro-hydraulic control.....	6-1
--	-----

DIFFERENTIAL LOCK

Mechanical differential lock.....	6-2
Electrohydraulic differential lock.....	6-3

REMOTE CONTROL VALVES

Safety rules.....	6-4
Rear remote control valve(s).....	6-5
Single/double action hydraulic valves.....	6-7

REAR POWER TAKE-OFF (PTO)

Safety rules.....	6-8
General.....	6-9
Speed adjustment.....	6-9
Electrohydraulically controlled power take-off.....	6-10
Mechanically controlled power take-off.....	6-12
Power take-off speeds.....	6-14
Power Take-Off (PTO) fender switch operation.....	6-15

FRONT POWER TAKE-OFF (PTO)

Safety rules.....	6-17
Front Power Take-Off (PTO).....	6-18

REAR HYDRAULIC LIFT

General safety and precautions.....	6-19
Hydraulic lift with mechanical control.....	6-20
Lift-O-Matic® control - Operating.....	6-22

Hydraulic lift with electronic control	6-24
Hydraulic lift external controls	6-30

FRONT HYDRAULIC LIFT

Safety rules	6-32
Front hydraulic lift	6-32

REAR 3-POINT HITCH

Three-point linkage	6-33
Three-point linkage dimensions	6-35
Quick coupler	6-36
Additional equipment attachment points	6-38

FRONT 3-POINT HITCH

Front lift with standard axle support	6-40
Front lift with multifunction axle support	6-42
Quick hitch	6-44

TOWBAR

General safety rules	6-45
Swinging drawbar	6-46

REAR TOW HITCH

General safety rules	6-47
Towing hitch	6-48

WHEELS AND TIRES

Wheels and tires	6-53
Tire dimensions	6-57

WHEEL TRACK ADJUSTMENT

Adjustment of the front tracks	6-59
Adjustment of the front mudguards	6-61
Adjustment of the steering angles	6-63
Front tracks diagram	6-64
Rear tracks diagram	6-66

BALLAST

Safety rules	6-67
Front ballast	6-68
Rear Ballast	6-68
Wheels - Ballast	6-69

TRAILER BRAKING SYSTEM

Hydraulic valve for trailer brakes	6-73
Mechanical trailer brake bracket	6-75

7 MAINTENANCE

GENERAL INFORMATION

General safety before you service.....	7-1
Introduction.....	7-3
Fuel supply.....	7-4
Biodiesel fuel - Biodiesel Fuels.....	7-5
Body maintenance.....	7-6
Opening the hood.....	7-8
Fluids and lubricants.....	7-9

MAINTENANCE CHART

Maintenance Chart.....	7-10
------------------------	------

As required

Radiator expansion tank.....	7-12
Windshield washer reservoir.....	7-12
Air conditioning - Dehydration filter.....	7-12
Distributor oil recovery pan.....	7-13
Radiator - Check.....	7-13
Brakes - Adjust.....	7-13
Machine lights.....	7-14
Tire pressure.....	7-14
Clutch pedal adjustment.....	7-15

At warning message display

Dry air filter - External cartridge.....	7-16
Brake fluid level.....	7-17
Fuel filter water drain.....	7-17

Every 10 hours or daily

Engine oil level.....	7-18
-----------------------	------

After first 50 hours

Maintenance - Tighten.....	7-18
Maintenance - Check.....	7-18
Maintenance - Replace.....	7-19
Maintenance - Cleaning.....	7-19
Maintenance - Test.....	7-20
Maintenance - Grease.....	7-20

Every 50 hours

Rear three-point hitch - Grease.....	7-21
Front axle.....	7-21
Rear tow hitch.....	7-22
Front hitch - Grease.....	7-23

Every 100 hours

Air conditioning condenser	7-24
Transmission oil heat exchanger	7-24
Intercooler	7-24
Cab air filters	7-25
Cab recirculated air filter	7-25
Alternator belt.....	7-26
Compressor belt.....	7-26

Every 300 hours

Hydraulic circuit oil filter	7-27
Auxiliary services oil filter.....	7-27
Dry air filter - External cartridge	7-28
Transmission and hydraulic lift	7-28
Front Axle Oil	7-29
Front axle final drives.....	7-29
Front axle spindle.....	7-29

Every 600 hours

Change engine oil and filter	7-30
Replacing the fuel filters	7-31
Fuel prefilter	7-31
Wheel bolt torque.....	7-32

Every 1200 hours or annually

Rear wheel hub.....	7-33
Replacing cab air filters.....	7-33
Replacing air filters	7-33
Fuel tank drain.....	7-34
Blow-by filter.....	7-34

Every 1200 hours or two years

Replacing front axle oil	7-35
Replacing front axle final drive oil	7-35
Replacing transmission oil.....	7-35
Washing cooling system.....	7-37

Every 3000 hours

Diesel particulate filter (DPF).....	7-39
--------------------------------------	------

ELECTRICAL SYSTEM

Battery service.....	7-40
Fuses and relay box.....	7-42
Fuse and relay locations	7-44
Light adjustments.....	7-54

Hood lamp replacement	7-55
-----------------------------	------

STORAGE

Tractor storage	7-56
-----------------------	------

CALIBRATION

Clutch calibration	7-57
Clutch calibration	7-60
Electronic lift calibration	7-63

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

TROUBLESHOOTING ENGINE	8-1
Electrical system - Troubleshooting ELECTRICAL SYSTEM	8-3
Hydraulic systems - Troubleshooting HYDRAULIC SYSTEM	8-4
Rear three-point hitch - Troubleshooting HYDRAULIC LIFT AND 3-POINT LINKAGE	8-5
Hydraulic service brakes - Troubleshooting	8-6
Cab climate control - Troubleshooting	8-7

ALARM(S)

Alarms	8-8
Display warnings overview	8-9

SYMPTOM(S)

Viewing error codes	8-13
Error code identification	8-13
Fault code of digital instrument	8-15

9 SPECIFICATIONS

Dimensions and weights	9-1
Maximum permitted loads on front and rear axle	9-4
Maximum permitted loads on drawbar	9-5
Maximum permitted loads on towing hitch	9-5
Technical data	9-6

10 ACCESSORIES

Radio	10-1
Joystick and Electric Hydraulic (EH) control - Operating	10-13

1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

The dealer NEW HOLLAND will provide instructions on the general operation of new equipment. The dealer's staff, assigned to maintenance, is available for any questions related to the operation of the machine.

Your NEW HOLLAND dealer carries a complete line of genuine NEW HOLLAND service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION

Model :

Product Identification Number (PIN):



This is the safety alert symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

⚠ WARNING

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.
Replace all shields before operating the machine.
Failure to comply could result in death or serious injury.**

W0012A

The machine has been designed and built according to the highest standards of quality and complies with the standing regulations on safety. However, the risk of accidents can never be completely excluded. That is why it is essential to observe elementary safety rules and precautions.

Read this manual carefully, paying particular attention to the instructions concerning safety, operation and maintenance so as to avoid the risk of injury while operating or servicing the machine.

Do not use this machine for any application or purpose other than those described in this manual. If the machine is to be used for work involving the use of special attachments, accessories or equipment, consult your NEW HOLLAND Dealer in order to make sure that any adaptations or modifications made are in keeping with the machine's technical specifications and with prevailing safety requirements.

Any modification or adaptation which is not approved by the manufacturer may invalidate the machine's initial conformity with safety requirements.

The machine must undergo regular inspections, the frequency of which varies according to the type of use. NEW HOLLAND Consult your authorised dealer.

Always keep this manual in the operator's compartment (in the seat back, behind the operator's seat). Make sure it is always complete and in good condition. To receive extra copies of the manual or copies in languages other than that of the country of residence, please contact your NEW HOLLAND dealer.

The manufacturer is committed to the constant improvement of its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

NOTICE: *The information in this manual is provided on the basis of information that was available at the time the manual was written. Settings, procedures, part numbers, software and other items may change, which may affect the maintenance of the machine. Ensure that you have the complete and most current information from your dealer before you start any machine operation. All data given in this book is subject to production variations.*

Engine tampering statement:

ATTENTION: *The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action, and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Ensure that all operators read this manual with care and always leave it at their disposal for immediate reference.

The NEW HOLLAND Dealer will provide you with the general instructions for operating your new machine. Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your machine.

New Holland Top Service is also available. Call 1-866-NEWHLND (1-866-639-4563) or email: na.topservice@cnh.com.

Your NEW HOLLAND dealer carries a complete line of genuine NEW HOLLAND service parts. These parts are manufactured and carefully inspected to ensure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model :
Product Identification Number (PIN):



Warning symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

⚠ WARNING

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.
Replace all shields before operating the machine.
Failure to comply could result in death or serious injury.**

W0012A

The machine has been designed and built according to the highest standards of quality and complies with the standing regulations on safety. However, the risk of accidents can never be completely excluded. That is why it is essential to observe elementary safety rules and precautions.

Read this manual carefully, paying particular attention to the instructions concerning safety, operation and maintenance so as to avoid the risk of injury while operating or servicing the machine.

Do not use this machine for any application or purpose other than those described in this manual. If the machine is to be used for work involving the use of special attachments, accessories or equipment, consult your NEW HOLLAND Dealer in order to make sure that any adaptations or modifications made are in keeping with the machine's technical specifications and with prevailing safety requirements.

Any modification or adaptation which is not approved by the manufacturer may invalidate the machine's initial conformity with safety requirements.

The machine must undergo regular inspections, the frequency of which varies according to the type of use. NEW HOLLAND Consult your authorised dealer.

Always keep this manual in the operator's compartment (in the seat back, behind the operator's seat). Make sure it is always complete and in good condition. To receive extra copies of the manual or copies in languages other than that of the country of residence, please contact your NEW HOLLAND dealer.

NOTICE: *The information in this manual is provided on the basis of information that was available at the time the manual was written. Settings, procedures, part numbers, software and other items may change, which may affect the maintenance of the machine. Ensure that you have the complete and most current information from your dealer before you start any machine operation. All data given in this book is subject to production variations.*

Engine tampering statement:

ATTENTION: *The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action, and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

Improvements

CNH America LLC applies a policy of continuous product development and improvement. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

1 - GENERAL INFORMATION

EC Declaration of Conformity

BG Декларация ЕС за съответствие по Direktiva 2006/42/EC Annex I	CZ Problémy a ohrožení ES Problémy a ohrožení ES Podle směrnice 2006/42/ES	DA EU-overensstemmelserklæring EU-overensstemmelserklæring Efter Richtlinie 2006/42/EF	DE EG-Konformitätserklärung EG-Konformitätserklärung nach Richtlinie 2006/42/EG	EL Απόφαση Συμμόρφωσης ΕΚ Απόφαση Συμμόρφωσης ΕΚ σύμφωνα με το άρθρο 2006/42/ΕΚ	NEW HOLLAND DECLARATION OF CONFORMITY CNH Europe Holding S.A. Bolwertweg 24 L-2484 LISBERG (LUXEMBOURG)
1.A.1 Имя [1]	Mn [1]	Wn [1]	Wn [1]	Sgn [1]	NEW HOLLAND
1.A.2 Представител на Giuseppe Gavioi, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg	Zastupovatel Giuseppe Gavioi, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg	repræsentant af Giuseppe Gavioi, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg	vertreten durch Giuseppe Gavioi, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg	αρμοδιότητα από τον Giuseppe Gavioi, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg	NEW HOLLAND
1.A.3 Декларацията, по която тази машина отговаря на всички изисквания на настоящия Регламент, се издава: Титулово име [2] Модел [3] Тип [4] Серийен номер [5] или на която се отнася настоящата декларация, е одобрен/са одобрени механизми на Директива 2006/42/EC, модифицирана от [6]	Prohlášení, že tato technika odpovídá veškerým požadavkům Evropské směrnice 2006/42/ES a národním změnám [6]. Problémažie, že tato technika odpovídá veškerým požadavkům Evropské směrnice 2006/42/ES a národním změnám [6]. Za kterou se tato prohlášení vydává, odpovídá celému rozsahu směrnice 2006/42/ES a národním změnám [6]. Pro relevantní implementace ustanovení této směrnice byly aplikovány následující harmonizované normy: • ISO 36322-1: část 1 a část 2 Další normy: viz část 1 a část 2 Místo a datum prohlášení [7] Jméno a podpis poskytovatele oady [8]	Landskapsbeskrivelse Handelsnavn [2] Model [3] Type [4] Serienummer [5] Har det denne erklæring omfatter, oplyste alle mekanismer i henhold til direktivet 2006/42/EF, ændret ved [6]. Følgende (harmoniserede) standarder anvendes til opfyldelse af kravene i direktivet: • ISO 36322-1: del 1 eller 2 Andre standarder: Se bølge- og afledningsbetegnelse. Sted og dato for erklæringen [7] Navn og underskrift des Befugtede [8]	erklæret af Giuseppe Gavioi, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg. erklæret af unsere alleinig Verrichtungs, dass das Produkt Landwirtschaffliche Zugmaschinen Handlbenzeichnung [2] Modell [3] Typ [4] Seriennummer [5] auf das die EG-Richtlinie 2006/42/EG unter Einhaltung der Richtlinie 2006/42/EG entspricht, abgeändert durch [6]. Zu welchen Umständen der Befugte in die Richtigkeit warden Kriterien übernommen: Normen herangezogen: • ISO 36322-1: Teil 1 oder 2 Andere Normen siehe in der Geführte- und Ableitungsbezeichnung. Ort und Datum der Erklärung [7] Name und Unterschrift des Befugten [8]	απόφαση, υπό αποκλειστική παρέμβαση, ότι η μηχανή συμμορφώνεται με τις διατάξεις της οδηγίας 2006/42/ΕΚ, όπως τροποποιήθηκε από το [6]. Εφαρμοσμένα πρότυπα: • ISO 36322-1: μέρος 1 ή 2 Άλλα πρότυπα: βλέπε στο [7] Ποσό και ημερομηνία της Έγγραφης Απόφασης Συμμόρφωσης [8]	NEW HOLLAND
1.A.4 за реализацията на механизма от Директива 2006/42/EC, съгласно Типични характеристики (характеристики) [7]	Pro relevantní implementace ustanovení této směrnice byly aplikovány následující harmonizované normy: • ISO 36322-1: část 1 a část 2 Další normy: viz část 1 a část 2 Místo a datum prohlášení [7] Jméno a podpis poskytovatele oady [8]	Følgende (harmoniserede) standarder anvendes til opfyldelse af kravene i direktivet: • ISO 36322-1: del 1 eller 2 Andre standarder: Se bølge- og afledningsbetegnelse. Sted og dato for erklæringen [7] Navn og Unterschrift des Befugten [8]	Zu welchen Umständen der Befugte in die Richtigkeit warden Kriterien übernommen: Normen herangezogen: • ISO 36322-1: Teil 1 oder 2 Andere Normen siehe in der Geführte- und Ableitungsbezeichnung. Ort und Datum der Erklärung [7] Name und Unterschrift des Befugten [8]	απόφαση, υπό αποκλειστική παρέμβαση, ότι η μηχανή συμμορφώνεται με τις διατάξεις της οδηγίας 2006/42/ΕΚ, όπως τροποποιήθηκε από το [6]. Εφαρμοσμένα πρότυπα: • ISO 36322-1: μέρος 1 ή 2 Άλλα πρότυπα: βλέπε στο [7] Ποσό και ημερομηνία της Έγγραφης Απόφασης Συμμόρφωσης [8]	NEW HOLLAND
1.A.5 Имя и подпись на упълномощено лице [8]	Mesto a datum prohlášení [7] Jméno a podpis poskytovatele oady [8]	Sted og dato for erklæringen [7] Navn og Unterschrift des Befugten [8]	Ort und Datum der Erklärung [7] Name und Unterschrift des Befugten [8]	Ποσό και ημερομηνία της Έγγραφης Απόφασης Συμμόρφωσης [8]	NEW HOLLAND
1.A.10 Име и подпись на упълномощено лице [8]	Mesto a datum prohlášení [7] Jméno a podpis poskytovatele oady [8]	Sted og dato for erklæringen [7] Navn og Unterschrift des Befugten [8]	Ort und Datum der Erklärung [7] Name und Unterschrift des Befugten [8]	Ποσό και ημερομηνία της Έγγραφης Απόφασης Συμμόρφωσης [8]	NEW HOLLAND

DECLARATION OF CONFORMITY

Here above is provided copy of the "EC" Declaration of Conformity (EC Declaration of Conformity act to 2006/42/EC). The EC DoC is the Manufacturer's declaration about equipment compliance to relevant EU provisions. Keep the original copy in a safe place. Local authorities may require you to show this document in order to assure compliance of your equipment. Translation of this declaration in your own country language is provided on the original document

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com