

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1

OPERATOR'S MANUAL

T5030

T5040

T5050

T5060

T5070

Tractor

Part number 47767853

4th edition English

September 2014

Replaces part number 47374251



Contents

1 GENERAL INFORMATION

| | |
|--|------|
| Note to the Owner | 1-1 |
| Declaration of conformity | 1-2 |
| Commission directive 2010/52/EU | 1-4 |
| Noise level | 1-11 |
| Electro-magnetic interference (EMC)..... | 1-12 |
| International symbols | 1-13 |
| Introduction | 1-15 |
| Tractor intended use..... | 1-16 |
| Ecology and the Environment | 1-18 |
| Identification plates | 1-19 |
| Approval data plate | 1-21 |
| Component Identification | 1-22 |

2 SAFETY INFORMATION

| | |
|--|------|
| Safety rules | 2-1 |
| Safety information | 2-3 |
| Air conditioning safety regulations..... | 2-7 |
| Vehicle vibration levels | 2-8 |
| Cab guard | 2-9 |
| Roll over protective structure (ROPS)..... | 2-11 |
| Machine stability | 2-12 |
| Personal protective equipment (PPE)..... | 2-14 |
| Tractor jacking points | 2-15 |
| Hazardous chemicals..... | 2-16 |
| Burn prevention..... | 2-17 |
| Fire or explosion prevention | 2-18 |
| Getting in and out of the machine | 2-19 |
| Emergency exit | 2-20 |
| Safety signs | 2-21 |

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

| | |
|--|-----|
| General Information | 3-1 |
| Cab | 3-2 |
| Heating, ventilation or air-conditioning control | 3-9 |

OPERATOR'S SEAT

| | |
|---------------------|------|
| Operator Seat | 3-11 |
|---------------------|------|

FORWARD CONTROLS

| | |
|-----------------------|------|
| Instrument panel..... | 3-15 |
| Keypad | 3-20 |
| Front controls | 3-21 |

RIGHT-HAND SIDE CONTROLS

Cab controls - Control identification 3-26

REARWARD CONTROLS

Cab controls - Control identification 3-30

EXTERIOR CONTROLS

Battery disconnect switch 3-32

DISPLAY SETTINGS

Instrument cluster - Adjust 3-32

Display settings 3-34

Odometer 3-44

Programming maintenance work 3-46

Aggressiveness 3-48

TRANSMISSION

TRANSMISSION WITH RANGE GEAR AND SHUTTLE 3-49

TRANSMISSION WITH RANGE GEAR AND HYDRAULIC POWER SHUTTLE 3-52

TRANSMISSION WITH CREEPER AND SHUTTLE 3-57

TRANSMISSION WITH CREEPER AND SHUTTLE 3-60

TRANSMISSION WITH ELECTRO-HYDRAULIC DUAL COMMAND 3-63

TRANSMISSION WITH ELECTRO-HYDRAULIC DUAL COMMAND 3-64

SPEED AT MAXIMUM POWER 3-69

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

General Information 4-1

STARTING THE UNIT

Engine starting system - Start 4-2

STOPPING THE UNIT

Engine starting system - Stop 4-4

5 TRANSPORT OPERATIONS

RECOVERY TRANSPORT

Towing the tractor 5-1

6 WORKING OPERATIONS

2WD or 4WD

Four-wheel drive with electro-hydraulic control 6-1

| | |
|---|------|
| DIFFERENTIAL LOCK | |
| Differential lock hydraulic control - Operating | 6-2 |
| REMOTE VALVES | |
| General safety rules | 6-3 |
| Hydraulic control valves | 6-4 |
| POWER TAKE OFF (PTO) | |
| Safety rules | 6-11 |
| Power take-off speeds | 6-12 |
| Operating Instructions | 6-13 |
| HYDRAULIC LIFT | |
| Safety precautions | 6-18 |
| Hydraulic lift with mechanical control | 6-19 |
| Hydraulic lift with electronic control | 6-22 |
| Operation | 6-28 |
| THREE-POINT LINKAGE | |
| Three-point linkage | 6-32 |
| Quick coupling three point linkage | 6-36 |
| Additional equipment attachment points | 6-38 |
| TOWBAR | |
| Safety rules | 6-39 |
| Swinging drawbar | 6-40 |
| REAR TOW HITCH | |
| Safety rules | 6-40 |
| Towing hitch | 6-42 |
| MAXIMUM PERMITTED LOADS | |
| Front and rear axle | 6-49 |
| Towbar | 6-51 |
| Towing hitch | 6-51 |
| WHEELS AND TIRES | |
| Wheels and tires | 6-52 |
| Tyre dimensions | 6-56 |
| WHEEL TRACK ADJUSTMENT | |
| Wheel tread settings | 6-58 |
| Tire combinations and tread positions | 6-62 |

BALLAST

| | |
|---|------|
| Ballasts and supports - Safety rules..... | 6-67 |
| Ballast | 6-68 |

7 MAINTENANCE

GENERAL INFORMATION

| | |
|--|-----|
| Introduction | 7-1 |
| Various controls | 7-3 |
| Break-in period | 7-4 |
| Fuel supply | 7-5 |
| Organic Acid Technology (OAT) coolant..... | 7-6 |
| Opening the hood | 7-8 |

MAINTENANCE CHART

| | |
|------------------------|-----|
| Maintenance chart..... | 7-9 |
|------------------------|-----|

As required

| | |
|---|------|
| Engine coolant level | 7-10 |
| Wiper and washer system - Level make up | 7-10 |
| Air conditioning - Dehydration filter | 7-11 |
| Handbrake..... | 7-12 |
| Control valve oil recovery cup | 7-12 |
| Radiator - Check | 7-12 |
| Brakes - Adjust | 7-13 |
| Clutch adjustment | 7-13 |
| Compressor belt..... | 7-14 |
| Lights | 7-14 |
| Tyre pressure | 7-14 |

At warning message display

| | |
|--------------------------------------|------|
| Main cartridge, dry air filter | 7-16 |
| Brake fluid level..... | 7-16 |
| Fuel filter water drain | 7-17 |

Every 10 hours or daily

| | |
|----------------------------|------|
| Engine oil level | 7-18 |
| Engine oil level | 7-18 |
| Compressed air brake | 7-18 |

Every 50 hours

| | |
|---|------|
| Rear wheel hub..... | 7-20 |
| Lift and linkage | 7-20 |
| 4WD steering cylinders..... | 7-20 |
| 4WD front axle rear pivot | 7-21 |
| 2WD steering cylinder | 7-21 |
| 2WD steering cylinder and right-hand stub axle..... | 7-21 |
| 2WD left-hand stub axle..... | 7-22 |

| | |
|---------------------------|------|
| 2WD front axle pivot..... | 7-22 |
|---------------------------|------|

Every 100 hours

| | |
|--|------|
| Air-conditioning condenser - Cleaning | 7-23 |
| Oil cooler/Heat exchanger - Cleaning WITH HYDRAULIC TRANSMISSIONS ONLY | 7-23 |
| Intercooler | 7-23 |
| Air filter - Cleaning | 7-24 |

Every 300 hours

| | |
|---|------|
| Hydraulic circuit oil filter | 7-25 |
| Oil filter models with power shuttle/dual command..... | 7-25 |
| Intake and exhaust manifolds and muffler - Cleaning | 7-25 |
| Inspect V-belt..... | 7-26 |
| Transmission and hydraulic lift | 7-26 |
| Transmission and hydraulic lift | 7-26 |
| 4WD front axle housing..... | 7-27 |
| 4WD front axle final drives | 7-27 |
| 2WD front wheels..... | 7-27 |
| 4WD front axles stub | 7-28 |
| Towing hitch | 7-28 |
| Hydraulic towing hook | 7-28 |
| Battery - Check..... | 7-29 |

Every 600 hours

| | |
|------------------------------|------|
| Engine oil and filter | 7-30 |
| Fuel filters - Replace | 7-30 |
| Fuel pre-filter | 7-32 |

Every 1200 hours or annually

| | |
|--------------------------------------|------|
| Cab air filter..... | 7-33 |
| Main cartridge, dry air filter | 7-33 |
| Fuel tank - Cleaning | 7-33 |

Every 1200 hours or two years

| | |
|---|------|
| 4WD front axle housing..... | 7-34 |
| 4WD front axle final drives | 7-34 |
| Engine valve adjustment | 7-34 |
| Transmission oil | 7-35 |
| Change the engine coolant fluid - Conventional type coolant | 7-37 |

1800 hours Service

| | |
|------------------------------|------|
| Fuel injectors - Check | 7-40 |
|------------------------------|------|

EVERY 3600 HOURS OR EVERY 4 YEARS

| | |
|--|------|
| Change the engine coolant fluid - OAT type coolant | 7-40 |
|--|------|

STORAGE

| | |
|-----------------------|------|
| Tractor storage | 7-43 |
|-----------------------|------|

General Maintenance

| | |
|---|------|
| Battery - Check | 7-43 |
| Fuse and relay box - Check | 7-46 |
| Fuses and Relays | 7-47 |
| Fuses and Relays | 7-49 |
| Fuses and Relays | 7-51 |
| Fuses and Relays | 7-53 |
| Fuses and Relays | 7-55 |
| Headlight - Adjust..... | 7-57 |
| Headlight - Replace | 7-57 |
| Tail, brake and direction indicator lightt..... | 7-58 |
| Front side and direction indicator lamp..... | 7-58 |
| Work light Side - Check | 7-58 |
| Upper cab work lights | 7-59 |

FLUIDS AND LUBRICANTS

| | |
|-------------------|------|
| Consumables | 7-60 |
|-------------------|------|

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

| | |
|---|------|
| Fault code of digital instrument..... | 8-1 |
| Transmission - Fault codes..... | 8-2 |
| Four-wheel drive - Fault codes | 8-3 |
| Differential - Fault codes..... | 8-3 |
| Power take-off - Fault codes..... | 8-3 |
| Hydraulic lift - Fault codes..... | 8-4 |
| TRUBLESHOOTING ENGINE | 8-5 |
| Electrical system - Troubleshooting | 8-7 |
| Hydraulic systems - Troubleshooting..... | 8-8 |
| Rear three-point hitch - Troubleshooting | 8-9 |
| Hydraulic service brakes - Troubleshooting..... | 8-10 |
| Cab climate control - Troubleshooting..... | 8-11 |

ALARM(S)

| | |
|------------------------|------|
| Alarms | 8-12 |
| Display warnings | 8-15 |

9 SPECIFICATIONS

| | |
|----------------------|-----|
| Technical data | 9-1 |
|----------------------|-----|

10 ACCESSORIES

| | |
|-----------------------------------|------|
| Joystick for control valves | 10-1 |
| Front-end loader..... | 10-3 |

| | |
|--|------|
| Hydraulic valve for trailer brakes | 10-4 |
| Pneumatic trailer brake | 10-6 |



1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

Your NEW HOLLAND dealer will instruct you in the general operation of your new equipment. Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your machine.

Your NEW HOLLAND dealer carries a complete line of genuine NEW HOLLAND service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model and product identification numbers of your machine.

| PLEASE RECORD THE FOLLOWING INFORMATION |
|---|
| Model: |
| Product Identification Number (PIN): |



This is the safety alert symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

| |
|--|
| <p>⚠ WARNING</p> <p>Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment. Replace all shields before operating the machine. Failure to comply could result in death or serious injury.</p> <p style="text-align: right; font-size: small;">W0012A</p> |
|--|

Engine tampering statement:

NOTICE: The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes

| | |
|-------------------------------|---|
| Clause of 2006/42/EC Annex II | EN EC Declaration of conformity According to Directive 2006/42/EC. |
| 1.A.1 | We, [1] |
| 1.A.2 | Represented by Antoon Vermeulen CNH Industrial Europe Holding S.A. Boulevard Royal, 24 L – 2449 Luxembourg |
| 1.A.3 | declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial number: [5] |
| 1.A.4 | to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6]. |
| 1.A.7 | For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual |
| 1.A.9 | Place and date of the declaration: [7] |
| 1.A.10 | Name and signature of the authorised person: [8] |

- FOPS level on your tractor cab is certified according to OECD Code 10.
- The CAB is Category 1 approved in accordance with EN 15695-1.
- NOISE EMISSION LEVELS have been measured in accordance with directives 2009/76/EC • 2009/63/EC.
- VIBRATION LEVELS are rated according to 78/764/EEC.
- ROPS PROTECTION is certified according to EN 15694.

Commission directive 2010/52/EU

Aspects concerning safety of directive 2010/52/EU

Section 4.1

A | Ergonomic position of the driver seat.

Adjust the driver seat correctly in the most comfortable, ergonomic position before using the machine. This reduces the risks and effects of the vibrations transmitted to the whole body. Please refer to **3-11** for specific adjustment instructions. See **2-8** for further information on the effects and risks of vibration transmitted to the whole body.

B | Heating, ventilation and air-conditioning.

Carefully read and comprehend the instructions for using and operating the air-conditioning, heating and ventilation system, given on **3-9**. Only a correct use of the cab ventilation and filtration system provides protection against dust and that the minimum differential pressure is ensured. The necessary filtration of the outside air can be accomplished only by using the air-conditioner and setting the fan on the highest speed with the doors, windows and canopy closed.

C | Starting and shutting down the engine.

To be able to use the machine safely, it is recommended to read and fully understand all the information on engine start-up and shutdown and likewise safety for use and operation. Please refer to **4-2** and **4-4**.

D | Emergency exit.

The tractor's rear window can be used as an emergency exit, as indicated by a special safety sign. See **2-20**.

E | Getting on and off the tractor.

▲ WARNING

Fall hazard!

Jumping on or off the machine could cause an injury. Always face the machine, use the handrails and steps, and get on or off slowly. Maintain a three-point contact to avoid falling: both hands on the handrails and one foot on the step, or one hand on the handrail and both feet on the steps. Failure to comply could result in death or serious injury.

W0141A

See **2-19**.

F | Articulated tractors.

▲ WARNING

Uncontrolled equipment movement!

Moving the articulated tractor steering wheel can swing or move attached equipment. Do not move the steering wheel until everyone is clear of the equipment. Failure to comply could result in death or serious injury.

W0906A

There is no space for people when the tractor steers.

To avoid personal injuries:

- Keep at a distance from the tractor articulation zone when the engine is running.
- Switch off the engine before working in the tractor articulation zone.
- Install the articulation cylinder retaining blocks before lifting the tractor or transporting it with another means, performing maintenance work in the articulation zone or activating static implements driven by the Power Take-Off (PTO). Take care to remove the retaining blocks before driving the tractor.
- Keep the transmission guards in position.

G | Special tools.

No special tools are required for using or servicing the machine. For support and maintenance work and services not covered in this manual, please contact your NEW HOLLAND dealer.

H | Support and maintenance.

⚠ DANGER

Improper operation or service of this machine can result in an accident.

Do not operate this machine or perform any lubrication, maintenance, or repair on it until you have read and understood the operation, lubrication, maintenance, and repair information.

Failure to comply will result in death or serious injury.

D0010A

⚠ DANGER

Improper operation or service of this machine can result in an accident.

Any unauthorized modifications made to this machine can have serious consequences. Consult an authorized dealer on changes, additions, or modifications that may be required for this machine. Do not make any unauthorized modifications.

Failure to comply will result in death or serious injury.

D0030A

⚠ WARNING

Improper operation or service of this machine can result in an accident.

Read and understand the SAFETY INFORMATION Section before you perform any maintenance, service, or repairs. Read and understand the specific service procedures for the components you plan to work with before you start servicing the machine.

Failure to comply could result in death or serious injury.

W0138A

⚠ WARNING

Improper operation or service of this machine can result in an accident.

If you do not understand a maintenance procedure, or doubt your ability to perform a maintenance procedure correctly, see your authorized dealer.

Failure to comply could result in death or serious injury.

W0157A

⚠ WARNING

Personal Protective Equipment (PPE) required.

When assembling, operating, or servicing the machine, wear protective clothing and PPE necessary for the particular procedure. Some PPE that may be necessary includes protective shoes, eye and/or face protection, hard hat, heavy gloves, filter mask, and hearing protection.

Failure to comply could result in death or serious injury.

W0353A

I | Hydraulic hoses.

Although periodical inspection of the hydraulic hoses is required, it is not necessary for the operator to carry out maintenance work. Please refer to the general precautions to be observed for tests and inspections given in this manual (Maintenance chapter).

J | Towing the Tractor.

⚠ WARNING

Avoid injury!

Incorrect towing procedures can cause accidents. When towing your machine, follow the procedure in this manual.

Failure to comply could result in death or serious injury.

W0476A

Please refer to 5-1.

K | Hoisting points.

The points to use for hoisting the machine are shown on **2-15**.

L | Batteries and fuel tank.

Observe all the following precautions. Please refer to **7-43** for the specific maintenance operations on the battery. Please refer to **7-5** for instructions on filling.

⚠ WARNING

Explosive gas!

Batteries emit explosive hydrogen gas and other fumes while charging. Ventilate the charging area. Keep the battery away from sparks, open flames, and other ignition sources. Never charge a frozen battery.

Failure to comply could result in death or serious injury.

W0005A

⚠ WARNING

Battery gas can explode!

To prevent an explosion: 1. Always disconnect the negative (-) battery cable first. 2. Always connect the negative (-) battery cable last. 3. Do not short circuit the battery posts with metal objects. 4. Do not weld, grind, or smoke near a battery.

Failure to comply could result in death or serious injury.

W0011A

⚠ WARNING

Battery acid causes burns. Batteries contain sulfuric acid.

Avoid contact with skin, eyes or clothing. Antidote (external): Flush with water. Antidote (eyes): flush with water for 15 minutes and seek medical attention immediately. Antidote (internal): Drink large quantities of water or milk. Do not induce vomiting. Seek medical attention immediately.

Failure to comply could result in death or serious injury.

W0111A

⚠ WARNING

Fire hazard!

When handling diesel fuel, observe the following precautions:

- 1. Do not smoke.**
- 2. Never fill the tank when the engine is running.**
- 3. Wipe up spilled fuel immediately.**

Failure to comply could result in death or serious injury.

W0099A

⚠ WARNING

Fire hazard!

Do not add gasoline, alcohol, or blended fuels to diesel fuel, except as recommended in this manual.

Fuel combinations may increase fire and explosion hazards.

Failure to comply could result in death or serious injury.

W0401A

⚠ WARNING

Fuel vapors are explosive and flammable.

Do not smoke while handling fuel. Keep fuel away from flames or sparks. Shut off engine and remove key before servicing. Always work in a well-ventilated area. Clean up spilled fuel immediately.

Failure to comply could result in death or serious injury.

W0904A

M | Danger of overturning.

Do not use the tractor on slopes or in such conditions as to compromise its limits of safety and stability, indicated in **2-12**. Using the tractor beyond these limits may result in a roll over or a tip over. Observe the recommendations in this manual. Pay particular attention when coming down steep slopes with a loaded tractor.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com