

ORIGINAL INSTRUCTIONS

OPERATOR'S MANUAL

T4.75F

T4.85F

T4.95F

T4.105F

Tractor

Part number 47768217

3rd edition English

September 2014

Replaces part number 47593719



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
Intended use.....	1-3
Proposition 65	1-5
Electro-Magnetic Compatibility (EMC)	1-6
Manual scope and required training level	1-7
Metric and imperial units abbreviations.....	1-8
Identification plates	1-10
Machine orientation.....	1-12
Component Identification	1-13

2 SAFETY INFORMATION

Safety rules and signal word definitions	2-1
Safety rules - General information	2-2
Safety rules - Maintenance	2-2
Safety rules - Wheels and tires	2-3
Safety rules - Explosions and fires	2-4
Safety rules - Battery	2-4
Safety rules - Passenger seat	2-5
Safety rules - Power Take-Off (PTO)	2-5
Safety rules - Seat belts	2-5
Safety rules - Operator protective structure	2-5
Safety rules - HVAC system	2-7
Safety rules - Personal Protective Equipment (PPE)	2-8
Safety rules - "Do not use" sign	2-8
Safety rules - Hazardous chemicals	2-8
Safety rules - Near utilities	2-8
Safety rules - In the event of electrical storms	2-9
Safety rules - Getting on and off the machine	2-9
Safety rules - Lifting and overhead loads	2-9
Ecology and the environment	2-10
Towing the tractor for recovery	2-11
Tractor jacking points.....	2-12
Burn prevention.....	2-13
Safety signs	2-14

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Getting in and out of the machine	3-1
Getting to know the internal parts of the cab	3-2

OPERATOR'S SEAT

Operator seat.....	3-5
--------------------	-----

FORWARD CONTROLS

Analogue dashboard	3-7
Digital dashboard	3-11
Front controls	3-17

LEFT-HAND SIDE CONTROLS

Console Left-hand console - Control identification	3-21
Parking brake for hydraulic transmissions	3-22

RIGHT-HAND SIDE CONTROLS

Console Right-hand console - Control identification	3-23
---	------

REARWARD CONTROLS

Console - Control identification	3-25
--	------

OVERHEAD CONTROLS

Heating system	3-25
Heating, ventilation or air-conditioning control	3-26
Cab air filter	3-28

EXTERIOR CONTROLS

Console - Control identification	3-29
--	------

DISPLAY SETTINGS

Instrument cluster - Program	3-30
------------------------------------	------

TRANSMISSION

Transmission - Operating 4WD models	3-37
Transmission with gear reducer and mechanical reversing mechanism	3-38
Transmission with gear reducer and electrohydraulic reversing mechanism	3-41
Parking brake for hydraulic transmissions	3-44
Transmission with gear reducer, electrohydraulic reversing mechanism and HI-LO control	3-45
Transmission with gear reducer, electrohydraulic reversing mechanism, HI-LO control and electrohydraulic clutch	3-48

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Basic operating safety rules	4-1
------------------------------------	-----

STARTING THE UNIT

Starting the engine	4-3
---------------------------	-----

STOPPING THE UNIT

Stopping the engine	4-5
---------------------------	-----

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Transporting the machine 5-1

RECOVERY TRANSPORT

Towing the tractor..... 5-2

6 WORKING OPERATIONS

FOUR WHEEL DRIVE (4WD)

Four-wheel drive with electro-hydraulic control..... 6-1

DIFFERENTIAL LOCK

Electrohydraulic differential lock..... 6-2

Mechanical differential lock..... 6-3

REMOTE VALVES

General safety rules 6-4

Rear remote control valve(s) 6-5

Electrohydraulically controlled side hydraulic valves 6-9

Electrohydraulically controlled rear remote control valves 6-11

Side hydraulic valves 6-12

REAR POWER TAKE-OFF (PTO)

Power take off (PTO) 6-13

FRONT POWER TAKE-OFF (PTO)

Front Power Take-Off (PTO) - Safety rules..... 6-15

Front Power Take-Off (PTO) - Operating..... 6-16

REAR HYDRAULIC LIFT

Hydraulic lift with mechanical control..... 6-17

Lift-O-Matic® control - Operating 6-18

Hydraulic lift with electronic control..... 6-20

FRONT HYDRAULIC LIFT

Hydraulic lift with mechanical control..... 6-25

Hydraulic lift with electronic control..... 6-27

REAR THREE-POINT HITCH

Operating Instructions 6-29

Attach the implement 6-33

Additional equipment attachment points 6-35

FRONT THREE-POINT HITCH

Operating Instructions	6-37
------------------------------	------

SWINGING DRAWBARS

Safety rules	6-40
Swinging drawbar	6-41

WHEELS AND TIRES

Wheels and tires	6-42
Tire dimensions	6-46

WHEEL TRACK ADJUSTMENT

Wheel tread settings	6-48
Tire Combinations and Tread Positions	6-51

BALLAST

Ballast	6-54
---------------	------

7 MAINTENANCE

GENERAL INFORMATION

General safety before you service	7-1
Introduction	7-3
Various controls	7-4
Body maintenance	7-5
Break-in period	7-7
Fuel supply	7-8
General specification	7-9
Organic Acid Technology (OAT) coolant	7-10
Consumables	7-12
Opening the hood	7-14

MAINTENANCE CHART

Maintenance chart	7-15
-------------------------	------

AS REQUIRED

Engine coolant level	7-17
Windscreen washer tank	7-17
Road light - Check	7-17
Clutch pedal adjustment	7-18
Parking brake or parking lock - Adjust	7-18
Radiator - Cleaning	7-18
Tire pressure	7-19
Wheel nuts torque	7-20
Brake pedals	7-20

AT WARNING MESSAGE DISPLAY

Engine air filters	7-21
Fuel filter water drain	7-22
Brake fluid level.....	7-23

EVERY 10 HOURS OR EACH DAY

Engine oil level	7-24
------------------------	------

EVERY 50 HOURS

Rear wheel hub.....	7-25
Lift and linkage	7-25
2WD steering cylinder	7-25
4WD steering cylinders.....	7-26
2WD front axle pivot.....	7-26
4WD front axle pivot.....	7-26
4WD transmission shaft	7-27
2WD right and left-hand stub axle.....	7-27
Front lift arms shaft	7-27
Front PTO coupling.....	7-28

EVERY 100 HOURS

Transmission oil cooler	7-29
Air conditioning condenser	7-29
Intercooler	7-29
Cab air filter.....	7-30
Cab recirculated air filter	7-30

EVERY 300 HOURS

Alternator belt.....	7-31
Transmission oil filter	7-31
Oil filter models with power shuttle/dual command.....	7-31
Engine air filters	7-32
Transmission oil level.....	7-32
4WD front axle housing.....	7-32
4WD front axle final drives	7-33
4WD front axles stub	7-33
2WD front wheels.....	7-33

EVERY 500 HOURS

Engine oil and filter	7-34
Fuel filter.....	7-35
Fuel pre-filter	7-36

EVERY 600 HOURS

Engine oil and filter	7-37
Fuel filter.....	7-38
Fuel pre-filter	7-39

EVERY 1200 HOURS OR ANNUALLY

Cab air filters	7-40
Cab recirculated air filter	7-41
Engine air filters	7-41
Fuel tank.....	7-41

EVERY 1200 HOURS OR EVERY 2 YEARS

4WD front axle housing.....	7-42
Engine valves.....	7-42
Change transmission oil.....	7-43
Change the engine coolant fluid - Conventional type coolant	7-44

EVERY 1800 HOURS

Fuel injectors - Check	7-47
------------------------------	------

EVERY 3600 HOURS OR EVERY 4 YEARS

Change the engine coolant fluid - OAT type coolant	7-47
--	------

ELECTRICAL SYSTEM

Battery.....	7-50
Fuses and relays	7-52
Fuses and relays location	7-53
Fuses and relays location	7-55
Fuses and relays location Fuses and relays on cab right hand upright	7-57
Headlight - Adjust.....	7-57
Headlight - Replace	7-58

STORAGE

Tractor storage	7-59
-----------------------	------

CALIBRATIONS

Dual command calibration.....	7-60
-------------------------------	------

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

Display fault codes	8-1
TRUBLESHOOTING ENGINE	8-3
Electrical system - Troubleshooting	8-5
Hydraulic systems - Troubleshooting.....	8-6
Rear three-point hitch - Troubleshooting	8-7
Hydraulic service brakes - Troubleshooting	8-8
Cab climate control - Troubleshooting.....	8-9

ALARM(S)

Alarms	8-10
Alarms, cause, solutions	8-12

9 SPECIFICATIONS

Dimensions and weights	9-1
Maximum permitted loads on front and rear axle.....	9-6
Maximum permitted loads on drawbar	9-7
Consumables.....	9-8
Technical data	9-10

10 ACCESSORIES

Radio	10-1
-------------	------

1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Ensure that all operators read this manual with care and always leave it at their disposal for immediate reference.

The NEW HOLLAND Dealer will provide you with the general instructions for operating your new machine. Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your machine.

New Holland Top Service is also available. Call 1-866-NEWHLND (1-866-639-4563) or email: na.topservice@cnh.com.

Your NEW HOLLAND dealer carries a complete line of genuine NEW HOLLAND service parts. These parts are manufactured and carefully inspected to ensure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model :
Product Identification Number (PIN):



Warning symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

⚠ WARNING

Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.

Replace all shields before operating the machine.

Failure to comply could result in death or serious injury.

W0012A

The machine has been designed and built according to the highest standards of quality and complies with the standing regulations on safety. However, the risk of accidents can never be completely excluded. That is why it is essential to observe elementary safety rules and precautions.

Read this manual carefully, paying particular attention to the instructions concerning safety, operation and maintenance so as to avoid the risk of injury while operating or servicing the machine.

Do not use this machine for any application or purpose other than those described in this manual. If the machine is to be used for work involving the use of special attachments, accessories or equipment, consult your NEW HOLLAND Dealer in order to make sure that any adaptations or modifications made are in keeping with the machine's technical specifications and with prevailing safety requirements.

Any modification or adaptation which is not approved by the manufacturer may invalidate the machine's initial conformity with safety requirements.

The machine must undergo regular inspections, the frequency of which varies according to the type of use. NEW HOLLAND Consult your authorised dealer.

Always keep this manual in the operator's compartment (in the seat back, behind the operator's seat). Make sure it is always complete and in good condition. To receive extra copies of the manual or copies in languages other than that of the country of residence, please contact your NEW HOLLAND dealer.

NOTICE: *The information in this manual is provided on the basis of information that was available at the time the manual was written. Settings, procedures, part numbers, software and other items may change, which may affect the maintenance of the machine. Ensure that you have the complete and most current information from your dealer before you start any machine operation. All data given in this book is subject to production variations.*

Engine tampering statement:

ATTENTION: *The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action, and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

Improvements

CNH America LLC applies a policy of continuous product development and improvement. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

Intended use

NOTE: *Your tractor is designed according to European directives related to health and safety risks; though it has been designed to minimize all the potential risks it is mandatory to carefully read, understand and observe all the decals and labels and to always refer to information and prescriptions outlined in this manual to prevent all residual potential risks. If you need further assistance please do not hesitate to contact your dealer.*

Your tractor is designed and made to pull, carry and power a variety of mounted or towed equipment, although within some physical limits. The working speed and performance may depend on various factors, such as weather and terrain conditions. Though the tractor is designed to perform in combination with a variety of equipment, there may be a number of combinations of the above parameters for which there is severe degradation of performance of the tractor and/or its mounted or trailed equipment. If you notice degradation of performance, contact your dealer for assistance, he may have useful information for improvements, or a kit may be available to enhance the performance.

Please carefully read and consider the following precautions:

- Do not use the tractor for purposes other than those intended by the manufacturer and outlined in this manual.
- Do not use the tractor beyond its limits of terrain gradient and stability. Using the tractor beyond these limits may result in roll-over or tip-over. Observe the recommendations in this manual.
- Do not use the tractor at higher speeds than those allowed by the load and the environment. A wet surface or other low adherence conditions may increase the braking distance or result in vehicle instability. Always adapt your travelling speed according to the load of the vehicle and the characteristics of the road.
- Do not use the tractor near or on soft verges of canals and brooks or banks and verges that are undermined by rodents. The tractor may sink sideways and roll over.
- Do not use the tractor on unstable crossings or bridges and/or on soft surfaces or ones that are not strong enough. These constructions may collapse and cause roll-over of the tractor. Always inspect the condition and carrying capacity of bridges and ramps before crossing.
- Do not use equipment mounted on the tractor which is not correctly matching and firmly fixed. The use of implements or accessories that have not been approved or are not correctly connected may increase the risk of roll-over of the tractor if they come loose. Ensure that the dimensions of the three-point linkage interface of both the tractor and the equipment comply with the categories defined in ISO 730. Ensure that the dimensions and speed of the PTO shaft on the tractors match those of the equipment.
- Do not use the tractor in combination with equipment without having consulted the specific Operator's Manual provided with the equipment. The tractor is a universal tool to carry, tow and drive a variety of equipment. This manual alone cannot provide you with all the information required for the safe operation of the combination.
- Do not use the tractor for pulling work, in cases where you do not know whether the load will yield, for instance when pulling stumps; the tractor may flip over when the stump is not yielding.
- Be cautious that the centre of gravity of the tractor may increase when loads on the front-end loader or the three-point linkage are raised. In these conditions, the tractor may roll over earlier than expected.
- Do not step down from the tractor without shutting down the PTO, shifting the transmission to park or neutral and applying the park brake, unless continued PTO operation is required for some equipment, such as pumps or wood chippers. The latter equipment may have an emergency stop device on the equipment itself, as human intervention is needed during operation. But other equipment, engaged and driven by the tractor will have no means to stop the power transmission, other than the PTO clutch of the tractor.
- You must take the necessary precautions (e.g. assistance) to always be aware of the possible presence of bystanders, especially when manoeuvring in confined areas, such as the farm yard and sheds. Keep people away from the tractor during work. Ask bystanders to leave the field. There is not only the risk of being run over by the tractor, but objects ejected by some equipment mounted on the tractor, such as a rotary mower, may cause harm. Stones may be thrown further than the mowed crop. Pay the necessary attention while operating next to public roads or footpaths. Thrown objects can be projected outside the field and hit unprotected people such as cyclists or pedestrians. Wait to cut the edge of the field till it is clear of bystanders.
- Do not allow riders on the tractor; do not allow people to stand on the access step to the cab when the tractor is moving. Your view to the left will be obstructed and a rider risks falling from the tractor during unexpected or abrupt movements.
- Always stay clear from the implements operating area and especially do not stand between the tractor and the implement or the trailed vehicle when operating lift controls; ensure no bystanders are near these operating areas.
- Certain functions of your tractor are controlled by software and some of them are safety-related. Do not attempt to modify or download software not certified and distributed by the manufacturer. Electronic settings and logics may be destroyed and seriously affect the functioning of the tractor. This may result in unpredictable and unsafe behaviour of the tractor. Always refer to your dealer; he has the appropriate tools and data sets

- and owns the officially released software versions and updates for your tractor.
- Your tractor may be equipped with a number of sensors to control safety functions. Tripping these sensors will result in a safe operation mode. Do not attempt to bypass any function on the tractor. You will be exposed to serious hazards, and moreover, the behaviour of the tractor may become unpredictable.
- The tractor has only one operator station and this is a one man operated vehicle. There is no need for other people on or around the tractor during normal operation. Do not allow riders on the tractor; do not allow people to stand near the access to the cab or on the step when the tractor is moving. Your view to the left will be obstructed and a rider risks falling from the tractor during unexpected or abrupt movements.

Proposition 65

CALIFORNIA Proposition 65 Warning
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm. Battery posts, terminals and related accessories contain lead and lead compounds. Wash hands after handling.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com