

ORIGINAL INSTRUCTIONS

PUMA 150
PUMA 165
Tier 4B (final)
Tractor

OPERATOR'S MANUAL

Part number 47771104

2nd edition English

January 2015

Replaces part number 47657432



Contents

1 GENERAL INFORMATION

Metric and imperial units abbreviations.....	1-1
To the owner.....	1-3
Product identification.....	1-5
Engine identification.....	1-6
Drive line identification.....	1-7
Cab identification.....	1-8
Ecology and the environment.....	1-9
Programming tractor functions.....	1-10
Operator's manual storage.....	1-11
Before operating the tractor.....	1-11
International symbols.....	1-12
Machine stability.....	1-13
Selective Catalytic Reduction (SCR) system.....	1-17

2 SAFETY INFORMATION

Safety precautions.....	2-1
Safety decals.....	2-3
Safety rules.....	2-11
Burn prevention.....	2-18
Prevention of fire or explosions.....	2-19
Fire extinguisher.....	2-20
Protection offered by the tractor.....	2-21
Hazardous substances.....	2-24
Emergency exit.....	2-25
Wheel chocks.....	2-26
Intended use statement.....	2-27
Instructor's seat.....	2-29

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Introduction.....	3-1
Cab air filters.....	3-5
In cab storage (where fitted).....	3-6
Cable and wiring routing.....	3-7
Mobile telephone usage.....	3-7
Implement monitor installation.....	3-8
Cab air pressurisation control (where fitted).....	3-8

OPERATOR'S SEAT

Operator's seat.....	3-10
Air suspension seat.....	3-11
Air suspension seat deluxe.....	3-13
Seat belt.....	3-17

INSTRUCTOR'S SEAT

Instructional seat	3-18
--------------------------	------

FORWARD CONTROLS

Ignition key	3-19
Hazard light switch	3-19
Lights and turn indicator lever	3-20
Windshield wiper and washer controls	3-21
Electronic parking brake	3-22
Clutch pedal	3-26
Foot brakes	3-26
Exhaust brake (where fitted)	3-27
Steering column	3-28

LEFT-HAND SIDE CONTROLS

Hand brake	3-29
------------------	------

RIGHT-HAND SIDE CONTROLS

Integrated control panel	3-30
--------------------------------	------

REARWARD CONTROLS

Switches on C-pillar	3-31
Hydraulic master switch	3-32
Heated screens (where fitted)	3-33
Fast steering system (where fitted)	3-34
Autoguidance system (where fitted)	3-36
Battery isolator control switch	3-37
Climate controls	3-38
Manual temperature control	3-39
Automatic Temperature Control (ATC)	3-40

OVERHEAD CONTROLS

Switch panel work lights	3-42
Interior light	3-43

INSTRUMENT CLUSTER

Integrated control unit	3-44
Gauges	3-44
Indicator and warning lights	3-45
Displays	3-48
Transmission display	3-49
Keypad basic	3-51
Keypad enhanced	3-52
Selecting or changing the display settings	3-54
Adjust menu	3-55
Configure menu	3-58
Performance monitor	3-61

Armrest color display	3-66
Pop-up screens on color display	3-68
Performance monitor on color display	3-74
Programming the displays	3-77
Alarm functions	3-80
Accessing stored error codes	3-82
Selective Catalytic Reduction (SCR) system instrumentation warning	3-83
Warning and advisory symbols	3-87

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Refueling the tractor	4-1
-----------------------------	-----

STARTING THE UNIT

Starting the engine	4-3
Grid heater cold start aid (where fitted)	4-4
Fuel heater (where fitted)	4-5
Coolant immersion heater (where fitted)	4-5
Transmission oil heater (where fitted)	4-6
Boosting the battery	4-7

STOPPING THE UNIT

Stopping the engine	4-8
Automatic engine shut down	4-8
Automatic engine shut down with enhanced keypad (where fitted)	4-9

MOVING THE UNIT

Operating in cold temperatures	4-10
Low idle speed management	4-12
Reversible engine fan	4-13

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

Carrying the tractor on a transporter	5-1
Secure the high visibility roof panel	5-1

RECOVERY TRANSPORT

Freeing a stuck tractor	5-2
Towing the tractor	5-3

6 WORKING OPERATIONS

GENERAL INFORMATION

Variable engine power management	6-1
Constant engine speed	6-3

Differential lock	6-6
Four wheel drive	6-8
Front axle suspension (where fitted)	6-10
HTS standard	6-11
Quick guide	6-11
Explanation of symbols	6-13
Recording and replaying	6-15
Recording a sequence	6-18
Replaying a sequence	6-20
HTS advanced	6-24
Headland turn sequence	6-24
Explanation of symbols	6-25
Recording a sequence	6-26
Replaying a sequence	6-30
Deleting a sequence with color display	6-33
Recording and replaying	6-36
Recording a sequence	6-40
Recording and replaying	6-44
TRANSMISSION	
Foot throttle pedal	6-47
Hand throttle	6-47
Shuttle lever	6-48
Sharp shuttle setting	6-50
Transmission display	6-51
Fault codes	6-53
SEMI POWERSHIFT TRANSMISSION	6-54
Transmission operation	6-54
Powershift control lever	6-55
Driving the tractor	6-56
Speed matching	6-58
Auto shift function	6-59
Auto shifting field mode	6-60
Auto shifting in road mode	6-63
Setting the forward and reverse gear ratios	6-66
Creeper gears (where fitted)	6-67
FULL POWERSHIFT TRANSMISSION	6-68
Transmission operation	6-68
Powershift control lever	6-69
Driving the tractor	6-70
Speed matching	6-72
Auto shift function	6-73
Auto shifting field mode	6-74
Auto shifting in road mode	6-77
Setting the forward and reverse gear ratios	6-80
Creeper gears (where fitted)	6-81
REAR POWER TAKE-OFF	
Power Take-Off (PTO) operating precautions	6-82
Attaching PTO driven equipment	6-82
Power Take-Off (PTO) operation	6-83

Two speed PTO systems	6-88
External PTO controls	6-90
Auto PTO operation	6-92

FRONT POWER TAKE OFF

Power Take-Off (PTO) operation	6-95
Auto PTO operation	6-97

REAR HITCH

Electronic Draft Control (EDC)	6-99
Settings and display	6-103
Electronic Draft Control (EDC) operation	6-105
External hitch controls	6-111

FRONT HITCH

Settings and adjustments	6-113
Hitch operation	6-116
Auxiliary front couplers (where fitted)	6-121
External hitch controls	6-123

HYDRAULIC REMOTE CONTROL VALVES

Remote control valves	6-124
Operating with remote valves	6-126
Connecting remote cylinders	6-130
Hydraulic oil level when using remote hydraulic equipment	6-132

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

Remote control valves	6-134
Settings and adjustments	6-141
Setting the remote valve priority	6-147
Creating timer programs	6-149
Connecting remote cylinders	6-156
Operating with remote valves	6-158
Joystick operation with a front loader	6-160
Mid mount remote valves	6-166
EHR implement control setting	6-168
External EHR controls	6-172
Hydraulic oil level when using remote hydraulic equipment	6-173

HYDRAULIC POWER BEYOND PORT

Hydraulic power beyond for external services with mechanical-hydraulic remote control valves	6-175
Hydraulic power beyond for external services with electro-hydraulic remote control valves	6-177

THREE POINT HITCH

Attaching three-point hitch equipment	6-180
---	-------

Lift rod adjustment.....	6-182
Top link adjustment.....	6-185
Flexible link end adjustment.....	6-186
Quick hitch.....	6-187
Linkage stabilizer adjustment.....	6-189

DRAWBARS AND TOWING ATTACHMENTS

Drawbars and towing attachments.....	6-192
Swinging drawbar.....	6-195

TRAILER BRAKING SYSTEMS

Air-operated trailer brakes.....	6-198
Trailer brake bias control.....	6-201
Auxiliary air supply connector (where fitted).....	6-201
Hydraulic trailer brakes.....	6-202

WHEEL TRACK ADJUSTMENT

Front wheel track adjustment.....	6-203
Front wheel alignment.....	6-207
Steering stops.....	6-208
Front axle oscillation stops.....	6-208
Front fender.....	6-209
REAR WHEEL TRACK ADJUSTMENT.....	6-211
Flange type axle (where fitted).....	6-211
Bar type axle (where fitted).....	6-214
Dual rear wheels (where fitted).....	6-220

BALLASTING AND TIRES

Ballasting and tires.....	6-223
Iron weights (where fitted).....	6-226
Liquid ballast.....	6-229
Tire inflation.....	6-231
Tire pressures and permissible loads.....	6-232

AUXILIARY POWER CONNECTIONS

Diagnostic socket.....	6-234
Trailer socket electrical.....	6-234
ELECTRICAL POWER CONNECTORS.....	6-235
Internal power connectors.....	6-235
External power connectors.....	6-237

7 MAINTENANCE

GENERAL INFORMATION

Introduction.....	7-1
Fuel requirement.....	7-2
Biodiesel fuel - Biodiesel fuels.....	7-4
Change the engine oil.....	7-6

Protective devices	7-7
Tractor jacking points	7-9
Lubricants and coolants	7-10
General specifications	7-12
Capacities	7-13

MAINTENANCE CHART

Maintenance chart	7-14
-------------------------	------

WHEN THE WARNING LAMP LIGHTS

Change the engine air cleaner outer element	7-16
Drain the fuel system water separator	7-17
Check the brake fluid level	7-18

EVERY 10 HOURS OR EACH DAY

Check the engine coolant level	7-19
Checking the engine oil level	7-20
Check the remote control valve drain bottles	7-21
Check windscreen washer reservoir	7-22
Drain air reservoir on air operated trailer brake	7-23

FIRST 50 HOURS

Service operations	7-24
--------------------------	------

EVERY 50 HOURS

Clean the cab air filter	7-25
Clean the SCR cover air ducts	7-26
Clean the cooler section	7-27
All grease fittings	7-28
Check the front and the rear wheel nuts	7-35
Check the tire pressures and the tire condition	7-36

EVERY 100 HOURS

Inspect the poly V-belt	7-37
Inspect the compressor drive belt	7-38

EVERY 300 HOURS

Check the battery fluid level	7-40
Adjust the hand brake	7-42
Check the transmission oil level, the rear axle oil level and the hydraulic oil level	7-43
Check the 4WD front axle differential oil level and the hubs oil level	7-44
Check the front PTO gearbox oil level	7-45

EVERY 600 HOURS

Change engine oil and filter	7-46
Change the first stage fuel filter and the fuel filter element	7-48
Change the engine air cleaner outer element	7-50
Change the charge pump oil filter	7-51

Check the engine air intake connections	7-52
Check the transmission oil cooler pipe couplings	7-53
Clean the DEF/AdBlue in-line filter	7-54

EVERY 1200 HOURS OR ANNUALLY

Change the cab air filters	7-55
Change the main oil filter cartridge	7-56
Change the transmission oil, the rear axle oil and the hydraulic oil	7-57
Change the 4WD differential oil	7-58
Change the 4WD planetary hub oil	7-59
Change the front PTO gearbox oil	7-60
Grease the rear axle shaft bearing	7-61

EVERY 1200 HOURS OR EVERY 2 YEARS

Change the DEF/AdBlue in-line filter	7-62
Change the engine air cleaner inner element	7-63
Check the valve tappet clearance	7-64
Change the air brake drier reservoir	7-65
Change the poly V-belts	7-66

EVERY 1800 HOURS OR EVERY 2 YEARS

Change the engine breather filter	7-69
---	------

EVERY 3600 HOURS OR EVERY 2 YEARS

Change the DEF/AdBlue main filter	7-70
---	------

EVERY 3600 HOURS OR EVERY 4 YEARS

Change the engine coolant fluid - OAT type coolant	7-71
--	------

EVERY 36 MONTHS

Check the air conditioning system	7-75
---	------

GENERAL MAINTENANCE

Cleaning the tractor	7-76
Check first stage fuel filter and water trap	7-78
Bleeding the fuel system	7-79
Hydraulic system hoses	7-80
Check the brake pedal latching/unlatching	7-80
Adjust the cab suspension (where fitted)	7-81
Headlight and work light adjustment	7-82
Bulb replacement	7-83
Fuses and relays	7-88
Protecting the electronic and electrical systems during battery charging or welding ..	7-93
Battery removal and installation	7-94

STORAGE

Tractor storage	7-95
Preparation for use after storage	7-96

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

Introduction	8-1
--------------------	-----

ALARM(S)

Fault codes and symbols	8-2
-------------------------------	-----

SYMPTOM(S)

Engine	8-4
Transmission	8-5
Hydraulics	8-5
Three-point hitch	8-6
Brakes	8-6
Cab	8-6
Electrical system	8-7

9 SPECIFICATIONS

General dimensions	9-1
Maximum operating angle	9-4
Maximum permissible operating weights	9-5
Tractor weights	9-5
Capacities	9-6
Engine	9-7
Fuel system	9-7
Air cleaner system	9-8
Cooling system	9-8
Transmission	9-8
Rear Power Take-Off (PTO)	9-9
Front Power Take-Off (PTO)	9-9
Hydraulic system	9-10
Three-point hitch	9-10
Remote control valves	9-12
Three-point hitch front	9-12
Front remote control valve couplers	9-12
Brakes	9-13
Steering	9-13
Electrical equipment	9-14
Ground speed chart Semi-Powershift transmission	9-15
Ground speed chart Full-Powershift transmission	9-17
Minimum hardware tightening torques	9-19

10 ACCESSORIES

Radio (where fitted).....	10-1
External rear view mirrors	10-1
Auxiliary headlights.....	10-3
Rotating beacon	10-4
Front-end loader fixation points	10-5

11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy	11-1
Service record 1st 50 hour, Dealer copy	11-3

1 - GENERAL INFORMATION

Metric and imperial units abbreviations

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m²	square foot	ft²
			square inch	in²
	square millimeter	mm²	square inch	in²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	µF	microfarad	µF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency – Rotational				
	revolution per minute	r/min	revolution per minute	r/min ^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	µm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per mass				
	milligram per kilogram	mg/ kg	parts per million	ppm
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH2O
	megapascal	MPa	pound per square inch	psi
	millibar	mbar		
	bar	bar		

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Temperature (other than thermodynamic)				
	degrees Celsius	°C	degrees Fahrenheit	°F
Time				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
Torque (includes bending moment, moment of force, and moment of a couple)				
	newton meter	N m	pound foot	lb ft
			pound foot	lb in
Velocity				
	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimeter per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
Volume (includes capacity)				
	cubic meter	m ³	cubic yard	yd ³
				cu yd
	liter	l	cubic inch	in ³
	liter	l	US gallon	US gal
			UK gallon	UK gal
			US quart	US qt
			UK quart	UK qt
	milliliter	ml	fluid ounce	fl oz
Volume per time (includes discharge and flow rate)				
	cubic meter per minute	m ³ /min	cubic foot per minute	ft ³ /min
	liter per minute	l/min	US gallon per minute	US gal/min
	milliliter per minute	ml/min	UK gallon per minute	UK gal/min
Sound power level and sound pressure level				
	decibel	dB	decibel	dB
Water hardness				
	German hardness	°dH	English hardness	°e
	French hardness	°fH	parts per million	ppm

Glossary

Acronym	Definition
DEF	Diesel Exhaust Fluid
ISO	International Organization for Standardization
MSDS	Material Safety Data Sheet
NOx	Nitrogen Oxide
PPE	Personal Protective Equipment
SCR	Selective Catalytic Reduction
ULSD	Ultra Low Sulfur Diesel
%	Percent
<	Less than
>	Greater than



Our support email:

ebooklibonline@outlook.com