

AXIAL-FLOW® 5140
AXIAL-FLOW® 6140
AXIAL-FLOW® 7140
Tier 2
Combine

SERVICE MANUAL

Part number 47795176
2nd edition English
November 2014
Replaces part number 47677212
Copyright © 2014 CNH America LLC. All Rights Reserved.





SERVICE MANUAL

AXIAL-FLOW® 5140 [YDG012001 - YEG012700] , AXIAL-FLOW® 5140 [YEG012701 -] , AXIAL-FLOW® 6140 [YDG012001 - YEG012700] , AXIAL-FLOW® 6140 [YEG012701 -] , AXIAL-FLOW® 7140 [YDG012001 - YEG012700] , AXIAL-FLOW® 7140 [YEG012701 -]

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.216] Fuel tanks	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.310] Aftercooler.....	10.5
[10.400] Engine cooling system	10.6
[10.408] Oil cooler and lines.....	10.7
[10.414] Fan and drive	10.8
[10.419] Stationary air screen	10.9
Main gearbox and drive	14
[14.100] Main gearbox and drive	14.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.145] Gearbox internal components.....	21.2
[21.182] Differential.....	21.3
Front axle system	25
[25.310] Final drives	25.1
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.124] Final drive hub, steering knuckles, and shafts	27.2
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.134] Two-speed assembly.....	29.2
[29.202] Hydrostatic transmission	29.3

[29.204] Reservoir, cooler, and lines	29.4
[29.218] Pump and motor components.....	29.5
[29.300] Rear hydrostatic transmission.....	29.6
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump	35.3
[35.220] Auxiliary hydraulic pump and lines	35.4
[35.300] Reservoir, cooler, and filters.....	35.5
[35.359] Main control valve	35.6
[35.410] Header or attachment height system	35.7
[35.536] Crop processor system	35.8
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.206] Pump	41.4
Wheels	44
[44.511] Front wheels.....	44.1
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
Electrical systems	55
[55.000] Electrical system	55.1

[55.014] Engine intake and exhaust system.....	55.2
[55.100] Harnesses and connectors.....	55.3
[55.201] Engine starting system.....	55.4
[55.202] Cold start aid.....	55.5
[55.301] Alternator.....	55.6
[55.302] Battery.....	55.7
[55.408] Warning indicators, alarms, and instruments.....	55.8
[55.421] Feeding control system.....	55.9
[55.512] Cab controls.....	55.10
[55.610] Ground speed control.....	55.11
[55.640] Electronic modules.....	55.12
[55.785] Precision farming system.....	55.13
[55.988] Selective Catalytic Reduction (SCR) electrical system.....	55.14
[55.DTC] FAULT CODES.....	55.15
Attachments/Headers.....	58
[58.105] Attachment/Header reel control system.....	58.1
Product feeding.....	60
[60.105] Floating roll, feed chain, and drive.....	60.1
[60.110] Feeder housing.....	60.2
[60.150] Feeder drive system.....	60.3
[60.500] Gearbox housing.....	60.4
Threshing.....	66
[66.105] Concave.....	66.1
[66.110] Concave control system.....	66.2
[66.260] Threshing mechanism drive system.....	66.3
[66.331] Rotor.....	66.4
Separation.....	72
[72.410] Rotary separator drive system.....	72.1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com