

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1

OPERATOR'S MANUAL

T8.320

T8.350

T8.380

T8.410

T8.435

T8.380 SmartTrax™

T8.410 SmartTrax™

T8.435 SmartTrax™

Tractor

PIN ZFRE03123 and above

Part number 47886384

1st edition English

June 2015



Contents

NOTE: The Operator's Manual consists of two volumes. The first volume contains operating information, the second volume the maintenance and diagnostic information.

1 GENERAL INFORMATION

Note to the owner.....	1-1
Engine tampering.....	1-2
Tractor intended use.....	1-2
Electro-magnetic compatibility (EMC).....	1-3
Manual scope.....	1-4
ISOBUS certification.....	1-5
Product identification.....	1-6
Manual storage.....	1-9
Machine orientation.....	1-10
Component Identification.....	1-11
Declaration of conformity.....	1-17
Selective Catalytic Reduction (SCR) system.....	1-19

2 SAFETY INFORMATION

Safety rules and signal word definitions.....	2-1
Safety rules - General.....	2-2
Safety rules - General maintenance safety.....	2-4
Safety rules - Wheels and tires.....	2-4
Safety rules - Driving on public roads and general transportation safety.....	2-4
Safety rules - Fire and explosion prevention.....	2-5
Safety rules - General battery safety.....	2-5
Safety rules - Hydraulic system safety.....	2-6
Safety rules - Passenger seat safety.....	2-6
Safety rules - Operator presence system.....	2-7
Safety rules - Power Take-Off (PTO).....	2-7
Safety rules - Reflectors and warning lights.....	2-7
Safety rules - Seat belts.....	2-7
Safety rules - Roll Over Protective Structure (ROPS).....	2-7
Safety rules - Cab protection.....	2-9
Safety rules - Air conditioning system.....	2-9
Safety rules - Personal Protective Equipment (PPE).....	2-9
Safety rules - Do Not Operate tag.....	2-9
Safety rules - Hazardous chemicals.....	2-9
Safety rules - Utility safety.....	2-10
Safety rules - Electrical storm safety.....	2-10
Safety rules - Mounting and dismounting.....	2-10
Safety rules - Working at heights.....	2-11
Safety rules - Lifting and overhead loads.....	2-11
Safety rules - Implements, tools and trailers.....	2-11
Safety rules - Roll over and tip over.....	2-12
Ecology and the environment.....	2-13
Safety signs.....	2-14

Selective Catalytic Reduction (SCR) exhaust treatment - Safety signs	2-27
Safety aspects	2-29
Noise levels	2-36
Vehicle vibration levels	2-37
Fire extinguisher	2-38
Emergency exit	2-39
Wheel wedges	2-40

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Tractor access	3-1
Lower step	3-3

OPERATOR'S SEAT

Control identification	3-4
------------------------------	-----

PASSENGER'S SEAT

Overview	3-8
----------------	-----

FORWARD CONTROLS

Steering column	3-9
Front console	3-12
Pedal controls	3-14

LEFT-HAND SIDE CONTROLS

Emergency brake lever	3-16
Pneumatic trailer brake	3-16

RIGHT-HAND SIDE CONTROLS

Armrest console	3-17
Armrest console	3-18
Multi function handle	3-19
Minimum/maximum RPM throttles	3-24
Engine speed control	3-26
Control panel	3-27
Remote valve controls	3-34
Joystick	3-35
Rear hitch controls	3-37
Armrest compartment	3-39
Adjusting the armrest console	3-41

REARWARD CONTROLS

Fender console	3-42
Automatic temperature controls	3-45
Automatic temperature control system	3-48
Ventilation	3-49

OVERHEAD CONTROLS

Interior lamps	3-51
----------------------	------

EXTERIOR CONTROLS

Rear fender	3-52
Front hitch	3-54

INSTRUMENT CLUSTER

Overview	3-55
Gauges	3-56
Status and warning icons	3-57
Upper display	3-60
Keypad	3-63
Setup menu	3-65
Rear tire radius and track radius charts	3-71
Adjust menu	3-72
Performance features	3-80

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Engine - Safety rules	4-1
-----------------------------	-----

STARTING THE UNIT

Normal engine starting	4-3
Cold starting aids	4-7
Cold temperature operation	4-9

STOPPING THE UNIT

Stopping the engine	4-11
---------------------------	------

MOVING THE UNIT

FULL POWERSHIFT TRANSMISSION	4-13
Powershift transmission	4-13
Best practices for prolonged transmission life	4-14
Inching pedal and throttle	4-15
Powershift transmission controls	4-16
Upper display - Powershift transmission	4-19
Driving the Powershift vehicle	4-21
Setting default gears	4-26
Ground Speed Management (GSM)	4-28
CONTINUOUSLY VARIABLE TRANSMISSION (CVT)	4-36
Auto Command brake, pedal and throttle operation	4-36
Auto Command controls	4-42
Upper display	4-47
Auto Command operation	4-48
Driving the Auto Command transmission	4-54
Transmission messages	4-59
POWERSHIFT AND CVT TRANSMISSIONS	4-61

Selective Catalytic Reduction (SCR) system	4-61
Engine idling or full catalyst messages	4-72
Mechanical Front Drive (MFD)	4-73
Differential lock system	4-76
Suspended axle	4-78
Ride control	4-82
Engine power boost	4-84
Constant engine speed	4-85
Suspended cab	4-88
Headland management system	4-89

PARKING THE UNIT

Automatic park lock	4-95
---------------------------	------

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Tractor warning lamps	5-1
Safe transport speed	5-3

SHIPPING TRANSPORT

Securing the tractor for shipping	5-4
---	-----

RECOVERY TRANSPORT

Safety rules	5-5
Towing the tractor	5-6

6 WORKING OPERATIONS

GENERAL INFORMATION

Overview	6-1
----------------	-----

REAR POWER TAKE-OFF (PTO)

Safety rules	6-2
Connecting the Power Take-Off (PTO)	6-6
Interchangeable Power Take-Off (PTO) shaft	6-7
Rear Power Take-Off (PTO) operation	6-13
Power Take-Off (PTO) fender switch operation	6-17
Auto Power Take-Off (PTO) operation	6-18

FRONT POWER TAKE-OFF (PTO)

Overview	6-21
Front Power Take-Off (PTO) operation	6-22

REAR HITCH

Identification	6-25
Link adjustment	6-26

Hitch high clearance adjustment	6-30
Hydraulic links	6-33
Sway limiter adjustment	6-35
Automatic telescoping stabilizers	6-36
Lower link block adjustment	6-38
Mechanical float adjustment	6-40
Hitch operation	6-41
Hitch remote switch operation	6-46
Position control operation	6-47
Load control operation	6-49
Slip control operation	6-51
Hitch set point	6-53

FRONT HITCH

Overview	6-55
Front hitch operation	6-55

DRAWBARS AND TOWING ATTACHMENTS

Safety rules	6-62
Drawbar capacity/position	6-63
Adjusting the drawbar	6-67

TRAILER HITCHES

Clevis and special drawbars	6-69
Automatic trailer hitch	6-71
Auto pickup hitch operation	6-74
Manual trailer hitch	6-76

TRAILER BRAKING SYSTEMS

Safety rules	6-78
Trailer brake connections	6-79
Air pressure monitoring	6-80

AUXILIARY CONNECTIONS

Auxiliary power and lighting	6-81
Cab power connections	6-83
Radar connection	6-84
Implement ISOBUS connector	6-85

HYDRAULIC REMOTE CONTROL VALVES

Valve couplers and connections	6-86
Motor return circuit	6-90
Power beyond circuit	6-91
Flow capacity	6-92
Hydraulic transport lock	6-93
Operating the controls	6-94
Remote valve display screens	6-98

Remote hydraulic auto mode	6-101
Auto depth control	6-104
Joystick operation	6-106

BALLASTING THE TRACTOR

Guidelines	6-110
Tire load and inflation charts	6-119
Weights, cast metal.....	6-121
Wheel slip and power hop performance	6-133

MECHANICAL FRONT DRIVE (MFD) AXLES

Front axle identification	6-136
Tire combinations and tread positions.....	6-137
Steering and oscillation stops	6-142
Tread and fender settings - Class 4.75 and 5.0 fixed front axles.....	6-144
Tread and fender settings - Class 4.75 and 5.0 saddle suspended front axles ..	6-149
Tread and fender settings - Class 5.0 wide front axles.....	6-154
Front wheel fenders	6-156
Front wheel fenders - Class 4.75 and 5.0 fixed and suspended axles	6-157
Front wheel fenders - Class 5.0 wide fixed and suspended axles	6-162

REAR AXLE

Rear wheel installation	6-167
Rear wheel tread settings	6-169

REAR TRACKS

Tire load and inflation charts - - Tractors with rear tracks	6-172
Maximum front ballast recommendations	6-173
Front wheel tread settings.....	6-174
Track preconditioning.....	6-179
Factory and field track settings.....	6-181

7 MAINTENANCE

GENERAL INFORMATION

Safety rules.....	7-1
Maintenance guidelines	7-2
Opening the hood	7-3
Closing the hood	7-5
Filling the fuel tank	7-6
Filling the Diesel Exhaust Fluid (DEF)/AdBlue® tank	7-8
Battery disconnect switch	7-10
Battery access and service.....	7-11
Tire and rim service.....	7-12
Tractor jacking points.....	7-14
Capacities	7-16
Consumables - Engine oil	7-17
Consumables - Transmission/hydraulic system fluid	7-18

Consumables - Diesel fuel	7-19
Consumables - Biodiesel fuels	7-20
Consumables - Diesel Exhaust Fluid (DEF)/AdBlue®	7-22
Consumables - Organic Acid Technology (OAT) coolant	7-24
Maintenance chart notes	7-26
Maintenance summary decal	7-27

Maintenance planning

Maintenance chart	7-28
-------------------------	------

At warning message display

Air filter service icon/message*	7-30
Water in fuel message	7-33
Transmission oil filter switch	7-35
Hydraulic oil filter switch	7-38

First 10 to 50 hours

Wheel bolt torque	7-41
Weight bolt torque	7-42
Differential and planetary oil	7-43

Every 10 hours or daily

Engine oil level	7-44
Transmission oil level	7-45
Engine coolant level	7-46
Air reservoir	7-46
Rear hitch and front axle	7-46

Every 50 hours or weekly

Engine auxiliary fuel filter	7-47
------------------------------------	------

First 100 hours

Powershift transmission clutch calibration	7-49
--	------

Every 100 hours

Front hitch	7-55
Front Power Take-Off (PTO) drive shaft	7-57

Every 200 hours

Track alignment	7-58
-----------------------	------

Every 300 hours

Battery water level (Note B)	7-59
Engine air intake and exhaust hoses	7-61
Engine coolant level - deaeration tank	7-63
Weight bolt torque	7-64

Front axle (Note A)	7-65
Rear hitch (Note A)	7-67
Fuel tank	7-69
Differential and planetary oil level (Note B).....	7-70
Transmission oil pressure	7-71
Front Power Take-Off (PTO) oil level	7-72

Every 400 hours

Cab air filter*.....	7-73
----------------------	------

Every 600 hours

Engine oil and filter*	7-76
Engine coolant antifreeze protection	7-79
Engine coolant hoses and clamps.....	7-79
Engine fuel filter*	7-81
Engine auxiliary fuel filter*	7-84
Fuel system bleeding	7-86
Changeable Power Take-Off (PTO) internal splines.....	7-87
Diesel Exhaust Fluid (DEF)/AdBlue® in-line filter	7-88
Front Power Take-Off (PTO) oil and filter*.....	7-89
Front Power Take-Off (PTO) dropbox oil	7-91
Engine air precleaner*	7-92

Every 1000 hours or annually

Pneumatic brake system dryer	7-93
Powershift transmission clutch calibration.....	7-94

Every 1200 hours or annually

Differential and planetary oil.....	7-100
Engine air filters*	7-104

Every 1500 hours

Transmission oil	7-107
Hydraulic oil filter*	7-110
Transmission oil filter*	7-111
Idler/roller wheel oil	7-112
Engine crankcase filter*	7-113

Every 3000 hours

Secondary steering system.....	7-117
Engine valve adjustment (Note C).....	7-117

Every 3600 hours

Diesel Exhaust Fluid (DEF)/AdBlue® supply module filter	7-118
---	-------

Every 4000 hours or every four years

Engine coolant.....	7-121
---------------------	-------

As required

Vehicle fire prevention.....	7-123
Track inspection and bolt torque.....	7-124
Track rotation.....	7-124
Track drive wheel and idler bolt torque.....	7-124
Track tension release.....	7-125
Track alignment.....	7-127
Cab air filter*.....	7-129
Grille screen and radiator area.....	7-132
Fuel tank vent filter.....	7-133
Transmission clutch and accumulator.....	7-133
Tire pressure.....	7-134
Fan belt.....	7-135
Diesel Exhaust Fluid (DEF)/AdBlue® tank.....	7-141
Remote valve collection bottle.....	7-143
Remote valve couplers.....	7-144
Emergency brake lever.....	7-145
Cab fabric and carpet.....	7-146
Seat belt.....	7-146

Fuse and relay locations

Electrical component location.....	7-147
Lamps and bulbs.....	7-152

STORAGE

Preparing for storage.....	7-153
Removal from storage.....	7-154

ELECTRICAL SYSTEM

Radio or audio system.....	7-155
Battery removal and installation.....	7-156
Auxiliary battery connections.....	7-158
Headlight.....	7-159
LED work lights.....	7-160
Grille work light.....	7-160
Fender tail light and warning light.....	7-161
Roof warning light.....	7-162
Roof work light.....	7-162
High intensity work light.....	7-163
Side turn indicator light.....	7-163
Rotating beacon light.....	7-164
Number plate light.....	7-164
Interior light.....	7-165

8 TROUBLESHOOTING

ALARM(S)

Display warnings overview	8-1
Display warnings - Level 1	8-2
Display warnings - Level 2	8-4
Display warnings - Level 3	8-7
Display warnings - Level 4	8-9

SYMPTOM(S)

Engine symptoms	8-11
Transmission symptoms	8-13
Hydraulic symptoms	8-14
Hitch symptoms	8-15
Brake symptoms	8-16
Cab environment symptoms	8-16
Electrical power system symptoms	8-17

9 SPECIFICATIONS

Engine specifications	9-1
Power train specifications	9-2
Operating speeds	9-5
Operating speeds - SmartTrax™ tractors	9-6
Vehicle dimensions and shipping weight	9-10
Vehicle dimensions and shipping weight - SmartTrax™ tractors	9-16
Maximum operating weight	9-18

10 ACCESSORIES

Farming system displays	10-1
Rear view mirrors	10-2
Chemical tank mounting	10-4
General accessories	10-6

1 - GENERAL INFORMATION

Note to the owner

This manual contains important information about the safe operation, adjustment and routine maintenance of your T8. or T8. **SmartTrax™** series tractor. The manual is divided into 10 chapters as outlined in the table of contents. Refer to the index at the end of this manual for locating specific items about your tractor.

Do NOT operate or permit anyone to operate or service this machine until you or the other persons have read this manual. Use only trained operators who have demonstrated the ability to operate and service this machine correctly and safely.

Tractors equipped with rear tracks

On **SmartTrax™** models, refer to the information starting on page **Operating speeds - SmartTrax™ tractors** for transport speed weight limitations.

This Operator's Manual is to be stored in the manual compartment behind the operator's seat in the vehicle. Make sure this manual is in good condition. Contact your dealer to obtain additional manuals.

Your NEW HOLLAND dealer will instruct you in the general operation of your new equipment. Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your machine. They will also provide any after-sales service you may need, and genuine NEW HOLLAND parts, your guarantee of quality and match.

See Operator's Manual for Transport Speed Weight Guidelines

kph/mpg			

code 00000000A

RAIL14TR03870BA 1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com