

ORIGINAL INSTRUCTIONS

JX80 HC
JX90 HC
JX95 HC
Tractor

OPERATOR'S MANUAL

Part number 47918208

1st edition English

August 2015

Replaces part number 87631855



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
TO THE OWNER	1-2
Legal advice	1-4
METRIC AND IMPERIAL UNITS ABBREVIATIONS	1-6
PRODUCT IDENTIFICATION	1-9
ECOLOGY AND THE ENVIRONMENT	1-12

2 SAFETY INFORMATION

SAFETY PRECAUTIONS	2-1
Commission Directive 2010/52/EU	2-3
WORKING SAFELY	2-10
GENERAL MAINTENANCE SAFETY	2-14
PROTECTION OFFERED BY THE TRACTOR	2-17
Dimensions	2-20
Dimensions	2-21
TRACTOR JACKING POINTS	2-22
PREVENTION OF FIRE OR EXPLOSION	2-23
Getting in and out of the machine	2-24
EMERGENCY EXIT	2-24
INTENDED USE STATEMENT	2-25
SAFETY DECALS	2-27
GUARDS	2-31
GUARDS	2-34
INTERNATIONAL SYMBOLS	2-37
NOISE LEVEL INFORMATION SHEET	2-38

3 CONTROLS AND INSTRUMENTS

Access to operator's platform

INTRODUCTION	3-1
CAB Access/Exit	3-2
ADJUST THE MIRRORS	3-4
SUN PROTECTION	3-5

Operator's seat

OPERATOR'S SEAT	3-5
OPERATOR'S SEAT	3-7
SEAT BELT	3-7

Forward controls

INSTRUMENT CLUSTER	3-8
LIGHT-/ TURN LEVER	3-12

Left-hand side controls

Left-hand side controls	3-13
FOUR WHEEL DRIVE	3-14

Right-hand side controls

Right-hand side controls.....	3-14
12 x 4 SYNCHROMESH TRANSMISSION	3-16
12 x 12 SYNCHRO SHUTTLE TRANSMISSION	3-17
TRANSMISSION WITH CREEPER AND SHUTTLE TRANSMISSION WITH CREEPER AND SHUTTLE – 30 km/h (19 mph)	3-20
MECHANICAL DIFFERENTIAL LOCK.....	3-22
LIMITED SLIP DIFFERENTIAL LOCK	3-23
HYDRAULIC LIFT	3-24
HYDRAULIC LIFT	3-25

Rearward controls

THREE POINT LINKAGE	3-28
EQUIPMENT MOUNTING POINTS EQUIPMENT MOUNTING POINTS	3-29
Lower links	3-30
REMOTE CONTROL VALVES	3-31

4 OPERATING INSTRUCTIONS

Starting the unit

STARTING THE ENGINE	4-1
---------------------------	-----

Stopping the unit

STOPPING THE ENGINE.....	4-2
--------------------------	-----

5 TRANSPORT OPERATIONS

Preparing for road transport

CARRYING THE TRACTOR ON A TRANSPORTER LOADING THE TRACTOR ONTO A TRANSPORTER	5-1
---------------------------------------------------------------------------------------	-----

Recovery transport

TOWING THE TRACTOR	5-1
--------------------------	-----

6 WORKING OPERATIONS

PREPARING FOR WORK

P.T.O. OPERATING PRECAUTIONS.....	6-1
Tires	6-2
Specification – Tires	6-4
Tire combinations.....	6-6
Tire pressures	6-6
FRONT WHEEL TRACK ADJUSTMENT (two wheel drive).....	6-8
WHEEL TRACK ADJUSTMENT - 4WD FRONT WHEEL AND REAR WHEEL ...	6-9
IRON WEIGHTS (where fitted).....	6-11
LIQUID BALLAST LIQUID BALLASTING	6-11
MAXIMUM PERMITTED WEIGHTS	6-12
STATIC WEIGHT DISTRIBUTION	6-13
INDEPENDENT POWER TAKE OFF (PTO) POWER TAKE-OFF OPERATION	6-14

GROUND DRIVE P.T.O. (where fitted)	6-14
POWER TAKE OFF (PTO) SPEEDS.....	6-15
Two speed Power Take-Off (PTO) systems	6-21

7 MAINTENANCE

General information

INTRODUCTION	7-1
DIESEL FUEL QUALITY SPECIFICATIONS.....	7-2
MISCELLANEOUS CHECKS	7-3
PROTECTIVE DEVICES	7-4
Engine cooling system - Basic instructions.....	7-6
Fluid capacities and lubricant specifications	7-7
Consumables.....	7-8

Maintenance planning

MAINTENANCE CHART	7-9
-------------------------	-----

Flexible Maintenance

Engine clutch	7-10
Brake pedal adjustment Adjusting height of service brake pedals	7-12
Alternator belt.....	7-13
Air filter dust valve	7-13

Warning light on

Main cartridge, dry air filter	7-14
Brake fluid reservoir level.....	7-15
Fuel filter water drain	7-15

EVERY 10 HOURS OR EACH DAY

Engine oil level	7-16
Battery	7-16
Radiator expansion tank.....	7-17
Cab air filter.....	7-17
Radiator, oil cooler and air conditioner condenser	7-18
Cab air-conditioning system	7-18

EVERY 50 HOURS

4WD steering cylinders.....	7-20
4WD front axle rear pivot	7-20
4WD front axle front pivot	7-21
2WD steering cylinder	7-21
2WD right-hand stub axle	7-21
2WD left-hand stub axle	7-22
2WD front axle pivot.....	7-22
Fuel filter.....	7-22

EVERY 300 HOURS

CHANGE ENGINE OIL AND FILTER	7-23
------------------------------------	------

Fuel filter	7-23
Fuel feed pump filter	7-24
Transmission and hydraulic circuit oil filter	7-24
Check final drives fluid level	7-25
Engine air cleaner outer element	7-25
Rear transmission and hydraulic lift oil level	7-25
Front Axle Reduction Hubs - 4WD	7-26
2WD front wheels.....	7-26
4WD front axle swivel bearings.....	7-26

EVERY 600 HOURS

Fuel filter/water separator	7-27
-----------------------------------	------

EVERY 900 HOURS

Engine valves.....	7-28
--------------------	------

EVERY 1200 HOURS OR ANNUALLY

Cab air filter.....	7-28
Air cleaner	7-28
Fuel tank.....	7-29
Drive Shaft Sleeve for 4WD Front Axle Connection.....	7-29

EVERY 1200 HOURS OR EVERY 2 YEARS

Fuel injectors	7-30
Front axle housing oil, 4WD	7-30
Front axle final drive hubs oil, 4WD	7-30
Transmission and hydraulic oil	7-31
Rear axle final reduction oil.....	7-32

EVERY 3600 HOURS

Engine cooling system - Change fluid	7-32
--------------------------------------------	------

GENERAL MAINTENANCE

Bleeding the fuel injection system	7-33
Bleeding the brake system	7-33

ELECTRICAL SYSTEM

Battery fluid level	7-35
Headlights - adjust.....	7-36
Replacing front headlight bulbs.....	7-37
Fuses and relay box	7-39
Cleaning the tractor.....	7-46

8 TROUBLESHOOTING

Fault code resolution

Introduction	8-1
--------------------	-----

Alarm(s)

ENGINE	8-1
Electrical System	8-3
Hydraulic System	8-4
THREE POINT HITCH	8-5
BRAKES.....	8-6
CAB.....	8-7

9 SPECIFICATIONS

Introduction	9-1
GENERAL DIMENSIONS	9-1
WEIGHTS	9-4
TRACTOR WEIGHTS	9-4
Engine specifications	9-4
CLUTCH.....	9-6
TRANSMISSION	9-6
POWER TAKE OFF (PTO)	9-7
HYDRAULIC LIFT	9-7
THREE-POINT HITCH	9-8
FRONT AXLE	9-8
STEERING	9-8
BRAKES.....	9-9
General specification BODYWORK AND DRIVING POSITION	9-9
Towing devices	9-10
Electrical systems	9-10
Instruments and accessories	9-11

10 ACCESSORIES

ACCESSORIES	10-1
HYDRAULIC TRAILER BRAKES	10-2

11 FORMS AND DECLARATIONS

Service record - 1st 50 hour, Owner copy 1st 50 hour, Owner copy	11-1
Service record - 1st 50 hour, Dealer copy 1st 50 hour, Dealer's copy	11-3

1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

The CASE IH dealer will provide instructions on the general operation of new equipment. The dealer's staff, assigned to maintenance, is available for any questions related to the operation of the machine.

Your CASE IH dealer carries a complete line of genuine CASE IH service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model code and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model :
Product Identification Number (PIN):



Warning symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

⚠ WARNING

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.
Replace all shields before operating the machine.
Failure to comply could result in death or serious injury.**

W0012A

The machine has been designed and built according to the highest standards of quality and it complies with all current safety regulations. However, the risk of accidents can never be completely excluded. That is why it is essential to observe elementary safety rules and precautions.

Read this manual carefully, paying particular attention to the instructions concerning safety, operation and maintenance so as to avoid the risk of injury while operating or servicing the machine.

Do not use this machine for any application or purpose other than those described in this manual. If the machine is to be used for work involving the use of special attachments, accessories or equipment, consult your CASE IH Dealer in order to make sure that any adaptations or modifications made are in keeping with the machine's technical specifications and with prevailing safety requirements.

Any modification or adaptation which is not approved by the manufacturer may invalidate the machine's initial conformity with safety requirements.

The machine must undergo regular inspections, the frequency of which varies according to the type of use. Consult your authorized CASE IH dealer.

Always keep this manual in the operator's compartment (in the seat back, behind the operator's seat). Make sure it is always complete and in good condition. To receive extra copies of the manual or copies in languages other than that of your country of residence, please contact your CASE IH dealer.

The manufacturer is committed to the constant improvement of its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

NOTICE: The information in this manual is provided on the basis of the information that was available at the time the manual was written. Settings, procedures, part numbers, software and other items may change, which may affect the maintenance of the machine. Ensure that you have complete and current information from your dealer before you start any machine operation. All data given in this book is subject to production variations.

Engine tampering statement:

ATTENTION: The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply with this prohibition could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!

TO THE OWNER

TO THE OWNER

GENERAL

This Manual has been prepared to assist you in the correct procedure for running—in, driving and operating and for the maintenance of your new tractor. Read this Manual carefully. Your tractor is intended for use in normal and customary agricultural applications.

If at any time you require advice concerning your tractor, do not hesitate to contact your CASE IH dealer. He has factory trained personnel, genuine manufacturers' parts and the necessary equipment to carry out all your service requirements.

Your tractor has been designed and built to give maximum performance, economy and ease of operation under a wide variety of operating conditions. Prior to delivery, the tractor was carefully inspected, both at the factory and by your dealer to ensure that it reaches you in optimum condition. To maintain this condition and ensure trouble-free operation, it is important that the routine services, as specified in 7-1 of this Manual, are carried out at the recommended intervals.

CLEANING THE TRACTOR

Your tractor is a state-of-the-art machine with user friendly controls. This should be borne in mind when cleaning the tractor, particularly if using a high pressure washer. Even though every precaution has been taken to safeguard electrical components and connections, the pressure generated by some of these machines is such that complete protection against water ingress cannot be guaranteed.

When using a high pressure washer, do not stand too close to the tractor and avoid directing the jet at electronic components, electrical connections, breathers, seals, filler caps, etc. Never direct a cold water jet at a hot engine or exhaust.

SAFETY

2-1 lists the precautions to be observed to ensure your safety and the safety of others. Read the safety precautions and follow the advice offered before operating the tractor.

FIRST 50 HOUR SERVICE

In Section 11, at the back of this Manual, you will find the 50-hour service reports.

After you have operated the tractor for 50 hours, take your tractor, together with this Manual, to your dealer. He will then perform the factory recommended 50-hour service and complete the service report sheets 11-1. The first sheet (page 11-1) is the dealer's copy and should be removed by the dealer after the service has been carried out. The second sheet (page 11-3) is your copy of the service performed. Ensure that you and the dealer sign both copies.

SERVICE PARTS

It should be pointed out that genuine parts have been examined and approved by the Company. The installation and/or use of 'non-genuine' products could have negative effects upon the design characteristics of your tractor and thereby affect its safety. The Company is not liable for any damage caused by the use of 'non-genuine' parts and accessories. Only genuine replacement parts should be used. The use of non-genuine parts may invalidate legal approvals associated with this product.

It is prohibited to carry out any modifications to the tractor unless specifically authorised, in writing, by the After Sales Service department of the Company.

WARRANTY

Your tractor is warranted according to legal rights in your country and the contractual agreement with the selling dealer. No warranty shall, however, apply if the tractor has not been used, adjusted and maintained according to the instructions given in the Operator's Manual.

ABOUT THIS MANUAL

This Manual gives information for use of this tractor, as intended and under the conditions foreseen by the manufacturer during normal operation and routine service and maintenance.

- Normal operation means the use of the tractor for the purpose intended by the manufacturer by an operator familiar with the tractor and the mounted or towed equipment and complying with the information for operation and safe practices, as specified by the manufacturer in this Manual and by the signs on the tractor and the equipment.
- Normal operation includes the preparation and storage of the tractor, swinging components into work position and vice versa, adding or removing ballast and picking up and setting off attachments
- Normal operation includes the adjustment and setting of the tractor and equipment, for the specific condition of the field and/or the crop
- Routine service and maintenance means activities that must be done daily by an operator familiar with the tractor characteristics and complying with the information for routine service and safe practices, as specified by the manufacturer in this Manual and by signs on the tractor, in order to maintain its proper function. Routine service includes activities such as fueling, cleaning, washing, topping up fluid levels, greasing, replacing of consumable articles such as lamp bulbs
- This Manual is not giving all the information related to periodical service, converting and repairs to be carried out by professional service personnel. For some of the latter activities, there may be a need for appropriate facilities, technical skills and tools which are not supplied with the tractor, please refer to your dealer or authorised workshop
- Periodical service means activities that must be done at defined intervals by trained personnel familiar with the tractor characteristics and which are complying with the information for periodical service and safe practices, as partly specified by the manufacturer in this Manual and in other Company literature, in order to maintain the expected life time of the tractor
- Converting means activities that must be done by professional service personnel familiar with the tractor characteristics and complying with the information for converting, as partly specified by the manufacturer in this Manual, in assembly instructions or in other Company literature, in order to fit the tractor to a specific configuration
- Repair means activities that must be done by professional service personnel only familiar with the tractor characteristics and complying with the information for repair, as specified by the manufacturer in the dealer's workshop Manual, in order to restore the proper function of the tractor after a failure or degradation of performance

1 - GENERAL INFORMATION

Legal advice

Cluster of 2006/42/EC Annex II	BG Декларация ЕС за съответствие с директивата 2006/42/ЕО	CZE Prohlášení o shodě ES	DA EU-overensstemmelserklæring	DE EG-Konformitätserklärung	EL Διήκηση Έπισημότητας ΕΚ	EN EC Declaration of conformity	ES Declaración CE de conformidad	ET EU vastastatuseatvõetus	FI EU-yhteensopivuuskäytävä	F Déclaration CE de conformité	HU EU Megfelelőségi nyilatkozat	IT Dichiarazione CE di conformità	LT ES atitikties deklaracija	LV EK Atbilstības deklarācija	NL CE Conformiteitsverklaring	NO CE samsvareklæring	PL Deklaracja zgodności WE	
1.A.1	Ним [1]	My [1]	Vi [1]	Wir [1]	Εμείς [1]	We [1]	Noobid [1]	Meie [1]	Me [1]	Les soussignés [1]	Ahálvotók [1]	Nis [1]	Nis [1]	Nis [1]	We [1]	Vi [1]	Firma [1]	
1.A.2	Представители на Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	Zastupenci Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	representanter af Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	vertreter durch Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	επιτελείων των Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	Representatives of Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	representados por Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	Eesindajad Giuseppe Gavio pool, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	edustajamehed Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	edustajamehed Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	représentés par Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	Akkor képviselői Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	Rappresentanti di Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	Ažbuovėniai Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	vertegenwoordigers Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	representert av Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg	nieżytkowników z siedzibą w Giuseppe Gavio, CNH Europe Holding SA, 11, Rue Aldringen, L-1118 Luxembourg
1.A.3	Декларация, позволяющая считать оборудование, не являющееся сельскохозяйственным транспортом, пригодным для: [2] Мотоцикл [3] Тип [4] Серийный номер [5]	Prohlášení, povolující považovat za vhodné zemědělské stroje, je výrobek: Zemědělský traktor [2] Občasný nářadí [3] Model [4] Typ [4] Výrobčí číslo [5]	erklæring på eget ansvar af produktet: Landbrugstraktor [2] Handtræk [3] Model [4] Type [4] Serienummer [5]	erklären auf eigene Verantwortung, dass das Produkt Landwirtschaftliche Zugmaschine Handtrabbezeichnung: [2] Modell: [3] Typ: [4] Seriennummer: [5]	εγκρίνει να θεωρηθεί ως μηχανή αγροτικού οχήματος, με τις προϋποθέσεις: Επιστρωτικό [2] Μотоцикл [3] Тип [4] Серийный номер [5]	declaration under our sole responsibility, that the product: Tractor agricultural [2] Trade Name [3] Model [4] Type [4] Serial Number [5]	declaramos, bajo nuestra exclusiva responsabilidad, que el producto: Tractor agrícola [2] Designación comercial [2] Modelo [3] Tipo [4] Número de serie [5]	käivata emal vastutusalul, et toode: Põllumootor [2] Äärmise [2] Model [3] Tüüp [4] Seeriainumber [5]	väitame ennala vastutusalul, että toode: Maatalustraktor [2] Äärmise [2] Model [3] Tüüp [4] Seeriainumber [5]	väitame ennala vastutusalul, että toode: Maatalustraktor [2] Äärmise [2] Model [3] Tüüp [4] Seeriainumber [5]	déclarant sous leur propre responsabilité, que le produit: Tracteur agricole [2] Désignation Commerciale [2] Modèle [3] Type [4] Numéro de série [5]	nyilatkozunk, hogy miénk kizárólagos felelősségünkön belül a termék: Traktor mezőgazdasági [2] Árképváltás [3] Típus [4] Sorozatszám [5]	declaramos, sotto la nostra esclusiva responsabilità, che il prodotto: Trattore Agricolo [2] Designazione commerciale [3] Modello [4] Tipo [4] Numero di serie [5]	atsakuroje šio produkto atitikties, atitiktis Deklaracija, su kurią galima pripažinti šio produkto atitikties standartui.	verklaren onder verantwoording van de afzender van de CE-keurmerk, dat het vervoer middel bedoeld is voor landbouw.	erklærer som eneansvarlig at produktet vil kunne brukes som jordbruksmaskin.	nieżytkowników zgodzą się, że produkt jest przeznaczony do użytku jako pojazd rolniczy.	
1.A.4	За работи по оценка съответствия декларацията е съобразена с изискванията на Директива 2006/42/ЕО, променени в [6].	na kleru je bila publikovana istovetna objava u skladu s zahtjevima Direktive 2006/42/EZ, izmijenjenim u: [6].	Erklæring om at den påklæbte erklæring overholder alle de relevante krav i direktivet 2006/42/EF, ændret ved [6].	Za sachgenen Übereinstimmung der Festlegung in der Richtlinie werden folgende (harmonisierte) Normen herangezogen:	αφ'εξουχίας δικής μας δήλωση, σύμφωνα με τις απαιτήσεις της Οδηγίας 2006/42/ΕΚ, όπως τροποποιήθηκε με το άρθρο 6.	to which this declaration relates, that all the relevant provisions of the Directive 2006/42/EC, amended by [6].	à cet égard se réfère la présente déclaration, en conformité avec les dispositions pertinentes de la Directive 2006/42/CE, modifiée par [6].	et selle kiandev deklaratsioon viitab, sisaldab kõik direktiiv 2006/42/EJ ja selle paranduste nõuded.	et selle kiandev deklaratsioon viitab, sisaldab kõik direktiiv 2006/42/EJ ja selle paranduste nõuded.	juhul tänu väikesele direktiivi 2006/42/EK muudatustele [6].	Således følger de i præfente declaration et conformer aux dispositions pertinentes de la Directive 2006/42/CE, modifiée par [6].	Az írott nyilatkozat vonatkozik arra, hogy a termék megfelel a 2006/42/EK irányelv vonatkozó rendelkezéseinek, amely a módosított irányelvvel egyeztetve van.	Per l'implementazione delle disposizioni della Direttiva, sono state applicate le seguenti norme armonizzate:	su kura šio deklaracija atitiktis, atitiktis Deklaracija, su kurią galima pripažinti šio produkto atitikties standartui.	Lai realizētu šīs deklarācijas noteikumus, ir izmantoti šādi harmonizētie standarti:	Vanwege deze verklaring betrekking heeft aan alle relevante essentiële eisen van de Richtlijn 2006/42/EG, geamendeerd door [6].	For implementering av direktivet betrekninger har følgende harmoniserte standarder blitt lagt til grunn:	De implementeringi viimast kehtivast Euroopa Liidu seadusest, mis on muudetud artikli 6 alusel.
1.A.7	• ISO 26322-1 parte 1 ou 2	• ISO 26322-1 parte 1 ou 2	• ISO 26322-1 del 1 ou 2	• ISO 26322-1 del 1 oder 2	• ISO 26322-1 parte 1 o 2	• ISO 26322-1 parte 1 o 2	• ISO 26322-1 osa 1 või 2	• ISO 26322-1 osa 1 või 2	• ISO 26322-1 osa 1 ou 2	• EN 26322-1 del 1 et 2	• EN 26322-1-1 vagy 2	• ISO 26322-1 parte 1 o 2	• ISO 26322-1 dal 1 o 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• ISO 26322-1-1 vagy 2	
1.A.9	Place and date of the declaration [7]	Lugar y fecha de la declaración [7]	Sted og dato for erklæringen [7]	Ort und Datum der Erklärung [7]	Tópis és dátum a nyilatkozat [7]	Lieu et date de la déclaration [7]	Lugar y fecha de la declaración [7]	Deklaratsiooni viimast kirjeldatud koht [7]	Vahetust teinud isiku nimi ja aadress [7]	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	
1.A.10	Name and signature of the authorised person [8]	Nombre y firma de la persona autorizada [8]	Navn und Unterschrift des Befulget: [8]	Name und Unterschrift des Befugten: [8]	Όνομα και υπογραφή του εξουσιοδοτημένου προσώπου [8]	Name and signature of the authorised person [8]	Nombre y firma de la persona autorizada [8]	Valitud isiku nimi ja aadress [8]	Valitud isiku nimi ja aadress [8]	Non et signature de la personne autorisée [8]	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2	• EN 26322-1 del 1 et 2



CASE II
CNH Europe Holding S.A.
Rue Aldringen, 11
- 1118 LUXEMBOURG
(Luxembourg)

SS10D345 1

Here above is provided copy of the "EC" Declaration of Conformity (EC Declaration of Conformity acc to 2006/42/EC).

The EC Declaration of Conformity is the manufacturer's declaration about equipment compliance to relevant EU provisions.

Please keep the original document in a safe place. Local authorities may require you to show this document in order to assure compliance of your equipment.

Translation of this declaration in your own country language is provided on the original document.

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes.

1 - GENERAL INFORMATION

<p>Clause of 2006/42/EC Annex II</p>	<p>EN EC Declaration of conformity According to Directive 2006/42/EC. We, [1] Represented by Guiseppe Gavioli CNH Europe Holding S.A. 13, Rue Aldringen L- 1118 Luxembourg declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5] to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6] For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied:</p> <ul style="list-style-type: none"> • ISO 26322-1 part 1 or 2 <p>Other standards: see Operators Manual Place and date of the declaration: [7] Name and signature of the authorised person: [8]</p>
<p>1.A.1</p>	
<p>1.A.2</p>	
<p>1.A.3</p>	
<p>1.A.4</p>	
<p>1.A.7</p>	
<p>1.A.9</p>	
<p>1.A.10</p>	

HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- ROPS PROTECTION is certified according to EN 15694.
- NOISE EMISSION LEVELS are rated according to **2009/76/EC** . and **2009/63/EC**
- VIBRATION LEVELS are rated according to 78/764/EEC.

NOTE: See safety section 2 in this manual for further explanation and details on above mentioned standards and specific terminology.

METRIC AND IMPERIAL UNITS ABBREVIATIONS

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m ²	square foot	ft ²
	square millimeter	mm ²	square inch	in ²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency - Rotational				
	revolution per minute	r/min	revolution per minute	r/min ^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	μm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per Mass				
	milligram per kilogram	mg/ kg		
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH ₂ O
	megapascal	MPa	pound per square inch	psi

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Temperature (other than Thermodynamic)				
	degrees Celsius	°C	degrees Fahrenheit	°F
Time				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
Torque (includes Bending moment, Moment of force, and Moment of a couple)				
	newton meter	N m	pound foot	lb ft
			pound foot	lb in
Velocity				
	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimeter per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
Volume (includes Capacity)				
	cubic meter	m ³	cubic yard	yd ³
				cu yd
	liter	l	cubic inch	in ³
	liter	l	US gallon	US gal
			UK gallon	UK gal
			US quart	US qt
			UK quart	UK qt
	milliliter	ml	fluid ounce	fl oz
Volume per time (includes Discharge and Flow rate)				
	cubic meter per minute	m ³ /min	cubic foot per minute	ft ³ /min
	liter per minute	l/min	US gallon per minute	US gal/min
	milliliter per minute	ml/min	UK gallon per minute	UK gal/min
Sound power level and Sound pressure level				
	decibel	dB	decibel	dB

Buy Now



Our support email:

ebooklibonline@outlook.com