

ORIGINAL INSTRUCTIONS

# OPERATOR'S MANUAL

---

**T7.175**

**T7.190**

**T7.210**

**Tier 4B (final)**

Sidewinder II

Tractor

**Part number 47948870**

2<sup>nd</sup> edition English

September 2016

*Replaces part number 47915024*



# Contents

---

## 1 GENERAL INFORMATION

|                                                 |      |
|-------------------------------------------------|------|
| Metric and imperial units abbreviations.....    | 1-1  |
| To the owner.....                               | 1-3  |
| Product identification.....                     | 1-5  |
| Engine identification.....                      | 1-6  |
| Drive line identification.....                  | 1-7  |
| Cab identification.....                         | 1-8  |
| Forestry kit plate.....                         | 1-9  |
| Ecology and the environment.....                | 1-10 |
| Programming tractor functions.....              | 1-11 |
| Operator's manual storage.....                  | 1-12 |
| Before operating the tractor.....               | 1-12 |
| International symbols.....                      | 1-13 |
| Machine stability.....                          | 1-14 |
| Selective Catalytic Reduction (SCR) system..... | 1-18 |

## 2 SAFETY INFORMATION

|                                        |      |
|----------------------------------------|------|
| Safety precautions.....                | 2-1  |
| Safety decals.....                     | 2-3  |
| Safety rules.....                      | 2-11 |
| Burn prevention.....                   | 2-18 |
| Prevention of fire or explosions.....  | 2-19 |
| Fire extinguisher.....                 | 2-20 |
| Protection offered by the tractor..... | 2-21 |
| Hazardous substances.....              | 2-24 |
| Emergency exit.....                    | 2-25 |
| Wheel chocks.....                      | 2-26 |
| Intended use statement.....            | 2-27 |
| Instructor's seat.....                 | 2-29 |

## 3 CONTROLS AND INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

|                                                    |     |
|----------------------------------------------------|-----|
| Introduction.....                                  | 3-1 |
| Cab air filters.....                               | 3-5 |
| In cab storage (where fitted).....                 | 3-6 |
| Cable and wiring routing.....                      | 3-7 |
| Mobile telephone usage.....                        | 3-7 |
| Implement monitor installation.....                | 3-8 |
| Cab air pressurisation control (where fitted)..... | 3-8 |

### OPERATOR'S SEAT

|                                                                       |      |
|-----------------------------------------------------------------------|------|
| Operator's seat.....                                                  | 3-10 |
| Air suspension seat deluxe.....                                       | 3-11 |
| Air suspension seat with passive or Dynamic Damping System (DDS)..... | 3-15 |
| Air suspension seat 'evolution active'.....                           | 3-21 |

---

|                 |      |
|-----------------|------|
| Seat belt ..... | 3-27 |
|-----------------|------|

## INSTRUCTOR'S SEAT

|                          |      |
|--------------------------|------|
| Instructional seat ..... | 3-28 |
|--------------------------|------|

## FORWARD CONTROLS

|                                            |      |
|--------------------------------------------|------|
| Ignition key .....                         | 3-29 |
| Hazard light switch .....                  | 3-29 |
| Lights and turn indicator lever .....      | 3-30 |
| Follow me home lights.....                 | 3-30 |
| Windshield wiper and washer controls ..... | 3-31 |
| Electronic parking brake.....              | 3-32 |
| Clutch pedal .....                         | 3-36 |
| Foot brakes.....                           | 3-36 |
| Exhaust brake (where fitted) .....         | 3-37 |
| Steering column .....                      | 3-38 |

## LEFT-HAND SIDE CONTROLS

|                  |      |
|------------------|------|
| Hand brake ..... | 3-39 |
|------------------|------|

## RIGHT-HAND SIDE CONTROLS

|                                |      |
|--------------------------------|------|
| Integrated control panel ..... | 3-40 |
| Multi function handle .....    | 3-41 |

## REARWARD CONTROLS

|                                           |      |
|-------------------------------------------|------|
| Switches on C-pillar .....                | 3-42 |
| Hydraulic master switch .....             | 3-43 |
| Heated screens (where fitted).....        | 3-44 |
| Autoguidance system (where fitted).....   | 3-45 |
| ISO bus functionality .....               | 3-45 |
| Battery isolator control switch .....     | 3-46 |
| Climate controls .....                    | 3-47 |
| Manual temperature control .....          | 3-48 |
| Automatic Temperature Control (ATC) ..... | 3-49 |

## OVERHEAD CONTROLS

|                                                           |      |
|-----------------------------------------------------------|------|
| Switch panel .....                                        | 3-50 |
| Left-hand and right-hand outermost work light switch..... | 3-51 |
| Interior light .....                                      | 3-52 |

## INSTRUMENT CLUSTER

|                                                |      |
|------------------------------------------------|------|
| Analog Digital Instrument Cluster (ADIC) ..... | 3-53 |
| Gauges .....                                   | 3-54 |
| Indicator and warning lights .....             | 3-55 |
| Displays .....                                 | 3-57 |
| Transmission display .....                     | 3-60 |
| Keypad enhanced .....                          | 3-61 |

---

|                                                                        |      |
|------------------------------------------------------------------------|------|
| Selecting or changing the display settings .....                       | 3-63 |
| Ground speed calibration.....                                          | 3-64 |
| Performance monitor .....                                              | 3-67 |
| Armrest color display .....                                            | 3-72 |
| Pop-up screens on color display .....                                  | 3-73 |
| Performance monitor on color display.....                              | 3-78 |
| Programming the displays.....                                          | 3-83 |
| Alarm functions .....                                                  | 3-86 |
| Accessing stored error codes .....                                     | 3-88 |
| Selective Catalytic Reduction (SCR) exhaust treatment - Overview ..... | 3-89 |
| Warning and advisory symbols .....                                     | 3-98 |

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

|                             |     |
|-----------------------------|-----|
| Refueling the tractor ..... | 4-1 |
|-----------------------------|-----|

### STARTING THE UNIT

|                                                |     |
|------------------------------------------------|-----|
| Starting the engine .....                      | 4-3 |
| Grid heater cold start aid (where fitted)..... | 4-4 |
| Fuel heater (where fitted).....                | 4-5 |
| Coolant immersion heater (where fitted) .....  | 4-5 |
| Transmission oil heater (where fitted) .....   | 4-6 |
| Boosting the battery .....                     | 4-7 |

### STOPPING THE UNIT

|                                                                      |     |
|----------------------------------------------------------------------|-----|
| Stopping the engine .....                                            | 4-8 |
| Automatic engine shut down .....                                     | 4-8 |
| Automatic engine shut down with enhanced keypad (where fitted) ..... | 4-9 |

### MOVING THE UNIT

|                                     |      |
|-------------------------------------|------|
| Operating in cold temperatures..... | 4-10 |
| Low idle speed management.....      | 4-12 |
| Reversible engine fan .....         | 4-13 |

## 5 TRANSPORT OPERATIONS

### PREPARING FOR ROAD TRANSPORT

|                                             |     |
|---------------------------------------------|-----|
| Carrying the tractor on a transporter ..... | 5-1 |
| Secure the high visibility roof panel ..... | 5-1 |

### RECOVERY TRANSPORT

|                              |     |
|------------------------------|-----|
| Freeing a stuck tractor..... | 5-2 |
| Towing the tractor.....      | 5-3 |

## 6 WORKING OPERATIONS

### GENERAL INFORMATION

|                                            |      |
|--------------------------------------------|------|
| Variable engine power management .....     | 6-1  |
| Constant engine speed .....                | 6-3  |
| Differential lock .....                    | 6-6  |
| Four wheel drive .....                     | 6-8  |
| Front axle suspension (where fitted) ..... | 6-10 |
| HTS standard .....                         | 6-11 |
| Quick guide .....                          | 6-11 |
| Explanation of symbols .....               | 6-13 |
| Recording and replaying .....              | 6-15 |
| Recording a sequence .....                 | 6-18 |
| Replaying a sequence .....                 | 6-20 |
| HTS advanced .....                         | 6-24 |
| Headland turn sequence .....               | 6-24 |
| Explanation of symbols .....               | 6-25 |
| Recording a sequence .....                 | 6-26 |
| Replaying a sequence .....                 | 6-30 |
| Saving a sequence .....                    | 6-33 |
| Edit a sequence .....                      | 6-36 |
| Recalling a sequence .....                 | 6-40 |
| Deleting a sequence .....                  | 6-44 |

### TRANSMISSION

|                                                   |      |
|---------------------------------------------------|------|
| Foot throttle pedal .....                         | 6-47 |
| Hand throttle .....                               | 6-47 |
| Shuttle lever .....                               | 6-48 |
| Sharp shuttle setting .....                       | 6-51 |
| Fault codes .....                                 | 6-52 |
| SEMI POWERSHIFT TRANSMISSION .....                | 6-53 |
| Transmission operation .....                      | 6-53 |
| Powershift control lever .....                    | 6-54 |
| Driving the tractor .....                         | 6-55 |
| Speed matching .....                              | 6-58 |
| Auto shift function .....                         | 6-59 |
| Auto shifting field mode .....                    | 6-60 |
| Auto shifting in road mode .....                  | 6-63 |
| Setting the forward and reverse gear ratios ..... | 6-66 |
| Creeper gears (where fitted) .....                | 6-67 |
| FULL POWERSHIFT TRANSMISSION .....                | 6-68 |
| Transmission operation .....                      | 6-68 |
| Powershift control lever .....                    | 6-69 |
| Driving the tractor .....                         | 6-70 |
| Speed matching .....                              | 6-72 |
| Auto shift function .....                         | 6-73 |
| Auto shifting field mode .....                    | 6-74 |
| Auto shifting in road mode .....                  | 6-77 |
| Setting the forward and reverse gear ratios ..... | 6-80 |
| Creeper gears (where fitted) .....                | 6-81 |

---

## REAR POWER TAKE-OFF

|                                                  |      |
|--------------------------------------------------|------|
| Power Take-Off (PTO) operating precautions ..... | 6-82 |
| Attaching PTO driven equipment .....             | 6-82 |
| Power Take-Off (PTO) operation .....             | 6-84 |
| Two speed PTO systems .....                      | 6-88 |
| External PTO controls .....                      | 6-90 |
| Auto PTO operation .....                         | 6-92 |

## FRONT POWER TAKE OFF

|                                      |      |
|--------------------------------------|------|
| Power Take-Off (PTO) operation ..... | 6-95 |
| Auto PTO operation .....             | 6-97 |

## REAR HITCH

|                                                |       |
|------------------------------------------------|-------|
| Electronic Draft Control (EDC) .....           | 6-99  |
| Settings and display .....                     | 6-103 |
| Electronic Draft Control (EDC) operation ..... | 6-105 |
| External hitch controls .....                  | 6-110 |

## FRONT HITCH

|                                               |       |
|-----------------------------------------------|-------|
| Settings and adjustments .....                | 6-112 |
| Front hitch operation .....                   | 6-115 |
| Auxiliary front couplers (where fitted) ..... | 6-120 |
| External hitch controls .....                 | 6-122 |

## ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

|                                                                 |       |
|-----------------------------------------------------------------|-------|
| Remote control valves .....                                     | 6-123 |
| Settings and adjustments .....                                  | 6-130 |
| Setting the remote valve priority .....                         | 6-135 |
| Creating timer programs .....                                   | 6-136 |
| Connecting remote cylinders .....                               | 6-143 |
| Operating with remote valves .....                              | 6-145 |
| Joystick operation with a front loader .....                    | 6-147 |
| Mid mount remote valves .....                                   | 6-154 |
| EHR implement control setting .....                             | 6-155 |
| External EHR controls .....                                     | 6-159 |
| Hydraulic oil level when using remote hydraulic equipment ..... | 6-160 |

## HYDRAULIC POWER BEYOND PORT

|                                                                                                 |       |
|-------------------------------------------------------------------------------------------------|-------|
| Hydraulic power beyond for external services with electro-hydraulic remote control valves ..... | 6-162 |
|-------------------------------------------------------------------------------------------------|-------|

## THREE POINT HITCH

|                                             |       |
|---------------------------------------------|-------|
| Attaching three-point hitch equipment ..... | 6-165 |
| Lift rod adjustment .....                   | 6-167 |
| Top link adjustment .....                   | 6-170 |
| Flexible link end adjustment .....          | 6-171 |

---

|                                     |       |
|-------------------------------------|-------|
| Quick hitch .....                   | 6-172 |
| Linkage stabilizer adjustment ..... | 6-174 |

## **DRAWBARS AND TOWING ATTACHMENTS**

|                                       |       |
|---------------------------------------|-------|
| Drawbars and towing attachments ..... | 6-177 |
| Swinging drawbar .....                | 6-180 |

## **TRAILER BRAKING SYSTEMS**

|                                                     |       |
|-----------------------------------------------------|-------|
| Air-operated trailer brakes .....                   | 6-183 |
| Trailer brake bias control .....                    | 6-186 |
| Auxiliary air supply connector (where fitted) ..... | 6-186 |
| Hydraulic trailer brakes .....                      | 6-187 |

## **WHEEL TRACK ADJUSTMENT**

|                                       |       |
|---------------------------------------|-------|
| Front wheel track adjustment .....    | 6-188 |
| Front wheel alignment .....           | 6-192 |
| Steering stops .....                  | 6-193 |
| Front axle oscillation stops .....    | 6-193 |
| Front fender .....                    | 6-194 |
| REAR WHEEL TRACK ADJUSTMENT .....     | 6-196 |
| Flange type axle (where fitted) ..... | 6-196 |
| Bar type axle (where fitted) .....    | 6-199 |
| Dual rear wheels (where fitted) ..... | 6-205 |

## **BALLASTING AND TIRES**

|                                            |       |
|--------------------------------------------|-------|
| Ballasting and tires .....                 | 6-208 |
| Iron weights (where fitted) .....          | 6-211 |
| Liquid ballast .....                       | 6-214 |
| Tire inflation .....                       | 6-216 |
| Tire pressures and permissible loads ..... | 6-217 |

## **AUXILIARY POWER CONNECTIONS**

|                                   |       |
|-----------------------------------|-------|
| Diagnostic socket .....           | 6-219 |
| Trailer socket electrical .....   | 6-219 |
| ELECTRICAL POWER CONNECTORS ..... | 6-220 |
| Internal power connectors .....   | 6-220 |
| External power connectors .....   | 6-222 |
| ISO bus classes .....             | 6-224 |
| ISO bus functionality .....       | 6-226 |

## **7 MAINTENANCE**

### **GENERAL INFORMATION**

|                                              |     |
|----------------------------------------------|-----|
| Introduction .....                           | 7-1 |
| Fuel requirement - Diesel fuel .....         | 7-2 |
| Fuel - Storage, handling and transport ..... | 7-2 |
| Biodiesel fuel - Biodiesel fuels .....       | 7-3 |
| Change the engine oil .....                  | 7-5 |

---

|                                             |      |
|---------------------------------------------|------|
| Protective devices .....                    | 7-6  |
| Tractor jacking points .....                | 7-8  |
| Lubricants and coolants .....               | 7-9  |
| General specifications .....                | 7-10 |
| Capacities .....                            | 7-11 |
| Organic Acid Technology (OAT) coolant ..... | 7-12 |

## MAINTENANCE CHART

|                         |      |
|-------------------------|------|
| Maintenance chart ..... | 7-13 |
|-------------------------|------|

## WHEN THE WARNING LAMP LIGHTS

|                                                   |      |
|---------------------------------------------------|------|
| Change the engine air cleaner outer element ..... | 7-15 |
| Drain the fuel system water separator .....       | 7-16 |
| Check the brake fluid level .....                 | 7-17 |

## EVERY 10 HOURS OR EACH DAY

|                                                         |      |
|---------------------------------------------------------|------|
| Check the engine coolant level .....                    | 7-18 |
| Checking the engine oil level .....                     | 7-19 |
| Check the remote control valve drain bottles .....      | 7-20 |
| Check windscreen washer reservoir .....                 | 7-21 |
| Drain air reservoir on air operated trailer brake ..... | 7-21 |

## FIRST 50 HOURS

|                          |      |
|--------------------------|------|
| Service operations ..... | 7-22 |
|--------------------------|------|

## EVERY 50 HOURS

|                                                       |      |
|-------------------------------------------------------|------|
| Clean the cab air filter .....                        | 7-24 |
| Clean the SCR cover air ducts .....                   | 7-25 |
| Clean the cooler section .....                        | 7-26 |
| All grease fittings .....                             | 7-27 |
| Check the front and the rear wheel nuts .....         | 7-34 |
| Check the tire pressures and the tire condition ..... | 7-34 |

## EVERY 100 HOURS

|                                         |      |
|-----------------------------------------|------|
| Inspect the poly V-belt .....           | 7-35 |
| Inspect the compressor drive belt ..... | 7-35 |

## EVERY 300 HOURS

|                                                                                            |      |
|--------------------------------------------------------------------------------------------|------|
| Check the battery fluid level .....                                                        | 7-37 |
| Adjust the hand brake .....                                                                | 7-39 |
| Check the transmission oil level, the rear axle oil level and the hydraulic oil level .... | 7-40 |
| Check the 4WD front axle differential oil level and the hubs oil level .....               | 7-41 |
| Check the front PTO gearbox oil level .....                                                | 7-42 |

## EVERY 600 HOURS

|                                                                      |      |
|----------------------------------------------------------------------|------|
| Change engine oil and filter .....                                   | 7-43 |
| Change the first stage fuel filter and the fuel filter element ..... | 7-45 |
| Change the engine air cleaner outer element .....                    | 7-47 |

---



|                                                        |      |
|--------------------------------------------------------|------|
| Change the hydraulic charge pump oil filter .....      | 7-48 |
| Check the engine air intake connections .....          | 7-49 |
| Check the transmission oil cooler pipe couplings ..... | 7-50 |
| Clean the DEF/AdBlue in-line filter .....              | 7-50 |

## EVERY 1200 HOURS OR ANNUALLY

|                                                    |      |
|----------------------------------------------------|------|
| Change the cab air filters .....                   | 7-51 |
| Change the hydraulic suction pump oil filter ..... | 7-52 |
| Change the 4WD differential oil .....              | 7-53 |
| Change the 4WD planetary hub oil .....             | 7-54 |
| Change the front PTO gearbox oil .....             | 7-55 |
| Grease the rear axle shaft bearing .....           | 7-55 |

## EVERY 1200 HOURS OR EVERY 2 YEARS

|                                                                            |      |
|----------------------------------------------------------------------------|------|
| Change the DEF/AdBlue in-line filter .....                                 | 7-56 |
| Change the engine air cleaner inner element .....                          | 7-57 |
| Check the valve tappet clearance .....                                     | 7-58 |
| Change the air brake drier reservoir .....                                 | 7-58 |
| Change the poly V-belts .....                                              | 7-59 |
| Change the transmission oil, the rear axle oil and the hydraulic oil ..... | 7-62 |

## EVERY 2 YEARS

|                                                  |      |
|--------------------------------------------------|------|
| Change the air conditioning receiver drier ..... | 7-63 |
|--------------------------------------------------|------|

## EVERY 1800 HOURS OR EVERY 2 YEARS

|                                         |      |
|-----------------------------------------|------|
| Change the engine breather filter ..... | 7-64 |
|-----------------------------------------|------|

## EVERY 3600 HOURS OR EVERY 2 YEARS

|                                         |      |
|-----------------------------------------|------|
| Change the DEF/AdBlue main filter ..... | 7-65 |
|-----------------------------------------|------|

## EVERY 3600 HOURS OR EVERY 4 YEARS

|                                                          |      |
|----------------------------------------------------------|------|
| Change the engine coolant fluid - OAT type coolant ..... | 7-66 |
|----------------------------------------------------------|------|

## GENERAL MAINTENANCE

|                                                                                        |      |
|----------------------------------------------------------------------------------------|------|
| Cleaning the tractor .....                                                             | 7-70 |
| Check first stage fuel filter and water trap .....                                     | 7-72 |
| Bleeding the fuel system .....                                                         | 7-73 |
| Hydraulic system hoses .....                                                           | 7-74 |
| Check the brake pedal latching/unlatching .....                                        | 7-74 |
| Adjust the cab suspension (where fitted) .....                                         | 7-75 |
| Headlight adjustment .....                                                             | 7-76 |
| Work light adjustment .....                                                            | 7-76 |
| Bulb replacement .....                                                                 | 7-77 |
| Fuses and relays .....                                                                 | 7-80 |
| Protecting the electronic and electrical systems during battery charging or welding .. | 7-88 |

---

|                                        |      |
|----------------------------------------|------|
| Battery removal and installation ..... | 7-89 |
|----------------------------------------|------|

## STORAGE

|                                         |      |
|-----------------------------------------|------|
| Tractor storage .....                   | 7-90 |
| Preparation for use after storage ..... | 7-91 |

## 8 TROUBLESHOOTING

### FAULT CODE RESOLUTION

|                    |     |
|--------------------|-----|
| Introduction ..... | 8-1 |
|--------------------|-----|

### ALARM(S)

|                               |     |
|-------------------------------|-----|
| Fault codes and symbols ..... | 8-2 |
|-------------------------------|-----|

### SYMPTOM(S)

|                         |     |
|-------------------------|-----|
| Engine .....            | 8-4 |
| Transmission .....      | 8-5 |
| Hydraulics .....        | 8-6 |
| Three-point hitch ..... | 8-6 |
| Brakes .....            | 8-7 |
| Cab .....               | 8-7 |
| Electrical system ..... | 8-8 |

## 9 SPECIFICATIONS

|                                                       |      |
|-------------------------------------------------------|------|
| General dimensions .....                              | 9-1  |
| Maximum operating angle .....                         | 9-4  |
| Maximum permissible operating weights .....           | 9-5  |
| Tractor weights .....                                 | 9-5  |
| Capacities .....                                      | 9-6  |
| Engine .....                                          | 9-7  |
| Fuel system .....                                     | 9-7  |
| Air cleaner system .....                              | 9-8  |
| Cooling system .....                                  | 9-8  |
| Transmission .....                                    | 9-8  |
| Rear Power Take-Off (PTO) .....                       | 9-9  |
| Front Power Take-Off (PTO) .....                      | 9-9  |
| Hydraulic system .....                                | 9-10 |
| Three-point hitch .....                               | 9-10 |
| Remote control valves .....                           | 9-12 |
| Three-point hitch front .....                         | 9-12 |
| Front remote control valve couplers .....             | 9-12 |
| Brakes .....                                          | 9-13 |
| Steering .....                                        | 9-13 |
| Electrical equipment .....                            | 9-14 |
| Ground speed chart Semi-Powershift transmission ..... | 9-15 |
| Ground speed chart Full-Powershift transmission ..... | 9-18 |
| Minimum hardware tightening torques .....             | 9-21 |

## 10 ACCESSORIES

|                                                 |      |
|-------------------------------------------------|------|
| Radio (where fitted).....                       | 10-1 |
| External rear view mirrors .....                | 10-1 |
| Auxiliary head lights and signature lights..... | 10-3 |
| Rotating beacon .....                           | 10-4 |
| Front-end loader fixation points .....          | 10-5 |

## 11 FORMS AND DECLARATIONS

|                                               |      |
|-----------------------------------------------|------|
| Service record 1st 50 hour, Owner copy .....  | 11-1 |
| Service record 1st 50 hour, Dealer copy ..... | 11-3 |

# 1 - GENERAL INFORMATION

## Metric and imperial units abbreviations

| Typical applications                | Metric unit            |        | Imperial unit         |                    |
|-------------------------------------|------------------------|--------|-----------------------|--------------------|
|                                     | Name                   | Symbol | Name                  | Symbol             |
|                                     |                        |        |                       |                    |
| Area (Land area)                    |                        |        |                       |                    |
|                                     | hectare                | ha     | acre                  | ac                 |
|                                     | square meter           | m²     | square foot           | ft²                |
|                                     |                        |        | square inch           | in²                |
|                                     | square millimeter      | mm²    | square inch           | in²                |
| Electricity                         |                        |        |                       |                    |
|                                     | ampere                 | A      | ampere                | A                  |
|                                     | volt                   | V      | volt                  | V                  |
|                                     | microfarad             | µF     | microfarad            | µF                 |
|                                     | ohm                    | Ω      | ohm                   | Ω                  |
| Force                               |                        |        |                       |                    |
|                                     | kilonewton             | kN     | pound                 | lb                 |
|                                     | newton                 | N      | pound                 | lb                 |
| Force per length                    |                        |        |                       |                    |
|                                     | newton per meter       | N/m    | pound per foot        | lb/ft              |
|                                     |                        |        | pound per inch        | lb/in              |
| Frequency                           |                        |        |                       |                    |
|                                     | megahertz              | MHz    | megahertz             | MHz                |
|                                     | kilohertz              | kHz    | kilohertz             | kHz                |
|                                     | hertz                  | Hz     | hertz                 | Hz                 |
| Frequency – Rotational              |                        |        |                       |                    |
|                                     | revolution per minute  | r/min  | revolution per minute | r/min <sup>a</sup> |
|                                     |                        | rpm    |                       | rpm                |
| Length                              |                        |        |                       |                    |
|                                     | kilometer              | km     | mile                  | mi                 |
|                                     | meter                  | m      | foot                  | ft                 |
|                                     | centimeter             | cm     | inch                  | in                 |
|                                     | millimeter             | mm     | inch                  | in                 |
|                                     | micrometer             | µm     |                       |                    |
| Mass                                |                        |        |                       |                    |
|                                     | kilogram               | kg     | pound                 | lb                 |
|                                     | gram                   | g      | ounce                 | oz                 |
|                                     | milligram              | mg     |                       |                    |
| Mass per mass                       |                        |        |                       |                    |
|                                     | milligram per kilogram | mg/ kg | parts per million     | ppm                |
| Power                               |                        |        |                       |                    |
|                                     | kilowatt               | kW     | horsepower            | Hp                 |
|                                     | watt                   | W      | Btu per hour          | Btu/hr             |
|                                     |                        |        | Btu per minute        | Btu/min            |
| Pressure or stress (Force per area) |                        |        |                       |                    |
|                                     | kilopascal             | kPa    | pound per square inch | psi                |
|                                     |                        |        | inch of mercury       | inHg               |
|                                     | pascal                 | Pa     | inch of water         | inH2O              |
|                                     | megapascal             | MPa    | pound per square inch | psi                |
|                                     | millibar               | mbar   |                       |                    |
|                                     | bar                    | bar    |                       |                    |

## 1 - GENERAL INFORMATION

| Typical applications                                                      | Metric unit            |                     | Imperial unit         |                      |
|---------------------------------------------------------------------------|------------------------|---------------------|-----------------------|----------------------|
|                                                                           | Name                   | Symbol              | Name                  | Symbol               |
| Temperature (other than thermodynamic)                                    |                        |                     |                       |                      |
|                                                                           | degrees Celsius        | °C                  | degrees Fahrenheit    | °F                   |
| Time                                                                      |                        |                     |                       |                      |
|                                                                           | hour                   | h                   | hour                  | h                    |
|                                                                           | minute                 | min                 | minute                | min                  |
|                                                                           | second                 | s                   | second                | s                    |
| Torque (includes bending moment, moment of force, and moment of a couple) |                        |                     |                       |                      |
|                                                                           | newton meter           | N m                 | pound foot            | lb ft                |
|                                                                           |                        |                     | pound foot            | lb in                |
| Velocity                                                                  |                        |                     |                       |                      |
|                                                                           | kilometer per hour     | km/h                | mile per hour         | mph                  |
|                                                                           | meter per second       | m/s                 | foot per second       | ft/s                 |
|                                                                           | millimeter per second  | mm/s                | inch per second       | in/s                 |
|                                                                           | meter per minute       | m/min               | foot per minute       | ft/min               |
| Volume (includes capacity)                                                |                        |                     |                       |                      |
|                                                                           | cubic meter            | m <sup>3</sup>      | cubic yard            | yd <sup>3</sup>      |
|                                                                           |                        |                     |                       | cu yd                |
|                                                                           | liter                  | l                   | cubic inch            | in <sup>3</sup>      |
|                                                                           | liter                  | l                   | US gallon             | US gal               |
|                                                                           |                        |                     | UK gallon             | UK gal               |
|                                                                           |                        |                     | US quart              | US qt                |
|                                                                           |                        |                     | UK quart              | UK qt                |
|                                                                           | milliliter             | ml                  | fluid ounce           | fl oz                |
| Volume per time (includes discharge and flow rate)                        |                        |                     |                       |                      |
|                                                                           | cubic meter per minute | m <sup>3</sup> /min | cubic foot per minute | ft <sup>3</sup> /min |
|                                                                           | liter per minute       | l/min               | US gallon per minute  | US gal/min           |
|                                                                           | milliliter per minute  | ml/min              | UK gallon per minute  | UK gal/min           |
| Sound power level and sound pressure level                                |                        |                     |                       |                      |
|                                                                           | decibel                | dB                  | decibel               | dB                   |
| Water hardness                                                            |                        |                     |                       |                      |
|                                                                           | German hardness        | °dH                 | English hardness      | °e                   |
|                                                                           | French hardness        | °fH                 | parts per million     | ppm                  |

## Glossary

| Acronym | Definition                                     |
|---------|------------------------------------------------|
| DEF     | Diesel Exhaust Fluid                           |
| ISO     | International Organization for Standardization |
| MSDS    | Material Safety Data Sheet                     |
| NOx     | Nitrogen Oxide                                 |
| PPE     | Personal Protective Equipment                  |
| SCR     | Selective Catalytic Reduction                  |
| ULSD    | Ultra Low Sulfur Diesel                        |
| %       | Percent                                        |
| <       | Less than                                      |
| >       | Greater than                                   |

## To the owner

### General information

This Manual has been prepared to assist you in the correct procedure for running- in, driving and operating and for the maintenance of your new tractor. Read this Manual carefully. Your tractor is intended for use in normal and customary agricultural applications.

If at any time you require advice concerning your tractor, do not hesitate to contact your authorized dealer. He has factory trained personnel, genuine manufacturers' parts and the necessary equipment to carry out all your service requirements.

The specification are provided for your information and guidance. For further information concerning your tractor and equipment, consult your authorized dealer.

All data given in this manual is subject to production variations. Dimensions and weight are approximate only. The illustrations do not necessarily show tractors in standard condition or imply that these features are available in all countries. For exact information about any particular tractor, please consult your authorized dealer.

Your tractor has been designed and built to give maximum performance, economy and ease of operation under a wide variety of operating conditions. Prior to delivery, the tractor was carefully inspected, both at the factory and by your dealer to ensure that it reaches you in optimum condition. To maintain this condition and ensure trouble-free operation, it is important that the routine services, as specified on page 7-13 of this manual, are carried out at the recommended intervals.

### About this manual

This manual gives information for use of your machine, as intended and under the conditions foreseen by the manufacturer during normal operation and routine service and maintenance.

Read and understand; keep it in good condition and always safely store it in the provided pocket in the back of your seat for later easy retrieval.

This manual does not contain all the information related to periodical service, converting and repairs to be carried out by professional service personnel.

The Table of Contents page(s) are provided to have an overview of main manual's topics. A detailed alphabetic index is available at the end of this manual for locating specific items.

### Normal operation

- Normal operation means the use of the tractor for the purpose intended by the manufacturer by an operator familiar with the tractor and the mounted or towed equipment and complying with the information for op-

eration and safe practices, as specified by the manufacturer in this manual and by the decals on the tractor and the equipment.

- Normal operation includes the preparation and storage of the tractor, swinging components into work position and vice versa, adding or removing ballast and picking up and setting off attachments.
- Normal operation includes the adjustment and setting of the tractor and equipment, for the specific condition of the field and/or the crop.

### Routine service

- Routine service and maintenance means activities that must be done daily by an operator familiar with the tractor characteristics and complying with the information for routine service and safe practices, as specified by the manufacturer in this manual and by decals on the tractor, in order to maintain its proper function. Routine service includes activities such as fueling, cleaning, washing, topping up fluid levels, greasing, replacing of consumable articles such as lamp bulbs.

### Converting, periodical service and repair

- Periodical service means activities that must be done at defined intervals by trained personnel familiar with the tractor characteristics and which are complying with the information for periodical service and safe practices, as partly specified by the manufacturer in this manual and in other Company literature, in order to maintain the expected life time of the tractor.
- Converting means activities that must be done by professional service personnel familiar with the tractor characteristics and complying with the information for converting, as partly specified by the manufacturer in this manual, in assembly instructions or in other Company literature, in order to fit the tractor to a specific configuration.
- Repair means activities that must be done by professional service personnel only familiar with the tractor characteristics and complying with the information for repair, as specified by the manufacturer in the dealer's workshop manual, in order to restore the proper function of the tractor after a failure or degradation of performance.

### Cleaning the tractor

Your tractor is a state- of- the- art machine with sophisticated, electronic controls. This should be taken into consideration when cleaning the tractor, particularly if using a high pressure washer. Even though every precaution has been taken to safeguard electronic components and connections, the pressure generated by some of these machines is such that complete protection against water ingress cannot be guaranteed.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)