

ORIGINAL INSTRUCTIONS

# OPERATOR'S MANUAL

---

**T4.65**

**T4.75**

**Powerstar™ - Tractor**

*PIN ZDAH00008 and above*

**Part number 47955162**

5<sup>th</sup> edition English

January 2016

*Replaces part number 47876011*



# Contents

---

## 1 GENERAL INFORMATION

Note to the Owner .....	1-1
Proposition 65 .....	1-3
Electromagnetic interference (EMC) .....	1-4
International symbols .....	1-5
Introduction .....	1-7
Operator's manual storage .....	1-8
Intended use .....	1-9
Ecology and the Environment .....	1-11
Identification plates .....	1-12

## 2 SAFETY INFORMATION

Safety rules and signal word definitions .....	2-1
Safety rules - General information .....	2-2
Safety rules – Maintenance .....	2-3
Safety rules - Wheels and tires .....	2-4
Safety rules – Explosions and fires .....	2-5
Safety rules - Fire extinguisher .....	2-5
Safety rules – Battery .....	2-6
Safety rules - Seat belts .....	2-6
Safety rules - Operator protective structure .....	2-7
Safety rules - HVAC system .....	2-9
Safety rules - Personal Protective Equipment (PPE) .....	2-9
Safety rules - "Do not use" sign .....	2-9
Safety rules - Hazardous chemicals .....	2-10
Safety rules - Near utilities .....	2-10
Safety rules - In the event of electrical storms .....	2-11
Safety rules – Mounting and dismounting the machine .....	2-11
Safety rules - Lifting and overhead loads .....	2-11
Ecology and the environment .....	2-12
Towing the tractor for recovery .....	2-13
Tractor jacking points .....	2-14
Burn prevention .....	2-15
Fire and explosion prevention .....	2-16
Mounting and dismounting .....	2-17
Safety signs .....	2-18

## 3 CONTROLS AND INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

Mounting and dismounting .....	3-1
Getting to know the internal parts of the cab .....	3-3
Rear-view outside mirrors - Localization overview .....	3-6
Clock adjustment .....	3-7

---

## OPERATOR'S SEAT

Operator seat .....	3-8
Air seat .....	3-9
Seat belt .....	3-11

## INSTRUCTOR'S SEAT

Instructor's seat .....	3-12
-------------------------	------

## FORWARD CONTROLS

Instrument panel .....	3-13
Front controls .....	3-18
Service brakes .....	3-21

## LEFT-HAND SIDE CONTROLS

Console Left-hand console - Localization overview .....	3-22
Hand brake lever - Operating (If fitted) .....	3-22

## RIGHT-HAND SIDE CONTROLS

Version with cab .....	3-23
Cableless version .....	3-25
Parking brake or parking lock - Operating .....	3-26
Heating, ventilation or air-conditioning control .....	3-27

## Power sockets

Electrical systems - Localization overview .....	3-29
--	------

## Settings and display

Instrument cluster Analog-Digital Instrument Cluster (ADIC) - Program .....	3-30
Instrument cluster - Program .....	3-31
Ground speed calibration .....	3-33
Programming maintenance work .....	3-36
Activating/deactivating buzzer .....	3-38
Setting units of measurement .....	3-39
Particulate Matter Catalyst .....	3-40
Resetting the oil change counter .....	3-45
Viewing error codes .....	3-46

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

Basic operating safety rules .....	4-1
Refueling .....	4-2

### STARTING THE UNIT

Starting the engine .....	4-3
---------------------------	-----

---

## STOPPING THE UNIT

Stopping the engine .....	4-5
---------------------------	-----

## MOVING THE UNIT

Machine movement start-up .....	4-6
Installing the loader .....	4-6
Removing the loader .....	4-8
Installing the bucket .....	4-9
Removing the bucket .....	4-11

## 5 TRANSPORT OPERATIONS

### ROAD TRANSPORT

Tractor transporting .....	5-1
----------------------------	-----

### RECOVERY TRANSPORT

Towing the tractor .....	5-2
--------------------------	-----

## 6 WORKING OPERATIONS

### Transmission

Transmission operation .....	6-1
------------------------------	-----

### FOUR WHEEL DRIVE (4WD)

Four-wheel drive with mechanical engagement .....	6-3
Four-wheel drive with electro-hydraulic control .....	6-5

### DIFFERENTIAL LOCK

Mechanical differential lock .....	6-6
------------------------------------	-----

### REAR POWER TAKE-OFF (PTO)

Safety rules .....	6-7
Attaching Power-Take Off (PTO) driven equipment .....	6-8
Power take-off speeds .....	6-9
Power Take Off (PTO) .....	6-10
Mechanically controlled power take-off .....	6-11

### REAR REMOTE CONTROL VALVE(S)

Remote control valves - Safety rules .....	6-12
Operation .....	6-13

### REAR HYDRAULIC LIFT

General .....	6-15
Hydraulic lift with mechanical control .....	6-16
Lift-O-Matic® control - Operating .....	6-18

---

## Three-point hitch

Rear three-point hitch - Operating .....	6-20
Additional equipment attachment points .....	6-23

## Front loader

Machine stability .....	6-24
Recommendations for working in safety .....	6-25
Joystick operation .....	6-26
Bucket level indicator rod installation .....	6-27
Loader operations .....	6-27

## TOWBAR

Safety rules .....	6-32
Towbar .....	6-33

## WHEELS AND TIRES

Safety rules .....	6-34
Tire dimensions .....	6-38
Adjustment of the front tracks .....	6-40
Disc-to-rim coupling for front 4WD tires .....	6-42
Adjustment of the front mudguards .....	6-43
Adjustment of the steering angles .....	6-45
Front tracks diagram .....	6-46
Rear tracks diagram .....	6-48

## BALLAST

Safety rules .....	6-49
Metal ballast .....	6-50
Liquid Ballast .....	6-51

## 7 MAINTENANCE

### GENERAL INFORMATION

General safety before you service .....	7-1
Introduction .....	7-3
Various controls .....	7-4
Consumables .....	7-5
Capacities .....	7-6
Engine oil temperature chart - Recommended engine oil for operating temperature ranges .....	7-7
Organic Acid Technology (OAT) coolant .....	7-8
Biodiesel fuel - Biodiesel fuels .....	7-10
Front end loader maintenance .....	7-12
Body maintenance .....	7-13
Opening the hood .....	7-15

---

## MAINTENANCE CHART

Maintenance chart .....	7-16
-------------------------	------

### As necessary

Radiator - Check – Fluid level .....	7-18
Windshield washer fluid reservoir - Filling .....	7-18
Front light - Check .....	7-18
Hand brake lever - Check (If fitted) .....	7-19
Air conditioning - Check .....	7-19
Radiator - Cleaning .....	7-19
Brake pedals - Check .....	7-20
Wheels - Check .....	7-20

### AT WARNING MESSAGE DISPLAY

Air cleaner - Cleaning .....	7-21
Fuel filters - Drain fluid .....	7-21
Brake fluid reservoir - Filling .....	7-22

### Every 10 hours or daily

Engine - Check - Oil level .....	7-22
Front loader and bucket - Grease .....	7-23

### After the first 50 hours of operation

Maintenance - Tighten .....	7-24
Maintenance - Check .....	7-24
Maintenance - Replace .....	7-24
Maintenance - Cleaning .....	7-25
Maintenance - Test .....	7-25
Maintenance - Grease .....	7-25

### Every 50 hours

Rear three-point hitch linkage - Grease .....	7-25
Rear hitch - Grease - Mechanical lift .....	7-26
Axle articulation - Grease – (4WD) .....	7-27
Steering knuckle - Grease – (2WD) .....	7-28
Front axle - Grease – Pivot pin (2WD) .....	7-29
Steering cylinder - Grease – (2WD) .....	7-30

### Every 100 hours

Air-conditioning condenser - Cleaning .....	7-31
Transmission cooler - Cleaning .....	7-32
Cab air filters - Cleaning .....	7-33
Cab air filters - Cleaning - Recirculation Filters .....	7-34
Accessory belt - Check - Alternator belt .....	7-35
Compressor drive belt - Check - Air conditioner belt .....	7-36
Front loader and bucket - Check – bolts and nuts .....	7-37

---

## Every 300 hours

Lift oil filters - Replace .....	7-38
Transmission oil filter - Replace .....	7-39
Oil dipstick - Check .....	7-40
Air cleaner - Cleaning .....	7-41
Four-Wheel Drive (4WD) axle - Check – Oil level .....	7-42
Final drive - Check – Oil level (4WD) .....	7-43
Steering knuckle and king pin - Grease – (4WD) .....	7-44
Axle wheel hub - Grease – Bearing (2WD) .....	7-45

## Every 600 hours

Engine - Replace - Oil and filter .....	7-46
Fuel filters - Replace .....	7-48
Wheels - Tighten .....	7-50
Driving wheel shaft - Grease - Bearing (4WD) .....	7-51

## Every 1200 hours or annually

Cab air filters - Replace .....	7-52
Air filter Recirculation filter - Replace .....	7-53
Air cleaner - Replace .....	7-54
Fuel tank - Drain fluid .....	7-55
Blowby recirculation filter - Replace .....	7-56
Front loader and bucket - Check – Hoses .....	7-57

## Every 1200 hours or two years

Transmission drive housing - Change fluid .....	7-58
Four-Wheel Drive (4WD) axle - Change fluid .....	7-59
Final drive - Change fluid – (4WD) .....	7-60
Accessory belt - Replace - Alternator belt .....	7-61
Compressor drive belt - Replace - Air conditioner belt .....	7-62
Radiator - Change fluid - conventional type .....	7-63

## Every two years

Receiver/Dryer - Replace .....	7-65
--------------------------------	------

## Every 3600 hours or four years

Radiator - Change fluid - OAT type .....	7-65
--	------

## Electrical system

Battery - Check .....	7-68
Fuse and relay box - Check - Fuse compartment location .....	7-70
Fuse and relay box - Check – Fuses location .....	7-72
Front light - Adjust .....	7-82
Front light - Replace .....	7-83

---

## STORAGE

Storage .....	7-84
---------------	------

## 8 TROUBLESHOOTING

### FAULT CODE RESOLUTION

Engine - Troubleshooting .....	8-1
Electrical system - Troubleshooting ELECTRICAL SYSTEM .....	8-3
Hydraulic systems - Troubleshooting HYDRAULIC SYSTEM .....	8-4
Couplers - Troubleshooting .....	8-5
Rear three-point hitch - Troubleshooting .....	8-6
Hydraulic service brakes - Troubleshooting .....	8-7
Cab climate control - Troubleshooting .....	8-7
Front loader and bucket - Troubleshooting .....	8-8

### ALARM(S)

Alarms .....	8-9
Display warnings overview .....	8-10
SYMPTOM(S) .....	8-13
Error code identification .....	8-14
Fault code of digital instrument .....	8-14

## 9 SPECIFICATIONS

Dimensions and weights .....	9-1
Maximum permitted loads on front and rear axle .....	9-4
Speed table for 8 x 8 gearbox .....	9-5
Speed table for 8 x 8 gearbox with additional reducer (12 x 12) .....	9-6
12 x 12 transmission speed table .....	9-7
Speed table for 12 x 12 gearbox with additional reducer (20 x 20) .....	9-9
Technical data .....	9-11
Consumables .....	9-14
Capacities .....	9-15
Engine oil temperature chart - Recommended engine oil for operating temperature ranges .....	9-16
Loader specifications .....	9-17

## 10 ACCESSORIES

Radio .....	10-1
Single piece ballast .....	10-9

---



# 1 - GENERAL INFORMATION

## Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new machine. You have bought a reliable machine, which will ensure high performance and long-lasting service, if you maintain and use the machine correctly. Ensure that all operators read this manual carefully. Always leave this manual at the operators' disposal for immediate reference.

The NEW HOLLAND dealer will provide you with the general operating instructions for your new machine. Your dealer's service technicians were trained directly by the manufacturer. The service technicians will be able to provide any further clarification that you need regarding the operation of your machine.

The New Holland Top Service program is also available. Call 1-866-NEWHLND (1-866-639-4563) or email: [na.topservice@cnh.com](mailto:na.topservice@cnh.com).

Your NEW HOLLAND dealer has the full range of genuine NEW HOLLAND spare parts. These parts are manufactured and inspected carefully to ensure high quality and accurate fitting of all necessary spare parts. When ordering parts, you should give your dealer the model code and product identification number of your new machine. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model code and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model :
Product Identification Number (PIN):



Warning symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

### **⚠ WARNING**

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.**

**Replace all shields before operating the machine.**

**Failure to comply could result in death or serious injury.**

W0012A

The machine has been designed and built according to the highest standards of quality and it complies with all current safety regulations. However, the risk of accidents can never be completely excluded. That is why it is essential to observe elementary safety rules and precautions.

Read this manual carefully, paying particular attention to the instructions concerning safety, operation and maintenance so as to avoid the risk of injury while operating or servicing the machine.

Do not use this machine for any applications or purposes other than those described in this manual. If the machine is to be used for work involving the use of special attachments, accessories or equipment, consult your NEW HOLLAND Dealer in order to make sure that any adaptations or modifications made are in keeping with the machine's technical specifications and with prevailing safety requirements.

Any modification or adaptation which is not approved by the manufacturer may invalidate the machine's initial conformity with safety requirements.

The machine must undergo regular inspections, the frequency of which varies according to the type of use. Consult your authorized NEW HOLLAND dealer.

Always keep this manual in the operator's compartment (in the seat back, behind the operator's seat). Make sure it is always complete and in good condition. To receive extra copies of the manual or copies in languages other than that of your country of residence, please contact your NEW HOLLAND dealer.

**NOTICE:** *The information in this manual is provided based on the information that was available at the time the manual was written. Settings, procedures, part numbers, software and other items may change, which may affect the maintenance of the machine. Ensure that you have complete and current information from your dealer before you start any machine operation. All data given in this book is subject to production variations.*

### **Engine tampering statement:**

**ATTENTION:** *The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators, and users is strictly prohibited by law. Failure to comply with this prohibition could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

### **Product improvements**

CNH America LLC applies a policy of continuous product development and improvement. We reserve the right to make changes or improvements when possible, without incurring any obligation to make these changes or modifications to the products sold previously.

## Proposition 65

<b>CALIFORNIA Proposition 65 Warning</b>
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm. Battery posts, terminals and related accessories contain lead and lead compounds. Wash hands after handling.

## Electromagnetic interference (EMC)

Interference may arise as a result of add-on equipment that may not necessarily meet the required standards. As such interference can result in serious malfunction of the unit and/or create unsafe situations, you must observe the following:

- The maximum power of emission equipment (radio, telephones, etc.) must not exceed the limits imposed by the national authorities of the country where you use the machine
- The electro-magnetic field generated by the add-on system should not exceed **24 V/m** at any time and at any location in the proximity of electronic components
- The add-on equipment must not interfere with the functioning of the on board electronics

Failure to comply with these rules will render the NEW HOLLAND warranty null and void.

## International symbols

TYPICAL APPLICATIONS	RECOMMENDED SI (METRIC) UNITS		IMPERIAL UNIT	
	NAME	SYMBOL	NAME	SYMBOL
AREA				
	hectare	ha	acre	ha
	square meter	m²	square foot	ft²
			square inch	in²
	square millimetre	mm²	square inch	in²
ELECTRICITY				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	µF	microfarad	µF
	ohm	Ω	ohm	Ω
FORCE				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
FORCE PER LENGTH				
	Newton metres	Nm	pound inch	lb in
FREQUENCY				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
FREQUENCY - ROTATIONAL				
	revolution per minute	r/min	revolution per minute	r/min
		rpm		rpm
LENGTH				
	kilometre	km	mile	mi
	meter	m	foot	ft
	centimetre	cm	inch	in
	millimetre	mm	inch	in
	micrometer	µm		
MASS				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
POWER				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu/hour	Btu/hr
			Btu/minute	Btu/min
PRESSURE or STRESS (FORCE PER AREA)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH2O
	megapascal	MPa	pound per square inch	psi

# 1 - GENERAL INFORMATION

TYPICAL APPLICATIONS	RECOMMENDED SI (METRIC) UNITS		IMPERIAL UNIT	
	NAME	SYMBOL	NAME	SYMBOL
TEMPERATURE (other than THERMODYNAMIC)				
	degrees Celsius	°C	degrees Fahrenheit	°F
TIME				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
TORQUE (includes BENDING MOMENT, MOMENT OF FORCE, and MOMENT OF A COUPLE)				
	newton meter	N m	feet-pounds	lb ft
			inch-pound	lb in
VELOCITY				
	kilometre per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimetre per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
VOLUME (includes CAPACITY)				
	cubic meter	m <sup>3</sup>	cubic yard	yd <sup>3</sup> (cu yd)
	litre	L	cubic inch	in <sup>3</sup>
	litre	L	US gallon	US gal
			U.K. gallon	UK gal
			US quart	US qt
			U.K. quart	UK qt
	millilitre	ml	fluid ounce	fl oz
VOLUME PER TIME (includes DISCHARGE and FLOW RATE)				
	cubic meter per minute	m <sup>3</sup> /min	cubic foot per minute	ft <sup>3</sup> /min
	litre per minute	L/min	US gallon per minute	US gal/min
	millilitre per minute	ml/min	UK gallon per minute	UK gal/min
SOUND POWER LEVEL and SOUND PRESSURE LEVEL				
	decibel	dB	decibel	dB

# Introduction

## About this manual

### **⚠ DANGER**

**Improper operation or service of this machine can result in an accident.**

**Do not operate this machine or perform any lubrication, maintenance, or repair on it until you have read and understood the operation, lubrication, maintenance, and repair information.**

**Failure to comply will result in death or serious injury.**

D0010A

This manual gives information for use of your machine, as intended and under the conditions foreseen by the manufacturer during normal operation and routine service and maintenance. Read and understand; keep it in good conditions and always safely store it in the provided pocket in the back of your seat for later easy retrieval. This manual does not contain all the information related to periodical service, converting and repairs to be carried out by professional service personnel. The Table of Contents page(s) are provided to have an overview of main manual's topics. A detailed alphabetic index is available at the end of this manual for locating specific items.

## Normal operation

- Normal operation means the use of the tractor for the purpose intended by the manufacturer by an operator familiar with the tractor and the mounted or towed equipment and complying with the information for operation and safe practices, as specified by the manufacturer in this manual and by the decals on the tractor and the equipment.
- Normal operation includes the preparation and storage of the tractor, swinging components into work position and vice versa, adding or removing ballast and picking up and setting off attachments.
- Normal operation includes the adjustment and setting of the tractor and equipment, for the specific condition of the field and/or the crop.

## Routine service

Routine service and maintenance means activities that must be done daily by an operator familiar with the tractor characteristics and complying with the information for routine service and safe practices, as specified by the manufacturer in this manual and by decals on the tractor, in order to maintain its proper function. Routine service includes activities such as fueling, cleaning, washing, topping up fluid levels, greasing, replacing of consumable articles such as lamp bulbs.

## Converting, periodical service and repair

- Periodical service means activities that must be done at defined intervals by trained personnel familiar with the tractor characteristics and which are complying with the information for periodical service and safe practices, as

partly specified by the manufacturer in this manual and in other Company literature, in order to maintain the expected life time of the tractor.

- Converting means activities that must be done by professional service personnel familiar with the tractor characteristics and complying with the information for converting, as partly specified by the manufacturer in this manual, in assembly instructions or in other Company literature, in order to fit the tractor to a specific configuration.
- Repair means activities that must be done by professional service personnel only familiar with the tractor characteristics and complying with the information for repair, as specified by the manufacturer in the dealer's workshop manual, in order to restore the proper function of the tractor after a failure or degradation of performance.

## Spare Parts

"Non-original" spare parts have not been tested or authorised by the Manufacturer. Installment and/or use of such products may adversely affect the tractor's design specifications, thereby compromising operational safety. The manufacturer cannot be held responsible for any damage resulting from the use of "non-original" spare parts. No modifications may be made to the tractor without written authorisation from the Manufacturer.

## Warranty

The tractor is guaranteed in accordance with current legislation in your country and in line with contractual agreements reached with the dealer at the time of sale. However, the warranty is no longer valid if the rules and instructions for the use and maintenance of the tractor, described in this Manual, are not observed.

## Cleaning the tractor

Your tractor is an advanced machine, fitted with an electrohydraulic control system. Care must be taken when cleaning the tractor, especially if a pressurized water cleaner is used.

Never stand too close to the tractor or direct the water jet on electrical components, seals or intake openings, etc. Never direct jets of cold water at the hot engine or exhaust.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)