

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1

FARMALL® 75C
FARMALL® 85C
FARMALL® 95C
FARMALL® 105C
FARMALL® 115C

Tractor

PIN ZDJVI 6843 and above

OPERATOR'S MANUAL

Part number 48071352

4th edition English

December 2016

Replaces part number 47945493



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
Intended use.....	1-3
Electro-Magnetic Compatibility (EMC)	1-5
Manual scope and required training level	1-6
Metric and imperial units abbreviations.....	1-7
Identification plates	1-9
Approval data plate.....	1-15
Operator's manual storage on the machine	1-16
Machine orientation.....	1-17
EC Declaration of Conformity	1-18
Exhaust Gas Recirculation (EGR) exhaust treatment - Product overview	1-20

2 SAFETY INFORMATION

Safety rules and signal word definitions	2-1
Safety rules - General information	2-2
Safety rules – Maintenance	2-2
Safety rules - Wheels and tires	2-3
Safety rules – Explosions and fires	2-4
Safety rules - Fire extinguisher	2-4
Safety rules – Battery	2-5
Safety rules - Passenger seat	2-5
Safety rules - Power Take-Off (PTO)	2-5
Safety rules - Seat belts	2-6
Safety rules - Operator protective structure	2-6
Safety rules - HVAC system	2-8
Safety rules - Personal Protective Equipment (PPE)	2-8
Safety rules - "Do not use" sign	2-8
Safety rules - Hazardous chemicals	2-8
Safety rules - Near utilities	2-9
Safety rules - In the event of electrical storms	2-9
Safety rules – Mounting and dismounting the machine	2-9
Safety rules - Lifting and overhead loads	2-10
Ecology and the environment	2-11
Commission directive 2010/52/EU	2-12
Noise level.....	2-19
Vibration levels	2-20
Machine stability.....	2-21
Towing the tractor for recovery	2-24
Tractor jacking points.....	2-25
Burn prevention.....	2-26
Emergency exit	2-27
Safety signs	2-28

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Getting in and out of the machine	3-1
Getting to know the internal parts of the cab	3-2
External rear view mirrors	3-5
Clock adjustment	3-6

OPERATOR'S SEAT

Mechanical suspension seat	3-7
Air seat	3-8
Air seat – "DELUXE" model	3-10
Safety belt	3-12

PASSENGER'S SEAT

Passenger's seat	3-13
------------------------	------

FORWARD CONTROLS

Instrument cluster	3-14
Console Front console - Localization overview.....	3-19

LEFT-HAND SIDE CONTROLS

Cabless version	3-23
Version with cab	3-24
Left side post controls	3-25
Hand brake	3-26

RIGHT-HAND SIDE CONTROLS

Cabless version	3-27
Version with cab	3-28
Version with cab	3-30
Multicontroller.....	3-33
Hand throttle.....	3-34
Park lock.....	3-35
Right side post controls.....	3-36
Heating, ventilation or air-conditioning control	3-38

DISPLAY SETTINGS

Performance windows	3-40
Programming tractor functions	3-44
Adjusting the dashboard/display brightness	3-45
Calibrating speed	3-47
Calibrating tool width	3-49
Programming maintenance work	3-50
Activating/deactivating buzzer	3-52
Setting units of measurement	3-53
Regenerating the diesel particulate filter (DPF) automatically/manually	3-54
Resetting the oil change counter	3-59
Viewing error codes	3-60

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Basic operating safety rules	4-1
Refueling	4-2

STARTING THE UNIT

Starting the engine	4-3
---------------------------	-----

STOPPING THE UNIT

Stopping the engine	4-5
Electronic battery isolator - Operating	4-6

MOVING THE UNIT

Machine movement start-up	4-7
Operating in cold temperatures	4-8
Low idle speed management	4-9

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Tractor transporting	5-1
----------------------------	-----

RECOVERY TRANSPORT

Towing the tractor	5-2
--------------------------	-----

6 WORKING OPERATIONS

Transmission

Transmission operation	6-1
------------------------------	-----

FOUR WHEEL DRIVE (4WD)

Four Wheel Drive (4WD) control	6-6
--------------------------------------	-----

DIFFERENTIAL LOCK

Mechanical differential lock	6-8
Electrohydraulic differential lock	6-9

AUXILIARY CONTROL VALVES

Remote control valves - Safety rules	6-10
Rear remote control valve(s)	6-11
Single/double action hydraulic valves	6-14

REAR POWER TAKE-OFF (PTO)

Safety rules	6-15
General	6-16
Changing the Power Take-Off (PTO) shaft	6-16
Electrohydraulically controlled power take-off	6-17
Mechanically controlled power take-off	6-21
Power Take-Off (PTO) external controls	6-25

FRONT POWER TAKE-OFF (PTO)

Safety rules	6-27
Front Power Take-Off (PTO)	6-28

REAR HYDRAULIC LIFT

General safety and precautions	6-29
Hydraulic lift with mechanical control	6-30
Rear hitch internal controls - Operating	6-32
Hydraulic lift with electronic control	6-34
Hydraulic lift external controls	6-40

FRONT HYDRAULIC LIFT

Safety rules	6-42
Front hydraulic lift	6-42
Front hydraulic lift with electronic control	6-43
Front hitch - Calibrate	6-48

REAR THREE-POINT HITCH

Three-point hitch adjustments	6-49
Three-point linkage dimensions	6-51
Quick hitch	6-52

FRONT THREE-POINT HITCH

Front lift with standard axle support	6-54
Front lift with multifunction axle support	6-56

TOWBAR

General safety rules	6-58
Drawbar - Operating	6-59

REAR TOW HITCH

General safety rules	6-60
Rear tow hitch	6-61

WHEELS AND TIRES

Wheels and tires	6-65
Tire dimensions	6-69

WHEEL TRACK ADJUSTMENT

Adjustment of the front tracks	6-71
Disc-to-rim coupling for front 4WD tires	6-73
Adjustment of the front mudguards.....	6-74
Adjustment of the steering angles.....	6-76
Front tracks diagram	6-77
Rear tracks diagram	6-79

BALLAST

Safety rules	6-80
Front ballast	6-80
Rear Ballast	6-81
Liquid Ballast	6-82

TRAILER BRAKING SYSTEM

Hydraulic brakes.....	6-85
Pneumatic brakes	6-87
Mechanical trailer brake bracket (Italy)	6-90

Power sockets

Electrical systems - Localization overview	6-91
--	------

7 MAINTENANCE

GENERAL INFORMATION

General safety before you service.....	7-1
Introduction	7-3
Body maintenance.....	7-4
Biodiesel fuel - Biodiesel fuels	7-6
General specification - Diesel fuel	7-8
Organic Acid Technology (OAT) coolant.....	7-9
Recommended engine oil for operating temperature ranges.....	7-11
Consumables.....	7-12
Capacities	7-13
Opening the hood	7-14

MAINTENANCE CHART

Maintenance chart.....	7-15
------------------------	------

As required

Radiator - Check – Fluid level	7-17
Windshield washer fluid reservoir - Filling	7-17
Air conditioning - Check	7-18
Hand brake lever - Check	7-18
Remote control valve reservoir - Check	7-18
Radiator - Cleaning.....	7-19
Brake pedals - Check.....	7-19

Hydraulic steering line - Check	7-20
External lighting - Check	7-20
Wheels - Check.....	7-20
Master clutch release control - Check.....	7-21

At warning message display

Air cleaner - Cleaning	7-22
Brake fluid reservoir - Filling.....	7-23
Fuel filters - Drain fluid	7-23
Engine - Replace - Engine oil and filter	7-24

Every 10 hours or daily

Engine - Check - Oil level	7-25
Air tanks - Drain fluid	7-25

After the first 50 hours of operation

Maintenance - Tighten.....	7-26
Maintenance - Check.....	7-26
Maintenance - Replace.....	7-26
Maintenance - Cleaning	7-27
Maintenance - Test	7-27
Maintenance - Grease.....	7-27

Every 50 hours

Steering cylinder - Grease – (2WD)	7-28
Front axle - Grease – Pivot pin (2WD)	7-28
Steering knuckle - Grease – (2WD)	7-28
Four-Wheel Drive (4WD) axle - Grease	7-29
Axle articulation support - Grease – SuperSteer™ axle	7-29
Front drive shaft - Grease – SuperSteer™ axle	7-29
Rear three-point hitch - Grease	7-30
Rear hitch - Grease – Mechanical lift	7-30
Front hitch - Grease	7-30

Every 100 hours

Air-conditioning condenser - Cleaning	7-31
Transmission cooler - Cleaning.....	7-31
Aftercooler - Cleaning	7-32
Cab air filters - Cleaning.....	7-32
Cab air filters - Cleaning - Recirculation Filters	7-33
Accessory belt - Check - Alternator belt	7-33
Compressor drive belt - Check - Air conditioner belt	7-33
Compressor drive belt - Check - Pneumatic trailer brake belt	7-34

Every 300 hours

Lift oil filters - Replace	7-35
----------------------------------	------

Transmission oil filter - Replace - Auxiliary services	7-35
Oil dipstick - Check	7-35
Air cleaner - Cleaning	7-36
Four-Wheel Drive (4WD) axle - Check	7-37
Final drive - Check	7-37
Steering knuckle and king pin - Grease – (4WD)	7-37

Every 600 hours

Engine - Replace Engine oil filter	7-38
Fuel filters - Replace	7-40
Wheels - Tighten	7-42
Driving wheel shaft - Grease - Bearing (4WD)	7-43

Every 1200 hours or annually

Cab air filters - Replace	7-43
Cab air filters - Replace - Recirculation Filters	7-43
Air cleaner - Replace	7-44
Fuel tank - Drain fluid.....	7-44
Blowby recirculation filter - Replace	7-45

Every 1200 hours or two years

Four-Wheel Drive (4WD) axle - Change fluid	7-46
Final drive - Change fluid – (4WD)	7-46
Transmission drive housing - Change fluid.....	7-46
Accessory belt - Replace - Alternator belt	7-47
Compressor drive belt - Replace - Air conditioner belt	7-47
Compressor drive belt - Replace - Pneumatic trailer brake belt	7-47
Radiator - Change fluid - Conventional coolant	7-48
Air dryer - Replace - Trailer pneumatic brakes air drier	7-50

Every two years

Receiver-dryer - Replace.....	7-51
-------------------------------	------

Every 3600 hours or four years

Radiator - Change fluid - OAT coolant	7-51
Diesel Particulate Filters (DPF) - Replace.....	7-54

Electrical System

Battery - Check	7-55
Fuses and Relays	7-57
Front light - Adjust	7-58
Front light - Replace	7-59

Fuse and relay locations

Fuse and relay box - Replace	7-60
------------------------------------	------

STORAGE

Storage	7-69
---------------	------

CALIBRATION

Clutch calibration - Power shuttle transmission	7-71
Clutch calibration — 2-speed Powershift transmission	7-74
Electronic lift calibration	7-77

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

Engine - Troubleshooting	8-1
Electrical system - Troubleshooting	8-3
Hydraulic systems - Troubleshooting	8-4
Rear three-point hitch - Troubleshooting	8-5
Hydraulic service brakes - Troubleshooting	8-6
Cab climate control - Troubleshooting	8-7

ALARM(S)

Alarms	8-8
Display warnings overview	8-9

SYMPTOM(S)

Viewing error codes	8-13
Error code identification	8-13

9 SPECIFICATIONS

Dimensions and weights	9-1
Maximum permitted loads on front and rear axle	9-4
Maximum permitted loads on drawbar	9-5
Maximum permitted loads on towing hitch	9-6
Additional equipment attachment points	9-7
Speed table for 12 x 12 gearbox	9-10
Speed table for 20 x 20 gearbox	9-12
Speed table for 24 x 24 gearbox	9-16
Speed table for 24 x 24 gearbox	9-20
Speed table for 40 x 40 gearbox	9-22
Consumables	9-25
Capacities	9-26
Technical data	9-27

10 ACCESSORIES

Radio	10-1
Single piece ballast	10-12

Joystick operation 10-14

Coolant immersion heater (where fitted) 10-15

1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

The CASE IH dealer will provide instructions on the general operation of new equipment. The dealer's staff, assigned to maintenance, is available for any questions related to the operation of the machine.

Your CASE IH dealer carries a complete line of genuine CASE IH service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model code and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model :
Product Identification Number (PIN):



Warning symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

⚠ WARNING

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.
Replace all shields before operating the machine.
Failure to comply could result in death or serious injury.**

W0012A

The machine has been designed and built according to the highest standards of quality and it complies with all current safety regulations. However, the risk of accidents can never be completely excluded. That is why it is essential to observe elementary safety rules and precautions.

Read this manual carefully, paying particular attention to the instructions concerning safety, operation and maintenance so as to avoid the risk of injury while operating or servicing the machine.

Do not use this machine for any application or purpose other than those described in this manual. If the machine is to be used for work involving the use of special attachments, accessories or equipment, consult your CASE IH Dealer in order to make sure that any adaptations or modifications made are in keeping with the machine's technical specifications and with prevailing safety requirements.

Any modification or adaptation which is not approved by the manufacturer may invalidate the machine's initial conformity with safety requirements.

The machine must undergo regular inspections, the frequency of which varies according to the type of use. Consult your authorized CASE IH dealer.

Always keep this manual in the operator's compartment (in the seat back, behind the operator's seat). Make sure it is always complete and in good condition. To receive extra copies of the manual or copies in languages other than that of your country of residence, please contact your CASE IH dealer.

The manufacturer is committed to the constant improvement of its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

NOTICE: *The information in this manual is provided on the basis of the information that was available at the time the manual was written. Settings, procedures, part numbers, software and other items may change, which may affect the maintenance of the machine. Ensure that you have complete and current information from your dealer before you start any machine operation. All data given in this book is subject to production variations.*

Engine tampering statement:

ATTENTION: *The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply with this prohibition could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

Intended use

NOTE: *Your tractor is designed according to European directives related to health and safety risks; though it has been designed to minimize all the potential risks it is mandatory to carefully read, understand and observe all the decals and labels and to always refer to information and prescriptions outlined in this manual to prevent all residual potential risks. If you need further assistance please do not hesitate to contact your dealer.*

Your tractor is designed and made to pull, carry and power a variety of mounted or towed equipment, although within some physical limits. The working speed and performance may depend on various factors, such as weather and terrain conditions. Though the tractor is designed to perform in combination with a variety of equipment, there may be a number of combinations of the above parameters for which there is severe degradation of performance of the tractor and/or its mounted or trailed equipment. If you notice degradation of performance, contact your dealer for assistance, he may have useful information for improvements, or a kit may be available to enhance the performance.

Please carefully read and consider the following precautions:

- Do not use the tractor for purposes other than those intended by the manufacturer and outlined in this manual.
- Do not use the tractor beyond its limits of terrain gradient and stability. Using the tractor beyond these limits may result in roll-over or tip-over. Observe the recommendations in this manual.
- Do not use the tractor at higher speeds than those allowed by the load and the environment. A wet surface or other low adherence conditions may increase the braking distance or result in vehicle instability. Always adapt your travelling speed according to the load of the vehicle and the characteristics of the road.
- Do not use the tractor near or on soft verges of canals and brooks or banks and verges that are undermined by rodents. The tractor may sink sideways and roll over.
- Do not use the tractor on unstable crossings or bridges and/or on soft surfaces or ones that are not strong enough. These constructions may collapse and cause roll-over of the tractor. Always inspect the condition and carrying capacity of bridges and ramps before crossing.
- Do not use equipment mounted on the tractor which is not correctly matching and firmly fixed. The use of implements or accessories that have not been approved or are not correctly connected may increase the risk of roll-over of the tractor if they come loose. Ensure that the dimensions of the three-point linkage interface of both the tractor and the equipment comply with the categories defined in ISO 730. Ensure that the dimensions and speed of the PTO shaft on the tractors match those of the equipment.
- Do not use the tractor in combination with equipment without having consulted the specific Operator's Manual provided with the equipment. The tractor is a universal tool to carry, tow and drive a variety of equipment. This manual alone cannot provide you with all the information required for the safe operation of the combination.
- Do not use the tractor for pulling work, in cases where you do not know whether the load will yield, for instance when pulling stumps; the tractor may flip over when the stump is not yielding.
- Be cautious that the centre of gravity of the tractor may increase when loads on the front-end loader or the three-point linkage are raised. In these conditions, the tractor may roll over earlier than expected.
- Do not step down from the tractor without shutting down the PTO, shifting the transmission to park or neutral and applying the park brake, unless continued PTO operation is required for some equipment, such as pumps or wood chippers. The latter equipment may have an emergency stop device on the equipment itself, as human intervention is needed during operation. But other equipment, engaged and driven by the tractor will have no means to stop the power transmission, other than the PTO clutch of the tractor.
- You must take the necessary precautions (e.g. assistance) to always be aware of the possible presence of bystanders, especially when manoeuvring in confined areas, such as the farm yard and sheds. Keep people away from the tractor during work. Ask bystanders to leave the field. There is not only the risk of being run over by the tractor, but objects ejected by some equipment mounted on the tractor, such as a rotary mower, may cause harm. Stones may be thrown further than the mowed crop. Pay the necessary attention while operating next to public roads or footpaths. Thrown objects can be projected outside the field and hit unprotected people such as cyclists or pedestrians. Wait to cut the edge of the field till it is clear of bystanders.
- Do not allow riders on the tractor; do not allow people to stand on the access step to the cab when the tractor is moving. Your view to the left will be obstructed and a rider risks falling from the tractor during unexpected or abrupt movements.
- Always stay clear from the implements operating area and especially do not stand between the tractor and the implement or the trailed vehicle when operating lift controls; ensure no bystanders are near these operating areas.
- Certain functions of your tractor are controlled by software and some of them are safety-related. Do not attempt to modify or download software not certified and distributed by the manufacturer. Electronic settings and logics may be destroyed and seriously affect the functioning of the tractor. This may result in unpredictable and unsafe behaviour of the tractor. Always refer to your dealer; he has the appropriate tools and data sets

and owns the officially released software versions and updates for your tractor.

- Your tractor may be equipped with a number of sensors to control safety functions. Tripping these sensors will result in a safe operation mode. Do not attempt to bypass any function on the tractor. You will be exposed to serious hazards, and moreover, the behaviour of the tractor may become unpredictable.

- The tractor has only one operator station and this is a one man operated vehicle. There is no need for other people on or around the tractor during normal operation. Do not allow riders on the tractor; do not allow people to stand near the access to the cab or on the step when the tractor is moving. Your view to the left will be obstructed and a rider risks falling from the tractor during unexpected or abrupt movements.



Our support email:

ebooklibonline@outlook.com