

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1

OPERATOR'S MANUAL

TK4020V

TK4030V

TK4020F

TK4030F

TK4040M

TK4050M

TK4030

TK4040

TK4050

TK4060

Tractor

Part number 48077221

6th edition English

December 2016

Replaces part number 47768443



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
Tractor intended use.....	1-3
Electro-magnetic interference (EMC).....	1-5
Manual scope and required training level	1-6
Metric and Imperial units abbreviations	1-8
Product Identification	1-10
Machine orientation.....	1-12
Component Identification	1-13
Declaration of conformity	1-16

2 SAFETY INFORMATION

Safety rules	2-1
Safety rules and signal word definitions - General information	2-2
Safety rules – Maintenance	2-2
Safety rules – Explosions and fires	2-4
Safety rules - Fire extinguisher	2-4
Safety rules – Battery	2-5
Safety rules - Power Take-Off (PTO)	2-6
Safety rules - Seat belts	2-6
Safety rules - Operator protective structure	2-6
Safety rules - HVAC system	2-8
Safety rules - Personal Protective Equipment (PPE)	2-9
Safety rules - "Do not use" sign	2-9
Safety rules - Hazardous chemicals	2-9
Safety rules - Near utilities	2-10
Safety rules - In the event of electrical storms	2-10
Safety rules – Mounting and dismounting the machine	2-10
Safety rules - Lifting and overhead loads	2-11
Safety rules On-road use	2-11
Ecology and the environment	2-12
Commission Directive 2010/52/EU	2-13
Noise level.....	2-20
Vehicle vibration levels	2-21
Personal safety	2-22
Burn prevention.....	2-23
Safety signs	2-24
Safety signs	2-30

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Access to operator's platform	3-1
Cab	3-2
Clock adjustment	3-6
Heating, ventilation or air-conditioning control	3-7

OPERATOR'S SEAT

Pneumatically-adjusted operator seat - Adjust 3-11

FORWARD CONTROLS

Instrument panel..... 3-13

Front controls 3-16

RIGHT-HAND SIDE CONTROLS

Right-hand side controls..... 3-18

EXTERIOR CONTROLS

Battery disconnect switch 3-19

Power sockets 3-19

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Basic operating safety rules 4-1

Refueling 4-3

STARTING THE UNIT

Engine operation 4-4

STOPPING THE UNIT

Stopping the engine 4-6

MOVING THE UNIT

Machine movement start-up..... 4-7

Transmission with gear reducer and reversing mechanism (8AV + 8RM) 4-8

Transmission with standard gear and additional reducer (16AV + 8RM) 4-9

Transmission with standard gear and additional reducer (16AV + 8RM) 4-10

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Preparing for road transport Road transport 5-1

6 WORKING OPERATIONS

STEERING CLUTCHES AND BRAKES

STEERING CLUTCHES AND BRAKES 6-1

CENTRE CLUTCH

Safety devices 6-2

Standard version 6-3

Version on request	6-3
--------------------------	-----

REAR POWER TAKE-OFF

Grouped safety message.....	6-3
General	6-5
Power take off (PTO)	6-6
Power take-off speeds.....	6-7

HYDRAULIC LIFT

Hydraulic lift	6-8
----------------------	-----

THREE-POINT LINKAGE

Rear three-point hitch - Operating.....	6-12
Additional equipment attachment points	6-14
Hitching tools for quick coupling	6-15

TOWING EQUIPMENT

Rear three-point hitch - Safety rules.....	6-17
Drilled cross bar on tool attachment.....	6-18
Swinging drawbar	6-19

REMOTE CONTROL VALVES

Safety rules.....	6-21
Remote control valve operation	6-22
Quick-release coupler problems.....	6-25

BALLAST

Ballasts and supports - Safety rules.....	6-27
Ballast	6-27

Tracks

Tracks - Dimension	6-27
--------------------------	------

7 MAINTENANCE

GENERAL INFORMATION

General safety before you service.....	7-1
Introduction	7-3
Various controls	7-4
Fuel storage	7-4
General specification - Biodiesel fuels	7-6
Organic Acid Technology (OAT) coolant.....	7-7
Body maintenance.....	7-9
Consumables	7-11
Capacities	7-13
Opening the hood	7-14

MAINTENANCE CHART

Maintenance chart.....	7-15
------------------------	------

AS REQUIRED

Engine coolant level	7-17
Radiator - Cleaning	7-17
Power take-off clutch	7-17
Service brakes.....	7-18
Parking Brake	7-18
Centre clutch	7-19
Clutch oil reservoir level	7-19
Idler wheels and rollers.....	7-19
Track chains	7-20
Steering clutch oil level	7-20
Windshield washer reservoir	7-21

At warning message display

Engine air filters	7-22
Fuel filter water drain	7-23

EVERY 10 HOURS OR EACH DAY

Engine oil level	7-24
------------------------	------

Initial 50 hours

Maintenance - Tighten.....	7-25
Maintenance - Check.....	7-25
Maintenance - Replace.....	7-25
Maintenance - Cleaning	7-26
Maintenance - Test	7-26
Maintenance - Grease.....	7-26

EVERY 50 HOURS

Leaf spring hinge pin	7-27
Rear support bar hinge	7-27
Centre clutch shifter sleeve.....	7-28

EVERY 100 HOURS

Transmission oil heat exchanger	7-29
Intercooler	7-29
Air conditioning condenser	7-29
Cab air filters	7-30
Cab air recirculation filter	7-30

EVERY 300 HOURS

Alternator belt.....	7-30
Steering clutch oil filter	7-31
Final drives	7-31
Lifting device and transmission oil level	7-32
Dry air filter - External cartridge	7-33

Lifting device oil filter	7-33
Brakes	7-34
Track tension adjust	7-34
Battery	7-34

EVERY 500 HOURS

Engine oil and filter TK4020, TK4030 and TK4040 models	7-35
Fuel filter TK4020, TK4030 and TK4040 models	7-36
Fuel prefilter	7-37

EVERY 600 HOURS

Engine oil and filter Models TK4050 and TK4060	7-38
Fuel filter Models TK4050 and TK4060	7-39
Fuel pre-filter	7-40

EVERY 1200 HOURS OR ANNUALLY

Air cleaner	7-41
Replacement of steering clutch oil	7-41
Fuel tank	7-42
Cab air filters	7-43
Cab air recirculation filter	7-43

EVERY 1200 HOURS OR EVERY 2 YEARS

Replacing lifting device and transmission oil	7-44
Replacement of final drive oil	7-45
Change the engine coolant fluid - Conventional type coolant	7-46
Engine valves	7-48

EVERY 1800 HOURS

Fuel injectors - Check	7-49
------------------------------	------

Every 3600 hours

Change the engine coolant fluid - OAT type coolant	7-50
--	------

ELECTRICAL SYSTEM

Battery service	7-52
Battery disconnect switch	7-54
Fuses and relays location	7-54
Fuse and relay locations	7-55
Light adjustments	7-57
Hood lamp replacement	7-57
Machine lights	7-58

STORAGE

Tractor storage	7-60
-----------------------	------

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

TROUBLESHOOTING ENGINE	8-1
Electrical system - Troubleshooting ELECTRICAL SYSTEM	8-3
Clutch - Troubleshooting	8-4
Hydraulic systems - Troubleshooting HYDRAULIC SYSTEM	8-4
Rear three-point hitch - Troubleshooting	8-5
Cab climate control - Troubleshooting.....	8-5

9 SPECIFICATIONS

Dimensions and weights	9-1
Speed table for 8 x 8 gearbox	9-7
Speed table for 16x8 gearbox	9-8
Speed table for 16x8 gearbox	9-10
Consumables	9-12
Capacities	9-14
Technical data	9-15

10 ACCESSORIES

Radio	10-1
-------------	------

1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

The NEW HOLLAND dealer will provide instructions on the general operation of new equipment. The dealer's staff, assigned to maintenance, is available for any questions related to the operation of the machine.

Your NEW HOLLAND dealer carries a complete line of genuine NEW HOLLAND service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model code and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model :
Product Identification Number (PIN):



Warning symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

⚠ WARNING

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.
Replace all shields before operating the machine.
Failure to comply could result in death or serious injury.**

W0012A

The machine has been designed and built according to the highest standards of quality and it complies with all current safety regulations. However, the risk of accidents can never be completely excluded. That is why it is essential to observe elementary safety rules and precautions.

Read this manual carefully, paying particular attention to the instructions concerning safety, operation and maintenance so as to avoid the risk of injury while operating or servicing the machine.

Do not use this machine for any application or purpose other than those described in this manual. If the machine is to be used for work involving the use of special attachments, accessories or equipment, consult your NEW HOLLAND Dealer in order to make sure that any adaptations or modifications made are in keeping with the machine's technical specifications and with prevailing safety requirements.

Any modification or adaptation which is not approved by the manufacturer may invalidate the machine's initial conformity with safety requirements.

The machine must undergo regular inspections, the frequency of which varies according to the type of use. Consult your authorized NEW HOLLAND dealer.

Always keep this manual in the operator's compartment (in the seat back, behind the operator's seat). Make sure it is always complete and in good condition. To receive extra copies of the manual or copies in languages other than that of your country of residence, please contact your NEW HOLLAND dealer.

The manufacturer is committed to the constant improvement of its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

NOTICE: *The information in this manual is provided on the basis of the information that was available at the time the manual was written. Settings, procedures, part numbers, software and other items may change, which may affect the maintenance of the machine. Ensure that you have complete and current information from your dealer before you start any machine operation. All data given in this book is subject to production variations.*

Engine tampering statement:

ATTENTION: *The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply with this prohibition could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

Tractor intended use

NOTE: *Your tractor is designed according to European directives related to health and safety risks; though it has been designed to minimize all the potential risks it is mandatory to carefully read, understand and observe all the decals and labels and to always refer to information and prescriptions outlined in this manual to prevent all residual potential risks. If you need further assistance please do not hesitate to contact your dealer.*

Your tractor is designed and made to pull, carry and power a variety of mounted or towed equipment, although within some physical limits. The working speed and performance may depend on various factors, such as weather and terrain conditions. Though the tractor is designed to perform in combination with a variety of equipment, there may be a number of combinations of the above parameters for which there is severe degradation of performance of the tractor and/or its mounted or trailed equipment. If you notice degradation of performance, contact your dealer for assistance, he may have useful information for improvements, or a kit may be available to enhance the performance.

Please carefully read and consider the following precautions:

- Do not use the tractor for purposes other than those intended by the manufacturer and outlined in this manual.
- Do not use the tractor beyond its limits of terrain gradient and stability. Using the tractor beyond these limits may result in roll-over or tip-over. Observe the recommendations in this manual.
- Do not use the tractor at higher speeds than those allowed by the load and the environment. A wet surface or other low adherence conditions may increase the braking distance or result in vehicle instability. Always adapt your travelling speed according to the load of the vehicle and the characteristics of the road.
- Do not use the tractor near or on soft verges of canals and brooks or banks and verges that are undermined by rodents. The tractor may sink sideways and roll over.
- Do not use the tractor on unstable crossings or bridges and/or on soft surfaces or ones that are not strong enough. These constructions may collapse and cause roll-over of the tractor. Always inspect the condition and carrying capacity of bridges and ramps before crossing.
- Do not use equipment mounted on the tractor which is not correctly matching and firmly fixed. The use of implements or accessories that have not been approved or are not correctly connected may increase the risk of roll-over of the tractor if they come loose. Ensure that the dimensions of the three-point linkage interface of both the tractor and the equipment comply with the categories defined in ISO 730. Ensure that the dimensions and speed of the PTO shaft on the tractors match those of the equipment.
- Do not use the tractor in combination with equipment without having consulted the specific Operator's Manual provided with the equipment. The tractor is a universal tool to carry, tow and drive a variety of equipment. This manual alone cannot provide you with all the information required for the safe operation of the combination.
- Do not use the tractor for pulling work, in cases where you do not know whether the load will yield, for instance when pulling stumps; the tractor may flip over when the stump is not yielding.
- Be cautious that the centre of gravity of the tractor may increase when loads on the front-end loader or the three-point linkage are raised. In these conditions, the tractor may roll over earlier than expected.
- Do not step down from the tractor without shutting down the PTO, shifting the transmission to park or neutral and applying the park brake, unless continued PTO operation is required for some equipment, such as pumps or wood chippers. The latter equipment may have an emergency stop device on the equipment itself, as human intervention is needed during operation. But other equipment, engaged and driven by the tractor will have no means to stop the power transmission, other than the PTO clutch of the tractor.
- You must take the necessary precautions (e.g. assistance) to always be aware of the possible presence of bystanders, especially when manoeuvring in confined areas, such as the farm yard and sheds. Keep people away from the tractor during work. Ask bystanders to leave the field. There is not only the risk of being run over by the tractor, but objects ejected by some equipment mounted on the tractor, such as a rotary mower, may cause harm. Stones may be thrown further than the mowed crop. Pay the necessary attention while operating next to public roads or footpaths. Thrown objects can be projected outside the field and hit unprotected people such as cyclists or pedestrians. Wait to cut the edge of the field till it is clear of bystanders.
- Do not allow riders on the tractor; do not allow people to stand on the access step to the cab when the tractor is moving. Your view to the left will be obstructed and a rider risks falling from the tractor during unexpected or abrupt movements.
- Always stay clear from the implements operating area and especially do not stand between the tractor and the implement or the trailed vehicle when operating lift controls; ensure no bystanders are near these operating areas.
- Certain functions of your tractor are controlled by software and some of them are safety-related. Do not attempt to modify or download software not certified and distributed by the manufacturer. Electronic settings and logics may be destroyed and seriously affect the functioning of the tractor. This may result in unpredictable and unsafe behaviour of the tractor. Always refer to your dealer; he has the appropriate tools and data sets

- and owns the officially released software versions and updates for your tractor.
- Your tractor may be equipped with a number of sensors to control safety functions. Tripping these sensors will result in a safe operation mode. Do not attempt to bypass any function on the tractor. You will be exposed to serious hazards, and moreover, the behaviour of the tractor may become unpredictable.
- The tractor has only one operator station and this is a one man operated vehicle. There is no need for other people on or around the tractor during normal operation. Do not allow riders on the tractor; do not allow people to stand near the access to the cab or on the step when the tractor is moving. Your view to the left will be obstructed and a rider risks falling from the tractor during unexpected or abrupt movements.

Electro-magnetic interference (EMC)

This machine complies strictly with the European Regulations on electro-magnetic emissions. However, interference may arise as a result of add-on equipment which may not necessarily meet the required standards. As such interference can result in serious malfunction of the unit and/or create unsafe situations, you must observe the following:

- Ensure that each piece of non- NEW HOLLAND equipment fitted to the machine bears the CE mark.
- The maximum power of emission equipment (radio, telephones, etc.) must not exceed the limits imposed by the national authorities of the country where you use the machine.
- The electro-magnetic field generated by the add-on system should not exceed **24 V/m** at any time and at any location in the proximity of electronic components.

Failure to comply with these rules will render the NEW HOLLAND warranty null and void.

Manual scope and required training level

Introduction to this manual

This manual gives information for use of your NEW HOLLAND machine, as intended and under the conditions foreseen by the manufacturer during normal operation and routine service and maintenance. This manual does not contain all the information related to periodical service, converting and repairs to be carried out by professional service personnel. For some of the latter activities, there may be a need for appropriate facilities, technical skills, and/or tools which are not supplied with the machine.

The manual is divided into sections as outlined in the General Table of Contents Page(s). Refer to the Detail Index at the end of this manual for locating specific items about your NEW HOLLAND machine.

Scope and Required Training Level

This manual gives information for use of your NEW HOLLAND machine, as intended and under the conditions foreseen by the manufacturer during normal operation and routine service and maintenance.

Normal operation consists of use of the NEW HOLLAND machine for the purpose intended by the manufacturer by an operator that is:

- Familiar with the NEW HOLLAND machine and the mounted or towed equipment.
- Acting in compliance with the information regarding operation and safety regulations, as specified by the manufacturer in this manual and by the signs on the machine.

Normal operation includes:

- The preparation and storage of the NEW HOLLAND machine
- The installation of components in the working positions and vice versa
- Adding or removing ballast
- Picking up and setting off mounted or towed equipment
- The adjustment and setting of the NEW HOLLAND machine and equipment for the specific condition of the field and/or the crop.

Routine service and maintenance consists of activities that must be done daily in order to maintain its proper function by an operator that is

- Familiar with NEW HOLLAND machine characteristics
- Acting in compliance with the information regarding routine maintenance and safety regulations, as specified by the manufacturer in this manual and by the signs on the NEW HOLLAND machine. Routine service includes activities such as fueling, cleaning,

washing, topping up fluid levels, greasing, replacing of consumable articles such as lamp bulbs.

This manual does not contain all the information related to periodical service, converting and repairs to be carried out by NEW HOLLAND professional service personnel. For some of the latter activities, there may be a need for appropriate facilities, technical skills, and/or tools which are not supplied with the NEW HOLLAND machine.

Periodical service consists of activities that must be done at defined intervals:

- By trained personnel familiar with the NEW HOLLAND machine characteristics.
- By trained personnel complying with the information for periodical service and safe practices, as partly specified by the manufacturer in this manual and in other company literature.
- To ensure that the NEW HOLLAND machine lasts for the expected length of time. Periodical service includes activities such as changing oil from the engine, hydraulic circuits or transmission, or other substances or components that need periodical exchange.

Converting consists of activities that must be done:

- By professional service personnel familiar with the NEW HOLLAND machine characteristics.
- In compliance with the information regarding converting, specified in part by the manufacturer in this manual, in the installation instructions, or in other company documentation
- In order to overhaul the NEW HOLLAND machine in a configuration that is appropriate for the specific conditions of the product or soil

Repair (and disassembly) involves some activities that must be performed:

- By professional service personnel familiar with the NEW HOLLAND machine characteristics.
- Complying with the information for repair, as specified by the manufacturer in the NEW HOLLAND dealer's service manual.
- In order to restore the correct functioning of the NEW HOLLAND machine after failure or performance deterioration during dismantling or disassembly of the NEW HOLLAND machine.

Read this manual before you start the engine or operate this NEW HOLLAND machine. If any information in this manual is not understood, or if you need more information or assistance, contact your NEW HOLLAND dealer.

All persons trained to use, or persons who use the NEW HOLLAND machine, must be old enough to have a valid local permit to operate the vehicle (or other local requirements regarding age) and must have demonstrated the

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com