

ORIGINAL INSTRUCTIONS

OPERATOR'S MANUAL

250TLA

Farm Loader

Part number 48077338

2nd edition English

November 2016

Replaces part number 47611315



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
International symbols	1-3
Front loader and bucket - Product identification	1-4
Machine orientation	1-5
Product overview	1-6

2 SAFETY INFORMATION

Safety rules and signal word definitions	2-1
Safety rules	2-2
Ecology and the environment	2-7
Decals and plates - Safety signs	2-8

3 OPERATING INSTRUCTIONS

Commissioning the unit

Machine preparation	3-1
Installing the loader	3-2
Installing the quick-attach plate	3-8
Installing the quick-attach bucket	3-10
Installing the bucket level indicator	3-12
Connecting the hydraulics at the tractor	3-14

Parking the unit

Removing the quick-attach bucket	3-15
Removing the quick-attach plate	3-16
Removing the loader	3-17

4 WORKING OPERATIONS

General information

Operating the loader	4-1
Front remote control valve	4-10

5 MAINTENANCE

General information

Basic instructions	5-1
Daily inspection	5-2
Hydraulics	5-4
Consumables	5-5

Maintenance planning

Maintenance chart	5-6
-------------------------	-----

Daily maintenance

Front loader and bucket - Check	5-6
Front loader and bucket - Grease	5-7

First 10 hours

Front loader and bucket - Check	5-8
---------------------------------------	-----

Every 50 hours

Front loader and bucket - Check	5-8
---------------------------------------	-----

6 TROUBLESHOOTING

Symptom(s)

Front loader and bucket - Troubleshooting	6-1
---	-----

7 SPECIFICATIONS

Loader specifications	7-1
Rear weighting options	7-3
Tractor ballasting	7-5
Tire pressure	7-7

8 ACCESSORIES

Attachments	8-1
-------------------	-----

9 FORMS AND DECLARATIONS

Delivery report - Owner copy	9-1
Delivery report - Dealer copy	9-2

1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

Your NEW HOLLAND dealer will instruct you in the general operation of your new equipment. (Refer to the 'Delivery Report' at the back of this manual.) Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your machine. New Holland Top Service is also available. Call 1-866-NEWHLND (1-866-639-4563) or email na.topservice@cnh.com.

Your NEW HOLLAND dealer carries a complete line of genuine NEW HOLLAND service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION

Loader Model

Product Identification Number (PIN)

Date Purchased

Attachment Model

Attachment Model



This is the safety alert symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

WARNING

Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.

Replace all shields before operating the machine.

Failure to comply could result in death or serious injury.

W0012A

Improvements

CNH America LLC is continually striving to improve its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

Intended use

The loader was designed to mount on NEW HOLLAND approved tractors. The loader is designed to load and move materials with a variety of buckets and approved NEW HOLLAND attachments.

DO NOT use this machine for any purpose or in any manner other than as described in the manual, decals, or other product safety information provided with the machine. These materials define the machine's intended use.

Use only approved accessories and attachments designed for your machine. Consult your dealer on changes, additions or modifications that may be required for your machine. Do not make any unauthorized modifications to your machine.

Installation and operation instructions for certain hydraulic valve sets, attachments and accessories may not be included in this operator's manual.

Use the publication received with the specific item. In the case of hydraulic valves, refer to the tractor operator's manual.

NOTICE: *Loader frames are designed for specific tractor models. Do not install a loader frame on a different model than specified, without obtaining approval from CNH America LLC.*

Operator's age

All persons who will be operating this machine shall possess a valid local vehicle operating permit and/or other applicable local age work permits.

WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE DEATH OR SERIOUS INJURY. MAKE SURE THAT EVERY OPERATOR:

-is instructed in the safe and proper use of this machine.

-reads and understands the operator's manual for this machine.

-reads and understands ALL safety signs on the machine.

Failure to comply could result in death or serious injury.

W0188A

Read and thoroughly understand this manual before operating this machine. If you are an inexperienced operator, study this manual and receive operating instructions from an experienced operator. Your dealer can assist you in learning machine operation and show you proper operating procedures. Keep this manual readily available, preferably with the machine. If the original manual is damaged, order a new one from your dealer.

International symbols

 
As a guide to the operation of the machine, various universal symbols have been utilized on the instruments, controls, switches, and fuse box. The symbols are shown below with an indication of their meaning.

	Thermostart starting aid		Radio		PTO		Position Control
	Alternator charge		Keep alive memory		Transmission in neutral		Draft Control
	Fuel level		Turn signals		Creeper gears		Accessory socket
	Automatic Fuel shut-off		Turn signals -one trailer		Slow or low setting		Implement socket
	Engine speed (rev/min x 100)		Turn signals -two trailers		Fast or high setting		%age slip
	Hours recorded		Front windshield wash/wipe		Ground speed		Hitch raise (rear)
	Engine oil pressure		Rear windshield wash/wipe		Differential lock		Hitch lower (rear)
	Engine coolant temperature		Heater temperature control		Rear axle oil temperature		Hitch height limit (rear)
	Coolant level		Heater fan		Transmission oil pressure		Hitch height limit (front)
	Tractor lights		Air conditioner		FWD engaged		Hitch disabled
	Headlamp main beam		Air filter blocked		FWD dis-engaged		Hydraulic and transmission filters
	Headlamp dipped beam		Parking brake		Warning!		Remote valve extend
	Work lamps		Brake fluid level		Hazard warning lights		Remote valve retract
	Stop lamps		Trailer brake		Variable control		Remote valve float
	Horn		Roof beacon		Pressurized! Open carefully		Malfunction! See Operator's Manual
			Warning ! Corrosive substance				Malfunction! (alternative symbol)

Front loader and bucket - Product identification


Product identification plate

A product identification plate (1) is located on the inside of the left-hand loader frame.

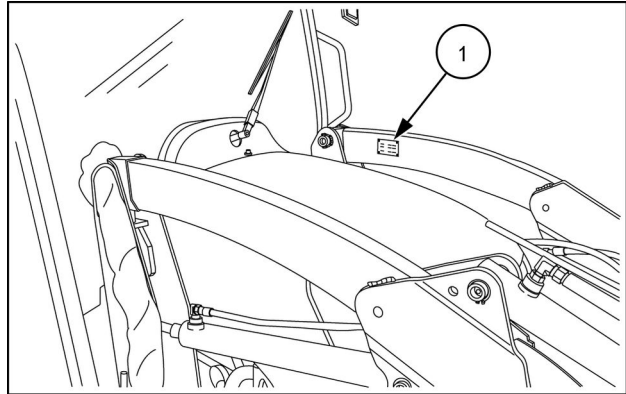

NHIL13CT00513AA 1

 
The identification numbers on this plate are important in the event that your loader should require future service.

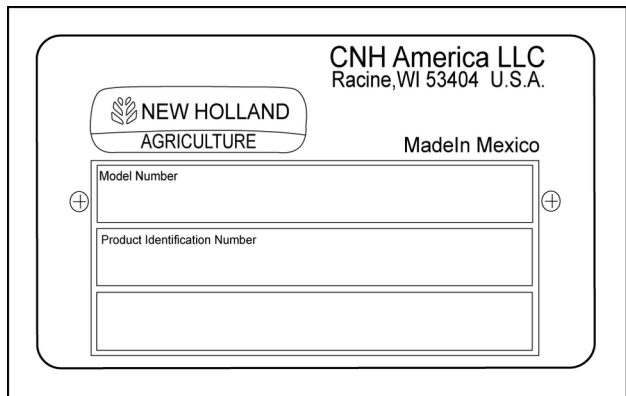


NHIL13CT00932AA 2

Machine orientation

 NOTE: On this equipment, left-hand and right-hand are determined by standing behind the unit, looking in the direction of travel.

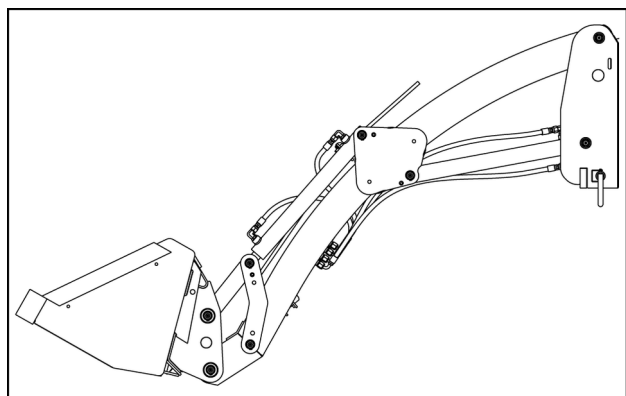


NHIL14CT00039AA 1

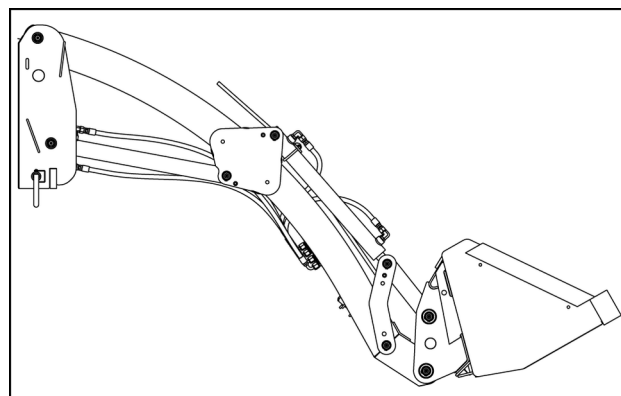 


NHIL14CT00037AA 2

 Left-hand view

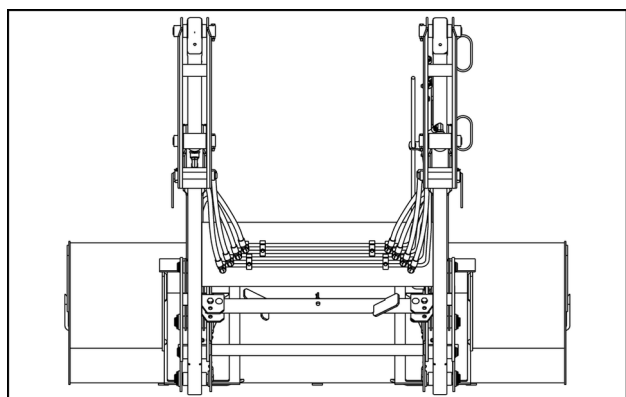

NHIL14CT00040AA 3

 Right-hand view

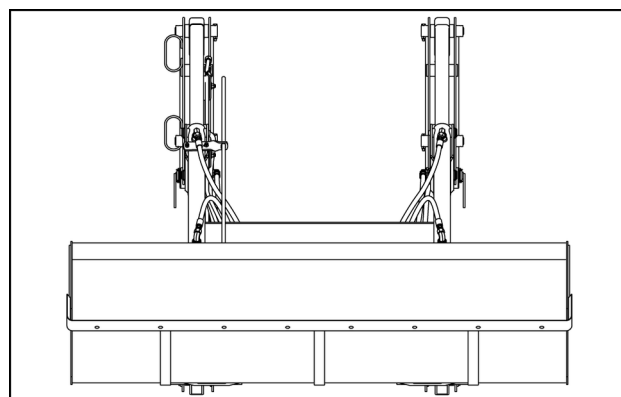

NHIL14CT00038AA 4

Rear view

 
Front view

Product overview

The 250TLA loader and attachments are designed to be compatible with the following compact tractors.


Boomer™

- Gear or Hydro-Static Transmission (HST)
 - 33, 35, 37, 40
- Continuously Variable Transmission (CVT)
 - 3040, 3045, 3050, 46D, 54D

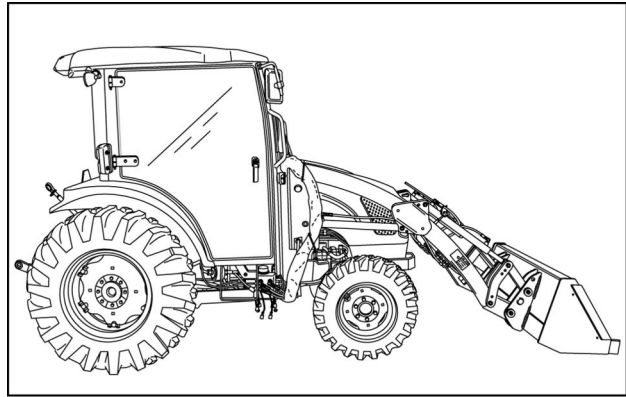

NHIL13CT00268AA 1

 Boomer™ CVT

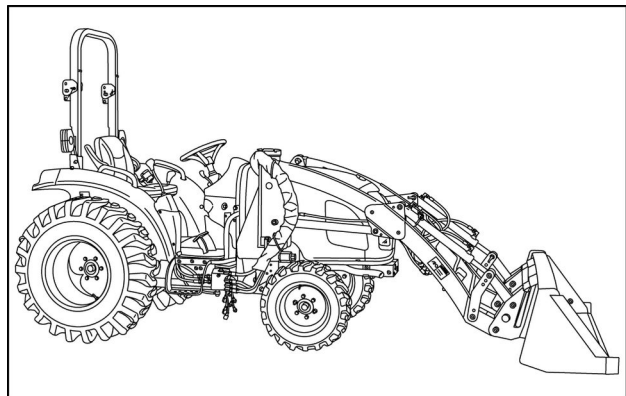

NHIL14CT00086AA 2

Boomer™ Gear or HST

The loader is a quick attach unit, and no tools are required to mount or dismount the loader from the tractor. The loader also has its own built in park stand.

A pallet fork and a complete line of heavy duty and material buckets are available. As the capacities of the buckets have been matched to tractor size, the operator can choose the bucket best suited for the tractor and the job. Bucket recommendations are listed in the Specifications section of this manual.

2 - SAFETY INFORMATION

Safety rules and signal word definitions


Personal safety





This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual and on machine safety signs, you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 **DANGER** indicates a hazardous situation that, if not avoided, will result in death or serious injury. The color associated with DANGER is RED.

 **WARNING** indicates a hazardous situation that, if not avoided, could result in death or serious injury. The color associated with WARNING is ORANGE.

 **CAUTION** indicates a hazardous situation that, if not avoided, could result in minor or moderate injury. The color associated with CAUTION is YELLOW.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation that, if not avoided, could result in machine damage or property damage. The color associated with Notice is BLUE.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine damage or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: Note indicates additional information that clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

Safety rules

General safety rules

Use caution when you operate the machine on slopes. Raised equipment, full tanks and other loads will change the center of gravity of the machine. The machine can tip or roll over when near ditches and embankments or uneven surfaces.

Never permit anyone other than the operator to ride on the machine.

Never operate the machine under the influence of alcohol or drugs, or while you are otherwise impaired.

When digging or using ground-engaging attachments, be aware of buried cables. Contact local utilities to determine the locations of services.

Pay attention to overhead power lines and hanging obstacles. High voltage lines may require significant clearance for safety.

Hydraulic oil or diesel fuel leaking under pressure can penetrate the skin, causing serious injury or infection.

- DO NOT use your hand to check for leaks. Use a piece of cardboard or paper.
- Stop the engine, remove the key, and relieve the pressure before you connect or disconnect fluid lines.
- Make sure that all components are in good condition. Tighten all connections before you start the engine or pressurize the system.
- If hydraulic fluid or diesel fuel penetrates the skin, seek medical attention immediately.
- Continuous long term contact with hydraulic fluid may cause skin cancer. Avoid long term contact and wash the skin promptly with soap and water.

Keep clear of moving parts. Loose clothing, jewelry, watches, long hair, and other loose or hanging items can become entangled in moving parts.

Wear protective equipment when appropriate.

DO NOT attempt to remove material from any part of the machine while it is being operated or while components are in motion.

Make sure that all guards and shields are in good condition and properly installed before you operate the machine. Never operate the machine with shields removed. Always close access doors or panels before you operate the machine.

Dirty or slippery steps, ladders, walkways, and platforms can cause falls. Make sure these surfaces remain clean and clear of debris.

A person or pet within the operating area of a machine can be struck or crushed by the machine or its equipment. DO NOT allow anyone to enter the work area.

Raised equipment and/or loads can fall unexpectedly and crush persons underneath. Never allow anyone to enter the area underneath raised equipment during operation.

Always keep windows, mirrors, all lighting, and Slow-Moving Vehicle (SMV) emblem clean to provide the best possible visibility while you operate the machine.

Operate controls only when seated in the operator's seat, except for those controls expressly intended for use from other locations.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com