OPERATOR'S MANUAL

NEW HOLLAND


TD60D

TD70D


TD80D

TD90D

TD95D

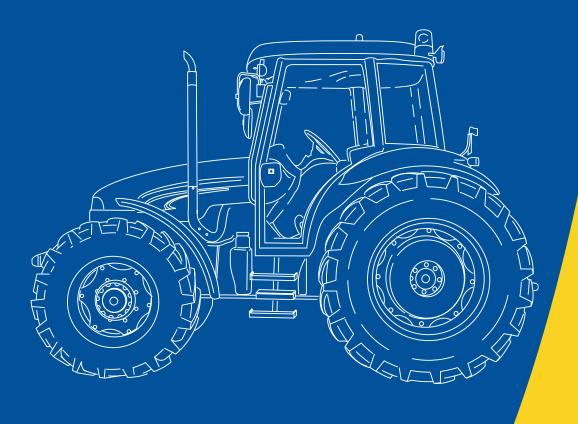



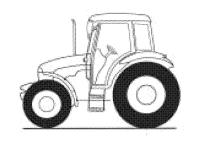

NEW HOLLAND

TD 60D

TD 70D

TD 80D

TD 90D

TD 95D

OPERATOR'S MANUAL



Electro-magnetic Interference (EMC)

This tractor complies strictly with the European Regulations on electro-magnetic emissions. However, interference may arise as a result of add-on equipment which may not necessarily meet the required standards. As such interference can result in serious malfunction of the unit and/or create unsafe situations, you must observe the following:

- Ensure that each piece of non-New Holland equipment fitted to the tractor bears the CE mark.
- The maximum power of emission equipment (radio, telephones, etc.) must not
 exceed the limits imposed by the national authorities of the country where you use
 the tractor.
- The electro-magnetic field generated by the add-on system should not exceed 24 V/m at any time and at any location in the proximity of electronic components.

Failure to comply with these rules will render the New Holland warranty null and void.

SECTION COLOUR CODE

The sections contained within this book are shown below and are easily identified by the coloured strip on the right-hand edge of each page.

1 – General Information and Safety
2 – Controls, Instruments and Operation
3 – Field Operation
4 – Lubrication and Maintenance
5 – Fault Finding
6 – Vehicle Storage
7 – Accessories
8 – Specifications
9 – First 50–hour Service Forms
10 – Index



CONTENTS

Title	Page
Section 1 – General Information and Safety	
To the owner	1–1
Tractor identification	1–2
Ecology and the environment	1–5
Safety precautions	1–6
Safety decals	1–12
International symbols	1–15
Section 2 – Controls, Instruments and Operation	
Safety covers and guards	2–2
Controls and instruments	2–4
Instrument panel	2–5
Instrument console controls	2–11
Right–hand side operating controls	2–12
Left-hand side operating controls	2–13
Cab controls	2–15
Seats	2–16
Cab	2–19
Cab air conditioning system	2–27
Transmission with range gear – 30 km/h (19 mph)	
Transmission with range gear and shuttle– 30 km/h (19 mph)	2–33
Transmission with creeper and shuttle– 30 km/h (19 mph)	
Mechanically controlled four wheel drive	2–39
Mechanically controlled differential lock	2–40
Towing the tractor	2–42
Loading the tractor onto a transporter	2–42
Checks before using the tractor	2–43
Section 3 – Field Operation	
Starting with thermostart the engine	3–3
Power take-off	3–5
Hydraulic lift	3–17
Three–point linkage Cat. II	3–22
Remote control valves	3–29
Wheel track adjustment	3–31
Tyres	3–38
Tyre combinations	3–42
Ballasting	3–49
Static weight distribution	3–50

Section 4 – Lubrication and Maintenance
Access for inspection and maintenance
Lubrication and maintenance table
Flexible maintenance
When the warning light is on
10-hour / daily service
50-hour service
300-hour service
600-hour service
900—hour service
1200 hour service
1200-hour or every 2 years service
Electrical system
Recommendations for bodywork maintenance
Lubricant capacities and specifications
Section 5 – Fault Finding
Introduction
Engine
Electrical system
Hydraulic system
Three-point linkage
Brakes
Cab
Section 6 – Vehicle Storage
Section 7 – Accessories
Beacon lamp
Drawbars and towing attachments
Hydralic trailer brake
Section 8 – Specifications
General Dimensions
Weights 8–4
Engine specifications
Timing 8–6
Fuel system
Lubrication 8–7
Cooling system
Transmission
Power take–off
Hydraulic system
Three-point linkage
Front axle
Steering
Steering 8–10 4WD front axle 8–10
Steering 8–10 4WD front axle 8–10 Brakes 8–11
4WD front axle 8–10 Brakes 8–11
4WD front axle
4WD front axle 8–10 Brakes 8–11 Bodywork and driving position 8–11
4WD front axle 8–10 Brakes 8–11 Bodywork and driving position 8–11 Towing devices 8–11 Electrical system 8–12
4WD front axle 8–10 Brakes 8–11 Bodywork and driving position 8–11 Towing devices 8–11

SECTION 1

GENERAL INFORMATION AND SAFETY

TO THE OWNER

GENERAL

This Manual has been prepared to assist you in the correct procedure for running—in, driving and operating and for the maintenance of your new tractor. Read this Manual carefully. Your tractor is intended for use in normal and customary agricultural applications.

If at any time you require advice concerning your tractor, do not hesitate to contact your New Holland dealer. He has factory trained personnel, genuine manufacturers' parts and the necessary equipment to carry out all your service requirements.

Your tractor has been designed and built to give maximum performance, economy and ease of operation under a wide variety of operating conditions. Prior to delivery, the tractor was carefully inspected, both at the factory and by your dealer to ensure that it reaches you in optimum condition. To maintain this condition and ensure trouble—free operation, it is important that the routine services, as specified in Section 4 of this Manual, are carried out at the recommended intervals.

CLEANING THE TRACTOR

Your tractor is a state-of-the-art machine with sophisticated controls. This should be borne in mind when cleaning the tractor, particularly if using a high pressure washer. Even though every precaution has been taken to safeguard electrical components and connections, the pressure generated by some of these machines is such that complete protection against water ingress cannot be guaranteed.

When using a high pressure washer, do not stand too close to the tractor and avoid directing the jet at electronic components, electrical connections, breathers, seals, filler caps, etc. Never direct a cold water jet at a hot engine or exhaust.

SAFETY

Pages 1–6 to 1–11 inclusive list the precautions to be observed to ensure your safety and the safety of others. Read the safety precautions and follow the advice offered **before** operating the tractor.

FIRST 50 HOUR SERVICE

In Section 9, at the back of this Manual, you will find the 50-hour service reports.

After you have operated the tractor for 50 hours, take your tractor, together with this Manual, to your dealer. He will then perform the factory recommended 50-hour service and complete the service report sheets (pages 9–1 and 9–3). The first sheet (page 9–1) is the dealer's copy and should be removed by the dealer after the service has been carried out. The second sheet (page 9–3) is your copy of the service performed. Ensure that you and the dealer sign both copies.

SERVICE PARTS

It should be pointed out that genuine parts have been examined and approved by the Company. The installation and/or use of 'non-genuine' products could have negative effects upon the design characteristics of your tractor and thereby affect it's safety. The Company is not liable for any damage caused by the use of 'non-genuine' parts and accessories. Only genuine replacement parts should be used. The use of non-genuine parts may invalidate legal approvals associated with this product.


It is prohibited to carry out any modifications to the tractor unless specifically authorised, in writing, by the After Sales Service department of the Company.


WARRANTY


Your tractor is warranted according to legal rights in your country and the contractual agreement with the selling dealer. No warranty shall, however, apply if the tractor has not been used, adjusted and maintained according to the instructions given in the Operator's Manual.

TRACTOR IDENTIFICATION

Serial numbers identify the tractor and its main components. The identification data must be supplied by the dealer for requests for spare parts or service operations. Identification data is of fundamental importance in the event of theft of the tractor. The location of the various identification data is shown below.

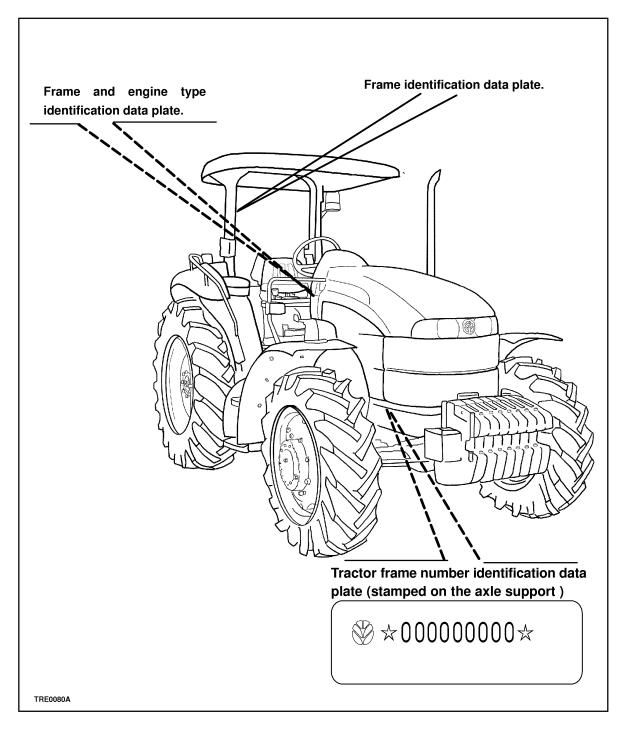

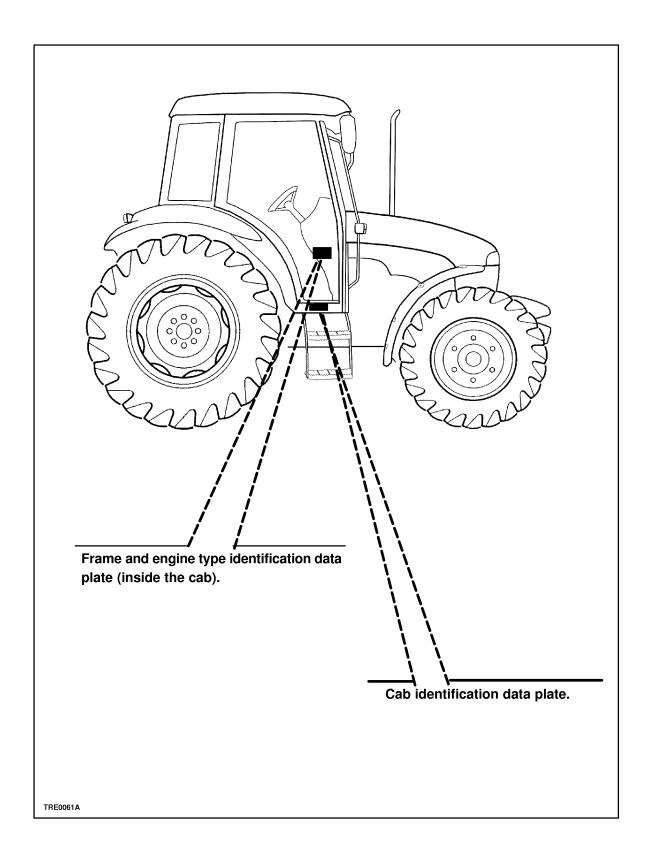

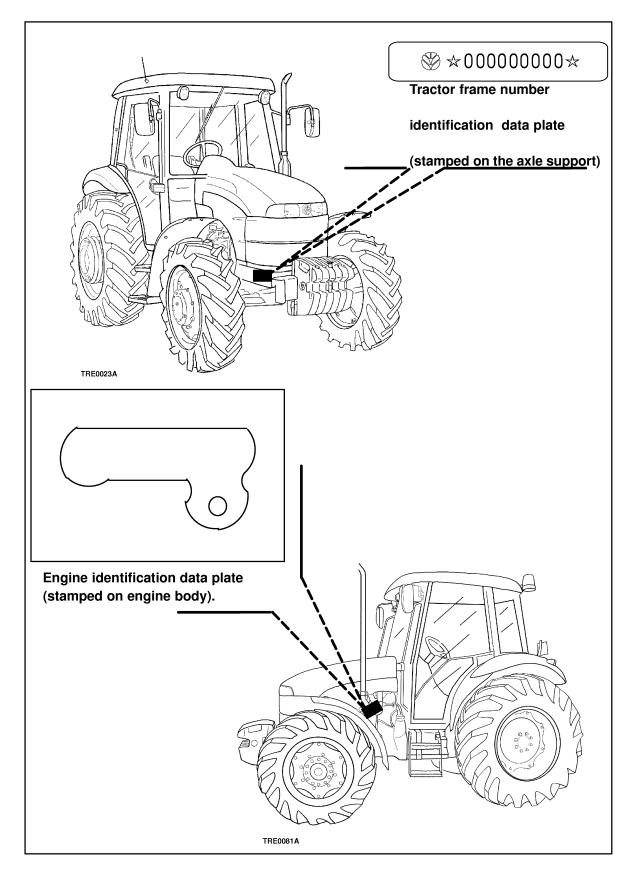

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com