

ORIGINAL INSTRUCTIONS

PUMA I 654
PUMA I 804
Tractor

OPERATOR'S MANUAL

CNH Industrial (Harbin) Machinery Co. Ltd.
No. 78 Songhua Road, Core District Hanan New Industry Zone,
Harbin City, Heilongjiang Province, P.R. China
+86 4008676600 (for customer in the areas other than Xinjiang Province)/
+86 4000991805 (for customer in Xinjiang Province)

Part number 51426103
1st edition English
February 2018



Contents

1 GENERAL INFORMATION

Metric and imperial units abbreviations.....	1-1
To the owner.....	1-3
Product identification.....	1-5
Engine identification.....	1-6
Drive line identification.....	1-7
Product identification plate.....	1-8
Ecology and the environment.....	1-9
Noise level information sheet.....	1-12
Programming tractor functions.....	1-12
Operator's manual storage.....	1-13
Before operating the tractor.....	1-13
International symbols.....	1-15
Vibration level information sheet.....	1-16
Machine stability.....	1-17

2 SAFETY INFORMATION

Safety precautions.....	2-1
Personal safety.....	2-2
Personal safety.....	2-4
Safety decals.....	2-6
Prevention of fire or explosions.....	2-15
Fire extinguisher.....	2-16
Protection offered by the tractor.....	2-17
Emergency exit.....	2-20
Intended use statement.....	2-21
Instructor's seat.....	2-23

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Introduction.....	3-1
Cab air filters.....	3-5
In cab storage (where fitted).....	3-6
Cable and wiring routing.....	3-7
Mobile telephone usage.....	3-7
Implement monitor installation.....	3-8
Cab air pressurisation control (where fitted).....	3-8

OPERATOR'S SEAT

Seat.....	3-10
Seat belt.....	3-14

INSTRUCTOR'S SEAT

Instructional seat.....	3-15
-------------------------	------

PASSENGER'S SEAT

Passenger seat	3-16
----------------------	------

FORWARD CONTROLS

Ignition key	3-17
Hazard light switch	3-17
Lights and turn indicator lever	3-18
Follow me home lights	3-18
Windshield wiper and washer controls	3-20
Electronic parking brake	3-21
Clutch pedal	3-25
Foot brakes	3-25
Exhaust brake (where fitted)	3-26
Steering column	3-27

LEFT-HAND SIDE CONTROLS

Hand brake	3-28
------------------	------

RIGHT-HAND SIDE CONTROLS

Integrated control panel	3-29
Integrated control panel	3-31

REARWARD CONTROLS

Hydraulic master switch	3-33
Fast steering system (where fitted)	3-34
Battery isolator control switch	3-36
Climate controls	3-37
Manual temperature control	3-39
Automatic Temperature Control (ATC)	3-40

OVERHEAD CONTROLS

Interior light	3-42
----------------------	------

INSTRUMENT CLUSTER

Integrated control unit	3-43
Gauges	3-43
Indicator and warning lights	3-44
Displays	3-47
Transmission display	3-48
Keypad basic	3-50
Keypad enhanced	3-51
Selecting or changing the display settings	3-53
Adjust menu	3-54
Configure menu	3-56
Performance monitor	3-59
Armrest color display	3-64
Pop-up screens on color display	3-66

Performance monitor on color display	3-71
Programming the displays	3-74
Alarm functions	3-77
Accessing stored fault codes	3-79
Warning and advisory symbols	3-80

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Refueling the tractor	4-1
-----------------------------	-----

STARTING THE UNIT

Starting the engine	4-3
Grid heater cold start aid (where fitted)	4-4
Fuel heater (where fitted)	4-5
Coolant immersion heater (where fitted)	4-5
Transmission oil heater (where fitted)	4-6
Boosting the battery	4-7

STOPPING THE UNIT

Stopping the engine	4-8
Automatic engine shut down	4-8
Automatic engine shut down with enhanced keypad (where fitted)	4-9

MOVING THE UNIT

Operating in cold temperatures	4-10
Reversible engine fan	4-11

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

Carrying the tractor on a transporter	5-1
Secure the high visibility roof panel	5-1

RECOVERY TRANSPORT

Freeing a stuck tractor	5-2
Towing the tractor	5-3

6 WORKING OPERATIONS

GENERAL INFORMATION

Variable engine power management	6-1
Constant engine speed	6-3
Differential lock	6-6
Four wheel drive	6-8
Front axle suspension (where fitted)	6-10

AUTOMATED HEADLAND FUNCTIONS	6-11
------------------------------------	------

Quick guide	6-11
-------------------	------

Explanation of symbols	6-13
Electronic modules - Operating – Recording and replaying	6-14
Recording a sequence	6-18
Replaying a sequence	6-20
Headland function and color display screen	6-25
Deleting a sequence with color display	6-28

TRANSMISSION

Transmission operation	6-29
Shuttle lever	6-30
Speed matching	6-31
Stationary control	6-32
Anti jack knife	6-33
Transmission display	6-34
Foot throttle pedal	6-35
Hand throttle	6-35
Shuttle lever	6-36
Transmission display	6-38
Fault codes	6-40
RANGECOMMAND TRANSMISSION	6-41
Transmission operation	6-41
Powershift control lever	6-42
Driving the tractor	6-43
Speed matching	6-45
Auto shift function	6-46
Auto shifting field mode	6-47
Auto shifting in road mode	6-50
Setting the sharp shuttle function	6-53
Creeper gears (where fitted)	6-54
POWERCOMMAND TRANSMISSION	6-55
Transmission operation	6-55
Driving the tractor	6-56
Speed matching	6-58
Auto shift function	6-59
Auto shifting field mode	6-60
Auto shifting in road mode	6-63
Auto shifting and 'go to' modes	6-66
Creeper gears (where fitted)	6-68

REAR POWER TAKE-OFF

Power Take-Off (PTO) operating precautions	6-69
Changing the PTO output shaft	6-69
Attaching PTO driven equipment	6-70
Power Take-Off (PTO) operation	6-71
Two speed PTO systems	6-76
Three speed PTO systems	6-77
Ground drive PTO (where fitted)	6-79
External PTO controls	6-80
Auto PTO operation	6-82

FRONT POWER TAKE OFF

Power Take-Off (PTO) operation	6-85
Auto PTO operation	6-87

REAR HITCH

Electronic Draft Control (EDC)	6-89
Settings and display	6-94
Electronic Draft Control (EDC) operation.....	6-96

FRONT HITCH

Settings and adjustments.....	6-103
Hitch operation	6-106
Auxiliary front couplers (where fitted).....	6-111

HYDRAULIC REMOTE CONTROL VALVES

Remote control valves.....	6-113
Operating with remote valves	6-116
Connecting remote cylinders	6-119
Hydraulic oil level when using remote hydraulic equipment.....	6-121

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

Remote control valves.....	6-123
Settings and adjustments.....	6-131
Setting the remote valve priority	6-138
Creating timer programs.....	6-140
Connecting remote cylinders	6-147
Operating with remote valves	6-149
Joystick operation with a front loader.....	6-151
Mid mount remote valves.....	6-157
External EHR controls	6-159
Hydraulic oil level when using remote hydraulic equipment.....	6-160

HYDRAULIC POWER BEYOND PORT

Hydraulic power beyond for external services with mechanical-hydraulic remote control valves.....	6-162
---	-------

THREE POINT HITCH

Attaching three-point hitch equipment.....	6-164
Lift rod adjustment.....	6-166
Top link adjustment	6-168
Flexible link end adjustment.....	6-170
Quick hitch.....	6-171
Linkage stabilizer adjustment.....	6-173

DRAWBARS AND TOWING ATTACHMENTS

Drawbars and towing attachments	6-177
---------------------------------------	-------

Swinging drawbar	6-180
Rear trailer hitches	6-183

TRAILER BRAKING SYSTEMS

Air-operated trailer brakes.....	6-189
Trailer brake bias control	6-193
Auxiliary air supply connector (where fitted).....	6-193

WHEEL TRACK ADJUSTMENT

Front wheel track adjustment.....	6-194
Front wheel alignment	6-198
Steering stops	6-199
Front axle oscillation stops	6-199
Front fender	6-200
REAR WHEEL TRACK ADJUSTMENT	6-202
Flange type axle (where fitted)	6-202
Bar type axle (where fitted).....	6-205
Dual rear wheels (where fitted).....	6-211

BALLASTING AND TIRES

Ballasting and tires	6-214
Iron weights (where fitted).....	6-218
Liquid ballast	6-221
Tire inflation.....	6-223
Tire pressures and permissible loads	6-224

AUXILIARY POWER CONNECTIONS

Diagnostic socket.....	6-227
Trailer socket electrical	6-227
Trailer socket electrical	6-228
ELECTRICAL POWER CONNECTORS	6-229
Internal power connectors.....	6-229
External power connectors	6-232

7 MAINTENANCE

GENERAL INFORMATION

Introduction	7-1
Fuel requirement	7-2
Biodiesel fuel	7-4
Protective devices	7-6
Lubricants and coolants	7-8
Tractor jacking points.....	7-10
General specifications	7-11
Organic Acid Technology (OAT) coolant.....	7-12

MAINTENANCE CHART

Maintenance chart.....	7-13
------------------------	------

WHEN THE WARNING LIGHT IS ON

Change the engine air cleaner outer element	7-15
Drain the fuel system water separator	7-18
Check the brake fluid level	7-19

EVERY 10 HOURS OR EACH DAY

Check the engine coolant level	7-20
Check the engine oil level	7-21
Check the remote control valve drain bottles	7-21
Check windscreen washer reservoir	7-22

FIRST 50 HOURS

Service operations	7-23
--------------------------	------

EVERY 50 HOURS

Clean the cab air filter	7-24
Clean the cooler section	7-26
All grease fittings	7-27
Check the front and the rear wheel nuts	7-33
Check the tire pressures and the tire condition	7-33

EVERY 100 HOURS

Inspect the poly V-belt	7-34
Inspect the compressor drive belt	7-34

EVERY 300 HOURS

Check the battery fluid level	7-35
Adjust the hand brake	7-36
Check the transmission oil level, the rear axle oil level and the hydraulic oil level	7-37
Check the 4WD front axle differential oil level and the hubs oil level	7-38
Check the front PTO gearbox oil level	7-38

EVERY 600 HOURS

Change engine oil and filter	7-39
Change the first stage fuel filter and the fuel filter element	7-41
Change the engine air cleaner outer element	7-42
Change the charge pump oil filter	7-44
Check the engine air intake connections	7-45
Check the transmission oil cooler pipe couplings	7-46

EVERY 1200 HOURS OR ANNUALLY

Change the cab air filters	7-47
Change the main oil filter cartridge	7-48
Change the 4WD differential oil	7-49
Change the 4WD planetary hub oil	7-50
Change the front PTO gearbox oil	7-50

EVERY 1200 HOURS OR EVERY 2 YEARS

Change the engine air cleaner inner element	7-51
Check the valve tappet clearance	7-52
Change the air brake drier reservoir.....	7-53
Change the transmission oil, the rear axle oil and the hydraulic oil	7-54

EVERY 1800 HOURS OR EVERY 2 YEARS

Change the engine breather filter	7-55
---	------

EVERY 3600 HOURS OR EVERY 4 YEARS

Change the engine coolant fluid - OAT type coolant	7-56
--	------

EVERY 36 MONTHS

Check the air-conditioning system	7-61
---	------

GENERAL MAINTENANCE

Cleaning the tractor.....	7-62
Check first stage fuel filter and water trap.....	7-64
Bleeding the fuel system	7-64
Hydraulic system hoses	7-65
Check the brake pedal latching/unlatching	7-65
Adjust the cab suspension (where fitted).....	7-66
Adjust the automatic pickup hitch	7-67
Headlight and work light adjustment	7-68
Bulb replacement.....	7-69
Fuses and relays	7-73
Protecting the electronic and electrical systems during battery charging or welding..	7-81
Battery removal and installation	7-82

STORAGE

Tractor storage	7-83
Preparation for use after storage	7-83

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

Introduction	8-1
--------------------	-----

ALARM(S)

Fault codes and symbols	8-2
-------------------------------	-----

SYMPTOM(S)

Engine	8-4
Transmission	8-5
Hydraulics	8-5

Three-point hitch	8-6
Brakes	8-6
Cab	8-6
Electrical system	8-7

9 SPECIFICATIONS

General dimensions	9-1
Maximum operating angle	9-4
Maximum permissible operating weights	9-5
Capacities	9-6
Engine	9-7
Fuel system	9-7
Air cleaner system	9-8
Cooling system	9-8
Transmission	9-8
Rear Power Take-Off (PTO)	9-10
Front Power Take-Off (PTO)	9-10
Hydraulic system	9-11
Three-point hitch	9-11
Remote control valves	9-13
Three-point hitch front	9-13
Front remote control valve couplers	9-13
Brakes	9-14
Steering	9-14
Electrical equipment	9-15
Ground speed chart Semi-Powershift transmission	9-16
Ground speed chart Full-Powershift transmission	9-18
Minimum hardware tightening torques	9-21

10 ACCESSORIES

Radio (where fitted)	10-1
External rear view mirrors	10-1
Auxiliary headlights	10-3
Rotating beacon	10-4
Front-end loader fixation points	10-5

11 FORMS AND DECLARATIONS

CE declaration of conformity	11-1
Service record 1st 50 hour, Owner copy	11-3
Service record 1st 50 hour, Dealer copy	11-5

1 - GENERAL INFORMATION

Metric and imperial units abbreviations

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m ²	square foot	ft ²
	square millimeter	mm ²	square inch	in ²
			square inch	in ²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency - Rotational				
	revolution per minute	r/min	revolution per minute	r/min ^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	μm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per mass				
	milligram per kilogram	mg/ kg	parts per million	ppm
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH ₂ O
	megapascal	MPa	pound per square inch	psi
	millibar	mbar		
	bar	bar		

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Temperature (other than thermodynamic)				
	degrees Celsius	°C	degrees Fahrenheit	°F
Time				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
Torque (includes bending moment, moment of force, and moment of a couple)				
	newton meter	N m	pound foot	lb ft
			pound foot	lb in
Velocity				
	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimeter per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
Volume (includes capacity)				
	cubic meter	m ³	cubic yard	yd ³
				cu yd
	liter	l	cubic inch	in ³
	liter	l	US gallon	US gal
			UK gallon	UK gal
			US quart	US qt
			UK quart	UK qt
	milliliter	ml	fluid ounce	fl oz
Volume per time (includes discharge and flow rate)				
	cubic meter per minute	m ³ /min	cubic foot per minute	ft ³ /min
	liter per minute	l/min	US gallon per minute	US gal/min
	milliliter per minute	ml/min	UK gallon per minute	UK gal/min
Sound power level and sound pressure level				
	decibel	dB	decibel	dB

To the owner

GENERAL INFORMATION

This manual has been prepared to assist you in the correct procedure for running- in, driving and operating and for the maintenance of your new tractor. Read this manual carefully. Your tractor is intended for use in normal and customary agricultural applications.

If at any time you require advice concerning your tractor, do not hesitate to contact your authorized dealer. He has factory trained personnel, genuine manufacturers' parts and the necessary equipment to carry out all your service requirements.

Your tractor has been designed and built to give maximum performance, economy and ease of operation under a wide variety of operating conditions. Prior to delivery, the tractor was carefully inspected, both at the factory and by your dealer to make sure that it reaches you in optimum condition. To maintain this condition and make sure trouble-free operation, it is important that the routine services, as specified on **Maintenance chart** of this manual, are carried out at the recommended intervals.

Operator's manual storage

The Operators Manual supplied with your tractor is an important source of information and should be stored safely.

The manual is written specifically for your tractor so it is important that you make a note of the print number and issue date which can be found on the cover. In the event the manual is lost or damaged it can be replaced with the correct version.

A storage pocket for the Operators Manual can be found on the rear of the seat. The manual should be kept in this pocket at all times when not in use.

The table of contents page(s) are provided to have an overview of main manual's topics. A detailed alphabetical index is available at the end of this manual for locating specific items.

Cleaning the tractor

Your tractor is a state-of-the-art machine with sophisticated, electronic controls. This should be taken into consideration when cleaning the tractor, particularly if using a high pressure washer. Even though every precaution has been taken to safeguard electronic components and connections, the pressure generated by some of these machines is such that complete protection against water ingress cannot be guaranteed.

When using a high pressure washer, do not stand too close to the tractor and avoid directing the jet at electronic components, electrical connections, breathers, seals, filler caps, etc. Never direct a cold water jet at a hot engine or exhaust.

Failure to comply with these rules will render the warranty null and void.

Safety

Pages 1--8 to 1--36 inclusive list the precautions to be observed to ensure your safety and the safety of others. Read the safety precautions and follow the advice offered before operating the tractor.

First 50 hour service

In section 8, at the back of this manual, you will find the **50 h** service reports.

NOTICE: *It is important the 50 h service is carried out as recommended to make sure your tractor provides optimum performance and efficiency.*

After you have operated the tractor for **50 h**, take your tractor, together with this manual, to your dealer. He will then perform the factory recommended **50 h** service and complete the service report sheets (see **Service record 1st 50 hour, Owner copy** and **Service record 1st 50 hour, Dealer copy**). The first sheet (see **Service record 1st 50 hour, Owner copy**) is your copy of the service performed. The second sheet (see **Service record 1st 50 hour, Dealer copy**) is the dealer's copy and should be removed by the dealer after the service has been carried out. make sure that you and the dealer sign both copies.

Service parts

It should be pointed out that genuine parts have been examined and approved by the company. The installation and/or use of 'non-genuine' products could have negative effects upon the design characteristics of your tractor and thereby affect its safety. The company is not liable for any damage caused by the use of 'non-genuine' parts and accessories. Only genuine replacement parts should be used. The use of non-genuine parts may invalidate legal approvals associated with this product.

It is prohibited to carry out any modifications to the tractor unless specifically authorized, in writing, by the after sales service department of the company.

Warranty

Your tractor is warranted according to legal rights in your country and the contractual agreement with the selling dealer. No warranty shall, however, apply if the tractor has not been used, adjusted and maintained according to the instructions given in the operator's manual.

Use of biodiesel fuels

NOTICE: *Before using biodiesel fuels in your tractor, see the information on 7-4 regarding the storage and use of bio diesel fuels.*

Emission controls

NOTE: The engine and fuel system on your machine is designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result

in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!

Buy Now



Our support email:

ebooklibonline@outlook.com