

ORIGINAL INSTRUCTIONS

PUMA1854
PUMA2104
PUMA2254
Tractor

OPERATOR'S MANUAL

CNH Industrial (Harbin) Machinery Co. Ltd.
No. 78 Songhua Road, Core District Hanan New Industry Zone,
Harbin City, Heilongjiang Province, P.R. China
+86 4008676600 (for customer in the areas other than Xinjiang Province)/
+86 4000991805 (for customer in Xinjiang Province)

Part number 51426105
1st edition English
July 2018



Contents

1 GENERAL INFORMATION

CE Declaration of conformity	1-1
Metric and Imperial units abbreviations	1-3
To the owner	1-5
Note to the owner	1-6
Product identification	1-9
Engine identification	1-10
Drive line identification	1-11
Cab identification	1-11
Ecology and the environment	1-12
Noise level	1-14
Programming tractor functions	1-15
Before operating the tractor	1-16
International symbols	1-17
Vehicle vibration levels	1-18
Machine stability	1-19
Instructor's seat	1-23
Passenger's seat	1-24

2 SAFETY INFORMATION

Safety precautions	2-1
Safety decals	2-3
Safety rules	2-12
Fire extinguisher	2-19
Protection offered by the tractor	2-20
Intended use statement	2-23
Safety aspects	2-25

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Cab access/exit	3-1
cab-Localization Overview	3-5
Cab air filters	3-7
In cab storage (where applicable)	3-8
Cable routing	3-9
Mobile phone	3-9
Monitor installation	3-10
Cab air pressurisation control (where fitted)	3-10

OPERATOR'S SEAT

Air suspension seat	3-12
Air suspension seat deluxe	3-14
Seat belt	3-20

INSTRUCTOR'S SEAT

Instructional seat	3-21
--------------------------	------

EXTERIOR CONTROLS

Passenger's seat	3-22
------------------------	------

FORWARD CONTROLS

Key start switch	3-23
Hazard light switch	3-23
Light's and turn indicator lever	3-24
Follow me home light's	3-24
Windshield wiper and washer controls	3-25
Park brake and electronic park lock (EPL)	3-26
Foot brakes	3-30
Steering column	3-31
Airflow vents	3-32

LEFT-HAND SIDE CONTROLS

Handbrake	3-33
-----------------	------

RIGHT-HAND SIDE CONTROLS

Integrated control panel	3-34
--------------------------------	------

REARWARD CONTROLS

Switch panel	3-39
Battery isolator switch (where fitted)	3-44
Climate controls	3-45
Temperature controls, cab	3-46

OVERHEAD CONTROLS

Worklights	3-49
Radio or audio system	3-50

INSTRUMENT CLUSTER

Analogue digital instrument cluster	3-51
Gauges	3-51
Indicator and warning lights	3-51
Displays	3-54
Keypad enhanced	3-56
Display settings	3-58
Display settings	3-58
Ground speed calibration	3-59
Ground speed calibration	3-65
Performance monitor	3-68
Performance monitor	3-75
Armrest display	3-80
Alarm functions	3-82

Error code access	3-84
Error code access	3-85
Warning and advisory symbols	3-86
Color display	3-93
Color display screen	3-95
Performance monitor	3-100
Setting the implement width	3-103

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Refueling the tractor	4-1
-----------------------------	-----

STARTING THE UNIT

Engine start-up	4-2
Starting a cold engine	4-4
Fuel heater (where fitted)	4-5
Coolant immersion heater (where fitted)	4-5
Transmission oil heater (where fitted)	4-6
Booster battery procedure	4-8

STOPPING THE UNIT

Engine shutdown	4-9
Engine automatic shutdown	4-9
Engine automatic shutdown with enhanced keypad (where fitted)	4-10

MOVING THE UNIT

Engine start-up	4-11
-----------------------	------

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

Tractor transporting	5-1
Roof hatch	5-1

RECOVERY TRANSPORT

Towing the tractor	5-2
--------------------------	-----

6 WORKING OPERATIONS

GENERAL INFORMATION

Engine power management	6-1
Engine speed control	6-3
Engine constant speed	6-5
Differential control	6-8
Four wheel drive	6-10
Front axle suspension (where fitted)	6-13
Automated headland functions	6-15

Quick guide	6-15
Headland turn sequence symbols HTS quick reference HTS Quick reference	6-17
Record and replay	6-19
Record and replay	6-21
Universal symbols	6-24
Record a sequence	6-25
Record and replay	6-27
Fast steering system (where fitted)	6-31

TRANSMISSION

Full powershift transmission	6-35
Clutch pedal	6-35
Foot throttle pedal	6-36
Transmission operation	6-37
Transmission controls	6-38
Driving the tractor	6-40
Autoshift function	6-42
Speed matching	6-47
Setting the forward and reverse gear ratios	6-48
Creeper gears	6-49
Transmission error codes	6-50
Ground speed Ground speeds	6-51
Drive pedal	6-63

REAR POWER TAKE-OFF

PTO operation safety rules	6-69
Front PTO drive shaft	6-69
Attaching Power-Take Off (PTO) driven equipment	6-71
PTO operation	6-72
PTO operation	6-78
Two speed PTO systems	6-82
Two speed PTO systems	6-84
Three speed PTO systems	6-86
PTO shiftable multi speed	6-87
Electronic PTO displays (where fitted) Electronic (where fitted)	6-89
PTO external controls	6-90
Auto PTO operation	6-92

FRONT POWER TAKE OFF

Front Power Take-Off (PTO) operation	6-96
PTO automatic system	6-99

REAR HITCH

Electronic Draft Control (EDC)	6-102
Draft control electronic	6-105
Rear hitch controls	6-109
Three-point hitch	6-111
Electronic Draft Control (EDC)	6-113
Electronic Draft Control (EDC) operation	6-118

Slip limit	6-124
External EHR controls	6-125

FRONT HITCH

Front hitch	6-127
Front hitch operation	6-130
Auxiliary front couplers (where fitted).....	6-136
Auxiliary front couplers (where fitted).....	6-138
External hitch controls	6-140

HYDRAULIC REMOTE CONTROL VALVES

Rear remote control valve(s)	6-141
Remote control valve operation	6-144
Connecting remote cylinders	6-147
Connecting remote cylinders	6-149
Hydraulic oil level	6-151

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

Mid mount control valve	6-153
Remote control valves	6-154
Remote control valves	6-160
Remote control valves	6-161
Mid-mount remote control valve electrohydraulic remote valve - adjust	6-167
Mid mount control valve	6-171
Remote control valve operation	6-173
Remote control valve operation	6-180
Remote control valve operation	6-182
Joystick for control valves	6-184
Joystick operation	6-187
Mid mount control valve	6-193
Remote valve controls	6-195
Hydraulic oil level	6-196

HYDRAULIC POWER BEYOND PORT

Power beyond circuit	6-198
Power beyond circuit	6-200

THREE POINT HITCH

Three-point hitch	6-201
Lift rods	6-203
Top link	6-205
Lower links	6-206
Quick hitch	6-207
Lower links	6-209

DRAWBARS AND TOWING ATTACHMENTS

Drawbars and towing attachments	6-213
Drawbars and towing attachments	6-215

Automatic pickup hitch	6-219
Automatic pickup hitch	6-223
Rear tow hitch	6-227

TRAILER BRAKING SYSTEMS

Trailer brakes air operated	6-233
Trailer brakes air operated (Italy only)	6-237
Trailer brake bias control	6-238
Auxiliary air supply	6-238
Trailer brakes hydraulic operated	6-239
Trailer brakes hydraulic operated (Italy only)	6-240

WHEEL TRACK ADJUSTMENT

Front wheels	6-241
Front wheel alignment	6-246
Front axle	6-247
Front drive axle	6-247
Front wheel fenders	6-248
Rear axle	6-250
Rear axle	6-254
Dual wheels	6-260

BALLASTING AND TIRES

Ballasting and tires	6-263
Iron weights (where fitted)	6-266
Liquid Ballast	6-268
Tire inflation	6-270
Tire load and inflation charts	6-271

AUXILIARY POWER CONNECTIONS

Diagnostic socket	6-273
Trailer electrical socket	6-273
Trailer electrical socket	6-274
Internal power connectors	6-275
External power connectors	6-277

7 MAINTENANCE

GENERAL INFORMATION

Introduction	7-1
Diesel fuel	7-2
Biodiesel fuel	7-3
Biodiesel fuel - Biodiesel fuels	7-5
Engine oil change	7-7
Protective devices	7-8
Lubricants and coolants	7-10
Tractor jacking points	7-12
General specifications	7-13
Capacities	7-14
Organic Acid Technology (OAT) coolant	7-15

MAINTENANCE CHART

Maintenance chart	7-16
-------------------------	------

WHEN THE WARNING LAMP LIGHTS

Engine air cleaner	7-18
Draining the fuel filter water separator	7-19

EVERY 10 HOURS OR EACH DAY

Engine coolant level	7-20
Engine oil level	7-21
Remote valve collection bottle	7-21
Windscreen washer reservoir	7-22
Trailer brakes air operated	7-22

FIRST 50 HOURS

Service operations	7-23
--------------------------	------

EVERY 50 HOURS

Cab air filters	7-24
Engine and hydraulic coolers	7-26
Grease fittings	7-27
Wheel and axle torques	7-34
Tire inflation pressures	7-34

EVERY 100 HOURS

Drive belts	7-35
Drive belts	7-35

EVERY 300 HOURS

Battery electrolyte level	7-36
Handbrake	7-37
Transmission rear axle and hydraulic system oil level	7-38
Front axle	7-38
PTO Gearbox	7-39
Front PTO oil level	7-39

EVERY 600 HOURS

Change engine oil and filter	7-40
Fuel filters	7-42
Engine air cleaner	7-43
Transmission / hydraulic oil filters	7-44
Engine air intake hoses	7-45
Transmission oil cooler	7-46

EVERY 1200 HOURS OR ANNUALLY

Cab air filters	7-47
Transmission / hydraulic oil filters	7-49

Transmission oil	7-51
Front axle differential oil level	7-52
Front axle - hubs	7-53
Front Power Take-Off (PTO).....	7-53
Rear axle drive shaft	7-54

EVERY 1200 HOURS OR EVERY 2 YEARS

Battery check	7-55
Engine air cleaner	7-57
Adjustment of engine valve rocker clearances	7-58
Change the engine coolant fluid - Conventional type coolant	7-59
Trailer brakes air operated	7-64
Drive belts	7-65

EVERY 1800 HOURS OR EVERY 2 YEARS

Engine breather filter	7-66
------------------------------	------

EVERY 3600 HOURS OR EVERY 4 YEARS

Change the engine coolant fluid - OAT type coolant	7-67
--	------

EVERY 36 MONTHS

Air conditioning system.....	7-72
Battery check	7-73

GENERAL MAINTENANCE

Cleaning the tractor.....	7-74
Battery	7-76
Fuel filter water drain	7-78
Fuel system bleeding.....	7-78
Brake pedals	7-79
Cab suspension, if equipped	7-80
Adjust the automatic pickup hitch	7-81
Adjust the automatic pickup hitch	7-82
Clutch calibration	7-83
Transmission clutch calibration.....	7-84
Transmission clutch calibration.....	7-87
Lighting system.....	7-90
Bulb replacement.....	7-91
Fuses and relays	7-95
Protection of the electronic modules during welding operations	7-100
Battery removal and installation	7-101

STORAGE

Tractor storage	7-103
Removal of tractor from storage	7-103

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

Introduction	8-1
--------------------	-----

ALARM(S)

Vehicle fault codes	8-2
---------------------------	-----

SYMPTOM(S)

Engine	8-4
Transmission	8-5
Hydraulics	8-5
Three-point hitch	8-6
Brakes	8-6
Cab	8-6
Electrical system	8-7

9 SPECIFICATIONS

General dimensions	9-1
Frame - General specification	9-1
Capacities	9-3
Transmission-capacity	9-4
Front axle system-capacity	9-4
Engine	9-5
Transmission	9-6
Rear PTO	9-7
Front Power Take-Off (PTO)	9-7
Hydraulic system	9-8
Three-point hitch	9-10
Remote control valves	9-10
Three-point hitch	9-10
Brakes	9-11
Steering system	9-11
Electrical equipment	9-12
Minimum hardware tightening torques	9-13

10 ACCESSORIES

Rear view mirrors	10-1
Lighting system	10-3
Roof beacon	10-3
Front loader support	10-4

11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy	11-1
Service record 1st 50 hour, Dealer copy	11-3

1 - GENERAL INFORMATION

CE Declaration of conformity

Clause of 2006/42/EC Annex II	BG Декларация ЕС за съответствие според Директива 2006/42/EC	CZE Prohlášení o shodě ES Podle směrnice 2006/42/ES	DA EU-overensstemmelseerklæring i henhold til direktivet 2006/42/EF	DE EG-Konformitätserklärung laut Richtlinie 2006/42/EG	EL Δήλωση Συμμόρφωσης ΕΚ Σύμφωνα με την Οδηγία 2006/42/ΕΚ
1.A.1	Ние, [1]	My, [1]	Vi, [1]	Wir, [1]	Εμείς, [1]
1.A.2	Представянами от Antoon Vermeulen, Leon Claeysstraat, 3A B-8210 Zedelgem (Belgium)	Zastupovani Antoon Vermeulen, Leon Claeysstraat, 3A B-8210 Zedelgem (Belgium)	repræsenteret af Antoon Vermeulen, Leon Claeysstraat, 3A B-8210 Zedelgem (Belgium)	vertreten durch Antoon Vermeulen, Leon Claeysstraat, 3A B-8210 Zedelgem (Belgium)	εκπροσωπούμενος, από τον Antoon Vermeulen, Leon Claeysstraat, 3A B-8210 Zedelgem (Belgium)
1.A.3	Декларираме, поемайки пълна отговорност, че продукта: Селскостопански трактор Търговско име: [2] Модел: [3] Тип: [4] Серийен номер: [5]	Prohláujeme na vlastní zodpovědnost, že výrobek: Zemědělský traktor Obchodní název: [2] Model: [3] Typ: [4] Výrobní číslo: [5]	erklærer på eget ansvar, at produktet: Landbrugstraktor Handelsnavn: [2] Model: [3] Type: [4] Serienummer: [5]	erkläre auf unsere alleinige Verantwortung, dass das Produkt: Landwirtschaftliche Zugmaschine Handelsbezeichnung: [2] Modell: [3] Typ: [4] Seriennummer: [5]	δηλώνουμε, υπό αποκλειστική μας ευθύνη, ότι το προϊόν: Γεωργικός Ελαστήριος Εμπορική ονομασία: [2] Μοντέλο: [3] Τύπος: [4] Σειριακός αριθμός: [5]
1.A.4	За който се отнася настоящата декларация, е съобразен с изискванията на Директива 2006/42/EC, променена с: [6]	na který se toto prohlášení vztahuje, odpovídá ustanovením směrnice 2006/42/ES a následujícím změnám: [6]	hvoraf denne erklæring henviser, opfylder alle de relevante krav i direktivet 2006/42/EF, ændret ved: [6]	auf das sich diese Erklärung bezieht, allen einschlägigen Bestimmungen der Richtlinie 2006/42/EG entspricht, abgeändert durch: [6]	στο οποίο αναφέρεται η δήλωση αυτή, είναι σύμφωνο με τις σχετικές διατάξεις της Οδηγίας 2006/42/ΕΚ, όπως έχει τροποποιηθεί με: [6]
1.A.7	За реализацията на изискванията от Директива 2006/42/EC, са приложени следните (хармонизирани) стандарти: • ISO 26322-1 част 1 и/или 2 Други стандарти: виж Ръководството за употреба.	Pro relevantní implementaci ustanovení této Směrnice byly aplikovány následující (harmonizované) normy: • ISO 26322-1 část 1 nebo 2 Ostatní normy: viz Návod pro použití a údržbu.	Følgende (harmoniserede) standarder er anvendt for opfyldelse af kravene i direktivet: • ISO 26322-1, del 1 eller 2 Andre standarder: Se brugs- og vedligeholdelsesmanualen.	Zur sachgerechten Umsetzung der Festlegungen in der Richtlinie wurden folgende (harmonisierte) Normen herangezogen: • ISO 26322-1 Teil 1 oder 2 Andere Normen: siehe in der Gebrauchs- und Wartungsanleitung.	για την υλοποίηση των διατάξεων της Οδηγίας, έχουν εφαρμοστεί τα ακόλουθα (εναρμονισμένα) πρότυπα: • ISO 26322-1 μέρος 1 ή 2 Άλλα πρότυπα: ανατρέξτε στο Εγχειρίδιο Χρήσης και Συντήρησης.
1.A.9	Место и дата на декларацията: [7]	Místo a datum prohlášení: [7]	Sted og dato for erklæringen: [7]	Ort und Datum der Erklärung: [7]	Τόπος και ημερομηνία της δήλωσης: [7]
1.A.10	Име и подпис на упълномощеното лице: [8]	Jméno a podpis pověřené osoby: [8]	Bemyndigedes navn og underskrift: [8]	Name und Unterschrift des Befugten: [8]	Όνομα και υπογραφή του εξουσιοδοτημένου προσώπου: [8]

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC	ES Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	ET EÜ vastavusdeklaratsioon Vastavalt direktiivile 2006/42/EÜ	FI EY-vaatimustenmukaisuusvakuutus direktiivin 2006/42/EY mukaan	F Déclaration CE de conformité selon la Directive 2006/42/CE
1.A.1	We, [1]	Nosotros, [1]	Meie, [1]	Me, [1]	Les soussignés, [1]
1.A.2	Represented by Antoon Vermeulen, Leon Claeysstraat, 3A B-8210 Zedelgem (Belgium)	representados por Antoon Vermeulen, Leon Claeysstraat, 3A B-8210 Zedelgem (Belgium)	Eindatuna Antoon Vermeulen poolt, Leon Claeysstraat, 3A B-8210 Zedelgem (Belgium)	edustajanimme Antoon Vermeulen, Leon Claeysstraat, 3A B-8210 Zedelgem (Belgium)	représentés par Antoon Vermeulen, Leon Claeysstraat, 3A B-8210 Zedelgem (Belgium)
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]	declaramos, bajo nuestra exclusiva responsabilidad, que el producto: Tractor agrícola Denominación comercial: [2] Modelo: [3] Tipo: [4] Número de serie: [5]	kiinnitame omal vastutusel, et toode: Põllutraktor Ärinimi: [2] Model: [3] Tüüp: [4] Seerialnumber: [5]	vakuutamme omalla vastuullamme, että tuote: Maatalustraktori Kauupallinen nimi: [2] Malli: [3] Tyyppi: [4] Sarjanumero: [5]	déclarent sous leur propre responsabilité, que le produit: Tracteur agricole Dénomination Commerciale: [2] Modèle: [3] Type: [4] Numéro de série: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6]	al cual se refiere la presente declaración, es conforme a las disposiciones pertinentes de la Directiva 2006/42/CE, modificada por: [6]	millele käesolev deklaratsioon viitab, täidab kõik direktiivi 2006/42/EÜ ja selle paranduste [6] nõuded.	johon tämä vakuutus viittaa, vastaa direktiivin 2006/42/EY vaatimuksia ja muutosta: [6]	faisant l'objet de la présente déclaration est conforme aux dispositions pertinentes de la Directive 2006/42/CE, amendée par: [6]
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual.	Para la implementación de las disposiciones pertinentes de la Directiva se han aplicado las siguientes normativas (armonizadas): • ISO 26322-1 parte 1 o 2 Otras normativas: véase el Manual de Uso y Mantenimiento.	Direktiivi nõuete ajakohaseks täitmiseks on rakendatud järgnevat (ühilustatud) standardeid: • ISO 26322-1 osa 1 või 2 Muud standardid: vt Kasutus- ja hooldusjuhend.	Direktiivin vaatimusten täytäntöönpanossa on käytetty seuraavia yhdenmukaistettuja standardeja: • ISO 26322-1 osa 1 tai 2 Muut standardit: ks. käyttö- ja huolto-opasta.	Pour mettre en œuvre les dispositions de la Directive, on a appliqué les normes suivantes (harmonisées): • EN 26322-1 partie 1 ou 2 Autres normes: voir Manuel d'Utilisation et d'Entretien.
1.A.9	Place and date of the declaration: [7]	Lugar y fecha de la declaración: [7]	Deklaratsiooni väljandamise koht ja aeg: [7]	Vakuutuksen antopaikka ja -päivä: [7]	Lieu et date de la déclaration: [7]
1.A.10	Name and signature of the authorised person: [8]	Nombre y firma de la persona autorizada: [8]	Volitatud isiku nimi ja allkiri: [8]	Valtuutetun henkilön nimi ja allekirjoitus: [8]	Nom et signature de la personne autorisée: [8]

CASE IH
AGRICULTURE

CNH Europe Holding S.A.
Boulevard Royal, 24
L - 2449, LUXEMBOURG
(Luxembourg)

(1) _____

(2) CASE IH.....

(3) _____

(4) _____

(5) _____

(6) _____

(7) Zedelgem,.....

(8) 
Antoon Vermeulen

SS13J073 1

Here above is provided copy of the "EC" Declaration of Conformity (EC Declaration of Conformity according to 2006/42/EC).

The EC Declaration of Conformity is the manufacturer's declaration about equipment compliance to relevant EU provisions.

Please keep the original document in a safe place. Local authorities may require you to show this document in order to assure compliance of your equipment.

Translation of this declaration in your own country language is provided on the original document.

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes.

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Antoon Vermeulen CNH Europe Holding S.A. 24, Boulevard Royal L- 2449 Luxembourg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6]
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonized) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorized person: [8]

Health and safety related standards applied to your tractor

- Passenger Seat is certified according to EN 15694.
- FOPS level on your tractor cab is certified according to OECD Code 10.
- HVAC (Heating, ventilation Air Conditioning): The cab category is certified according to EN 15695-1. The appropriate category is shown on the cab identification plate – see section 1.
- HV (Heating, ventilation) The cab is certified according to EN 15695-1. The appropriate category is shown on the cab identification plate – see section 1.
- Noise Emission Levels are rated according to 2009/76/EC and 2009/63/EC.
- Vibration Levels are rated according to 78/764/EEC.

NOTE: See safety section 2 in this manual for further explanation and details on above mentioned standards and specific terminology.

Metric and Imperial units abbreviations

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m²	square foot	ft²
			square inch	in²
	square millimeter	mm²	square inch	in²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	µF	microfarad	µF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency – Rotational				
	revolution per minute	r/min	revolution per minute	r/min ^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	µm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per mass				
	milligram per kilogram	mg/ kg	parts per million	ppm
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH2O
	megapascal	MPa	pound per square inch	psi
	millibar	mbar		
	bar	bar		

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Temperature (other than thermodynamic)				
	degrees Celsius	°C	degrees Fahrenheit	°F
Time				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
Torque (includes bending moment, moment of force, and moment of a couple)				
	newton meter	N m	pound foot	lb ft
			pound foot	lb in
Velocity				
	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimeter per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
Volume (includes capacity)				
	cubic meter	m ³	cubic yard	yd ³
				cu yd
	liter	l	cubic inch	in ³
	liter	l	US gallon	US gal
			UK gallon	UK gal
			US quart	US qt
			UK quart	UK qt
	milliliter	ml	fluid ounce	fl oz
Volume per time (includes discharge and flow rate)				
	cubic meter per minute	m ³ /min	cubic foot per minute	ft ³ /min
	liter per minute	l/min	US gallon per minute	US gal/min
	milliliter per minute	ml/min	UK gallon per minute	UK gal/min
Sound power level and sound pressure level				
	decibel	dB	decibel	dB
Water hardness				
	German hardness	°dH	English hardness	°e
	French hardness	°fH	parts per million	ppm

Glossary

Acronym	Definition
DEF	Diesel Exhaust Fluid
ISO	International Organization for Standardization
MSDS	Material Safety Data Sheet
NOx	Nitrogen Oxide
PPE	Personal Protective Equipment
SCR	Selective Catalytic Reduction
ULSD	Ultra Low Sulfur Diesel
%	Percent
<	Less than
>	Greater than



Our support email:

ebooklibonline@outlook.com