

ORIGINAL INSTRUCTIONS

OPTUM[®] 270 CVX
OPTUM[®] 300 CVX
Tractor - Tier 4B(final)
*PIN HACOP****JE801001 and above*

OPERATOR'S MANUAL

Part number 51533461

2nd edition English

October 2018

Replaces part number 48071677



Contents

1 GENERAL INFORMATION

Metric and imperial units abbreviations.....	1-1
To the owner.....	1-3
Operator's manual storage	1-5
Product identification	1-6
Engine identification	1-7
Drive line identification	1-8
Cab identification	1-8
Programming tractor functions	1-9
Before operating the tractor	1-10
International symbols.....	1-11
Machine stability.....	1-12
Selective Catalytic Reduction (SCR) system.....	1-16

2 SAFETY INFORMATION

Safety precautions.....	2-1
Safety decals	2-3
Safety rules	2-12
Burn prevention.....	2-19
Prevention of fire or explosions.....	2-20
Fire extinguisher.....	2-21
Protection offered by the tractor	2-22
Hazardous substances	2-25
Ecology and the environment	2-26
Emergency exit	2-27
Wheel chocks.....	2-28
Intended use statement	2-29
Instructor's seat.....	2-31

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Introduction	3-1
Cab air filters	3-5
In cab storage (where fitted).....	3-6
Cable and wiring routing.....	3-7
Mobile telephone usage	3-8
Implement monitor installation.....	3-9

OPERATOR'S SEAT

Operator's seat	3-10
Air suspension seat deluxe.....	3-11
Air suspension seat with passive or Dynamic Damping System (DDS).....	3-16
Air suspension seat 'evolution active'	3-22
Seat belt	3-29

INSTRUCTOR'S SEAT

Instructional seat	3-30
--------------------------	------

FORWARD CONTROLS

Ignition key	3-31
Hazard lights switch	3-31
Lights and turn indicator lever	3-32
Windshield wiper and washer controls	3-33
Electronic parking brake	3-34
Emergency brake	3-37
Anti-lock braking system ABS Operation	3-38
Clutch pedal	3-45
Foot brakes	3-45
Exhaust brake (where fitted)	3-49
Steering column	3-49

RIGHT-HAND SIDE CONTROLS

Integrated control panel	3-50
Multifunction Handle	3-51

REARWARD CONTROLS

Switches on C-pillar	3-52
Battery isolator switch (where fitted)	3-53
Heated screens (where fitted)	3-54
ISO bus functionality	3-55
Hydraulic master switch	3-56
Switches on right-hand trim	3-57
Advanced steering system field/road switch	3-58
Variable Ratio Steering (VRS)	3-59
Autoguidance system	3-62
Autoguidance - Variable ratio steering	3-63

OVERHEAD CONTROLS

Switches on roof	3-64
Left-hand and right-hand outermost work light switch	3-65
Interior light	3-66
Automatic Temperature Control (ATC)	3-67

INSTRUMENT CLUSTER

Integrated control unit	3-69
Gauges	3-69
Indicator and warning lights	3-70
Displays	3-73
Keypad enhanced	3-74
Selecting or changing the display settings	3-76
Adjust menu	3-77
Configure menu	3-82
Performance monitor	3-84

Tire Pressure Monitoring System (TPMS) (where fitted)	3-90
Armrest color display	3-93
Pop-up screens on color display	3-94
Performance monitor on color display	3-99
Programming the displays	3-104
Alarm functions	3-107
Accessing stored error codes	3-109
Selective Catalytic Reduction (SCR) exhaust treatment - Overview	3-110
Warning and advisory symbols	3-120
Warning and advisory symbols	3-135

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Refueling the tractor	4-1
-----------------------------	-----

STARTING THE UNIT

Starting the engine	4-3
Grid heater cold start aid (where fitted)	4-5
Fuel heater (where fitted)	4-5
Coolant immersion heater (where fitted)	4-6
Transmission oil heater (where fitted)	4-7

STOPPING THE UNIT

Stopping the engine	4-8
Automatic engine shut down	4-9

MOVING THE UNIT

Operating in cold temperatures	4-11
Low idle speed management	4-14
Variable Pitch Fan (VPF)	4-15

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Safe transport speed	5-1
----------------------------	-----

PREPARING FOR ROAD TRANSPORT

Carrying the tractor on a transporter	5-2
Secure the high visibility roof panel	5-2

RECOVERY TRANSPORT

Freeing a stuck tractor	5-3
Towing the tractor	5-4

6 WORKING OPERATIONS

GENERAL INFORMATION

Constant engine speed	6-1
Differential lock	6-4
Four wheel drive	6-6
Front axle suspension (where fitted)	6-8
Automated headland functions - Base	6-11
Headland turn sequence - Quick guide	6-11
Recording and replaying	6-13
Explanation of symbols	6-16
Recording a sequence	6-18
Replaying a sequence	6-20
Headland function and color display screen	6-24
Deleting a sequence with color display	6-27
Automated headland functions - Advanced	6-28
Headland turn sequence	6-28
Universal Symbols	6-29
Recording a sequence	6-32
Creating a sequence in standstill	6-37
Replaying a sequence	6-39
Saving a sequence	6-43
Edit a sequence	6-46
Recalling a sequence	6-50
Deleting a sequence	6-54
Headland turn sequence error codes	6-55

TRANSMISSION

Transmission operation	6-57
Anti jack knife	6-58
Stationary control	6-59
Engine speed control	6-60
Shuttle lever	6-63
Transmission controls	6-65
Drive pedal	6-68
Programming maximum speed	6-69
Transmission display	6-71
Manual mode	6-72
Automatic mode	6-73
Transmission range lock	6-74
Speed matching	6-75
Pneumatic Trailer Brake Stabilization System	6-76
Fault codes	6-78

REAR POWER TAKE-OFF (PTO)

Power Take-Off (PTO) operating precautions	6-79
Changing the PTO output shaft	6-79
Attaching PTO driven equipment	6-80
PTO operation	6-81
PTO 2 speed system	6-85

PTO shiftable multi speed	6-87
External PTO controls	6-89
Auto PTO operation	6-91

FRONT POWER TAKE OFF

PTO operation	6-94
Auto PTO operation	6-99
External PTO controls	6-101

REAR HITCH

Electronic Draft Control (EDC)	6-103
Settings and adjustments.....	6-107
Electronic Draft Control (EDC) operation.....	6-109
External hitch controls	6-115

FRONT HITCH

Settings and adjustments.....	6-117
Front hitch operation	6-120
External hitch controls	6-123
Auxiliary front couplers (where fitted).....	6-124
External controls for front couplers	6-126

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

Remote control valves.....	6-127
Settings and adjustments.....	6-135
Valve priority	6-141
Programming tractor functions	6-143
Connecting remote cylinders	6-150
Operating with remote valves	6-153
Mid mount remote valves.....	6-155
External EHR controls	6-157
EHR implement control setting	6-158
Transmission rear axle and hydraulic system oil level	6-162

HYDRAULIC POWER BEYOND PORT

Power beyond circuit	6-164
ISO Power beyond couplings.....	6-166

THREE POINT HITCH

Attaching three-point hitch equipment.....	6-167
Lift rod adjustment.....	6-169
Top link adjustment	6-172
Lower links	6-174
Quick hitch.....	6-175
Automatic stabilizers (where fitted).....	6-177
Hydraulic stabilizers (where fitted)	6-180

DRAWBARS AND TOWING ATTACHMENTS

Drawbars and towing attachments	6-182
Swinging drawbar	6-185

TRAILER BRAKING SYSTEMS

Trailer brake release switch	6-187
Air-operated trailer brakes (Universal type)	6-188
Air-operated trailer brakes (UK type)	6-191
Trailer brakes air operated	6-192
Hydraulic trailer brakes (Universal type - Dual line)	6-193
Hydraulic trailer brakes (Universal type - Single line)	6-196

WHEEL TRACK ADJUSTMENT

Tire combinations	6-197
Front wheel track adjustment	6-198
Front wheel alignment	6-201
Steering stops	6-202
Front axle oscillation stops	6-203
Front wheel fenders	6-204
Rear wheel track adjustment	6-206
Flange type axle (where fitted)	6-206
Bar type axle (where fitted)	6-208
Dual rear wheels (where fitted)	6-211

BALLASTING AND TIRES

Ballasting and tires	6-215
Iron weights (where fitted)	6-218
Liquid ballast	6-221
Tire inflation	6-223
Tire pressures and permissible loads	6-224

AUXILIARY POWER CONNECTIONS

Diagnostic socket	6-226
Trailer electrical socket	6-227
Electrical power connectors	6-228
Internal power connectors	6-228
External power connectors	6-230
ISO bus classes	6-232
ISO bus functionality	6-234
Reconfigurable inputs for ISO Bus function	6-242

7 MAINTENANCE

GENERAL INFORMATION

Introduction	7-1
Fuel requirement - Diesel fuel	7-2
Fuel - Storage, handling and transport	7-2
Biodiesel fuel - Biodiesel fuels	7-3

Change the engine oil	7-5
Protective devices	7-6
Tractor jacking points.....	7-8
Engine oils.....	7-9
General specifications.....	7-10
Capacities	7-11
Organic Acid Technology (OAT) coolant.....	7-12

MAINTENANCE CHART

Maintenance chart.....	7-13
------------------------	------

WHEN THE WARNING LAMP LIGHTS

Change the engine air cleaner outer element.....	7-15
Drain the fuel system water separator.....	7-16
Check the brake fluid level	7-17

EVERY 10 HOURS OR EACH DAY

Check the engine coolant level.....	7-18
Check the engine oil level	7-19
Check the remote control valve drain bottles.....	7-19
Check windscreen washer reservoir	7-20
Drain air reservoir on air operated trailer brake	7-20

FIRST 50 HOURS

Service operations.....	7-21
-------------------------	------

EVERY 50 HOURS

Clean the cab air filter	7-22
Clean the SCR cover air ducts	7-24
Clean the cooler section.....	7-25
All grease fittings (except rear axle).....	7-26
Check the front and the rear wheel nuts	7-31
Check the tire pressures and the tire condition.....	7-31

EVERY 100 HOURS

Inspect the compressor drive belt	7-32
---	------

EVERY 300 HOURS

Inspect the poly V-belt.....	7-33
Check the battery fluid level	7-33
Check the transmission oil level, the rear axle oil level and the hydraulic oil level	7-35

EVERY 600 HOURS

Change engine oil and filter	7-36
Change the first stage fuel filter and the fuel filter element.....	7-38
Change the engine air cleaner outer element.....	7-39
Change the hydraulic charge pump oil filter and the van pump oil filter.....	7-40

Check the engine air intake connections	7-41
Check the transmission oil cooler pipe couplings	7-42
Check the 4WD front axle differential oil level and the hubs oil level.....	7-43

EVERY 600 HOURS OR ANNUALLY

Grease the rear axle shaft bearing	7-44
--	------

EVERY 1200 HOURS OR ANNUALLY

Change the cab air filters	7-44
Change the hydraulic suction pump oil filter	7-46
Change the 4WD differential oil	7-47
Change the 4WD planetary hub oil	7-48

EVERY 1200 HOURS OR EVERY 2 YEARS

Change the engine air cleaner inner element	7-49
Check the valve tappet clearance	7-50
Change the air brake drier reservoir.....	7-50
Change the poly V-belts	7-51
Change the transmission oil, the rear axle oil and the hydraulic oil	7-53
Clean the lubrication pump filter	7-54
Change the engine breather filter	7-55
Change the Diesel Exhaust Fluid (DEF)/AdBlue® suction filter	7-56

EVERY 3600 HOURS OR EVERY 2 YEARS

Change the DEF/AdBlue main filter	7-57
---	------

EVERY 3600 HOURS OR EVERY 4 YEARS

Change the engine coolant fluid	7-58
---------------------------------------	------

EVERY 2 YEARS

Check the air conditioning system.....	7-62
Change the air conditioning receiver drier.....	7-63

GENERAL MAINTENANCE

Cleaning the tractor.....	7-64
Check first stage fuel filter and water trap	7-66
Bleeding the fuel system	7-66
Hydraulic system hoses	7-67
Check the brake pedal latching/unlatching	7-67
Adjust the cab suspension (where fitted).....	7-68
Headlight adjustment	7-69
Work light adjustment	7-69
Bulb replacement.....	7-70
Fuses and relays	7-73
Protecting the electronic and electrical systems during battery charging or welding..	7-84

Battery removal and installation	7-85
--	------

STORAGE

Tractor storage	7-87
Removing the machine from storage	7-87

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

Introduction	8-1
--------------------	-----

ALARM(S)

Fault codes and symbols	8-2
-------------------------------	-----

SYMPTOM(S)

Engine	8-4
Transmission	8-5
Hydraulics	8-5
Three-point hitch	8-6
Brakes	8-6
Cab	8-6
Electrical system	8-7

9 SPECIFICATIONS

General dimensions	9-1
Minimum turn radius	9-3
Axle dimension	9-4
Maximum operating angle	9-6
Maximum permissible operating weights	9-7
Tractor weights	9-7
Capacities	9-8
Engine	9-9
Fuel system	9-9
Air cleaner system	9-10
Cooling system	9-10
Transmission	9-10
Rear Power Take-Off (PTO)	9-11
Front Power Take-Off (PTO)	9-11
Hydraulic system	9-12
Rear three-point hitch	9-12
Front three-point hitch	9-13
Remote control valves	9-14
Front remote control valve	9-14
Brakes	9-15
Steering	9-15
Electrical equipment	9-16
Minimum hardware tightening torques	9-17

10 ACCESSORIES

Radio (where fitted).....	10-1
External rear view mirrors	10-1
Border marker plates	10-3
Auxiliary head lights and signature lights.....	10-4
Rotating beacon	10-4
Auxiliary pneumatic coupler	10-5

11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy	11-1
Service record 1st 50 hour, Dealer copy	11-3
Telematics module declaration of conformity	11-4

1 - GENERAL INFORMATION

Metric and imperial units abbreviations

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m²	square foot	ft²
			square inch	in²
	square millimeter	mm²	square inch	in²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	µF	microfarad	µF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency – Rotational				
	revolution per minute	r/min	revolution per minute	r/min ^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	µm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per mass				
	milligram per kilogram	mg/ kg	parts per million	ppm
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH2O
	megapascal	MPa	pound per square inch	psi
	millibar	mbar		
	bar	bar		

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Temperature (other than thermodynamic)				
	degrees Celsius	°C	degrees Fahrenheit	°F
Time				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
Torque (includes bending moment, moment of force, and moment of a couple)				
	newton meter	N m	pound foot	lb ft
			pound foot	lb in
Velocity				
	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimeter per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
Volume (includes capacity)				
	cubic meter	m³	cubic yard	yd³
				cu yd
	liter	l	cubic inch	in³
	liter	l	US gallon	US gal
			UK gallon	UK gal
			US quart	US qt
			UK quart	UK qt
	milliliter	ml	fluid ounce	fl oz
Volume per time (includes discharge and flow rate)				
	cubic meter per minute	m³/min	cubic foot per minute	ft³/min
	liter per minute	l/min	US gallon per minute	US gal/min
	milliliter per minute	ml/min	UK gallon per minute	UK gal/min
Sound power level and sound pressure level				
	decibel	dB	decibel	dB
Water hardness				
	German hardness	°dH	English hardness	°e
	French hardness	°fH	parts per million	ppm

Glossary

Acronym	Definition
DEF	Diesel Exhaust Fluid
ISO	International Organization for Standardization
MSDS	Material Safety Data Sheet
NOx	Nitrogen Oxide
PPE	Personal Protective Equipment
SCR	Selective Catalytic Reduction
ULSD	Ultra Low Sulfur Diesel
%	Percent
<	Less than
>	Greater than



Our support email:

ebooklibonline@outlook.com