

ORIGINAL INSTRUCTIONS - according to Regulation (EU) 2014/1322, Annex XXII

# OPERATOR'S MANUAL

---

**TD5.85**

**TD5.95**

**TD5.105**

**TD5.115**

Tractor

**Part number 51559167**

6<sup>th</sup> edition English

November 2018

*Replaces part number 48129900*



# Contents

---

## 1 GENERAL INFORMATION

|   |     |
|---|-----|
| METRIC AND IMPERIAL UNITS ABBREVIATIONS ..... | 1-1 |
| TO THE OWNER .....                            | 1-3 |
| PRODUCT IDENTIFICATION .....                  | 1-5 |
| ECOLOGY AND THE ENVIRONMENT .....             | 1-8 |

## 2 SAFETY INFORMATION

|  |      |
|--|------|
| SAFETY PRECAUTIONS .....   | 2-1  |
| Safety aspects in accordance with Regulation (EU) 1322/2014 - Annex XXII and subsequent amendments and modifications ..... | 2-3  |
| Safety rules .....   | 2-12 |
| Safety rules - General information .....   | 2-13 |
| Safety rules – Maintenance .....   | 2-14 |
| Safety rules - Wheels and tires .....  | 2-15 |
| Safety rules – Explosions and fires .....  | 2-16 |
| Safety rules - Fire extinguisher .....   | 2-17 |
| Safety rules – Battery .....   | 2-18 |
| Safety rules - Instructor seat .....   | 2-19 |
| Safety rules - Passenger seat .....  | 2-20 |
| Safety rules – Operator presence system .....  | 2-21 |
| Safety rules - Power Take-Off (PTO) .....  | 2-22 |
| Safety rules - Reflectors and warning lights .....   | 2-23 |
| Safety rules - Seat belts .....  | 2-24 |
| Safety rules Operator protective structure .....   | 2-25 |
| Safety rules - HVAC system .....   | 2-29 |
| Safety rules - Personal Protective Equipment (PPE) .....   | 2-30 |
| Safety rules - "Do not use" sign .....   | 2-31 |
| Safety rules - Hazardous chemicals .....   | 2-32 |
| Safety rules - Near utilities .....  | 2-33 |
| Safety rules - In the event of electrical storms .....   | 2-34 |
| Safety rules – Mounting and dismounting the machine .....  | 2-35 |
| Safety rules - Lifting and overhead loads .....  | 2-36 |
| Safety rules - Front end loader .....  | 2-37 |
| Ecology and the environment .....  | 2-38 |
| Noise level .....  | 2-39 |
| Vibration levels .....   | 2-40 |
| Machine stability .....  | 2-41 |
| Towing the tractor for recovery .....  | 2-44 |
| Emergency escape from cab .....  | 2-45 |
| Wheel chocks .....   | 2-46 |
| Personal safety .....  | 2-47 |
| PREVENTION OF FIRE OR EXPLOSION .....  | 2-48 |
| Burn prevention .....  | 2-49 |
| Getting in and out of the machine .....  | 2-50 |
| EMERGENCY EXIT .....   | 2-51 |
| INTENDED USE STATEMENT .....   | 2-52 |
| SAFETY DECALS .....  | 2-54 |

---

|   |      |
|---|------|
| GUARDS .....                            | 2-60 |
| INTERNATIONAL SYMBOLS .....             | 2-62 |
| NOISE LEVEL INFORMATION SHEET .....     | 2-63 |
| VIBRATION LEVEL INFORMATION SHEET ..... | 2-64 |

### 3 CONTROLS AND INSTRUMENTS

#### Access to operator's platform

|                                     |      |
|-------------------------------------|------|
| INTRODUCTION .....                  | 3-1  |
| INSTRUMENT CLUSTER .....            | 3-3  |
| Cab controls and adjustments .....  | 3-4  |
| STEERING COLUMN .....               | 3-5  |
| CAB Access/Exit .....               | 3-6  |
| ADJUST THE MIRRORS .....            | 3-9  |
| SUN PROTECTION .....                | 3-10 |
| CONTROL ELEMENTS/SIDE CONSOLE ..... | 3-11 |
| RADIO (option) .....                | 3-13 |
| TEMPERATURE CONTROLS, CAB .....     | 3-14 |
| CAB AIR FILTERS .....               | 3-15 |
| AIR CONDITIONING SYSTEM .....       | 3-17 |
| Air conditioning .....              | 3-18 |

#### Operator's seat

|                             |      |
|-----------------------------|------|
| DOCUMENTATION STORAGE ..... | 3-20 |
| OPERATOR'S SEAT .....       | 3-21 |
| OPERATOR'S SEAT .....       | 3-23 |
| SEAT BELT .....             | 3-24 |

#### Instructional seat

|   |      |
|---|------|
| INSTRUCTIONAL SEAT (where fitted) ..... | 3-25 |
|---|------|

#### Forward controls

|   |      |
|---|------|
| LIGHT-/ TURN LEVER .....                              | 3-25 |
| KEY- START SWITCH .....                               | 3-27 |
| STEERING COLUMN .....                                 | 3-28 |
| BATTERY ISOLATOR SWITCH .....                         | 3-30 |
| 12 X 12 POWER SHUTTLE TRANSMISSION .....              | 3-31 |
| TRANSMISSION WITH CREEPER AND SHUTTLE .....           | 3-35 |
| FOUR WHEEL DRIVE .....                                | 3-38 |
| ELECTRO-HYDRAULICALLY OPERATED FOUR-WHEEL DRIVE ..... | 3-39 |
| MECHANICAL DIFFERENTIAL LOCK .....                    | 3-40 |
| LIMITED SLIP DIFFERENTIAL LOCK .....                  | 3-41 |
| Electrohydraulic differential lock .....              | 3-42 |
| DIFFERENTIAL LOCK OPERATING .....                     | 3-43 |

#### Left-hand side controls

|                                 |      |
|---------------------------------|------|
| LEFT-HAND SIDE CONTROLS .....   | 3-44 |
| REAR POWER TAKE-OFF (PTO) ..... | 3-45 |

#### Right-hand side controls

|                                |      |
|--------------------------------|------|
| RIGHT-HAND SIDE CONTROLS ..... | 3-46 |
|--------------------------------|------|

---

## ANALOGUE/ DIGITAL INSTRUMENT CLUSTER

|                          |      |
|--------------------------|------|
| INSTRUMENT CLUSTER ..... | 3-47 |
| GAUGES .....             | 3-51 |

## DISPLAY SETTINGS

|   |      |
|---|------|
| Display programming .....   | 3-53 |
| Adjusting the dashboard/display brightness .....                              | 3-54 |
| Calibrating speed .....   | 3-56 |
| Calibrating tool width .....  | 3-58 |
| Programming maintenance work .....  | 3-59 |
| Activating/deactivating buzzer .....  | 3-61 |
| Setting units of measurement .....  | 3-62 |
| Regenerating the diesel particulate filter (DPF) automatically/manually ..... | 3-63 |
| Viewing error codes .....   | 3-68 |

## 4 OPERATING INSTRUCTIONS

### Starting the unit

|                                    |     |
|------------------------------------|-----|
| BEFORE OPERATING THE TRACTOR ..... | 4-1 |
| BOOSTING THE TRACTOR BATTERY ..... | 4-2 |
| STARTING THE ENGINE .....          | 4-3 |
| GLOW PLUGS - COLD START AID .....  | 4-4 |

### Stopping the unit

|                           |     |
|---------------------------|-----|
| STOPPING THE UNIT .....   | 4-6 |
| STOPPING THE ENGINE ..... | 4-7 |

## 5 TRANSPORT OPERATIONS

### Preparing for road transport

|   |     |
|---|-----|
| CARRYING THE TRACTOR ON A TRANSPORTER LOADING THE TRACTOR ONTO A<br>TRANSPORTER ..... | 5-1 |
|---|-----|

### Recovery transport

|                          |     |
|--------------------------|-----|
| TOWING THE TRACTOR ..... | 5-2 |
|--------------------------|-----|

## 6 WORKING OPERATIONS

### Rear mechanical control

|   |      |
|---|------|
| P.T.O. OPERATING PRECAUTIONS .....                              | 6-1  |
| INDEPENDENT POWER TAKE OFF (PTO) POWER TAKE-OFF OPERATION ..... | 6-2  |
| GROUND DRIVE P.T.O. (where fitted) .....                        | 6-4  |
| POWER TAKE OFF (PTO) SPEEDS .....                               | 6-6  |
| Two speed Power Take-Off (PTO) systems .....                    | 6-8  |
| Two speed PTO systems .....                                     | 6-9  |
| HYDRAULIC LIFT .....  | 6-20 |
| EXTERNAL HYDRAULIC POWER LIFT CONTROLS (where fitted) .....     | 6-21 |
| HYDRAULIC LIFT .....  | 6-22 |

---

|   |      |
|---|------|
| HYDRAULIC LIFT -CONDITIONS OF USE ..... | 6-25 |
| THREE POINT HITCH .....                 | 6-26 |
| THREE POINT HITCH .....                 | 6-27 |
| EQUIPMENT MOUNTING POINTS .....         | 6-29 |
| Lower links .....                       | 6-31 |
| REMOTE CONTROL VALVES .....             | 6-32 |
| REMOTE CONTROL VALVES .....             | 6-35 |

## WHEEL TRACK ADJUSTMENT

|  |      |
|--|------|
| FRONT WHEEL TRACK ADJUSTMENT (two wheel drive).....        | 6-38 |
| WHEEL TRACK ADJUSTMENT - 4WD FRONT WHEEL AND REAR WHEEL .. | 6-40 |
| Adjustment of the steering angles .....                    | 6-43 |
| FRONT WHEEL FENDERS .....                                  | 6-44 |

## Wheels

|                                  |      |
|----------------------------------|------|
| Tires .....                      | 6-45 |
| TIRES - GENERAL INFORMATION..... | 6-47 |
| Tire combinations.....           | 6-49 |
| Tire pressures .....             | 6-51 |

## BALLASTING AND TIRES

|  |      |
|--|------|
| IRON WEIGHTS (where fitted) .....      | 6-53 |
| LIQUID BALLAST LIQUID BALLASTING ..... | 6-54 |
| LIQUID BALLAST .....                   | 6-56 |
| MAXIMUM PERMITTED WEIGHTS .....        | 6-58 |
| STATIC WEIGHT DISTRIBUTION .....       | 6-60 |

## 7 MAINTENANCE

### General information

|   |      |
|---|------|
| GENERAL SAFETY BEFORE YOU SERVICE .....             | 7-1  |
| INTRODUCTION .....                                  | 7-3  |
| DIESEL FUEL QUALITY SPECIFICATIONS.....             | 7-4  |
| BIODIESEL FUEL - Biodiesel fuels .....              | 7-5  |
| Engine cooling system - Basic instructions.....     | 7-7  |
| BODYWORK MAINTENANCE .....                          | 7-8  |
| OPENING THE HOOD .....                              | 7-10 |
| Fluid capacities and lubricant specifications ..... | 7-11 |

### Maintenance planning

|                        |      |
|------------------------|------|
| Maintenance chart..... | 7-12 |
|------------------------|------|

### As required maintenance

|   |      |
|---|------|
| Radiator expansion tank.....            | 7-13 |
| Windshield washer reservoir .....       | 7-14 |
| Check the air-conditioning system ..... | 7-15 |
| Radiator - Check .....                  | 7-16 |
| Brake pedals - Check.....               | 7-17 |
| Hydraulic service brakes - Adjust.....  | 7-18 |
| External lighting - Check .....         | 7-19 |
| Front wheels - Check.....               | 7-20 |

---

|                             |      |
|-----------------------------|------|
| Clutch cable - Adjust ..... | 7-21 |
|-----------------------------|------|

## At warning message display

|   |      |
|---|------|
| Dry air filter - External cartridge ..... | 7-22 |
| Brake fluid level.....                    | 7-23 |
| Fuel filter water drain .....             | 7-24 |

## EVERY 10 HOURS OR EACH DAY

|  |      |
|--|------|
| Engine oil level .....                                   | 7-25 |
| Battery .....  | 7-26 |
| Radiator expansion tank.....                             | 7-27 |
| Windscreen washer bottle .....                           | 7-28 |
| Cab air filter.....                                      | 7-29 |
| Cab recirculated air filter .....                        | 7-30 |
| Radiator, oil cooler and air conditioner condenser ..... | 7-31 |
| Pneumatic brakes .....                                   | 7-32 |

## Initial 50 hours

|                              |      |
|------------------------------|------|
| Maintenance - Tighten.....   | 7-33 |
| Maintenance - Check.....     | 7-34 |
| Maintenance - Replace.....   | 7-35 |
| Maintenance - Cleaning ..... | 7-36 |
| Maintenance - Test .....     | 7-37 |
| Maintenance - Grease.....    | 7-38 |

## Every 50 hours

|                                       |      |
|---------------------------------------|------|
| 2WD steering cylinder – (2WD) .....   | 7-39 |
| 2WD front axle trunnion pin .....     | 7-40 |
| 2WD steering spindle.....             | 7-41 |
| Front axle 4WD.....                   | 7-42 |
| Rear three-point hitch - Grease ..... | 7-43 |
| Hand brake lever - Grease .....       | 7-44 |

## Every 100 hours

|  |      |
|--|------|
| Air-conditioning condenser .....               | 7-45 |
| Transmission oil heat exchanger .....          | 7-46 |
| Intercooler .....                              | 7-47 |
| Cab air filter.....                            | 7-48 |
| Cab recirculated air filter .....              | 7-49 |
| Alternator belt.....                           | 7-50 |
| Compressor belt.....                           | 7-51 |
| Pneumatic trailer brakes compressor belt ..... | 7-52 |

## Every 300 hours

|   |      |
|---|------|
| Hydraulic circuit oil filter .....        | 7-53 |
| Auxiliary services oil filter.....        | 7-54 |
| Dry air filter - External cartridge ..... | 7-55 |
| Hydraulic oil tank .....                  | 7-56 |

---

|                                   |      |
|-----------------------------------|------|
| Front axle (4WD) oil level.....   | 7-57 |
| 4WD front axle final drives ..... | 7-58 |
| 4WD front axles stub .....        | 7-59 |

## Every 600 hours

|                                    |      |
|------------------------------------|------|
| Change engine oil and filter ..... | 7-60 |
| Replacing the fuel filters .....   | 7-61 |
| Fuel prefilter .....               | 7-62 |
| Wheel bolt torque.....             | 7-63 |

## Every 1200 hours or annually

|                             |      |
|-----------------------------|------|
| Replacing air filters ..... | 7-64 |
| Blow-by filter.....         | 7-65 |

## Every 1200 hours or two years

|  |      |
|--|------|
| Front axle (4WD) oil replace.....          | 7-66 |
| Replacing front axle final drive oil ..... | 7-67 |
| Replacing transmission oil.....            | 7-68 |

## Every 3600 hours

|  |      |
|--|------|
| Change the engine coolant fluid - OAT type coolant ..... | 7-69 |
| Diesel particulate filter (DPF).....                     | 7-71 |

## ELECTRICAL SYSTEM

|                                    |      |
|------------------------------------|------|
| Battery service.....               | 7-72 |
| Fuse and relay box - Replace ..... | 7-74 |
| Fuse and relay locations .....     | 7-75 |
| Light adjustments.....             | 7-79 |
| Headlight bulb replacement .....   | 7-80 |

## Storage

|                       |      |
|-----------------------|------|
| Tractor storage ..... | 7-81 |
|-----------------------|------|

## 8 TROUBLESHOOTING

### Fault code resolution

|                    |     |
|--------------------|-----|
| Introduction ..... | 8-1 |
|--------------------|-----|

### Alarm(s)

|                         |     |
|-------------------------|-----|
| ENGINE .....            | 8-1 |
| Electrical System ..... | 8-3 |
| Hydraulic System .....  | 8-4 |
| THREE POINT HITCH ..... | 8-5 |
| BRAKES.....             | 8-6 |
| CAB.....                | 8-7 |
| Alarms .....            | 8-8 |

---

|  |      |
|--|------|
| Display warnings overview .....        | 8-9  |
| Viewing error codes .....              | 8-13 |
| Error code identification .....        | 8-14 |
| Fault code of digital instrument ..... | 8-15 |

## 9 SPECIFICATIONS

|                                      |      |
|--------------------------------------|------|
| Introduction .....                   | 9-1  |
| Consumables .....                    | 9-2  |
| General dimensions .....             | 9-3  |
| Weights .....                        | 9-5  |
| Tractor weights .....                | 9-6  |
| Engine specifications .....          | 9-7  |
| Engine cooling system .....          | 9-8  |
| Fuel system .....                    | 9-9  |
| Clutch .....                         | 9-10 |
| Transmission .....                   | 9-11 |
| Power take-off .....                 | 9-12 |
| Hydraulic lift .....                 | 9-13 |
| Three point hitch - capacities ..... | 9-14 |
| Three-point hitch .....              | 9-15 |
| Front wheels .....                   | 9-16 |
| Steering .....                       | 9-17 |
| Brakes .....                         | 9-18 |
| Cab .....                            | 9-19 |
| Towing devices .....                 | 9-20 |
| Electrical system .....              | 9-21 |
| Instruments and accessories .....    | 9-22 |

## 10 ACCESSORIES

|  |       |
|--|-------|
| ACCESSORIES .....  | 10-1  |
| ROTATING BEACON .....  | 10-2  |
| QUICK HITCH .....  | 10-3  |
| SWINGING DRAWBARS .....  | 10-5  |
| HYDRAULICALLY OPERATED TOWING HITCH .....  | 10-8  |
| HYDRAULIC TRAILER BRAKES .....   | 10-11 |
| Trailer brake hydraulic control - Operating - Dual line .....  | 10-13 |
| Trailer brake hydraulic control - Operating - Dual-line, compatible with trailers with universal single line ..... | 10-15 |
| Pneumatic brakes .....   | 10-17 |

## 11 FORMS AND DECLARATIONS

|   |      |
|---|------|
| Service record 1st 50 hour, Owner copy .....    | 11-1 |
| Service record 1st 50 hour, Dealer's copy ..... | 11-3 |

---



Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)