

ORIGINAL INSTRUCTIONS

OPERATOR'S MANUAL

Powerstar™ 90

Powerstar™ 100

Powerstar™ 110

Powerstar™ 120

Tractor

PIN ELRT5100PJLE50082 and above

Part number 51594050

3rd edition English

April 2019

Replaces part number 51484887



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
Intended use.....	1-3
Electro-Magnetic Compatability (EMC).....	1-5
Manual scope and required training level	1-6
Metric and imperial units abbreviations.....	1-8
Identification plates	1-10
Operator's manual storage on the machine	1-15
Machine orientation.....	1-16
Selective catalytic reduction (SCR) system	1-17

2 SAFETY INFORMATION

Safety rules and signal word definitions	2-1
Safety rules - General information	2-2
Safety rules – Maintenance	2-2
Safety rules - Wheels and tires	2-3
Safety rules – Explosions and fires	2-4
Safety rules - Fire extinguisher	2-4
Safety rules – Battery	2-5
Safety rules - Instructor seat	2-5
Safety rules - Passenger seat	2-5
Safety rules – Operator presence system	2-6
Safety rules - Power Take-Off (PTO)	2-6
Safety rules - Reflectors and warning lights	2-6
Safety rules - Seat belts	2-6
Safety rules - Operator protective structure	2-6
Safety rules - HVAC system	2-8
Safety rules - Personal Protective Equipment (PPE)	2-9
Safety rules - "Do not use" sign	2-9
Safety rules - Hazardous chemicals	2-9
Safety rules - Near utilities	2-9
Safety rules - In the event of electrical storms	2-10
Safety rules – Mounting and dismounting the machine	2-10
Safety rules - Lifting and overhead loads	2-10
Safety rules - Front end loader	2-11
Ecology and the environment	2-12
Towing the tractor for recovery	2-13
Tractor jacking points	2-14
Burn prevention.....	2-15
Emergency escape from cab	2-16
Wheel chocks.....	2-17
Safety signs	2-18

3 CONTROLS AND INSTRUMENTS

Access to operator's platform

Mounting and dismounting	3-1
External rear view mirrors	3-2
Getting to know the internal parts of the cab	3-3
Clock adjustment	3-6

Operator's seat

Mechanical suspension seat	3-7
Air seat	3-8
Air suspension seat deluxe	3-9
Seat belt	3-11

Instructional seat

Instructional seat - Localization overview	3-12
--	------

Forward controls

Instrument panel	3-12
Selective catalytic reduction (SCR) system	3-18
Front controls	3-28

Left-hand side controls

Left side console	3-33
Hand brake lever - Operating (if equipped)	3-34

Right-hand side controls

Park lock	3-35
Heating, ventilation or air-conditioning control	3-36
Hand throttle	3-37
Right-hand console	3-38
Right side post controls	3-41

Exterior controls

Rear fender controls	3-43
Hydraulic lift	3-44
Trailer socket electrical	3-45

Display

Performance windows	3-46
Programming tractor functions	3-50
Calibrating tool width	3-51
Activating/deactivating buzzer	3-52
Adjusting the dashboard/display brightness	3-53
Calibrating speed	3-55
Programming maintenance work	3-57

Setting units of measurement	3-59
------------------------------------	------

Warning and advisory symbols

Display warnings overview	3-60
---------------------------------	------

4 OPERATING INSTRUCTIONS

Commissioning the unit

Basic operating safety rules	4-1
Fuel supply	4-2
Filling the Diesel Exhaust Fluid (DEF)/AdBlue® tank	4-3

Starting the unit

Starting the engine	4-4
---------------------------	-----

Stopping the unit

Stopping the engine	4-5
---------------------------	-----

Moving the unit

Machine movement start-up	4-7
Low idle speed management	4-8
Installation of the front loader	4-9
Removing the loader	4-10
Installing the bucket	4-11
Removing the bucket	4-13

5 TRANSPORT OPERATIONS

Road transport

Transporting the machine	5-1
Road transport of the tractor with loader installed	5-2
Safe transport speed	5-3

Recovery transport

Recovery and towing	5-4
Towing the tractor	5-5

6 WORKING OPERATIONS

General information

Constant engine speed	6-1
Mechanical differential lock	6-2
Roll Over Protection Structure (ROPS) removable	6-3

Drive

Transmission operation	6-5
------------------------------	-----

Rear remote control valves

Safety rules	6-8
Rear remote control valves	6-8
Single/double action hydraulic valves	6-11
Hydraulic oil level when using remote hydraulic equipment	6-12

Mid-mount control valve

Joystick	6-13
----------------	------

Rear Power Take-Off (PTO)

Safety rules	6-16
General	6-17
Changing the Power Take-Off (PTO) shaft	6-18
Attaching Power-Take Off (PTO) driven equipment	6-20
Mechanically controlled power take-off - independent operated manual	6-21
Electrohydraulically controlled power take-off - Independent operated with electrohydraulic control	6-23
Power take-off speeds	6-25
Stationary power take off operation switch	6-26

Rear hydraulic lift

Safety rules	6-27
Rear hydraulic lift with mechanical control	6-27
Lift-O-Matic® control - Operating	6-29
Operating Instructions	6-31
Hydraulic lift external controls	6-34

Towbar

General safety rules	6-36
Swinging drawbar	6-36

Tread and fender settings

Adjustment of the front tracks	6-37
Disc-to-rim coupling for front 4WD tires	6-39
Adjustment of the dynamic front mudguards	6-40
Front tracks diagram	6-42
Rear tracks diagram	6-45
Adjustment of the steering angles	6-46

Rear three-point hitch

Three-point linkage dimensions	6-47
Three-point hitch adjustments	6-48
Rear three-point hitch - Operating — Configuring the tractor when towing a trailer with single or multiple axles	6-50

Tires and wheels

Wheels and tires.....	6-51
Tire dimensions.....	6-55

Ballasting

Safety rules.....	6-57
Ballasting	6-57
Front ballast weight.....	6-58
Rear Ballast	6-59
Liquid ballast	6-60

Power sockets

Power sockets	6-63
---------------------	------

Four-Wheel Drive (4WD)

Four-wheel drive with electro-hydraulic control.....	6-65
--	------

Front loader

Machine stability.....	6-65
Recommendations for working in safety	6-66
Bucket level indicator rod installation.....	6-67
Loader operations	6-67

7 MAINTENANCE

General information

Emissions overview	7-1
General safety before you service.....	7-4
Introduction	7-6
Dealer service and parts	7-6
Body maintenance.....	7-6
Opening the hood	7-8
Organic Acid Technology (OAT) coolant.....	7-9
Selective Catalytic Reduction (SCR) exhaust treatment - Basic instructions	7-10
General specification - Diesel fuel	7-12
General specification - Biodiesel fuels	7-13
Front end loader maintenance	7-15
Engine oil	7-16
Consumables.....	7-17
Capacities	7-18

Maintenance planning

Maintenance chart.....	7-19
------------------------	------

As required

Radiator - Check – Fluid level	7-22
Windshield washer fluid reservoir - Filling	7-22

Air conditioning - Check	7-23
Hand brake lever - Check (If fitted)	7-23
Radiator - Cleaning	7-24
Brake pedals - Check.....	7-24
Hydraulic steering line - Check	7-25
External lighting - Check	7-25
Wheels - Check.....	7-25
Master clutch release control - Check	7-26
Fuel tank - Cleaning - Filler neck filter	7-26
Diesel Exhaust Fluid (DEF)/AdBlue®/ARLA tank - Cleaning - Filler neck filter	7-27

At warning message display

Air cleaner - Cleaning	7-28
Brake fluid reservoir - Filling.....	7-29
Fuel filters - Drain fluid	7-29
Engine - Replace - Oil and filter	7-30
Diesel Exhaust Fluid (DEF)/AdBlue®/ARLA tank - Change fluid.....	7-30

Every 10 hours or daily

Engine - Check - Oil level	7-31
Front loader and bucket - Grease	7-31

After the first 50 hours of operation

Maintenance - Tighten.....	7-32
Maintenance - Check	7-32
Maintenance - Replace	7-32
Maintenance - Cleaning	7-33
Maintenance - Test	7-33
Maintenance - Grease.....	7-33

Every 50 hours

Steering cylinder - Grease – (2RM)	7-34
Front axle - Grease - Pivot (2RM)	7-34
Steering knuckle - Grease – (2RM)	7-34
Four-Wheel Drive (4WD) axle - Grease	7-35
Rear three-point hitch - Grease	7-35
Rear hitch - Grease – Mechanical lift	7-35
Selective Catalytic Reduction (SCR) exhaust treatment - Cleaning System cover air ducts	7-36
Selective Catalytic Reduction (SCR) muffler and catalyst - Cleaning	7-37

Every 100 hours

Air-conditioning condenser - Cleaning	7-40
Transmission cooler - Cleaning.....	7-40
Aftercooler - Cleaning	7-41
Cab air filters - Cleaning.....	7-41
Cab air filters - Cleaning - Recirculation Filters	7-42

Accessory belt - Check - Alternator belt	7-42
Compressor drive belt - Check - Air conditioner belt	7-42
Front loader and bucket - Check – bolts and nuts	7-43

Every 300 hours

Lift oil filters - Replace	7-45
Transmission oil filter - Replace - Auxiliary services	7-45
Air cleaner - Cleaning	7-45
Oil dipstick - Check Oil level	7-46
Transmission drive housing - Check - Oil Level	7-47
Four-Wheel Drive (4WD) axle - Check	7-47
Final drive - Check	7-47
Steering knuckle and king pin - Grease – (4WD)	7-48

Every 600 hours

Engine - Replace - Oil and filter	7-49
Fuel filters - Replace	7-51
Wheels - Tighten	7-53
Diesel Exhaust Fluid (DEF)/AdBlue®/ARLA filters - Cleaning - In line filter	7-54
Diesel Exhaust Fluid (DEF)/AdBlue®/ARLA filters - Replace - In line filter	7-54
Driving wheel shaft - Grease - Bearing	7-54

Every 1200 hours or annually

Cab air filters - Replace	7-55
Cab air filters - Replace - Recirculation Filters	7-55
Air cleaner - Replace	7-55
Fuel tank - Drain fluid.....	7-56
Crankcase ventilation system - Replace	7-57
Front loader and bucket - Check – Hoses	7-57
Crankcase ventilation system - Replace	7-57

Every 1200 hours or two years

Four-Wheel Drive (4WD) axle - Change fluid	7-58
Final drive - Change fluid – (4WD)	7-58
Transmission drive housing - Change fluid.....	7-58
Accessory belt - Replace - Alternator belt	7-59
Compressor drive belt - Replace - Air conditioner belt	7-59

Every two years

Receiver-dryer - Replace.....	7-60
-------------------------------	------

Every 3600 hours or two years

Diesel Exhaust Fluid (DEF)/AdBlue®/ARLA filters - Replace - Main Filter	7-61
---	------

Every 3600 hours or four years

Radiator - Change fluid - OAT coolant	7-61
---	------

Electrical system

Battery - Check	7-63
Front light - Adjust	7-65
Front light - Replace	7-66
Turn signal and/or hazard lights - Replace	7-67
Headlight - Replace	7-67
Fuse and relay box - Replace	7-68

Fuse and relay locations

Fuse and relay box - Check	7-70
----------------------------------	------

Storage

Tractor storage	7-87
Removal of tractor from storage	7-88

CALIBRATION

Clutch calibration - Power shuttle transmission	7-88
Electronic lift calibration	7-92

8 TROUBLESHOOTING

Fault code resolution

Viewing error codes	8-1
Error code identification	8-1
Front loader and bucket - Troubleshooting	8-2

Alarm(s)

Instrument cluster Analog-Digital Instrument Cluster (ADIC) - Basic instructions..	8-2
--	-----

Symptom(s)

Hydraulic systems - Troubleshooting	8-3
Hydraulic service brakes - Troubleshooting	8-3
Engine - Troubleshooting	8-4
Electrical system - Troubleshooting	8-5
Rear three-point hitch - Troubleshooting	8-5
Hydraulic service brakes - Troubleshooting	8-6
Cab climate control - Troubleshooting	8-6
Front loader and bucket - Troubleshooting	8-6
Instrument cluster - Part identification	8-7
Instrument cluster - General specification	8-7

9 SPECIFICATIONS

General dimensions	9-1
Maximum permitted loads on front and rear axle	9-3

Maximum permitted loads on drawbar	9-4
Additional equipment attachment points	9-5
Speed table for 12 x 12 gearbox	9-7
Speed table for 20 x 20 gearbox	9-9
Consumables	9-11
Capacities	9-11
General specification	9-12
Front loader and bucket - General specification.....	9-16

10 ACCESSORIES

Radio	10-1
Single piece ballast.....	10-12
Coolant immersion heater (where fitted)	10-14

1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new machine. You have bought a reliable machine, which will ensure high performance and long-lasting service, if you maintain and use the machine correctly. Ensure that all operators read this manual carefully. Always leave this manual at the operators' disposal for immediate reference.

The NEW HOLLAND dealer will provide you with the general operating instructions for your new machine. Your dealer's service technicians were trained directly by the manufacturer. The service technicians will be able to provide any further clarification that you need regarding the operation of your machine.

The New Holland Top Service program is also available. Visit www.newholland.com.

Your NEW HOLLAND dealer has the full range of genuine NEW HOLLAND spare parts. These parts are manufactured and inspected carefully to ensure high quality and accurate fitting of all necessary spare parts. When ordering parts, you should give your dealer the model code and product identification number of your new machine. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model code and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model :
Product Identification Number (PIN):



Warning symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

⚠ WARNING

Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.

Replace all shields before operating the machine.

Failure to comply could result in death or serious injury.

W0012A

The machine has been designed and built according to the highest standards of quality and it complies with all current safety regulations. However, the risk of accidents can never be completely excluded. That is why it is essential to observe elementary safety rules and precautions.

Read this manual carefully, paying particular attention to the instructions concerning safety, operation and maintenance so as to avoid the risk of injury while operating or servicing the machine.

Do not use this machine for any applications or purposes other than those described in this manual. If the machine is to be used for work involving the use of special attachments, accessories or equipment, consult your NEW HOLLAND Dealer in order to make sure that any adaptations or modifications made are in keeping with the machine's technical specifications and with prevailing safety requirements.

Any modification or adaptation which is not approved by the manufacturer may invalidate the machine's initial conformity with safety requirements.

The machine must undergo regular inspections, the frequency of which varies according to the type of use. Consult your authorized NEW HOLLAND dealer.

Always keep this manual in the operator's compartment (in the seat back, behind the operator's seat). Make sure it is always complete and in good condition. To receive extra copies of the manual or copies in languages other than that of your country of residence, please contact your NEW HOLLAND dealer.

NOTICE: *The information in this manual is provided based on the information that was available at the time the manual was written. Settings, procedures, part numbers, software and other items may change, which may affect the maintenance of the machine. Ensure that you have complete and current information from your dealer before you start any machine operation. All data given in this book is subject to production variations.*

Engine tampering statement:

ATTENTION: *The fuel system, exhaust after-treatment system, and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators, and users is strictly prohibited by law. Failure to comply with this prohibition could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

Product improvements

CNH America LLC applies a policy of continuous product development and improvement. We reserve the right to make changes or improvements when possible, without incurring any obligation to make these changes or modifications to the products sold previously.

Intended use

NOTE: *Your tractor is designed according to European directives related to health and safety risks; though it has been designed to minimize all the potential risks it is mandatory to carefully read, understand and observe all the decals and labels and to always refer to information and prescriptions outlined in this manual to prevent all residual potential risks. If you need further assistance please do not hesitate to contact your dealer.*

Your tractor is designed and made to pull, carry and power a variety of mounted or towed equipment, although within some physical limits. The working speed and performance may depend on various factors, such as weather and terrain conditions. Though the tractor is designed to perform in combination with a variety of equipment, there may be a number of combinations of the above parameters for which there is severe degradation of performance of the tractor and/or its mounted or trailed equipment. If you notice degradation of performance, contact your dealer for assistance, he may have useful information for improvements, or a kit may be available to enhance the performance.

Please carefully read and consider the following precautions:

- Do not use the tractor for purposes other than those intended by the manufacturer and outlined in this manual.
- Do not use the tractor beyond its limits of terrain gradient and stability. Using the tractor beyond these limits may result in roll-over or tip-over. Observe the recommendations in this manual.
- Do not use the tractor at higher speeds than those allowed by the load and the environment. A wet surface or other low adherence conditions may increase the braking distance or result in vehicle instability. Always adapt your travelling speed according to the load of the vehicle and the characteristics of the road.
- Do not use the tractor near or on soft verges of canals and brooks or banks and verges that are undermined by rodents. The tractor may sink sideways and roll over.
- Do not use the tractor on unstable crossings or bridges and/or on soft surfaces or ones that are not strong enough. These constructions may collapse and cause roll-over of the tractor. Always inspect the condition and carrying capacity of bridges and ramps before crossing.
- Do not use equipment mounted on the tractor which is not correctly matching and firmly fixed. The use of implements or accessories that have not been approved or are not correctly connected may increase the risk of roll-over of the tractor if they come loose. Ensure that the dimensions of the three-point linkage interface of both the tractor and the equipment comply with the categories defined in ISO 730. Ensure that the dimensions and speed of the PTO shaft on the tractors match those of the equipment.
- Do not use the tractor in combination with equipment without having consulted the specific Operator's Manual provided with the equipment. The tractor is a universal tool to carry, tow and drive a variety of equipment. This manual alone cannot provide you with all the information required for the safe operation of the combination.
- Do not use the tractor for pulling work, in cases where you do not know whether the load will yield, for instance when pulling stumps; the tractor may flip over when the stump is not yielding.
- Be cautious that the centre of gravity of the tractor may increase when loads on the front-end loader or the three-point linkage are raised. In these conditions, the tractor may roll over earlier than expected.
- Do not step down from the tractor without shutting down the PTO, shifting the transmission to park or neutral and applying the park brake, unless continued PTO operation is required for some equipment, such as pumps or wood chippers. The latter equipment may have an emergency stop device on the equipment itself, as human intervention is needed during operation. But other equipment, engaged and driven by the tractor will have no means to stop the power transmission, other than the PTO clutch of the tractor.
- You must take the necessary precautions (e.g. assistance) to always be aware of the possible presence of bystanders, especially when manoeuvring in confined areas, such as the farm yard and sheds. Keep people away from the tractor during work. Ask bystanders to leave the field. There is not only the risk of being run over by the tractor, but objects ejected by some equipment mounted on the tractor, such as a rotary mower, may cause harm. Stones may be thrown further than the mowed crop. Pay the necessary attention while operating next to public roads or footpaths. Thrown objects can be projected outside the field and hit unprotected people such as cyclists or pedestrians. Wait to cut the edge of the field till it is clear of bystanders.
- Do not allow riders on the tractor; do not allow people to stand on the access step to the cab when the tractor is moving. Your view to the left will be obstructed and a rider risks falling from the tractor during unexpected or abrupt movements.
- Always stay clear from the implements operating area and especially do not stand between the tractor and the implement or the trailed vehicle when operating lift controls; ensure no bystanders are near these operating areas.
- Certain functions of your tractor are controlled by software and some of them are safety-related. Do not attempt to modify or download software not certified and distributed by the manufacturer. Electronic settings and logics may be destroyed and seriously affect the functioning of the tractor. This may result in unpredictable and unsafe behaviour of the tractor. Always refer to your dealer; he has the appropriate tools and data sets

and owns the officially released software versions and updates for your tractor.

- Your tractor may be equipped with a number of sensors to control safety functions. Tripping these sensors will result in a safe operation mode. Do not attempt to bypass any function on the tractor. You will be exposed to serious hazards, and moreover, the behaviour of the tractor may become unpredictable.

- The tractor has only one operator station and this is a one man operated vehicle. There is no need for other people on or around the tractor during normal operation. Do not allow riders on the tractor; do not allow people to stand near the access to the cab or on the step when the tractor is moving. Your view to the left will be obstructed and a rider risks falling from the tractor during unexpected or abrupt movements.

Electro-Magnetic Compatability (EMC)

Interference may arise as a result of add-on equipment that may not necessarily meet the required standards. As such interference can result in serious malfunction of the unit and/or create unsafe situations, you must observe the following:

- The maximum power of emission equipment (radio, telephones, etc.) must not exceed the limits imposed by the national authorities of the country where you use the machine
- The electro-magnetic field generated by the add-on system should not exceed **24 V/m** at any time and at any location in the proximity of electronic components
- The add-on equipment must not interfere with the functioning of the on board electronics

Failure to comply with these rules will render the NEW HOLLAND warranty null and void.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com