

ORIGINAL INSTRUCTIONS - according to Regulation (EU) 2014/1322, Annex XXII

Farmall® 85C
Farmall® 95C
Farmall® 105C
Farmall® 115C
Efficient Power - Tractor
PIN HLRFC085EGLF03629 and above

OPERATOR'S MANUAL

Part number 51594653

4th edition English

March 2019

Replaces part number 51492896



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
Intended use.....	1-3
Electro-Magnetic Compatibility (EMC)	1-5
Metric and imperial units abbreviations.....	1-6
Identification plates	1-8
Approval data plate.....	1-17
Operator's manual storage	1-17
Machine orientation.....	1-18
Health and safety related standards applied to your tractor.....	1-19
Exhaust Gas Recirculation (EGR) system	1-20

2 SAFETY INFORMATION

Safety aspects in accordance with Regulation (EU) 1322/2014 - Annex XXII and subsequent amendments and modifications	2-1
Safety rules and signal word definitions	2-10
Safety rules	2-11
Safety rules	2-11
Safety rules - General information	2-17
Safety rules – Maintenance	2-18
Safety rules - Wheels and tires	2-19
Safety rules – Explosions and fires	2-20
Safety rules - Fire extinguisher	2-20
Safety rules – Battery	2-20
Safety rules - Instructor seat	2-21
Safety rules – Operator presence system	2-21
Safety rules - Power Take-Off (PTO)	2-21
Safety rules - Reflectors and warning lights	2-22
Safety rules - Seat belts	2-22
Safety rules - Operator protective structure	2-22
Safety rules - HVAC system	2-24
Safety rules - Personal Protective Equipment (PPE)	2-24
Safety rules - "Do not use" sign	2-24
Safety rules - Hazardous chemicals	2-24
Safety rules - Near utilities	2-25
Safety rules - In the event of electrical storms	2-25
Safety rules – Mounting and dismounting the machine	2-25
Safety rules - Lifting and overhead loads	2-26
Safety rules - Front end loader	2-26
Ecology and the environment	2-27
Noise level.....	2-28
Vibration levels	2-29
Towing the tractor for recovery	2-30
Tractor jacking points.....	2-31
Burn prevention.....	2-32
Emergency escape from cab	2-33

Wheel chocks.....	2-34
Safety signs	2-35

3 CONTROLS AND INSTRUMENTS

Access to operator's platform

Getting in and out of the machine	3-1
Getting to know the internal parts of the cab	3-2
External rear view mirrors	3-5
Clock adjustment	3-6

Operator's seat

Mechanical suspension seat	3-7
Air seat	3-8
Air suspension seat deluxe	3-9
Safety belt	3-11

Instructional seat

Instructional seat - Localization overview	3-12
--	------

Forward controls

Instrument cluster	3-12
Front controls	3-19

Left-hand side controls

Left side console	3-25
Left side post controls	3-26
Handbrake.....	3-28

Right-hand side controls

Right-hand console.....	3-29
Right side post controls.....	3-38
Multicontroller.....	3-40
Hand throttle.....	3-41
Park lock.....	3-42
Heating, ventilation or air-conditioning control	3-43

Display

Performance windows	3-45
Programming tractor functions	3-49
Adjusting the dashboard/display brightness.....	3-49
Calibrating speed	3-52
Calibrating tool width	3-54
Programming maintenance work	3-55
Activating/deactivating buzzer	3-57
Setting units of measurement	3-58
Regenerating the diesel particulate filter (DPF) automatically/manually	3-59

Resetting the oil change counter	3-64
Viewing error codes	3-65

Warning and advisory symbols

Display warnings overview	3-66
---------------------------------	------

4 OPERATING INSTRUCTIONS

Commissioning the unit

Basic operating safety rules	4-1
Refueling	4-2

Starting the unit

Starting engine	4-3
-----------------------	-----

Stopping the unit

Stopping the engine	4-5
Electronic battery isolator - Operating	4-6

Moving the unit

Machine movement start-up	4-7
Operating in cold temperatures	4-8
Low idle speed management	4-9

5 TRANSPORT OPERATIONS

Road transport

Transporting the machine	5-1
--------------------------------	-----

Recovery transport

Recovery and towing	5-2
Towing the tractor	5-3

6 WORKING OPERATIONS

General information

Constant engine speed	6-1
Four-wheel drive	6-2
Mechanical differential lock	6-3
Electrohydraulic differential lock	6-4
Roll Over Protection Structure (ROPS) removable	6-5
Roll Over Protection Structure (ROPS) non-removable	6-7

Drive

Transmission operation	6-8
------------------------------	-----

Rear remote control valves	
Remote control valves - Safety rules	6-18
Rear remote control valves	6-19
Single/double action hydraulic valves	6-22
Hydraulic oil level when using remote hydraulic equipment.....	6-23

Mid-mount control valve	
Joystick	6-24

Rear Power Take-Off (PTO)	
Safety rules	6-27
General	6-29
Changing the Power Take-Off (PTO) shaft	6-29
Attaching Power Take-Off (PTO) driven equipment	6-31
Independent Power Take-Off manual	6-32
Independent Power Take-Off with electrohydraulic control	6-37
Ground speed Power Take-Off manual	6-41
Ground speed Power Take-Off electro-hydraulic operation	6-45
Power take-off speeds.....	6-49
Power Take-Off (PTO) external controls.....	6-50
Stationary power take off operation switch	6-51

Front Power Take-Off (PTO)	
Safety rules	6-52
Front Power Take-Off (PTO).....	6-53

Rear hydraulic lift	
Safety rules	6-54
Hydraulic lift with mechanical control	6-55
Rear hitch internal controls - Operating	6-57
Hydraulic lift with electronic control.....	6-59
Hydraulic lift with electronic control.....	6-62
Operating Instructions	6-67
Hydraulic lift external controls	6-70

Front hydraulic lift	
Safety rules	6-72
Front hydraulic lift with mechanical control	6-72
Front hydraulic lift with electronic control	6-73

Rear three-point hitch	
Three-point hitch adjustments	6-77
Rear three-point hitch - Operating — Configuring the tractor when towing a trailer with single or multiple axles	6-79
Hitching tools for quick coupling	6-80

Three-point linkage dimensions	6-81
Front three-point hitch	
Three-point hitch front	6-82
Three-point hitch front - Coupling fitted on the axle	6-84
Towbar	
General safety rules	6-85
Drawbar - Operating	6-86
Towing hook	
General safety rules	6-87
Towing hook	6-88
Automatic trailer hitch	6-91
Trailer braking systems	
Attaching a trailer	6-93
Hydraulic trailer brakes - Dual line	6-94
Hydraulic trailer brakes - Dual-line, compatible with trailers with universal single line	6-96
Hydraulic trailer brakes - With single line, Italy type	6-98
Trailer brake safety switch	6-100
Air-operated trailer brakes	6-101
Mechanical trailer brake bracket (Italy)	6-104
Tires and wheels	
Wheels and tires	6-105
Tire dimensions	6-109
Tread and fender settings	
Adjustment of the front tracks	6-111
Disc-to-rim coupling for front 4WD tires	6-113
Adjustment of the front mudguards	6-114
Adjustment of the steering angles	6-116
Front tracks diagram	6-116
Rear tracks diagram	6-119
Ballasting	
Safety rules	6-121
Ballasting	6-121
Front ballast weight	6-123
Rear Ballast	6-124
Liquid ballast	6-125

Power sockets

Power sockets	6-129
---------------------	-------

7 MAINTENANCE

General information

General safety before you service	7-1
Introduction	7-3
Dealer service and parts	7-3
Body maintenance	7-4
Organic Acid Technology (OAT) coolant	7-6
Consumables	7-7
Capacities	7-8
Opening the hood	7-9

Maintenance planning

Maintenance chart	7-10
-------------------------	------

As required

Radiator - Check – Fluid level	7-12
Windshield washer fluid reservoir - Filling	7-12
Air conditioning - Check	7-13
Hand brake lever - Check	7-13
Remote control valve reservoir - Check	7-13
Radiator - Cleaning	7-14
Brake pedals - Check	7-14
Hydraulic steering line - Check	7-15
External lighting - Check	7-15
Wheels - Check	7-15
Master clutch release control - Check	7-16

At warning message display

Air cleaner - Cleaning	7-17
Brake fluid reservoir - Filling	7-18
Fuel filters - Drain fluid	7-18
Engine - Replace - Oil and filter	7-19

Every 10 hours or daily

Engine - Check - Oil level	7-20
Air tanks - Drain fluid	7-20

After the first 50 hours of operation

Maintenance - Tighten	7-21
Maintenance - Check	7-21
Maintenance - Replace	7-21
Maintenance - Cleaning	7-22
Maintenance - Test	7-22
Maintenance - Grease	7-22

Every 50 hours

Steering cylinder - Grease – (2WD)	7-23
Front axle - Grease – Pivot pin (2WD)	7-23
Steering knuckle - Grease – (2WD)	7-23
Four-Wheel Drive (4WD) axle - Grease	7-24
Steering cylinder - Grease – SuperSteer™ axle	7-24
Front drive shaft - Grease - SuperSteer™ Axle	7-25
Rear three-point hitch - Grease	7-25
Rear hitch - Grease – Mechanical lift	7-25
Front hitch - Grease	7-26
Front hitch - Grease - Coupling mounted on the axle	7-26

Every 100 hours

Air-conditioning condenser - Cleaning	7-27
Transmission cooler - Cleaning	7-27
Aftercooler - Cleaning	7-28
Cab air filters - Cleaning	7-28
Cab air filters - Cleaning - Recirculation Filters	7-29
Accessory belt - Check - Alternator belt	7-29
Compressor drive belt - Check - Air conditioner belt	7-29
Compressor drive belt - Check - Pneumatic trailer brake belt	7-30

Every 300 hours

Lift oil filters - Replace	7-31
Transmission oil filter - Replace - Auxiliary services	7-31
Transmission drive housing - Check - Oil Level	7-32
Air cleaner - Cleaning	7-32
Final drive - Check	7-33
Four-Wheel Drive (4WD) axle - Check	7-33
Steering knuckle and king pin - Grease – (4WD)	7-34
Front Power Take-Off (PTO) housing - Check - Oil Level	7-34

Every 600 hours

Engine - Replace - Oil and filter	7-36
Fuel filters - Replace	7-38
Wheels - Tighten	7-40
Driving wheel shaft - Grease - Bearing	7-41

Every 1200 hours or annually

Cab air filters - Replace	7-42
Cab air filters - Replace - Recirculation Filters	7-42
Air cleaner - Replace	7-42
Fuel tank - Drain fluid	7-43
Crankcase ventilation system - Replace	7-44

Every 1200 hours or two years

Four-Wheel Drive (4WD) axle - Change fluid	7-45
Final drive - Change fluid – (4WD)	7-45
Transmission drive housing - Change fluid	7-46
Accessory belt - Replace - Alternator belt	7-46
Compressor drive belt - Replace - Air conditioner belt	7-46
Compressor drive belt - Replace - Pneumatic trailer brake belt	7-47
Radiator - Change fluid - Conventional coolant	7-47
Radiator - Change fluid - Conventional coolant	7-48
Air dryer - Replace - Trailer pneumatic brakes air drier	7-51
Front Power Take-Off (PTO) housing - Change fluid	7-52

Every two years

Receiver-dryer - Replace	7-53
--------------------------------	------

Every 3600 hours or four years

Radiator - Change fluid - OAT coolant	7-54
Diesel Particulate Filters (DPF) - Replace	7-56

Electrical system

Battery - Check	7-57
Front light - Adjust	7-59
Front light - Replace	7-60
Turn signal and/or hazard lights - Replace	7-61
Headlight - Replace	7-61
Fuse and relay box - Replace – Fuse and relay	7-62

Fuse and relay locations

Fuse and relay box - Part identification - Fuse and relay	7-64
---	------

Storage

Tractor storage	7-83
Removal of tractor from storage	7-85

CALIBRATION

Clutch calibration - Power shuttle transmission	7-85
Clutch calibration — Dual Command™ transmission	7-89
Clutch calibration — 2-speed Powershift transmission	7-91
Electronic lift calibration	7-95

8 TROUBLESHOOTING

Fault code resolution

Viewing error codes	8-1
Error code identification	8-1

Symptom(s)

Engine - Troubleshooting	8-2
Electrical system - Troubleshooting	8-4
Hydraulic systems - Troubleshooting	8-5
Rear three-point hitch - Troubleshooting	8-6
Hydraulic service brakes - Troubleshooting	8-7
Cab climate control - Troubleshooting	8-8

9 SPECIFICATIONS

General dimensions	9-1
Maximum permitted loads on front and rear axle	9-3
Maximum permitted loads on drawbar	9-4
Maximum permitted loads on towing hitch	9-5
Speed table for 12 x 12 gearbox	9-6
Speed table for 20 x 20 gearbox	9-9
Speed table for 24 x 24 gearbox	9-13
Speed table for 24 x 24 gearbox	9-15
Speed table for 40 x 40 gearbox	9-17
Additional equipment attachment points	9-21
Consumables	9-24
Capacities	9-25
General specification	9-26

10 ACCESSORIES

Radio	10-1
Single piece ballast	10-11
Coolant immersion heater (where fitted)	10-13
Front-end loader fixation points	10-14

1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

The CASE IH dealer will provide instructions on the general operation of new equipment. The dealer's staff, assigned to maintenance, is available for any questions related to the operation of the machine.

Your CASE IH dealer carries a complete line of genuine CASE IH service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model code and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model :
Product Identification Number (PIN):



Warning symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

⚠ WARNING

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.
Replace all shields before operating the machine.
Failure to comply could result in death or serious injury.**

W0012A

The machine has been designed and built according to the highest standards of quality and it complies with all current safety regulations. However, the risk of accidents can never be completely excluded. That is why it is essential to observe elementary safety rules and precautions.

Read this manual carefully, paying particular attention to the instructions concerning safety, operation and maintenance so as to avoid the risk of injury while operating or servicing the machine.

Do not use this machine for any application or purpose other than those described in this manual. If the machine is to be used for work involving the use of special attachments, accessories or equipment, consult your CASE IH Dealer in order to make sure that any adaptations or modifications made are in keeping with the machine's technical specifications and with prevailing safety requirements.

Any modification or adaptation which is not approved by the manufacturer may invalidate the machine's initial conformity with safety requirements.

The machine must undergo regular inspections, the frequency of which varies according to the type of use. Consult your authorized CASE IH dealer.

Always keep this manual in the operator's compartment (in the seat back, behind the operator's seat). Make sure it is always complete and in good condition. To receive extra copies of the manual or copies in languages other than that of your country of residence, please contact your CASE IH dealer.

The manufacturer is committed to the constant improvement of its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

NOTICE: *The information in this manual is provided on the basis of the information that was available at the time the manual was written. Settings, procedures, part numbers, software and other items may change, which may affect the maintenance of the machine. Ensure that you have complete and current information from your dealer before you start any machine operation. All data given in this book is subject to production variations.*

Engine tampering statement:

ATTENTION: *The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply with this prohibition could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*



Our support email:

ebooklibonline@outlook.com