

Windrower Tractors 8860, 8860HP, 8870, and 8880

Table of Contents

DIVISION / SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Index		Rac 6-22470
Introduction	1001	Rac 6-22480
Safety Rules, General Machine Specifications, and Standard Torque Specifications	1002	Rac 6-22490
Maintenance and Lubrication	1003	Rac 6-22500
Decals	1004	Rac 6-22510
2 ENGINE		
Index		Rac 6-22520
Engine Removal and Installation and Radiator Removal and Installation	2001	Rac 6-22530
Engine Accessories	2010	Rac 6-22540
Engine Service Information	2020	Rac 6-22550
3 FUEL SYSTEM		
Index		Rac 6-22560
Fuel System and Engine Controls	3001	Rac 6-22570
Fuel Injection Pump and Fuel Injectors	3002	Rac 6-22580
4 ELECTRICAL SYSTEM		
Index		Rac 6-22590
Removal and Installation of Electrical Components	4001	Rac 6-22600
Specifications, Schematics, Troubleshooting, and Using Booster Batteries to Start the Engine	4010	Rac 6-22610
Instruments	4020	Rac 6-22620
Electrical Schematics		Rac 6-5972 (Rev. B)
5 STEERING		
Index		Rac 6-22630
Removal and Installation of Steering Components	5001	Rac 6-22640
Steering Control Linkage Troubleshooting and Adjustment	5010	Rac 6-22650

6	POWER TRAIN	
	Index	Rac 6-22660
	Ground Drive Hydraulic System Specifications, Operation, Schematics, Troubleshooting, and Tests	6001 Rac 6-22670
	Charge Pump	6010 Rac 6-22680
	Tandem Pump	6012 Rac 6-22690
	Ground Drive Motors	6020 Rac 6-22700
	Two Speed Control Valve and Two Speed Cylinder	6030 Rac 6-22710
	Drive Controls	6032 Rac 6-22720
	Drive Shafts	6050 Rac 6-22730
	Chain Cases-with Single Drive Chains	6052 Rac 6-22740
	Chain Cases-with Dual Drive Chains	6054 Rac 6-22750
	Wheels and Tires	6060 Rac 6-22760
7	BRAKES	
	Index	Rac 6-22770
	Parking Lock	7001 Rac 6-22780
8	HYDRAULIC SYSTEM	
	Index	Rac 6-22790
	Hydraulic System Specifications, Operation, Schematics, Troubleshooting, and Tests	8001 Rac 6-22800
	Cleaning the Hydraulic System	8006 Rac 6-22810
	Header Drive Pump	8010 Rac 6-22820
	Header Drive System, Specifications, Operation, Schematics, Tests, and Adjustments-Tractors with Two Header Drive Motors	8015 Rac 6-22830
	Header Drive Motor-Tractors with One Header Drive Motor	8020 Rac 6-22840
	Header Drive Motor-Tractors with Two Header Drive Motors	8025 Rac 6-22850
	Header Lift and Flotation Valve, Header Angle Control Valve, and Bypass Valve	8030 Rac 6-22860
	Accumulator	8040 Rac 6-22870
	Cylinders	8090 Rac 6-22880
9	CHASSIS	
	Index	Rac 6-22890
	Air Conditioner Components, Removal and Installation	9001 Rac 6-22900
	Air Conditioning Troubleshooting and System Checks ..	9010 Rac 6-22910
	Cab, Seat, and Windshield	9020 Rac 6-22920
	Walking Beam	9040 Rac 6-22930

DIVISION 1

INDEX

SECTION TITLE	SECTION NUMBER
Introduction	1001
Safety Rules, General Machine Specifications, and Standard Torque Specifications	1002
Maintenance and Lubrication	1003
Decals	1004

Section 1001

INTRODUCTION

TABLE OF CONTENTS

General Information	1001-2
To Our Customer	1001-2
Introduction	1001-2
Serial Number Location	1001-2
Replacement Parts	1001-3
Units of Measure	1001-3
Table of Contents	1001-3
Page Numbers	1001-3

GENERAL INFORMATION

To Our Customer

We appreciate your confidence in our farm equipment and thank you for your patronage. In preparing this manual, we hope we have furnished you with a valuable tool for operating and maintaining this fine machine. Use this manual as your guide. Practicing the instructions given here will result in many years of dependable service from your machine.

Your Dealer can give you assistance with parts and specially trained personnel to assist you in repair and maintenance. Call your Dealer if you need any assistance or information.

Introduction

This service manual has been prepared with the latest service information available at the time of publication. Read the service manual carefully before doing any service on this machine. This manual is one of the most important tools available to the service technician.

“Right-hand” and “Left-hand” as used in this manual is determined by facing in the direction the machine will travel when in use.

The photos, illustrations, and data used in this manual were current at the time of printing, but due to possible production changes, your machine can vary slightly. The Manufacturer reserves the right to redesign and change the machine as necessary without notification.




WARNING

Some pictures in this manual show the machine with shields removed to allow for a better view of the subject of the picture. Never operate the machine with any of the shields removed.

Serial Number Location

The serial number is important information about the machine. You will need the serial number when ordering some replacement parts.

The tractor serial number plate is located on the left side of the tractor mainframe below the operator's platform.

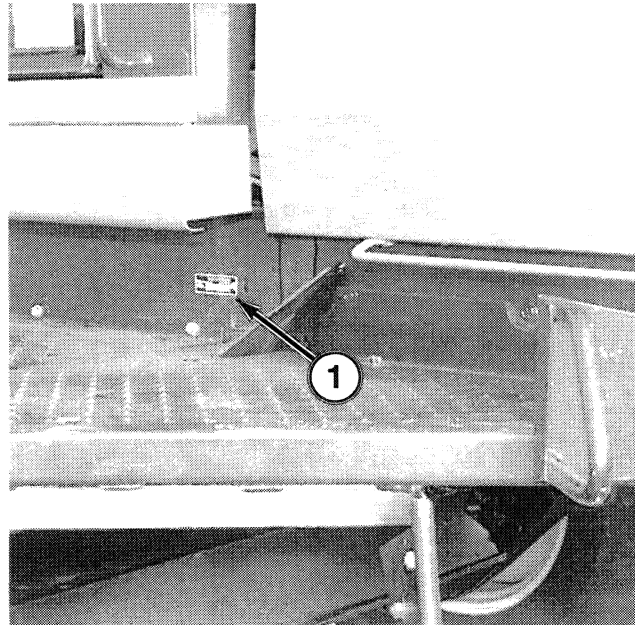

845WT-96082-101

1. Serial Number Location on Tractor

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com