

L405/L455 Front End Loader

Operators Manual With Set-Up Instructions

Rac 6-25740

Reprinted



1 - TO THE OWNER	1
2 - IDENTIFICATION NUMBERS	3
ATTACHMENT IDENTIFICATION NUMBER	3
3 - SAFETY/DECALS	5
SAFETY	5
DECALS	11
4 - SPECIFICATIONS	13
LOADER SPECIFICATIONS	13
TRACTOR PREPARATION	17
5 - TRACTOR/LOADER CONNECTIONS	25
MOUNTING THE LOADER	25
DISMOUNTING THE LOADER	27
HYDRAULIC CONNECTIONS	29
6 - OPERATING INSTRUCTIONS	33
LOADER OPERATION	33
LOADER CONTROLS	34
7 - LOADER/ATTACHMENT CONNECTIONS	59
REMOVING STANDARD ATTACH BUCKET FROM LOADER	59
INSTALLING STANDARD ATTACH BUCKET TO LOADER	60
REMOVING BUCKET OR ATTACHMENT FROM QUICK COUPLER ..	61
INSTALLING BUCKET OR ATTACHMENT TO QUICK COUPLER	62
8 - LUBRICATION	65
LOADER LUBRICATION	65
LUBRICATION CHART	66
9 - MAINTENANCE	69
TORQUE SPECIFICATIONS	69
BUCKET LEVEL INDICATOR ADJUSTMENT	71
CONTROL CABLE ADJUSTMENT	72
CONTROL VALVE	73
BUSHING REPLACEMENT	74
HYDRAULIC CYLINDER SEAL REPLACEMENT	81
CONTROL CABLE REPLACEMENT	84
10 - LOADER STORAGE	85
STORAGE PREPARATION	85
REMOVING LOADER FROM STORAGE	85
11 - TROUBLESHOOTING	87
PROBLEMS AND THEIR PROBABLE CAUSES	87

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com