

L705/L755 Front End Loader

Operators Manual

6-25800

Reprinted



GENERAL TABLE OF CONTENTS

1 - TO THE OWNER	1
2 - IDENTIFICATION NUMBERS	3
ATTACHMENT IDENTIFICATION NUMBER	3
3 - SAFETY/DECALS	5
SAFETY	5
DECALS	11
4 - SPECIFICATIONS	13
LOADER SPECIFICATIONS	13
TRACTOR PREPARATION	17
5 - TRACTOR/LOADER CONNECTIONS	23
MOUNTING THE LOADER	23
DISMOUNTING THE LOADER	25
HYDRAULIC CONNECTIONS	27
6 - OPERATING INSTRUCTIONS	29
LOADER OPERATION	29
LOADER CONTROLS	30
7 - LOADER/ATTACHMENT CONNECTIONS	53
REMOVING STANDARD ATTACH BUCKET FROM LOADER	53
INSTALLING STANDARD ATTACH BUCKET TO LOADER	54
REMOVING BUCKET OR ATTACHMENT FROM QUICK COUPLER ..	55
INSTALLING BUCKET OR ATTACHMENT TO QUICK COUPLER	56
8 - LUBRICATION	59
LOADER LUBRICATION	59
LUBRICATION CHART	60
9 - MAINTENANCE	63
TORQUE SPECIFICATIONS	63
BUCKET LEVEL INDICATOR ADJUSTMENT	65
CONTROL CABLE ADJUSTMENT	66
CONTROL VALVE WITHOUT SELF-LEVELING	67
BUSHING REPLACEMENT	68
HYDRAULIC CYLINDER SEAL REPLACEMENT	76
CONTROL CABLE REPLACEMENT	79

10 - LOADER STORAGE	81
STORAGE PREPARATION	81
REMOVING LOADER FROM STORAGE	81
11 - TROUBLESHOOTING	83
PROBLEMS AND THEIR PROBABLE CAUSES	83
12 - LOADER SETUP INSTRUCTIONS	87
GENERAL INFORMATION	87
REMOVAL FROM SHIPPING CONFIGURATION	88
MOUNTING BRACKET INSTALLATION	89
LOADER FRAME INSTALLATION	97
REAR MOUNT HOSE PACKAGE INSTALLATION	98
MID MOUNT HOSE PACKAGE INSTALLATION - WITHOUT SELF-LEVELING VALVE	100
MID MOUNT HOSE PACKAGE INSTALLATION - WITH SELF-LEVELING VALVE	103
EXTERNAL VALVE HOSE PACKAGE INSTALLATION - WITH SELF-LEVELING VALVE	109
EXTERNAL VALVE HOSE PACKAGE INSTALLATION - WITHOUT SELF-LEVELING VALVE	116
JOYSTICK INSTALLATION - 2 OR 3 FUNCTION	123
CONTROL CABLE INSTALLATION	126
THIRD FUNCTION HOSE PACKAGE INSTALLATION	129
TWO FUNCTION TO THREE FUNCTION JOYSTICK CONVERSION	131
QUICK COUPLER INSTALLATION	133
INSTALLATION OF STANDARD ATTACH BUCKET TO LOADER ...	134
BUCKET LEVEL INDICATOR INSTALLATION	134
INSTALLATION OF CUTTING EDGE (84 AND 96 INCH HEAVY DUTY QC BUCKETS ONLY)	135
INSTALLATION OF TOOTH BAR (84 AND 96 INCH HEAVY DUTY QC BUCKETS ONLY)	135
INSTALLATION OF SPILL GUARD (84 AND 96 INCH HEAVY DUTY BUCKETS ONLY)	136
INSTALLATION OF GRILL GUARD	136
BALE AND SILAGE GRAPPLE INSTALLATION	137
(84 AND 96 INCH BUCKETS) (CASE IH)	137
HAY GRAPPLE INSTALLATION (84 AND 96 INCH HEAVY DUTY QC BUCKETS ONLY) (FFC)	139
THIRD FUNCTION CONTROL VALVE INSTALLATION	143
DETAIL INDEX	145
DETAIL INDEX	145

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com