

2555 Cotton Picker Service Manual 7-88071 Table of Contents

Description	PC Code	Section No.	Form No.
General		Tab 1	
Standard Torque Specifications	5	1001	8-71602
Fluid and Lubricants	4	1010	7-63272
Loctite Product Chart	2		8-98902
Engines		Tab 2	
See 6TA 830 Service Manual			
Fuel System		Tab 3	
See 6TA 830 Service Manual			
Electrical		Tab 4	
How It Works	135	4000	7-88350
Wiring Schematics and Troubleshooting 2555 Cotton Picker Prior To JJC0157150	58	4002	7-68401
Electrical Schematic (see pocket at rear of manual)			7-68420
Wiring Schematics and Troubleshooting 2555 Cotton Picker P.I.N. JJC0157150 and After	56	4002	7-87420
Electrical Schematic (see pocket at rear of manual)			7-87051
Steering		Tab 5	
Steering Axle And Line	16	5003	8-99061
Steering Hand Pump	14	5020	7-62571
Steering Cylinder	12	5030	8-62441
Rear Drive Axle Service	26	5040	7-67370
Power Train		Tab 6	
Foot-N-Inch Valve	4	6015	7-63830
Hydrostatic Drive Pump Service	14	6018	7-64341
Hydrostatic Drive Motor Service	10	6030	7-64121
Transmission Service	40	6040	7-63351
Drum Drive	16	6051	8-82772
Final Drives	14	6060	7-63491
Cable Adjustment	6	6080	7-89540
Brakes		Tab 7	
Brake Assemblies	13	7010	7-62541
Master Brake Valve	13	7020	7-62550

Reprinted

Description	PC Code	Section No.	Form No.
Hydraulic		Tab 8	
How It Works	128	8000	7-88360
Hydraulic Schematic and Troubleshooting	32	8002	7-68391
Hydraulic Schematic (see pocket at rear of manual)			7-68410
Hydraulic Oil Filter	4	8030	7-63291
Hydraulic Pump and Compensator - Overhaul	34	8040	8-62480
Hydraulic Gear Pump	10	8045	7-86310
Hydraulic Manifold Valve	6	8051	8-99022
Hydraulic Valves, Cylinders and Motor	44	8060	8-62182
Auger Drive Motor	8	8070	7-67730
Chassis		Tab 9	
Air Conditioning Troubleshooting - Visual and Operating	22	9010	7-86210
Air Conditioning System - Gauges and Testing	24	9020	7-63310
Air Conditioner System Service	12	9030	7-85540
Air Conditioning Components Service	30	9040	7-63331
Air Suspension Seat	10	9065	7-60911
Fan Assembly	22	9070	8-62222
Pressure Moistener System	10	9075	7-64011
Basket Assembly Service	28	9077	7-85900
Picker Drum Removal and Installation	8	9081	8-99191
Picker Drum Service	54	9091	6-11951
Picker Bar and Spindle Lubrication System	6	9092	8-98611
Drum Gearboxes and Input Drive Shaft	12	9093	8-99101

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Section 1001

GENERAL TORQUE SPECIFICATIONS

TABLE OF CONTENTS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE 3



 
TORQUE SPECIFICATIONS - METRIC HARDWARE 4




TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS 5

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS 6

TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers dry, or when lubricated with engine oil. Not applicable if special graphities, Molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs		
  		
Size	Pound-Inches	Newton metres
1/4 inch	108 to 132	12 to 15
5/16 inch	204 to 252	23 to 28
3/8 inch	420 to 504	48 to 57
Size	Pound-Feet	Newton metres
7/16 inch	54 to 64	73 to 87
1/2 inch	80 to 96	109 to 130
9/16 inch	110 to 132	149 to 179
5/8 inch	150 to 180	203 to 244
3/4 inch	270 to 324	366 to 439
7/8 inch	400 to 480	542 to 651
1.0 inch	580 to 696	787 to 944
1-1/8 inch	800 to 880	1085 to 1193
1-1/4 inch	1120 to 1240	1519 to 1681
1-3/8 inch	1460 to 1680	1980 to 2278
1-1/2 inch	1940 to 2200	2631 to 2983

Grade 8 Bolts, Nuts, and Studs		
  		
Size	Pound-Inches	Newton metres
1/4 inch	144 to 180	16 to 20
5/16 inch	288 to 348	33 to 39
3/8 inch	540 to 648	61 to 73
Size	Pound-Feet	Newton metres
7/16 inch	70 to 84	95 to 114
1/2 inch	110 to 132	149 to 179
9/16 inch	160 to 192	217 to 260
5/8 inch	220 to 264	298 to 358
3/4 inch	380 to 456	515 to 618
7/8 inch	600 to 720	814 to 976
1.0 inch	900 to 1080	1220 to 1465
1-1/8 inch	1280 to 1440	1736 to 1953
1-1/4 inch	1820 to 2000	2468 to 2712
1-3/8 inch	2380 to 2720	3227 to 3688
1-1/2 inch	3160 to 3560	4285 to 4827
NOTE: Use thick nuts with Grade 8 bolts.		

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com