



## **OPERATOR'S MANUAL**

**Magnum 215 , Magnum 245 , Magnum 275 , Magnum 305 ,  
Magnum 335**

# Contents

---

<b>1 GENERAL INFORMATION</b>	
Safety rules .....	1-1
Read the Operators Manual .....	1-2
CNH America LLC technical manuals .....	1-2
Proposition 65 .....	1-2
Product identification .....	1-3
Note to the Owner .....	1-4
Tractor intended use .....	1-5
Manual storage .....	1-5
Product identification .....	1-7
Component location .....	1-9
<b>2 SAFETY INFORMATION</b>	
Safety rules .....	2-1
ROPS and CSF .....	2-8
Front-end loader .....	2-9
Hazardous substances .....	2-10
SAFETY DECALS .....	2-11
<b>3 CONTROLS/INSTRUMENTS</b>	
<b>ACCESS TO OPERATOR'S PLATFORM</b>	
Tractor access .....	3-1
<b>OPERATOR'S SEAT</b>	
Overview .....	3-2
Control identification .....	3-4
<b>INSTRUCTOR'S SEAT</b>	
Overview .....	3-7
<b>FORWARD CONTROLS</b>	
Steering column .....	3-8
Front console .....	3-11
Pedal controls .....	3-13
<b>RH SIDE CONTROLS</b>	
Armrest console .....	3-15
Armrest compartment .....	3-23
Adjusting the armrest console .....	3-26
<b>REARWARD CONTROLS</b>	
Fender console .....	3-27
Automatic temperature controls .....	3-32
Automatic temperature control system .....	3-35
Ventilation .....	3-36
<b>OVERHEAD CONTROLS</b>	
Lamp controls .....	3-38
<b>EXTERIOR CONTROLS</b>	
Rear fender controls .....	3-39
<b>INSTRUMENT CLUSTER</b>	
Overview .....	3-40

---

Gauges .....	3-41
Upper display .....	3-43
Keypad .....	3-45
Status and warning icons.....	3-47
Lower display .....	3-49
Display settings.....	3-69
Operator preferences.....	3-80
Icon legend .....	3-90

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

Before starting the engine .....	4-1
----------------------------------	-----

### STARTING THE UNIT

Normal engine starting .....	4-4
Cold temperature operation .....	4-7

### STOPPING THE UNIT

Stopping the engine .....	4-10
---------------------------	------

### MOVING THE UNIT

Powershift transmission .....	4-11
Transmission default gears.....	4-12
Setting default gears .....	4-16
Best practices for prolonged transmission life.....	4-19
Transmission disengages; neutral icon flashes .....	4-20
Automatic productivity management (APM).....	4-21
Mechanical front drive (MFD).....	4-28
Differential lock system.....	4-32
Suspended axle .....	4-35
Ride control.....	4-43
Constant engine speed.....	4-46
Electronic end of row system.....	4-48

## 5 TRANSPORT OPERATIONS

### ROAD TRANSPORT

Tractor warning lamps and SMV symbol .....	5-1
Wide transport marker light.....	5-2
Tractor warning lamps .....	5-4
Safe transport speed .....	5-5
Implement warning lamps and SMV symbol .....	5-6
Safety chain .....	5-7

### SHIPPING TRANSPORT

Securing the tractor for shipping .....	5-8
---	-----

### RECOVERY TRANSPORT

Safety rules.....	5-9
Towing the tractor.....	5-10

## 6 WORKING OPERATIONS

### GENERAL INFORMATION

---

Overview .....	6-1
<b>REAR PTO</b>	
Safety rules .....	6-2
Connecting the PTO .....	6-5
Interchangeable PTO shaft .....	6-6
Reversible PTO shaft .....	6-12
PTO operation .....	6-14
PTO fender switch operation .....	6-18
Auto PTO operation .....	6-19
<b>THREE POINT HITCH</b>	
Identification .....	6-23
Link adjustment .....	6-24
Hitch high clearance adjustment .....	6-28
Hydraulic links .....	6-31
Sway limiter adjustment .....	6-32
Lower link block adjustment .....	6-33
Mechanical float adjustment .....	6-34
Hitch quick coupler - Category III/IIIN .....	6-35
Hitch quick coupler - Category IVN .....	6-40
Hitch operation .....	6-44
Hitch remote switch operation .....	6-50
Position control operation .....	6-51
Load control operation .....	6-53
Slip control operation .....	6-55
Hitch set point .....	6-58
<b>DRAWBARS AND TOWING ATTACHMENTS</b>	
Safety rules .....	6-61
Drawbar capacity/position .....	6-61
Adjusting the drawbar .....	6-66
<b>AUXILIARY POWER CONNECTIONS</b>	
Auxiliary power and lighting .....	6-68
Cab power connections .....	6-70
<b>HYDRAULIC REMOTE CONTROL VALVES</b>	
Valve couplers and connections .....	6-72
Motor return circuit .....	6-75
Power beyond circuit .....	6-76
Overview .....	6-78
Operating the controls .....	6-79
Changing the functional mode .....	6-82
Remote hydraulic auto mode .....	6-86
Auto depth control .....	6-89
<b>BALLASTING THE TRACTOR</b>	
Guidelines .....	6-92
Tire load and inflation charts .....	6-97
Weights, cast metal and liquid .....	6-105
Wheel slip and power hop performance .....	6-113
<b>MECHANICAL FRONT DRIVE (MFD) AXLES</b>	

Tire combinations and tread positions .....	6-116
Steering and oscillation stops .....	6-123
Tread and fender settings - standard MFD axles.....	6-131
Tread and fender settings - saddle suspension axles .....	6-138
Tread and fender settings - heavy duty and 3 meter axles.....	6-146

## REAR AXLE

Rear wheel installation .....	6-154
Rear wheel tread settings .....	6-157

## 7 MAINTENANCE

### GENERAL INFORMATION

Safety rules .....	7-1
Opening the hood .....	7-2
Battery access and service .....	7-4
Tire and rim service.....	7-5
Tractor jacking points.....	7-7
Capacities .....	7-9
Consumables .....	7-11
Electrical component location .....	7-15
Electrical system specification.....	7-19
Maintenance chart notes .....	7-20

### MAINTENANCE CHART

Maintenance Chart .....	7-20
-------------------------	------

### At warning message display

Air filter service icon/message.....	7-23
--------------------------------------	------

### First 10 to 50 hours

Differential and planetary oil.....	7-24
Wheel bolt torque.....	7-25
Weight bolt torque .....	7-26

### Every 10 hours or daily

Engine oil level .....	7-27
Transmission oil level.....	7-28
Engine coolant level .....	7-29
Engine auxiliary fuel filter.....	7-30
Air reservoir - Drain fluid.....	7-31
Rear hitch and front axle .....	7-32

### Every 50 hours

Engine primary fuel filter.....	7-33
---------------------------------	------

### Every 300 hours

Battery water level (Note E) .....	7-34
Engine air intake hoses.....	7-35
Engine coolant level - deaeration tank .....	7-36
Engine oil and filter .....	7-37
Wheel bolt torque.....	7-39
Weight bolt torque .....	7-40
Front axle (Note A) .....	7-41

---

Rear hitch (Note A) .....	7-48
Fuel tank .....	7-50
Differential and planetary oil level (Note B) .....	7-51
Transmission oil pressure oil pressure .....	7-53
Reversible 1000 RPM PTO shaft (Note D) .....	7-55

### Every 600 hours

Engine coolant antifreeze protection .....	7-56
Engine coolant filter .....	7-57
Engine coolant hoses and clamps .....	7-58
Engine primary fuel filter .....	7-59
Changeable PTO internal splines .....	7-61

### Every 1200 hours or annually

Differential and planetary oil .....	7-62
Engine air filters .....	7-66
Engine air precleaner .....	7-70

### Every 1500 hours

Transmission oil .....	7-71
Transmission oil filter .....	7-73
Regulated transmission filter .....	7-74

### Every 2100 hours

Engine coolant .....	7-75
Fuel injector nozzles (Note C) .....	7-78
Engine valve adjustment (Note C) .....	7-78

### Every 3000 hours

Engine vibration damper (Note C) .....	7-79
--	------

### As required

Vehicle fire prevention .....	7-80
Cab air filter .....	7-81
Engine primary air filter .....	7-84
Grille screen and radiator area .....	7-87
Fuel tank vent filter .....	7-89
Transmission clutch and accumulator .....	7-89
Tire pressure .....	7-89
Fan belt .....	7-90
Spark arresting muffler .....	7-91
Remote valve collection bottle .....	7-92
Engine auxiliary fuel filter .....	7-93
Cab fabric and carpet .....	7-95
Seat belt .....	7-96

### STORAGE

Tractor storage .....	7-97
Removal from storage .....	7-97

### ELECTRICAL SYSTEM

Radio or audio system .....	7-98
Battery removal and installation .....	7-99
Auxiliary battery connections .....	7-101

---

Head light - Replace .....	7-102
Flood and work light .....	7-108
Fender tail light and warning light .....	7-110
Roof front warning and work light .....	7-112
Roof rear warning light .....	7-115
High intensity work light .....	7-117
Wide transport marker light.....	7-119
Rotating beacon light.....	7-120
Interior light - Replace .....	7-121

## 8 TROUBLESHOOTING

### ALARM(S)

Display warnings .....	8-1
------------------------	-----

## 9 SPECIFICATIONS

ENGINE - General specification.....	9-1
POWER TRAIN - General specification .....	9-3
TRAVELLING - Speeds .....	9-6
Vehicle dimensions and shipping weight .....	9-15
Maximum operating weight.....	9-17

## 10 ACCESSORIES

Front wheel fenders .....	10-1
Farming system displays .....	10-7
Chemical tank mounting.....	10-10
Loader connection and operation .....	10-12
Trailer brake connections.....	10-13
General accessories.....	10-16

# 1 - GENERAL INFORMATION

## Safety rules

### PRECAUTIONARY STATEMENTS

#### Personal Safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

Throughout this manual and on machine decals, you will find signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.



**DANGER** indicates a hazardous situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.

M1169A



**WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.

M1170A



**CAUTION**, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. The color associated with Caution is YELLOW.

M1171A

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION INSTRUCTIONS COULD RESULT IN DEATH OR SERIOUS INJURY.

#### MACHINE SAFETY

**IMPORTANT:** *IMPORTANT* is used to address practices not related to personal safety.

The word IMPORTANT is intended for machine safety. It is used throughout this manual followed by specific instructions to prevent machine damage. Failure to follow IMPORTANT messages could result in machine damage.

#### INFORMATION

**NOTE:** *Instructions that clarify steps, procedures, or other information in this manual.*



## Read the Operators Manual



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE DEATH OR SERIOUS INJURY. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the manual(s) pertaining to the machine.
- Reads and understands ALL safety decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow CNH America LLC instructions on machine operation and maintenance.

## CNH America LLC technical manuals

Manuals are available from your dealer for the operation, service and repair of your machine. For prompt convenient service, contact your dealer for assistance in obtaining the manuals for your machine.

Your dealer can expedite your order for Operators Manuals, Parts Catalogs, Repair Manuals and maintenance records.

Always give the machine name, model and P.I.N. (product identification number) of your machine so your dealer can provide the correct manuals for your machine.

The company is continually striving to improve its products and therefore reserves the right to make improvements and changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

All data given in this manual is subject to production variations.

**IMPORTANT:** *Operating and service messages displayed on the electronic operating panel may vary from what is shown in the Operators Manual. If this occurs, heed the latest instructions on the electronic operating panel.*


Dimensions and weights are approximate only and the illustrations do not necessarily show the machine in standard condition. For exact information about any particular machine, please consult your dealer.

## Proposition 65


<p style="text-align: center;"><b>CALIFORNIA</b></p> <p style="text-align: center;"><b>Proposition 65 Warning</b></p> <p><b>Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.</b></p> <p><b>Battery posts, terminals and related accessories contain lead and lead compounds. Wash hands after handling.</b></p>
---

RCIL08CCH001EAA 1

Product identification

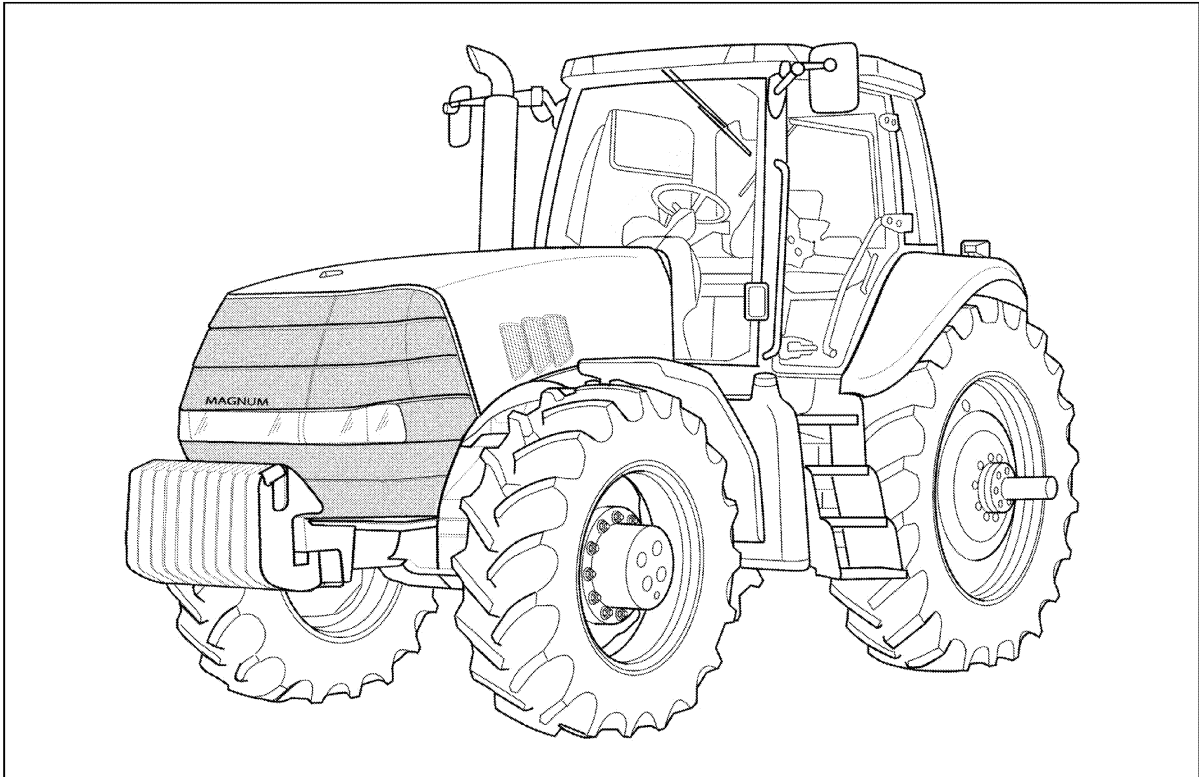

RCPH07CCH014FAB 1

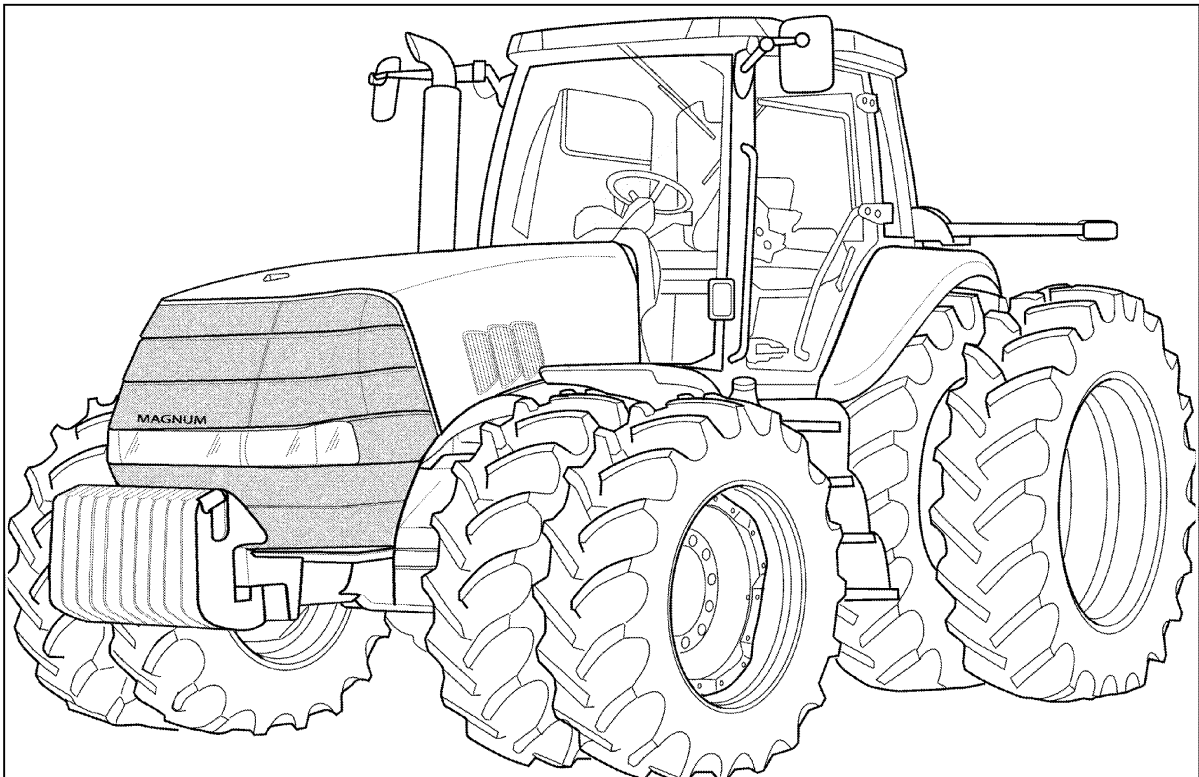

RCPH08CCH004FAB 2

## Note to the Owner

This manual contains important information about the safe operation, adjustment and routine maintenance of your Magnum series tractor. The manual is divided into ten chapters as outlined in the table of contents. Refer to the index at the end of this manual for locating specific items about your tractor.

Do NOT operate or permit anyone to operate or service this machine until you or the other persons have read this manual. Use only trained operators who have demonstrated the ability to operate and service this machine correctly and safely.

This Operator's Manual is to be stored in the manual compartment equipped on this machine. Make sure this manual is in good condition. Contact your dealer to obtain additional manuals. Contact your dealer for any further information or assistance about your machine. Your dealer has approved service parts. Your dealer has technicians with special training that know the best methods of repair and maintenance for your tractor.

## Tractor intended use

Magnum series tractors with standard equipment and authorized attachments, are intended to be used for customary farming, land leveling and related agriculture operations (intended use). Installation of utility (dozer) blades, tile plows, or push bars on the tractor is not recommended. Any tractor damage resulting from the installation and/or use of such equipment is not covered by the tractor warranty.

Consult an authorized dealer or CNH America LLC on changes, additions or modifications that can be required for this machine to comply with various regulations and safety requirements. Unauthorized modifications will cause serious injury or death. Anyone making such unauthorized modifications is responsible for the consequences.

Do not use this machine for any purpose or in any manner other than as described in the manual, decals, or other product safety information provided with the machine. These materials define the machine's intended use.

Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for any damage or injury resulting from this misuse and these risks must be born solely by the user.

Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

All persons who will be operating this machine shall possess a valid local vehicle operating permit and/or other applicable local age work permits.


This tractor must be operated, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention).

The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Any arbitrary modifications carried out on the tractor will relieve the manufacturer of all liability for any resulting damage or injury.

**ATTENTION:** *The engine and fuel system on your machine is designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is complete. Engine service and/or repairs must be done by a certified technician only!*

## Manual storage

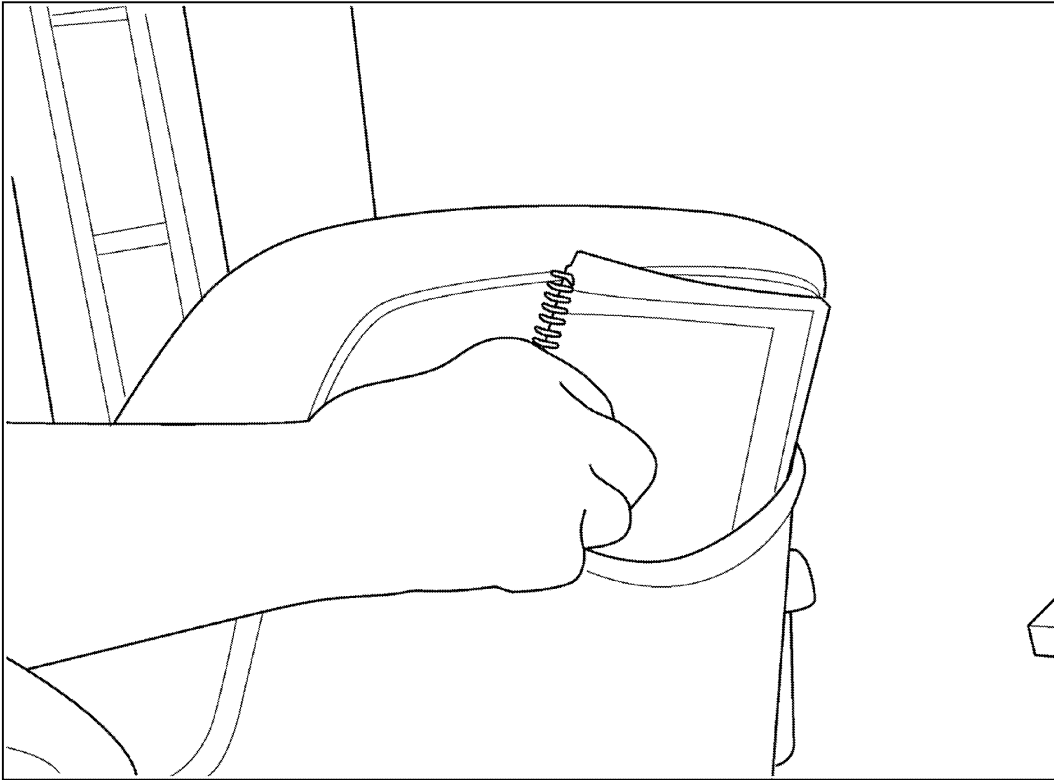

RCPH08CCH002FAB 1

Keep the Operator's Manual in the storage compartment provided on your tractor. The Operator's Manual must be available for use by all operators.

The right hand and left hand side of the tractor used in this manual are the same as your right hand and left hand when sitting in the tractor seat looking forward.

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)