
 
OPERATOR'S MANUAL

TS6020 TS6030 TS6030HC




Print No. 84279727 Replaces Print No. 73335418 English 02/10

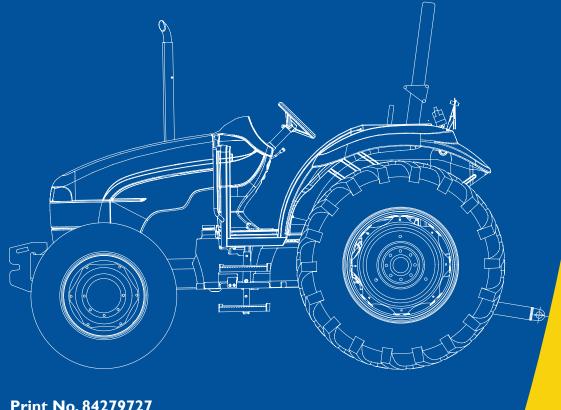



OPERATOR'S MANUAL

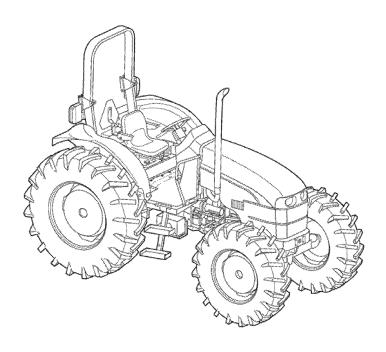

TS6020 TS6030 HC TS6030

Contents

1	GENERAL INFORMATION	
	Safety rules and signal word definitions	
	Note to the Owner	
	Legal advice	
	Foreword - Ecology And The Environment	
	Delivery Report- Dealer Copy	
	Delivery Report- Owner Copy	
	Machine identification	
	Protective shield - Safety rules	
	Product overview	1-9
2	SAFETY INFORMATION	
	General safety rules	
	Basic operating safety rules	
	Battery safety	2-3
	Driving on public roads	
	Electrical storm safety	
	Fire prevention	
	General maintenance safety rules	
	Hazardous chemicals	2-6
	Implements, tools and trailers	
	Mounting and dismounting precautions	
	Operator presence system	
	PTO operation safety rules	
	Roll over and tip over precautions	
	Utility safety	
	Wheel and tire safety	
	General specification - Biodiesel Fuels	
	International symbols	
	•	0
3	CONTROLS/INSTRUMENTS	
	ACCESS TO OPERATOR'S PLATFORM	
	Step and ladder - Access/Exit	3-1
	OPERATOR'S SEAT	
	OPERATOR 5 SEAT Operator seat adjustments	2 2
	Seat belt - Operating	
	Seat beit - Operating	ა-ა
	FORWARD CONTROLS	
	Instrument panel	
	Instrument panel - Control identification	3-5
	Floor - Control Foot controls	3-6
	LH SIDE CONTROLS	
	PTO clutch - Control identification	3-7
	Parking brake	
	DU CIDE CONTROL C	
	RH SIDE CONTROLS Transmission controls	2 0
	110110010110011100101100000000000000000	J-9

	Hydraulic controls	3-10
	EXTERIOR CONTROLS Remote control valves	3-11
4	OPERATING INSTRUCTIONS	
	COMMISSIONING THE UNIT	
	Note to the Owner	4-1
	Roll Over Protective Structure (ROPS) - adjustments	
	Instrument panel - Operating	
	General transmission operation	
	Differential lock command - Operating	
	Hydraulic System	
	Hydraulic control valves Operating double acting hydraulic cylinders	
	Operating double acting hydraulic cylinders	
	Drawbar capacity/position	
	Three point linkage system	
	Rear PTO operating	4-26
	STARTING THE UNIT	
	Starting the engine	4-30
	Engine starting aids	4-32
	STOPPING THE UNIT	
	Driving and stopping the tractor	4-33
	MOVING THE UNIT	
	STEERING - Control	4-34
5	TRANSPORT OPERATIONS	
•		
	ROAD TRANSPORT Basic instructions	5-1
		0 1
	RECOVERY TRANSPORT Towing the tractor	5-2
^	· ·	02
6	WORKING OPERATIONS	
	GENERAL INFORMATION	
	Tire condition and air pressure	
	Tire load and inflation charts Tractor ballasting	6-8
	Liquid Ballast	
	Front wheel alignment	6-11
	Rear wheel tread settings	6-15
7	MAINTENANCE	
	GENERAL INFORMATION	
	Maintenance and Service Schedule	
	First 50 Hour Service	
	Fueling the machine Opening, closing, or removing protective shields for service	
	Opening, dosing, or removing protective shields for service	1-5

	Service Air Filter If Warning Lamp Is On	7-7
	Every 10 Hours of Operation or Daily (Whichever Occurs First)	
	Every 50 hours	
	Every 300 hours	
	Every 600 hours	7-18
	Every 1200 hours or annually	7-20
	Every 1200 hours or two years	7-22
	General service (perform if necessary)	7-24
	First 50 hours of tractor operation	7-29
	Mandatory 300 hour service	7-31
	Mandatory 600 hour service	7-32
	Mandatory 900 hour service	7-33
	Mandatory 1200 hour service	7-34
	Mandatory 1500 hour service	7-35
	STORAGE	
	Preparing for storage	7-36
	Preparation for use after Storage	
_	·	
8	SPECIFICATIONS	
	General dimensions	
	Engine specifications	
	Engine coolant specifications	
	Available transmissions	
	PTO (power take off) specifications	
	Hydraulic system general specifications	
	Three point linkage general specifications	
	Remote control valve specifications	
	Brake specifications	
	Steering general specifications	
	Electrical system specification	
	Lubrication and Hydraulic Oil Capacities	
	Lubrication and oil specifications	

1 - GENERAL INFORMATION

Safety rules and signal word definitions

Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual and on machine decals, you will find the signal words Danger, Warning, and Caution followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

△ DANGER △

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.

M1160.6

\triangle WARNING \triangle

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.

M1170

△ CAUTION △

CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. The color associated with Caution is YELLOW.

M1171

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation which, if not avoided, could result in machine or property damage. The color associated with Notice is BLUE.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: Note indicates additional information which clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available; ready for reference.

Your NEW HOLLAND dealer will instruct you in the general operation of your new machine. Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation and service of your machine. Upon delivery of your machine, work with your dealer to complete both delivery reports on pages 1-4 and 1-5.

Your NEW HOLLAND dealer carries a complete line of genuine NEW HOLLAND service parts. These parts are manufactured and carefully inspected to ensure high quality and proper attachment of any necessary replacement parts. Be prepared to provide your dealer the model and product identification number of your machine when ordering parts (refer to your completed delivery report or the machine identification decals).

Some illustrations in this manual show shields opened or removed to display areas being serviced. Replace all shields before operating the machine. Failure to comply could result in death or serious injury.

M1213

IMPROVEMENTS

CNH America LLC is continually striving to improve its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

Legal advice

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery post, terminals and related accessories contain lead and lead compounds.

Wash hands after handling

BT09A213 1

Foreword - Ecology And The Environment

Soil, air, and water are vital factors of agriculture and life in general. When legislation does not yet rule the treatment of some of the substances which are required by advanced technology, common sense should govern the use and disposal of products of a chemical and petrochemical nature.

NOTE: The following are recommendations which may be of assistance:

- · Become acquainted with and ensure that you understand the relative legislation applicable to your country.
- Where no legislation exists, obtain information from suppliers of oils, filters, batteries, fuels, antifreeze, cleaning agents, etc., with regard to their effect on man and nature and how to safely store, use and dispose of these substances.
- Agricultural consultants will, in many cases, be able to help you as well.

HELPFUL HINTS

- Avoid filling tanks using cans or inappropriate pressurized fuel delivery systems which may cause considerable spillage.
- In general, avoid skin contact with all fuels, oils, acids, solvents, etc. Most of them contain substances which may be harmful to your health.
- · Modern oils contain additives. Do not burn contaminated fuels and or waste oils in ordinary heating systems.
- Avoid spillage when draining off used engine coolant mixtures, engine, gearbox and hydraulic oils, brake fluids, etc. Do not mix drained brake fluids or fuels with lubricants. Store them safely until they can be disposed of in a proper way to comply with local legislation and available resources.
- Modern coolant mixtures, i.e. antifreeze and other additives, should be replaced every two years. They should not be allowed to get into the soil but should be collected and disposed of properly.
- Repair any leaks or defects in the engine cooling or hydraulic system immediately.
- Do not increase the pressure in a pressurized circuit as this may lead to a component failure.
- Protect hoses during welding as penetrating weld splatter may burn a hole or weaken them, allowing the loss of oils, coolant, etc.

Delivery Report- Dealer Copy

Delivery Date									
Owner's Name									
Address									
Dealer's Name									
Address									
Unit:	Model -	Product Identification Number							
Engine:	Model -	Product Identification Number							
Attachment:	Model -	Product Identification Number							
	Model -	Product Identification Number							
	Model -	Product IdentificationNumber							
Using the operator's manual as a guide, instruction was given as indicated by the check marks.									
() Safety precautions and practice () Lubrication points and schedule () Maintenance areas, adjustments, and schedule () Field adjustments for various crop conditions () Operation () Use of optional equipment () Preseason service () End-of-season service () Proper use of operator's manual () Customer given operator's manual () All safety shielding is installed Dealer Representative's Signature									
·	· ·								
"I have been instructed in the operation, maintenance, and safety features of this machine as detailed in the operator's manual."									
Owner's Signature _									

Delivery Report-Owner Copy Delivery Date Owner's Name Address Dealer's Name Address Unit: Model Product Identification Number Model Product Identification Engine: Number Attachment: Model Product Identification Number Model Product Identification Number Model Product Identification Number Using the operator's manual as a guide, instruction was given as indicated by the check marks. () Safety precautions and practice () Lubrication points and schedule () Maintenance areas, adjustments, and schedule () Field adjustments for various crop conditions () Operation () Use of optional equipment () Preseason service () End-of-season service () Proper use of operator's manual () Customer given operator's manual () All safety shielding is installed Dealer Representative's Signature

"I have been instructed in the operation, maintenance, and safety features of this machine as detailed in the

Owner's Signature


operator's manual."

Machine identification

The machine and major components are identified by serial numbers and/or manufacturing codes. You should supply the unit's identification data to the authorized dealer when requesting parts or service, and also to identify the unit in case of theft.

Vehicle identification plate


Under the machine's hood you will find the vehicle identification plate.

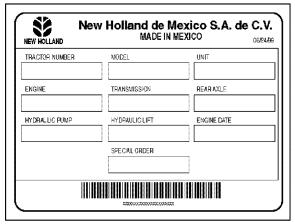

RCPH10TTS012AAD

4WD front axle identification plate

If your unit is equipped with optional 4WD, you will find a front axle identification plate on the right rear surface of the front axle housing.

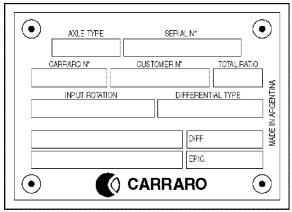

RCPH10TTS013AAD 2

Protective shield - Safety rules

\triangle Warning \triangle

Some illustrations in this manual show shields opened or removed to display areas being serviced. Replace all shields before operating the machine. Failure to comply could result in death or serious injury.

M1213


△ WARNING **△**

Whenever a PTO driven machine is in operation, the PTO guard must be in place for most operations to prevent injury to the operator or bystanders. Where attachments, such as pumps, are installed on the PTO shaft (especially if the tractor PTO guard is moved upward or removed), extended shielding equivalent to the PTO guard must be installed with the attachment. Install the PTO guard to its original position immediately when the attachment is removed. Failure to comply could result in death or serious injury.

M273B

Engine hood

The engine hood covers all engine moving parts. The hood should always be closed and locked before operating the machine.

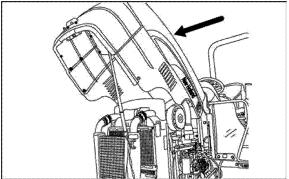


RCPH09TTS085AAD

User platform fenders and shields

Fenders and shields provide some user platform protection from stones or dirt that may be dislodged and tossed during tractor operation.

NOTE: Front fenders are optional and not standard equipment on tractors.

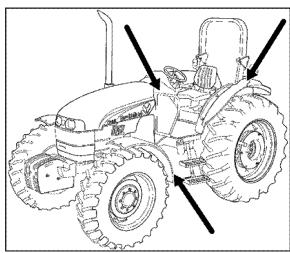

RCPH09TTS005AAD

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com