

**Magnum 180  
Magnum 190  
Magnum 210  
Magnum 225  
Tractors**

**Operator's Manual**

**Print No. 84337988**

English 04/10


Replaces 84233772

From serial no. Z9RH06000





## OPERATOR'S MANUAL

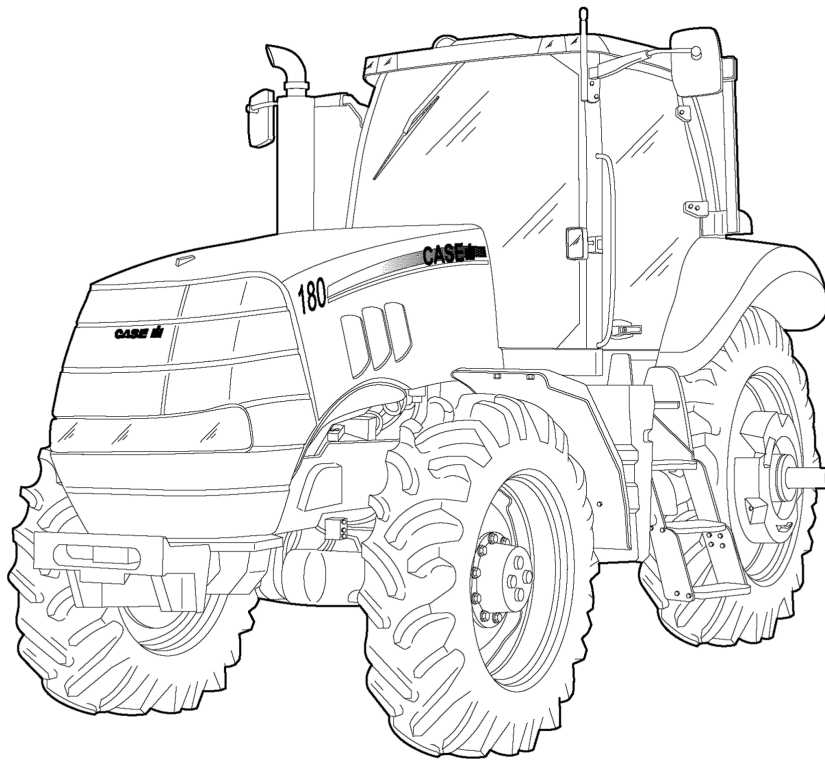

**Magnum 180**  
**Magnum 190**  
**Magnum 210**  
**Magnum 225**

# Contents

---

## 1 GENERAL INFORMATION

Safety rules and signal word definitions .....	1-1
Read the Operators Manual .....	1-2
Proposition 65 .....	1-2
Product identification .....	1-3
Note to the Owner .....	1-4
Tractor intended use.....	1-4
Manual storage .....	1-5
Product identification .....	1-6
Component location .....	1-8

## 2 SAFETY INFORMATION

Safety rules - General .....	2-1
Safety rules - Air conditioning system .....	2-1
Safety rules - Basic operating .....	2-2
Safety rules - Battery .....	2-2
Safety rules - Driving on public roads .....	2-4
Safety rules - Electrical storm safety .....	2-4
Safety rules - Fire prevention .....	2-4
Safety rules - General maintenance .....	2-5
Safety rules - Hazardous chemicals .....	2-6
Safety rules - Implements, tools and trailers .....	2-6
Safety rules - Instructional seat .....	2-7
Safety rules - Mounting and dismounting .....	2-7
Safety rules - Operator presence system .....	2-7
Safety rules - PTO operation .....	2-8
Safety rules - Roll over and tip over .....	2-8
Safety rules - Utility power lines .....	2-9
Safety rules - Wheels and tires .....	2-9
ROPS and CSF.....	2-10
Safety decals .....	2-11

## 3 CONTROLS/INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

Tractor access .....	3-1
----------------------	-----

### OPERATOR'S SEAT

Overview .....	3-2
Control identification.....	3-3

### INSTRUCTOR'S SEAT

Overview .....	3-6
----------------	-----

### FORWARD CONTROLS

Steering column .....	3-7
Front console .....	3-10
Pedal controls .....	3-12

### LH SIDE CONTROLS

Hand brake .....	3-14
------------------	------

---

## **RH SIDE CONTROLS**

Armrest console .....	3-15
Multi-function handle .....	3-16
Minimum/maximum rpm throttles .....	3-21
Control panel .....	3-23
Remote valve controls .....	3-33
Joystick .....	3-34
Armrest compartment .....	3-35
Adjusting the armrest console .....	3-36

## **REARWARD CONTROLS**

Fender console .....	3-37
Automatic temperature controls .....	3-40
Automatic temperature control system .....	3-43
Ventilation .....	3-44

## **OVERHEAD CONTROLS**

Interior lamps .....	3-46
----------------------	------

## **EXTERIOR CONTROLS**

Rear fender .....	3-47
-------------------	------

## **INSTRUMENT CLUSTER**

Overview .....	3-48
Gauges .....	3-48
Status and warning icons .....	3-49
Upper display .....	3-52
Lower display .....	3-54
Keypad .....	3-55
Standard instrumentation .....	3-57
Performance instrumentation .....	3-64

## **4 OPERATING INSTRUCTIONS**

### **COMMISSIONING THE UNIT**

Before starting the engine .....	4-1
----------------------------------	-----

### **STARTING THE UNIT**

Normal engine starting .....	4-4
Cold starting aids .....	4-6
Cold temperature operation .....	4-7

### **STOPPING THE UNIT**

Stopping the engine .....	4-9
---------------------------	-----

### **MOVING THE UNIT**

<b>FULL POWERSHIFT TRANSMISSION</b> .....	4-10
Powershift transmission .....	4-10
Inching pedal and throttle .....	4-11
Transmission controls .....	4-12
Upper display .....	4-15
Driving the vehicle .....	4-16
Autoshift road and field .....	4-18
Go To feature .....	4-23
Speed matching .....	4-23
Setting reverse gear ratios .....	4-25

---

Transmission errors and calibration .....	4-26
Creeper gears .....	4-27
CONTINUOUSLY VARIABLE TRANSMISSION (CVT) .....	4-28
CVT brake, pedal and throttle operation .....	4-28
CVT transmission operation .....	4-32
CVT transmission controls .....	4-34
CVT transmission display .....	4-38
CVT speed matching .....	4-41
CVT transmission error codes .....	4-42
POWERSHIFT AND CVT TRANSMISSIONS .....	4-43
Mechanical front drive (MFD) .....	4-43
Differential lock system .....	4-45
Suspended axle .....	4-47
Engine power management .....	4-49
Ride control .....	4-51
Constant engine speed .....	4-52
Electronic end of row system .....	4-55

## PARKING THE UNIT

Park brake and electronic park lock (EPL) .....	4-66
---	------

## 5 TRANSPORT OPERATIONS

### ROAD TRANSPORT

Tractor warning lamps and SMV symbol .....	5-1
Wide transport marker light .....	5-2
Tractor warning lamps .....	5-4
Safe transport speed .....	5-5
Implement warning lamps and SMV symbol .....	5-6
Safety chain .....	5-7

### SHIPPING TRANSPORT

Securing the tractor for shipping .....	5-8
---	-----

### RECOVERY TRANSPORT

Safety rules .....	5-9
--------------------	-----

## 6 WORKING OPERATIONS

### GENERAL INFORMATION

Before operating the vehicle .....	6-1
Guidelines .....	6-2

### REAR PTO

Safety rules .....	6-3
Connecting the PTO .....	6-6
PTO operation .....	6-8
Two speed PTO systems .....	6-10
Auto PTO operation .....	6-11
PTO fender switch operation .....	6-14

### THREE POINT HITCH

Connecting three-point hitch implements .....	6-15
Three-point hitch adjustments .....	6-16
Hitch controls and settings .....	6-23

---

Draft control .....	6-29
Position and ride control.....	6-32

## DRAWBARS AND TOWING ATTACHMENTS

Safety rules .....	6-34
Adjusting the drawbar .....	6-35

## HYDRAULIC TRAILER BRAKES

Trailer brake connections.....	6-37
--------------------------------	------

## AUXILIARY POWER CONNECTIONS

Auxiliary power and lighting .....	6-38
Cab power connections .....	6-40

## HYDRAULIC REMOTE CONTROL VALVES

Valve couplers and connections.....	6-42
Transport lock .....	6-47
Operating the controls .....	6-48
Remote valve display screens.....	6-53
Rear fender controls.....	6-56
Joystick operation .....	6-57

## BALLASTING THE TRACTOR

Guidelines .....	6-62
Tire load and inflation charts .....	6-66
Weights, cast metal and liquid.....	6-72
Wheel slip and power hop performance .....	6-80

## MECHANICAL FRONT DRIVE (MFD) AXLES

Tire combinations and tread positions.....	6-82
Toe-in setting - MFD front axles .....	6-87
Steering and oscillation stops .....	6-88
Tread and fender settings - standard MFD axles.....	6-92

## REAR AXLE

Rear wheel installation .....	6-98
Rear wheel tread settings .....	6-100
Rear axle installation (axle with keyway) .....	6-105
Rear wheel tread settings (axle with keyway) .....	6-110
MFD lead/lag calculation .....	6-114

## 7 MAINTENANCE

### GENERAL INFORMATION

Safety rules.....	7-1
Opening the hood .....	7-2
Closing the hood .....	7-3
Battery access and service .....	7-4
Tire and rim service.....	7-6
Tractor jacking points.....	7-8
Capacities .....	7-10
Consumables .....	7-12
Electrical component location .....	7-16

### MAINTENANCE CHART

Maintenance Chart .....	7-20
-------------------------	------

---

## At warning message display

Air filter service icon/message .....	7-21
Fuel filter water separator .....	7-25

## Every 10 hours or daily

Engine coolant level .....	7-26
Engine oil level .....	7-26
Windshield washer fluid level .....	7-27

## First 50 hours

Dealer performed service .....	7-28
--------------------------------	------

## Every 50 hours

Coolers and condenser .....	7-29
Cab air filter .....	7-31
Grease fittings .....	7-34
Wheel bolt torque .....	7-41
Tire pressure .....	7-42

## Every 300 hours

Battery water level .....	7-43
Fan belt .....	7-45
Transmission oil level .....	7-46
Mechanical front drive (MFD) gearbox .....	7-47
Park brake .....	7-48

## Every 600 hours

Engine oil and filter .....	7-49
Hydraulic filter(s) .....	7-51
Engine primary air filter .....	7-53
Engine air intake hoses .....	7-56
Fuel filters .....	7-58
Differential and planetary oil .....	7-60

## Every 1200 hours or annually

Cab air filter .....	7-62
Hydraulic filter(s) .....	7-64
Rear axle bearing .....	7-70
Transmission oil .....	7-71
Differential and planetary oil .....	7-74
Mechanical front drive (MFD) gearbox .....	7-78
Battery water level .....	7-79

## Every 1200 hours or two years

Engine coolant .....	7-81
Engine secondary air filter .....	7-84
Engine valve adjustment .....	7-87
Blowby filter .....	7-87
Lubrication filter - CVT transmission .....	7-87

## Every 36 months

Air conditioning system .....	7-88
-------------------------------	------

---

## As required

Pre-filter and water trap .....	7-89
Fuel tank vent filter .....	7-91
Fan belt .....	7-92
Spark arresting muffler .....	7-96
Remote valve collection bottle .....	7-98
Cab fabric and carpet .....	7-98
Tractor exterior .....	7-99
Seat belt .....	7-100

## STORAGE

Preparing for storage .....	7-101
Removing from storage .....	7-102

## ELECTRICAL SYSTEM

Radio or audio system .....	7-104
Battery removal and installation .....	7-105
Battery - Charging .....	7-107
Head light - Replace .....	7-108
Rear work light - Replace .....	7-114
Fender tail light and warning light .....	7-116
Roof front warning and work light .....	7-118
Roof rear warning light .....	7-121
High intensity work light .....	7-123
Wide transport marker light .....	7-125
Rotating beacon light .....	7-126
Interior light - Replace .....	7-127

## 8 TROUBLESHOOTING

### ALARM(S)

Display warnings .....	8-1
Automatic engine shut down .....	8-8
Fault reporting .....	8-9

### SYMPTOM(S)

Engine symptoms .....	8-11
Transmission symptoms .....	8-13
Hydraulic symptoms .....	8-14
Hitch symptoms .....	8-15
Brake symptoms .....	8-16
Cab environment symptoms .....	8-16
Electrical power system symptoms .....	8-17

## 9 SPECIFICATIONS

Engine specifications .....	9-1
Power train specifications .....	9-2
Operating speeds .....	9-5
Vehicle dimensions and shipping weight .....	9-8
Maximum operating weight .....	9-10

## 10 ACCESSORIES

Front wheel fenders .....	10-1
---------------------------	------

---



Farming system displays .....	10-6
Chemical tank mounting.....	10-7
Loader connection and operation .....	10-9
General accessories.....	10-10

## 11 FORMS AND DECLARATIONS

First service dealer copy .....	11-1
First service customer copy .....	11-3

---

# 1 - GENERAL INFORMATION

## Safety rules and signal word definitions

### Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual and on machine decals, you will find the signal words Danger, Warning, and Caution followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.



**DANGER** indicates a hazardous situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.

M1169A



**WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.

M1170A



**CAUTION**, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. The color associated with Caution is YELLOW.

M1171A

**FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.**

### Machine safety

**NOTICE:** Notice indicates a situation which, if not avoided, could result in machine or property damage. The color associated with Notice is BLUE.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

### Information

**NOTE:** Note indicates additional information which clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

## Read the Operators Manual



Improper operation of this vehicle can cause death or serious injury. Before using the vehicle, make certain that every operator:

- Is instructed in safe and proper use of the machine.
- Reads and understands the manual(s) pertaining to the machine.
- Reads and understands all safety decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow CNH America LLC instructions on machine operation and maintenance.

## Proposition 65

### CALIFORNIA


#### Proposition 65 Warning

**Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.**

**Battery posts, terminals and related accessories contain lead and lead compounds. Wash hands after handling.**

RCIL08CCH001EAA 1

## Product identification

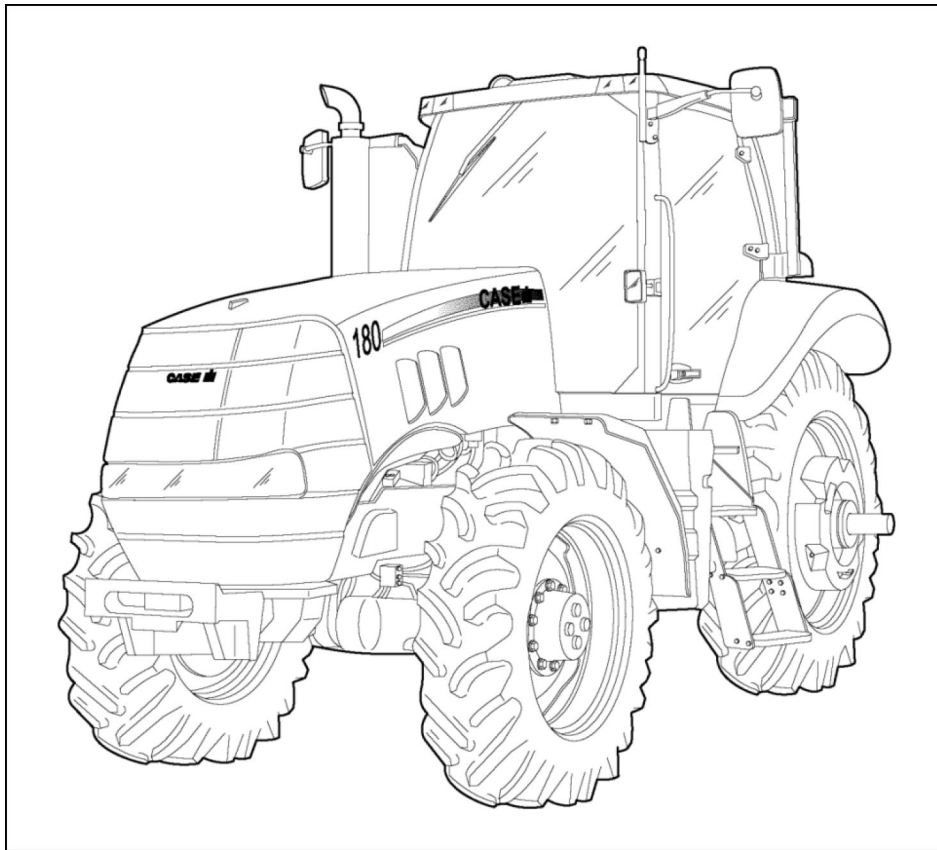

RCPH09CCH012BAB 1

The right hand and left hand side of the tractor used in this manual are the same as your right hand and left hand when sitting in the tractor seat looking forward.

## Note to the Owner

This manual contains important information about the safe operation, adjustment and routine maintenance of your Magnum series tractor. The manual is divided into eleven chapters as outlined in the table of contents. Refer to the index at the end of this manual for locating specific items about your tractor.

Do NOT operate or permit anyone to operate or service this machine until you or the other persons have read this manual. Use only trained operators who have demonstrated the ability to operate and service this machine correctly and safely.


This Operator's Manual is to be stored in the manual compartment behind the operator's seat in the vehicle. Make sure this manual is in good condition. Contact your dealer to obtain additional manuals. Contact your dealer for any further information or assistance about your machine. Your dealer has approved service parts. Your dealer has technicians with special training that know the best methods of repair and maintenance for your tractor.

## Tractor intended use

Magnum series tractors with standard equipment and authorized attachments, are intended to be used for customary farming and related agriculture operations. Farming implements and attachments for loading and moving materials can be used on the tractor where recommended and approved by CASE IH. Installation of utility (dozer) blades, tile plows, or push bars on the tractor is not recommended. Any tractor damage resulting from the installation and/or use of such equipment is not covered by the tractor warranty.

Consult an authorized dealer or CNH America LLC on changes, additions or modifications that can be required for this machine to comply with various regulations and safety requirements. Unauthorized modifications will cause serious injury or death. Anyone making such unauthorized modifications is responsible for the consequences.

## Manual storage

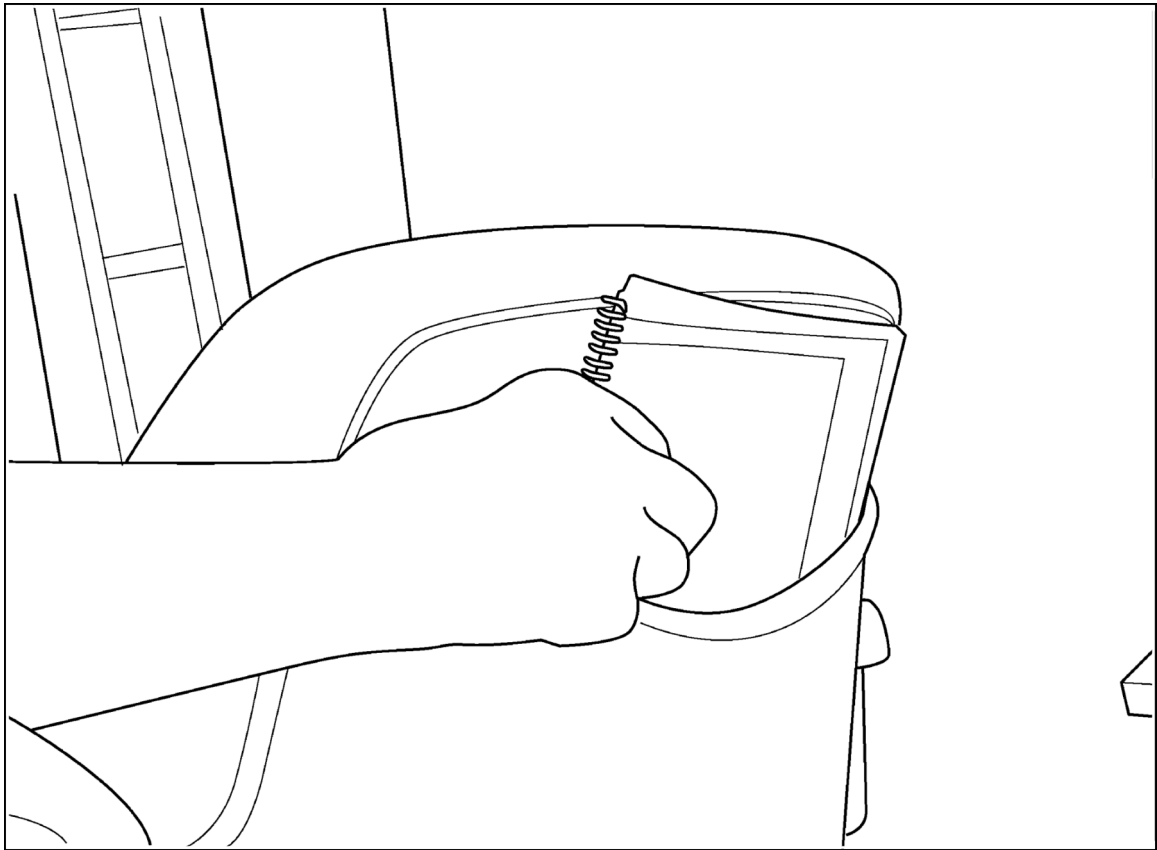

RCPH08CCH002FAB 1

Keep the Operator's Manual in the storage compartment provided on your tractor. The Operator's Manual must be available for use by all operators.

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)