

PUMA 130 CVX
PUMA 145 CVX
PUMA 160 CVX
Tractors

OPERATOR'S MANUAL

Part Number 84411131

1st edition English
March 2011



ORIGINAL INSTRUCTIONS

- according to Directives 2006/42/EC, Annex I 1.7.4.1

PUMA 130 CVX **PUMA 145 CVX** **PUMA 160 CVX** Tractors

OPERATOR'S MANUAL

Part Number 84411131

1st edition English
March 2011



Contents

1 GENERAL INFORMATION

CE DECLARATION OF CONFORMITY	1-1
METRIC AND IMPERIAL UNITS ABBREVIATIONS	1-3
TO THE OWNER	1-5
PRODUCT IDENTIFICATION	1-7
ENGINE IDENTIFICATION	1-8
DRIVELINE IDENTIFICATION	1-9
CAB IDENTIFICATION	1-9
PRODUCT IDENTIFICATION PLATE	1-9
ECOLOGY AND THE ENVIRONMENT	1-10
NOISE LEVEL	1-11
PROGRAMMING TRACTOR FUNCTIONS	1-11
BEFORE OPERATING THE TRACTOR	1-12
INTERNATIONAL SYMBOLS	1-13
VIBRATION LEVEL INFORMATION SHEET	1-14
MACHINE STABILITY	1-15
INSTRUCTOR'S SEAT	1-19
SELECTIVE CATALYTIC REDUCTION (SCR) SYSTEM	1-20

2 SAFETY INFORMATION

SAFETY DECALS	2-1
SAFETY PRECAUTIONS	2-9
BEFORE DRIVING THE TRACTOR	2-10
DRIVING THE TRACTOR	2-11
OPERATING THE TRACTOR	2-12
OPERATING THE P.T.O.	2-14
OPERATING THE EXTERNAL CONTROLS	2-14
SERVICING THE TRACTOR	2-15
DIESEL FUEL	2-17
PREVENTION OF FIRE OR EXPLOSION	2-18
FIRE EXTINGUISHER	2-19
PROTECTION OFFERED BY THE TRACTOR	2-20
INTENDED USE STATEMENT	2-23

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

INTRODUCTION	3-1
CAB AIR FILTERS	3-5
IN CAB STORAGE (where fitted)	3-6
CABLE AND WIRING ROUTING	3-7
MOBILE TELEPHONE USAGE	3-7
IMPLEMENT MONITOR INSTALLATION	3-8
CAB AIR PRESSURISATION MONITOR (where fitted)	3-8

OPERATOR'S SEAT

AIR SUSPENSION SEAT DELUXE	3-10
SEAT BELT	3-15

INSTRUCTOR'S SEAT

INSTRUCTIONAL SEAT (where fitted)	3-16
---	------

FORWARD CONTROLS

KEY- START SWITCH	3-17
HAZARD WARNING LIGHT SWITCH	3-17
LIGHT-/ TURN LEVER	3-18
FOLLOW ME HOME LIGHTS	3-18
WINDSHIELD WIPER AND WASHER CONTROLS	3-19
ELECTRONIC PARK BRAKE	3-20
CLUTCH/ INCHING PEDAL	3-24
FOOT BRAKES	3-24
EXHAUST BRAKE (where fitted)	3-25
STEERING COLUMN	3-26

LEFT-HAND SIDE CONTROLS

HANDBRAKE	3-27
-----------------	------

RIGHT-HAND SIDE CONTROLS

INTEGRATED CONTROL PANEL	3-28
--------------------------------	------

REARWARD CONTROLS

SWITCH PANEL C- PILLAR	3-29
HYDRAULIC MASTER SWITCH	3-30
HEATED SCREENS (where fitted)	3-31
FAST STEERING SYSTEM (where fitted)	3-32
BATTERY ISOLATOR SWITCH	3-34
CLIMATE CONTROLS	3-35
MANUAL TEMPERATURE CONTROL	3-36
AUTOMATIC TEMPERATURE CONTROL (ATC)	3-37

OVERHEAD CONTROLS

SWITCH PANEL WORKLIGHTS	3-39
RADIO/CASSETTE/CD PLAYER (where fitted)	3-39
INTERIOR LIGHT	3-40

INSTRUMENT CLUSTER

INTEGRATED CONTROL UNIT	3-41
GAUGES	3-41
INDICATOR AND WARNING LIGHTS	3-42
DISPLAYS	3-45
KEYPAD BASIC	3-46
KEYPAD ENHANCED	3-47
SELECTING OR CHANGING THE DISPLAY SETTINGS	3-49
ADJUST MENU	3-50
CONFIGURE MENU	3-52
PERFORMANCE MONITOR	3-56
ARMREST COLOUR DISPLAY	3-60
POP- UP SCREENS ON COLOUR DISPLAY	3-62
PERFORMANCE MONITOR ON COLOUR DISPLAY	3-68
PROGRAMMING THE DISPLAYS	3-71
ALARM FUNCTIONS	3-74
ACCESSING STORED ERROR CODES	3-76

WARNING AND ADVISORY SYMBOLS	3-77
------------------------------------	------

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

TRACTOR REFUELLING	4-1
--------------------------	-----

STARTING THE UNIT

STARTING THE ENGINE	4-3
GRID HEATER COLD START AID (where fitted)	4-4
FUEL HEATER (where fitted)	4-4
COOLANT IMMERSION HEATER (where fitted)	4-5
TRANSMISSION OIL HEATER (where fitted)	4-6
BOOSTING THE BATTERY	4-7

STOPPING THE UNIT

STOPPING THE ENGINE	4-8
AUTOMATIC ENGINE SHUTDOWN	4-8
AUTOMATIC ENGINE SHUTDOWN WITH ENHANCED KEYPAD (where fitted)	4-9

MOVING THE UNIT

OPERATING IN COLD TEMPERATURES	4-10
REVERSIBLE ENGINE FAN	4-11

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

CARRYING THE TRACTOR ON A TRANSPORTER	5-1
SECURE THE HIGH VISIBILITY ROOF PANEL	5-1

RECOVERY TRANSPORT

TOWING THE TRACTOR	5-2
--------------------------	-----

6 WORKING OPERATIONS

GENERAL INFORMATION

VARIABLE ENGINE POWER MANAGEMENT	6-1
CONSTANT ENGINE SPEED	6-3
DIFFERENTIAL LOCK	6-6
FOUR WHEEL DRIVE	6-8
FRONT AXLE SUSPENSION (where fitted)	6-10
AUTOMATED HEADLAND FUNCTIONS	6-11
QUICK GUIDE	6-11
RECORDING AND RE-PLAYING	6-13
EXPLANATION OF SYMBOLS	6-16
RECORDING A SEQUENCE	6-17
RE-PLAYING A SEQUENCE	6-22
DELETING A SEQUENCE	6-26

TRANSMISSION

TRANSMISSION OPERATION.....	6-27
DRIVE PEDAL.....	6-27
ENGINE SPEED CONTROL.....	6-28
SHUTTLE LEVER.....	6-30
SPEED MATCHING.....	6-31
TRANSMISSION CONTROLS.....	6-32
PROGRAMME THE MAXIMUM SPEED.....	6-34
STATIONARY CONTROL.....	6-35
ANTI JACK KNIFE.....	6-36
TRANSMISSION DISPLAY.....	6-37
MANUAL MODE.....	6-38
AUTOMATIC MODE.....	6-39
ERROR CODES.....	6-40

REAR POWER TAKE-OFF

P.T.O. OPERATING PRECAUTIONS.....	6-41
CHANGING THE P.T.O. OUTPUT SHAFT.....	6-41
ATTACHING P.T.O. DRIVEN EQUIPMENT.....	6-42
P.T.O. OPERATION.....	6-43
THREE-SPEED P.T.O. SYSTEM.....	6-48
GROUND DRIVE P.T.O. (where fitted).....	6-49
EXTERNAL P.T.O. CONTROLS.....	6-50
AUTO P.T.O. OPERATION.....	6-52

FRONT POWER TAKE OFF

P.T.O. OPERATION.....	6-55
AUTO P.T.O. OPERATION.....	6-57

REAR HITCH

ELECTRONIC DRAFT CONTROL.....	6-59
SETTINGS AND DISPLAY.....	6-63
ELECTRONIC DRAFT CONTROL OPERATION.....	6-65
EXTERNAL HITCH CONTROLS.....	6-71

FRONT HITCH

SETTINGS AND ADJUSTMENTS.....	6-73
HITCH OPERATION.....	6-76
AUXILIARY FRONT COUPLERS (where fitted).....	6-81
EXTERNAL HITCH CONTROLS.....	6-83

HYDRAULIC REMOTE CONTROL VALVES

REMOTE CONTROL VALVES.....	6-84
OPERATING WITH REMOTE VALVES.....	6-86
CONNECTING REMOTE CYLINDERS.....	6-90
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT.....	6-92

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

REMOTE CONTROL VALVES.....	6-94
SETTINGS AND ADJUSTMENTS.....	6-101

SETTING THE REMOTE VALVE PRIORITY	6-107
CREATING TIMER PROGRAMMES	6-109
CONNECTING REMOTE CYLINDERS	6-116
OPERATING WITH REMOTE VALVES	6-118
JOYSTICK OPERATION WITH A FRONT LOADER.....	6-120
MID MOUNT REMOTE VALVES	6-122
EXTERNAL EHR CONTROLS	6-124
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT	6-125

HYDRAULIC POWER BEYOND PORT

HYDRAULIC POWER BEYOND FOR EXTERNAL SERVICES	6-127
--	-------

THREE POINT HITCH

ATTACHING THREE-POINT HITCH EQUIPMENT	6-130
LIFT ROD ADJUSTMENT	6-132
TOP LINK ADJUSTMENT	6-134
FLEXIBLE LINK END ADJUSTMENT	6-135
QUICK HITCH	6-136
LINKAGE STABILISER ADJUSTMENT	6-138

DRAWBARS AND TOWING ATTACHMENTS

DRAWBARS AND TOWING ATTACHMENTS	6-141
SWINGING DRAWBARS.....	6-144
AUTOMATIC PICK-UP HITCH	6-147
REAR TOW HITCH.....	6-149

TRAILER BRAKING SYSTEMS

AIR-OPERATED TRAILER BRAKES	6-155
AIR-OPERATED TRAILER BRAKES (Italy only).....	6-158
TRAILER BRAKE BIAS CONTROL	6-159
AUXILIARY AIR SUPPLY CONNECTOR (where fitted).....	6-159
HYDRAULIC TRAILER BRAKES	6-160
HYDRAULIC TRAILER BRAKES (Italy only).....	6-161

WHEEL TRACK ADJUSTMENT

FRONT WHEEL TRACK ADJUSTMENT	6-162
FRONT WHEEL ALIGNMENT	6-165
STEERING STOPS	6-166
FRONT AXLE OSCILLATION STOPS	6-166
FRONT FENDER.....	6-167
REAR WHEEL TRACK ADJUSTMENT	6-169
FLANGE TYPE AXLE (where fitted)	6-169
BAR TYPE AXLE (where fitted)	6-172

BALLASTING AND TYRES

BALLASTING AND TYRES	6-176
IRON WEIGHTS (where fitted)	6-179
LIQUID BALLAST	6-182
TYRE INFLATION	6-184
TYRE PRESSURES AND PERMISSIBLE LOADS	6-185

AUXILIARY POWER CONNECTIONS

DIAGNOSTIC SOCKET	6-187
TRAILER SOCKET ELECTRICAL	6-187
ELECTRICAL POWER CONNECTORS	6-188
INTERNAL POWER CONNECTORS	6-188
EXTERNAL POWER CONNECTORS	6-190

7 MAINTENANCE

GENERAL INFORMATION

INTRODUCTION	7-1
FUEL REQUIREMENT	7-2
BIODIESEL FUEL	7-4
ENGINE OIL CHANGE	7-5
PROTECTIVE DEVICES	7-6
LUBRICANTS AND COOLANTS Lubrications and Coolants	7-8
General specification	7-10
CAPACITIES	7-11

MAINTENANCE CHART

Maintenance Chart	7-12
-------------------------	------

WHEN THE WARNING LAMP LIGHTS

CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT	7-14
DRAIN FUEL SYSTEM WATER SEPARATOR	7-15
CHECK BRAKE FLUID LEVEL	7-16

EVERY 10 HOURS OR EACH DAY

CHECK ENGINE COOLANT LEVEL	7-17
CHECK ENGINE OIL LEVEL	7-18
CHECK REMOTE CONTROL VALVE DRAIN BOTTLES	7-18
CHECK WINDSCREEN WASHER RESERVOIR	7-19
DRAIN AIR RESERVOIR ON AIR OPERATED TRAILER BRAKE	7-19

FIRST 50 HOURS

SERVICE OPERATIONS	7-20
--------------------------	------

EVERY 50 HOURS

CLEAN THE CAB AIR FILTER	7-21
CLEAN THE COOLER SECTION	7-23
ALL GREASE FITTINGS	7-24
CHECK FRONT AND REAR WHEEL NUTS	7-30
CHECK TYRE PRESSURES AND TYRE CONDITION	7-30

EVERY 100 HOURS

INSPECT POLY V-BELT	7-31
INSPECT COMPRESSOR DRIVE BELT	7-31

EVERY 300 HOURS

CHECK BATTERY FLUID LEVEL.....	7-32
ADJUST HANDBRAKE.....	7-33
CHECK TRANSMISSION/REAR AXLE AND HYDRAULIC OIL LEVEL.....	7-34
CHECK 4WD FRONT AXLE DIFFERENTIAL AND HUBS OIL LEVEL.....	7-35
CHECK FRONT P.T.O. GEARBOX OIL LEVEL.....	7-35

EVERY 600 HOURS

CHANGE ENGINE OIL AND FILTER.....	7-36
CHANGE FUEL PRE-FILTER AND FUEL FILTER ELEMENT.....	7-38
CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT.....	7-39
CHANGE CHARGE PUMP AND GEAR PUMP OIL FILTER.....	7-40
CHECK ENGINE AIR INTAKE CONNECTIONS.....	7-41
CHECK TRANSMISSION OIL COOLER PIPE COUPLINGS.....	7-42
CLEAN DEF/ AdBlue INLINE FILTER.....	7-42

EVERY 1200 HOURS OR ANNUALLY

CHANGE CAB AIR FILTERS.....	7-43
CHANGE MAIN OIL FILTER CARTRIDGE.....	7-44
CHANGE TRANSMISSION/ REAR AXLE AND HYDRAULIC OIL.....	7-45
CHANGE 4WD DIFFERENTIAL OIL.....	7-46
CHANGE 4WD PLANETARY HUB OIL.....	7-47
CHANGE FRONT P.T.O. GEARBOX OIL.....	7-47

EVERY 1200 HOURS OR EVERY 2 YEARS

CHECK BATTERY FLUID LEVEL.....	7-48
CHANGE DEF/ AdBlue INLINE FILTER.....	7-49
CHANGE ENGINE AIR CLEANER INNER ELEMENT.....	7-50
CHANGE ENGINE BREATHER FILTER.....	7-51
CHECK VALVE TAPPET CLEARANCE.....	7-51
CHANGE ENGINE COOLANT FLUID.....	7-52
CHANGE AIR BRAKE DRIER RESERVOIR.....	7-56
CHANGE POLY V-BELTS.....	7-57

EVERY 3600 HOURS OR EVERY 2 YEARS

CHANGE DEF/ AdBlue MAIN FILTER.....	7-59
-------------------------------------	------

EVERY 36 MONTHS

SERVICE THE AIR CONDITIONER SYSTEM.....	7-60
CHECK BATTERY FLUID LEVEL.....	7-61

GENERAL MAINTENANCE

CLEANING THE TRACTOR.....	7-63
FUEL SYSTEM PRE- FILTER AND WATER TRAP.....	7-65
BLEEDING THE FUEL INJECTION SYSTEM.....	7-65
CHECK BRAKE PEDAL LATCHING/UNLATCHING.....	7-66
ADJUST CAB SUSPENSION (where fitted).....	7-67
ADJUST AUTOMATIC PICK- UP HITCH.....	7-68
HEADLIGHT AND WORKLAMP ADJUSTMENT.....	7-69
BULB REPLACEMENT.....	7-70
FUSES AND RELAYS.....	7-74
PROTECTING THE ELECTRONIC AND ELECTRICAL SYSTEMS DURING BATTERY CHARGING OR WELDING.....	7-79

BATTERY REMOVAL AND INSTALLATION	7-80
--	------

STORAGE

TRACTOR STORAGE	7-81
PREPARATION FOR USE AFTER STORAGE	7-81

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

INTRODUCTION	8-1
--------------------	-----

ALARM(S)

FAULT CODES AND SYMBOLS	8-2
-------------------------------	-----

SYMPTOM(S)

ENGINE	8-4
TRANSMISSION	8-5
HYDRAULICS	8-5
THREE POINT HITCH	8-6
BRAKES	8-6
CAB	8-7
ELECTRICAL SYSTEM	8-7

9 SPECIFICATIONS

GENERAL DIMENSIONS	9-1
MAXIMUM OPERATING ANGLE	9-4
TYPICAL OPERATING WEIGHTS	9-5
CAPACITIES	9-6
ENGINE	9-7
FUEL SYSTEM	9-7
AIR CLEANER SYSTEM	9-8
COOLING SYSTEM	9-8
TRANSMISSION	9-8
REAR POWER TAKE-OFF	9-9
FRONT POWER TAKE OFF	9-9
HYDRAULIC SYSTEM	9-10
THREE POINT HITCH	9-10
REMOTE CONTROL VALVES	9-12
THREE POINT HITCH FRONT	9-12
FRONT REMOTE VALVE COUPLERS	9-12
BRAKES	9-13
STEERING	9-13
ELECTRICAL EQUIPMENT	9-14
MINIMUM HARDWARE TIGHTENING TORQUES	9-15

10 ACCESSORIES

EXTERNAL REAR VIEW MIRRORS	10-1
AUXILIARY HEADLIGHTS	10-1

11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy	11-1
Service record 1st 50 hour, Dealer copy	11-3



1 - GENERAL INFORMATION

CE DECLARATION OF CONFORMITY

Class of 2006/42/EC Annex II	BG	CZ	DA	DE	EL	EN	ES	ET	FI	FR	DE	IT	LT	LV	NL	NO	PL	
1.A.1	Име: [1]	№: [1]	№: [1]	№: [1]	№: [1]	№: [1]	№: [1]	№: [1]	№: [1]	№: [1]	№: [1]	№: [1]	№: [1]	№: [1]	№: [1]	№: [1]	№: [1]	
1.A.2	Представител на Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	Zastupovatel Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	representant of Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	vertreter durch Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	vertreter durch Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	representative for Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	representante de Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	Esindutavatu Giuseppe Gavio pool, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	edustajavaltuisen Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	agente pour Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	agente für Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	representant de Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	Atstovėjai Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	vertegenwoordigd door Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	representant av Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	kišiai/pasidaikytiniai įstovai Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen, L-1118 Luxembourg	
1.A.3	Декларацията показва пълна отговорност, не покрива Селскостопански трактор (Трактори номер [2]) Модел: [3] Тип: [4] Серия номер: [5]	Prohlášení je plně odpovědné, ne pokrývá Zemědělský traktor (Obsahují sériové [2]) Model: [3] Typ: [4] Výrobní číslo: [5]	erklærer på eget ansvar at produktet Landbrugstraktor (Indeholder [2]) Model: [3] Type: [4] Serienummer: [5]	erklären auf eget ansvar at produktet Landwirtschaftliche Zugmaschine (Handelsbezeichnung: [2]) Model: [3] Typ: [4] Serienummer: [5]	erklären auf meine alleinige Verantwortung, dass das Produkt Landwirtschaftliche Zugmaschine (Handelsbezeichnung: [2]) Model: [3] Typ: [4] Serienummer: [5]	επιβεβαιώνω, υπό αποκλειστική ευθύνη, ότι το προϊόν: Γεωργικός Ελασμοφόρος (αριθμός σειράς [2]) Μοντέλο: [3] Τύπος: [4] Σειριακός αριθμός [5]	declares under my sole responsibility, that the product: Agricultural tractor (Tractor Name: [2]) Model: [3] Type: [4] Serial Number: [5]	declarăm, întru deplină exclusivă răspundere, că produsul: Tractor agricol (Denumirea comercială [2]) Model: [3] Tip: [4] Număr de serie [5]	deklaravau, kaip manšis exclusiua atsakomybė, apie šį produktą: Tractorus (Tractorus pavadinimas [2]) Modelis: [3] Tipas: [4] Numeris de serijos [5]	ilmanen täysin vastuullisesti, että tämä tuote on siviiliä käyttävä maatalouskone (tuotteen nimi [2]) malli: [3] tyyppi: [4] sarjanumero: [5]	ilmanen täysin vastuullisesti, että tämä tuote on siviiliä käyttävä maatalouskone (tuotteen nimi [2]) malli: [3] tyyppi: [4] sarjanumero: [5]	déclare sous leur propre responsabilité, que le produit: Tracteur agricole (Désignation Commerciale: [2]) Modèle: [3] Type: [4] Numéro de série [5]	at which this declaration relates, falls all the relevant provisions of the Directive 2006/42/EC, amended by [6].	at which this declaration relates, falls all the relevant provisions of the Directive 2006/42/EC, amended by [6].	at which this declaration relates, falls all the relevant provisions of the Directive 2006/42/EC, amended by [6].	at which this declaration relates, falls all the relevant provisions of the Directive 2006/42/EC, amended by [6].	at which this declaration relates, falls all the relevant provisions of the Directive 2006/42/EC, amended by [6].	at which this declaration relates, falls all the relevant provisions of the Directive 2006/42/EC, amended by [6].
1.A.4	За оградата на информацията от Декларацията 2006/42/EC, съгласно специфични (характеризирани) стандарти:	Pro relevantní implementaci ustanovení této směrnice byly aplikovány následující harmonizované normy:	Følgende harmoniserede standarder er anvendt for opfyldelse af kravene i direktivet:	Za usloženosti izjava o skladnosti je podprta s harmoniziranimi standardi:	Følgende harmoniserede standarder er anvendt for opfyldelse af kravene i direktivet:	For relevant implementation of the provisions of the Directive, the following (harmonised) standards apply:	Para a implementação das disposições da Diretiva, foram aplicadas as seguintes normas harmonizadas:	Direktivi rešava s izjavo o skladnosti s harmoniziranimi standardi:	Direktivni vaatimukset täytetään soveltamalla harmonisoituja standardeja:	Declaratiei sunt în conformitate cu dispozițiile Directivei 2006/42/CE și cu toate dispozițiile modificative ale acesteia:	Declaratiei sunt în conformitate cu dispozițiile Directivei 2006/42/CE și cu toate dispozițiile modificative ale acesteia:	Per l'implementazione delle disposizioni della Direttiva, sono state applicate le seguenti norme armonizzate:	Šiame deklaracijoje nurodomi visi reikšmingi standartiniai šiuo direktyvos reikalavimus atitinkantys standartai:	Direktivni zahtevi ispunjavani sukladno standardima:	Voor de tenuisgeving van de eisen van de Richtlijn zijn de volgende geharmoniseerde normen toegepast:	soam demne declarație referitoare la aplicarea prevederilor Directivei 2006/42/CE, amendată prin [6].	Ważną rolę w realizacji deklaracji o zgodności z dyrektywą 2006/42/CE odegrały następujące normy:	
1.A.7	ISO 26322-1 part 1 and 2	ISO 26322-1 parte 1 și 2	ISO 26322-1 del 1 og del 2	ISO 26322-1 del 1 og del 2	ISO 26322-1 del 1 og del 2	ISO 26322-1 part 1 and 2	ISO 26322-1 parte 1 și 2	ISO 26322-1 dalis 1 ir 2	ISO 26322-1 del 1 og del 2	ISO 26322-1 parte 1 și 2	ISO 26322-1 parte 1 și 2	ISO 26322-1 parte 1 și 2	ISO 26322-1 dalis 1 ir 2	ISO 26322-1 del 1 og del 2	ISO 26322-1 parte 1 og del 2	ISO 26322-1 parte 1 și 2	ISO 26322-1 część 1 i 2	
1.A.9	Local de data de declaratie: [7]	Locul și data de declarare: [7]	Sted og dato for erklæringen: [7]	Ort und Datum der Erklärung: [7]	Ort und Datum der Erklärung: [7]	Place and date of the declaration: [7]	Lugar y fecha de la declaración: [7]	Deklaracijos vieta ir data: [7]	Välitiedot sijoitteen ja ajankohdan: [7]	Sted og dato for erklæringen: [7]	Local de data de declaratie: [7]	Local y fecha de la declaración: [7]	Deklaracijos vieta ir data: [7]	Välitiedot sijoitteen ja ajankohdan: [7]	Sted og dato for erklæringen: [7]	Local de data de declaratie: [7]	Local y fecha de la declaración: [7]	Sted og dato for erklæringen: [7]
1.A.10	Name and signature of the authorised person: [8]	Nume și semnătură a persoanei autorizate: [8]	Bemyndigedes navn og underskrift: [8]	Name und Unterschrift des Belegten: [8]	Name und Unterschrift des Belegten: [8]	Name and signature of the authorised person: [8]	Nume y firma de la persona autorizada: [8]	Välitiedot sijoitteen ja ajankohdan: [8]	Välitiedot sijoitteen ja ajankohdan: [8]	Name und Unterschrift der autorisierten Person: [8]	Name y firma de la persona autorizada: [8]	Nume și semnătură a persoanei autorizate: [8]	Välitiedot sijoitteen ja ajankohdan: [8]	Välitiedot sijoitteen ja ajankohdan: [8]	Name und Unterschrift der autorisierten Person: [8]	Nume și semnătură a persoanei autorizate: [8]	Välitiedot sijoitteen ja ajankohdan: [8]	Välitiedot sijoitteen ja ajankohdan: [8]



CNH Europe Holding S.A.
Rue Aldringen, 13
L-1118 Luxembourg
Luxembourg

Here above is provided copy of the "EC" Declaration of Conformity (EC Declaration of Conformity acc to 2006/42/EC).

The EC Declaration of Conformity is the manufacturer's declaration about equipment compliance to relevant EU provisions.

Please keep the original document in your own country language as a safe place. Local authorities may require you to show this document in order to assure compliance of your equipment.

Translation of this declaration in your own country language is provided on the original document.

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes.

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Guiseppe Gavioli CNH Europe Holding S.A. 13, Rue Aldringen L- 1118 Luxembourg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6]
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorised person: [8]

HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- ROPS PROTECTION is certified according to **EN 15694**.
- FOPS level on your tractor cab is certified according to **OECD Code 10**.
- HVAC (Heating, ventilation Air Conditioning) CAB is certified Category 1 according to **EN 15695-1**.
- HV (Heating, ventilation) cab is certified Category 1 according to **EN 15695-1**.
- NOISE EMISSION LEVELS are rated according to **77/311/EC**.
- VIBRATION LEVELS are rated according to **78/764/EEC**.

NOTE: See safety section 2 in this manual for further explanation and details on above mentioned standards and specific terminology.

METRIC AND IMPERIAL UNITS ABBREVIATIONS

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m²	square foot	ft²
	square millimeter	mm²	square inch	in²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency - Rotational				
	revolution per minute	r/min	revolution per minute	r/min^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	μm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per Mass				
	milligram per kilogram	mg/ kg		
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH₂O
	megapascal	MPa	pound per square inch	psi

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com