

ORIGINAL INSTRUCTIONS

- according to Directives 2006/42/EC, Annex I 1.7.4.1

PUMA 130 CVX **PUMA 145 CVX** **PUMA 160 CVX** Tractors

OPERATOR'S MANUAL



Part Number 84479483

1st edition English
January 2012



Contents

1 GENERAL INFORMATION

CE DECLARATION OF CONFORMITY	1-1
METRIC AND IMPERIAL UNITS ABBREVIATIONS	1-3
TO THE OWNER	1-5
PRODUCT IDENTIFICATION	1-7
ENGINE IDENTIFICATION	1-8
DRIVELINE IDENTIFICATION	1-9
CAB IDENTIFICATION	1-9
PRODUCT IDENTIFICATION PLATE	1-9
ECOLOGY AND THE ENVIRONMENT	1-10
NOISE LEVEL INFORMATION SHEET	1-11
PROGRAMMING TRACTOR FUNCTIONS	1-11
BEFORE OPERATING THE TRACTOR	1-12
INTERNATIONAL SYMBOLS	1-13
VIBRATION LEVEL INFORMATION SHEET	1-14
MACHINE STABILITY	1-15
INSTRUCTOR'S SEAT	1-19
SELECTIVE CATALYTIC REDUCTION (SCR) SYSTEM	1-20

2 SAFETY INFORMATION

SAFETY PRECAUTIONS	2-1
BEFORE DRIVING THE TRACTOR	2-2
DRIVING THE TRACTOR	2-3
OPERATING THE TRACTOR	2-4
OPERATING THE P.T.O.	2-6
OPERATING THE EXTERNAL CONTROLS	2-6
SERVICING THE TRACTOR	2-7
DIESEL FUEL	2-9
PREVENTION OF FIRE OR EXPLOSION	2-10
FIRE EXTINGUISHER	2-11
PROTECTION OFFERED BY THE TRACTOR	2-12
INTENDED USE STATEMENT	2-15
SAFETY ASPECTS	2-17
SAFETY DECALS	2-24

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

INTRODUCTION	3-1
CAB AIR FILTERS	3-5
IN CAB STORAGE (where fitted)	3-6
CABLE AND WIRING ROUTING	3-7
MOBILE TELEPHONE USAGE	3-7
IMPLEMENT MONITOR INSTALLATION	3-8
CAB AIR PRESSURISATION MONITOR (where fitted)	3-8

OPERATOR'S SEAT

AIR SUSPENSION SEAT DELUXE	3-10
SEAT BELT	3-15

INSTRUCTOR'S SEAT

INSTRUCTIONAL SEAT (where fitted).....	3-16
--	------

FORWARD CONTROLS

KEY- START SWITCH	3-17
HAZARD WARNING LIGHT SWITCH.....	3-17
LIGHT-/ TURN LEVER	3-18
FOLLOW ME HOME LIGHTS.....	3-18
WINDSHIELD WIPER AND WASHER CONTROLS	3-19
ELECTRONIC PARK BRAKE	3-20
CLUTCH/ INCHING PEDAL.....	3-24
FOOT BRAKES	3-24
EXHAUST BRAKE (where fitted).....	3-25
STEERING COLUMN	3-26

LEFT-HAND SIDE CONTROLS

HANDBRAKE.....	3-27
----------------	------

RIGHT-HAND SIDE CONTROLS

INTEGRATED CONTROL PANEL	3-28
--------------------------------	------

REARWARD CONTROLS

SWITCHES ON C-PILLAR	3-29
HYDRAULIC MASTER SWITCH.....	3-30
HEATED SCREENS (where fitted)	3-31
FAST STEERING SYSTEM (where fitted)	3-32
BATTERY ISOLATOR SWITCH	3-34
CLIMATE CONTROLS	3-35
MANUAL TEMPERATURE CONTROL	3-36
AUTOMATIC TEMPERATURE CONTROL (ATC).....	3-37

OVERHEAD CONTROLS

SWITCH PANEL WORKLIGHTS	3-39
INTERIOR LIGHT	3-40

INSTRUMENT CLUSTER

INTEGRATED CONTROL UNIT.....	3-41
GAUGES	3-41
INDICATOR AND WARNING LIGHTS	3-42
DISPLAYS	3-45
KEYPAD BASIC	3-46
KEYPAD ENHANCED	3-47
SELECTING OR CHANGING THE DISPLAY SETTINGS	3-49
ADJUST MENU	3-50
CONFIGURE MENU	3-52
PERFORMANCE MONITOR.....	3-55
ARMREST COLOUR DISPLAY	3-60
POP- UP SCREENS ON COLOUR DISPLAY.....	3-62
PERFORMANCE MONITOR ON COLOUR DISPLAY	3-68
PROGRAMMING THE DISPLAYS	3-71
ALARM FUNCTIONS.....	3-74

ACCESSING STORED ERROR CODES	3-76
WARNING AND ADVISORY SYMBOLS	3-77

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

TRACTOR REFUELLING	4-1
--------------------------	-----

STARTING THE UNIT

STARTING THE ENGINE	4-3
GRID HEATER COLD START AID (where fitted)	4-4
FUEL HEATER (where fitted)	4-5
COOLANT IMMERSION HEATER (where fitted)	4-5
TRANSMISSION OIL HEATER (where fitted)	4-6
BOOSTING THE BATTERY	4-7

STOPPING THE UNIT

STOPPING THE ENGINE	4-8
AUTOMATIC ENGINE SHUTDOWN	4-8
AUTOMATIC ENGINE SHUTDOWN WITH ENHANCED KEYPAD (where fitted)	4-9

MOVING THE UNIT

OPERATING IN COLD TEMPERATURES	4-10
REVERSIBLE ENGINE FAN	4-12

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

CARRYING THE TRACTOR ON A TRANSPORTER	5-1
SECURE THE HIGH VISIBILITY ROOF PANEL	5-1

RECOVERY TRANSPORT

TOWING THE TRACTOR	5-2
--------------------------	-----

6 WORKING OPERATIONS

GENERAL INFORMATION

VARIABLE ENGINE POWER MANAGEMENT	6-1
CONSTANT ENGINE SPEED	6-3
DIFFERENTIAL LOCK	6-6
FOUR WHEEL DRIVE	6-8
FRONT AXLE SUSPENSION (where fitted)	6-10
AUTOMATED HEADLAND FUNCTIONS	6-11
QUICK GUIDE	6-11
EXPLANATION OF SYMBOLS	6-13
RECORDING AND RE-PLAYING	6-14
RECORDING A SEQUENCE	6-17
RE-PLAYING A SEQUENCE	6-19

HEADLAND FUNCTION AND COLOUR DISPLAY SCREENS.....	6-23
DELETING A SEQUENCE WITH COLOUR DISPLAY.....	6-26

TRANSMISSION

TRANSMISSION OPERATION.....	6-27
DRIVE PEDAL.....	6-27
ENGINE SPEED CONTROL	6-28
SHUTTLE LEVER	6-30
SPEED MATCHING	6-31
TRANSMISSION CONTROLS	6-32
PROGRAMME THE MAXIMUM SPEED	6-34
STATIONARY CONTROL	6-35
ANTI JACK KNIFE	6-36
TRANSMISSION DISPLAY.....	6-37
MANUAL MODE.....	6-38
AUTOMATIC MODE.....	6-39
ERROR CODES.....	6-40

REAR POWER TAKE-OFF

P.T.O. OPERATING PRECAUTIONS.....	6-41
CHANGING THE P.T.O. OUTPUT SHAFT	6-41
ATTACHING P.T.O. DRIVEN EQUIPMENT	6-42
P.T.O. OPERATION.....	6-43
THREE-SPEED P.T.O. SYSTEM.....	6-48
GROUND DRIVE P.T.O. (where fitted)	6-49
EXTERNAL P.T.O. CONTROLS.....	6-50
AUTO P.T.O. OPERATION	6-52

FRONT POWER TAKE OFF

P.T.O. OPERATION.....	6-55
AUTO P.T.O. OPERATION	6-57

REAR HITCH

ELECTRONIC DRAFT CONTROL	6-59
SETTINGS AND DISPLAY	6-63
ELECTRONIC DRAFT CONTROL OPERATION	6-65
EXTERNAL HITCH CONTROLS.....	6-71

FRONT HITCH

SETTINGS AND ADJUSTMENTS	6-73
HITCH OPERATION.....	6-76
AUXILIARY FRONT COUPLERS (where fitted).....	6-81
EXTERNAL HITCH CONTROLS.....	6-83
FRONT HITCH MANAGEMENT	6-84

HYDRAULIC REMOTE CONTROL VALVES

REMOTE CONTROL VALVES	6-90
OPERATING WITH REMOTE VALVES	6-93
CONNECTING REMOTE CYLINDERS	6-96
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT	6-98

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)	
REMOTE CONTROL VALVES	6-100
SETTINGS AND ADJUSTMENTS	6-107
SETTING THE REMOTE VALVE PRIORITY.....	6-113
CREATING TIMER PROGRAMMES.....	6-115
CONNECTING REMOTE CYLINDERS	6-122
OPERATING WITH REMOTE VALVES	6-124
JOYSTICK OPERATION WITH A FRONT LOADER.....	6-126
MID MOUNT REMOTE VALVES	6-128
EXTERNAL EHR CONTROLS	6-130
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT	6-131
 HYDRAULIC POWER BEYOND PORT	
HYDRAULIC POWER BEYOND FOR EXTERNAL SERVICES	6-133
 THREE POINT HITCH	
ATTACHING THREE-POINT HITCH EQUIPMENT	6-136
LIFT ROD ADJUSTMENT	6-138
TOP LINK ADJUSTMENT	6-140
FLEXIBLE LINK END ADJUSTMENT	6-141
QUICK HITCH	6-142
LINKAGE STABILISER ADJUSTMENT	6-144
 DRAWBARS AND TOWING ATTACHMENTS	
DRAWBARS AND TOWING ATTACHMENTS	6-147
SWINGING DRAWBARS.....	6-150
AUTOMATIC PICK-UP HITCH	6-153
REAR TOW HITCH.....	6-155
 TRAILER BRAKING SYSTEMS	
AIR-OPERATED TRAILER BRAKES	6-161
AIR-OPERATED TRAILER BRAKES (Italy only).....	6-164
TRAILER BRAKE BIAS CONTROL	6-165
AUXILIARY AIR SUPPLY CONNECTOR (where fitted).....	6-165
HYDRAULIC TRAILER BRAKES	6-166
HYDRAULIC TRAILER BRAKES (Italy only).....	6-167
 WHEEL TRACK ADJUSTMENT	
FRONT WHEEL TRACK ADJUSTMENT	6-168
FRONT WHEEL ALIGNMENT	6-171
STEERING STOPS	6-172
FRONT AXLE OSCILLATION STOPS	6-172
FRONT FENDER.....	6-173
REAR WHEEL TRACK ADJUSTMENT	6-175
FLANGE TYPE AXLE (where fitted)	6-175
BAR TYPE AXLE (where fitted)	6-178
 BALLASTING AND TYRES	
BALLASTING AND TYRES	6-182
IRON WEIGHTS (where fitted)	6-185

LIQUID BALLAST	6-188
TYRE INFLATION	6-190
TYRE PRESSURES AND PERMISSIBLE LOADS	6-191

AUXILIARY POWER CONNECTIONS

DIAGNOSTIC SOCKET	6-193
TRAILER SOCKET ELECTRICAL	6-193
ELECTRICAL POWER CONNECTORS	6-194
INTERNAL POWER CONNECTORS	6-194
EXTERNAL POWER CONNECTORS	6-196

7 MAINTENANCE

GENERAL INFORMATION

INTRODUCTION	7-1
FUEL REQUIREMENT	7-2
BIODIESEL FUEL	7-4
ENGINE OIL CHANGE	7-5
PROTECTIVE DEVICES	7-6
LUBRICANTS AND COOLANTS	7-8
TRACTOR JACKING POINTS	7-10
GENERAL SPECIFICATIONS	7-10
CAPACITIES	7-11

MAINTENANCE CHART

Maintenance Chart	7-12
-------------------------	------

WHEN THE WARNING LAMP LIGHTS

CHANGE ENGINE AIR CLEANER OUTER ELEMENT	7-14
DRAIN FUEL SYSTEM WATER SEPARATOR	7-15
CHECK BRAKE FLUID LEVEL	7-16

EVERY 10 HOURS OR EACH DAY

CHECK ENGINE COOLANT LEVEL	7-17
CHECK ENGINE OIL LEVEL	7-18
CHECK REMOTE CONTROL VALVE DRAIN BOTTLES	7-18
CHECK WINDSCREEN WASHER RESERVOIR	7-19
DRAIN AIR RESERVOIR ON AIR OPERATED TRAILER BRAKE	7-19

FIRST 50 HOURS

SERVICE OPERATIONS	7-20
--------------------------	------

EVERY 50 HOURS

CLEAN CAB AIR FILTER	7-22
CLEAN SCR COVER AIR DUCTS	7-23
CLEAN COOLER SECTION	7-24
ALL GREASE FITTINGS	7-25
CHECK FRONT AND REAR WHEEL NUTS	7-32
CHECK TYRE PRESSURES AND TYRE CONDITION	7-32

EVERY 100 HOURS

INSPECT POLY V-BELT	7-33
INSPECT COMPRESSOR DRIVE BELT	7-33

EVERY 300 HOURS

CHECK BATTERY FLUID LEVEL	7-34
ADJUST HANDBRAKE	7-35
CHECK TRANSMISSION/REAR AXLE AND HYDRAULIC OIL LEVEL	7-36
CHECK 4WD FRONT AXLE DIFFERENTIAL AND HUBS OIL LEVEL	7-37
CHECK FRONT P.T.O. GEARBOX OIL LEVEL	7-37

EVERY 600 HOURS

CHANGE ENGINE OIL AND FILTER	7-38
CHANGE FUEL PRE-FILTER AND FUEL FILTER ELEMENT	7-40
CHANGE ENGINE AIR CLEANER OUTER ELEMENT	7-41
CHANGE CHARGE PUMP AND GEAR PUMP OIL FILTER	7-42
CHECK ENGINE AIR INTAKE CONNECTIONS	7-43
CHECK TRANSMISSION OIL COOLER PIPE COUPLINGS	7-44
CLEAN DEF/ AdBlue INLINE FILTER	7-44

EVERY 1200 HOURS OR ANNUALLY

CHANGE CAB AIR FILTERS	7-45
CHANGE MAIN OIL FILTER CARTRIDGE	7-46
CHANGE TRANSMISSION/ REAR AXLE AND HYDRAULIC OIL	7-47
CHANGE 4WD DIFFERENTIAL OIL	7-48
CHANGE 4WD PLANETARY HUB OIL	7-49
CHANGE FRONT P.T.O. GEARBOX OIL	7-49
GREASE REAR AXLE SHAFT BEARING	7-50

EVERY 1200 HOURS OR EVERY 2 YEARS

CHECK BATTERY FLUID LEVEL	7-51
CHANGE DEF/ AdBlue INLINE FILTER	7-52
CHANGE ENGINE AIR CLEANER INNER ELEMENT	7-53
CHECK VALVE TAPPET CLEARANCE	7-54
CHANGE ENGINE COOLANT FLUID	7-55
CHANGE AIR BRAKE DRIER RESERVOIR	7-59
CHANGE POLY V-BELTS	7-60

EVERY 1800 HOURS OR EVERY 2 YEARS

CHANGE ENGINE BREATHER FILTER	7-62
-------------------------------------	------

EVERY 3600 HOURS OR EVERY 2 YEARS

CHANGE DEF/ AdBlue MAIN FILTER	7-63
--------------------------------------	------

EVERY 36 MONTHS

SERVICE AIR CONDITIONER SYSTEM	7-64
CHECK BATTERY FLUID LEVEL	7-65

GENERAL MAINTENANCE

CLEANING THE TRACTOR	7-67
----------------------------	------

FUEL SYSTEM PRE- FILTER AND WATER TRAP	7-69
BLEEDING FUEL INJECTION SYSTEM.....	7-69
CHECK BRAKE PEDAL LATCHING/UNLATCHING	7-70
ADJUST CAB SUSPENSION (where fitted)	7-71
ADJUST AUTOMATICK PICK- UP HITCH	7-72
HEADLIGHT AND WORKLAMP ADJUSTMENT.....	7-73
BULB REPLACEMENT.....	7-74
FUSES AND RELAYS.....	7-78
PROTECTING ELECTRONIC AND ELECTRICAL SYSTEMS DURING BATTERY CHARGING OR WELDING	7-83
BATTERY REMOVAL AND INSTALLATION	7-84

STORAGE

TRACTOR STORAGE.....	7-85
PREPARATION FOR USE AFTER STORAGE	7-85

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

INTRODUCTION	8-1
--------------------	-----

ALARM(S)

FAULT CODES AND SYMBOLS	8-2
-------------------------------	-----

SYMPTOM(S)

ENGINE	8-4
TRANSMISSION	8-5
HYDRAULICS	8-5
THREE POINT HITCH	8-6
BRAKES.....	8-6
CAB.....	8-7
ELECTRICAL SYSTEM	8-7

9 SPECIFICATIONS

GENERAL DIMENSIONS	9-1
MAXIMUM OPERATING ANGLE	9-4
MAXIMUM OPERATING WEIGHTS	9-5
TRACTOR WEIGHTS	9-5
CAPACITIES	9-6
ENGINE	9-7
FUEL SYSTEM.....	9-7
AIR CLEANER SYSTEM	9-8
COOLING SYSTEM.....	9-8
TRANSMISSION	9-8
REAR POWER TAKE-OFF.....	9-9
FRONT POWER TAKE OFF	9-9
HYDRAULIC SYSTEM	9-10
THREE POINT HITCH	9-10
REMOTE CONTROL VALVES	9-12
THREE POINT HITCH FRONT	9-12
FRONT REMOTE VALVE COUPLERS	9-12

BRAKES.....	9-13
STEERING	9-13
ELECTRICAL EQUIPMENT.....	9-14
MINIMUM HARDWARE TIGHTENING TORQUES	9-15

10 ACCESSORIES

RADIO (where fitted)	10-1
EXTERNAL REAR VIEW MIRRORS.....	10-1
AUXILIARY HEADLIGHTS	10-3
ROTATING BEACON.....	10-4
FRONT- END LOADER FIXATION POINTS	10-5

11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy	11-1
Service record 1st 50 hour, Dealer copy	11-3

1 - GENERAL INFORMATION

CE DECLARATION OF CONFORMITY

[illegible]

Here above is provided copy of the "EC" Declaration of Conformity (EC Declaration of Conformity acc to 2006/42/EC).

The EC Declaration of Conformity is the manufacturer's declaration about equipment compliance to relevant EU provisions.

Please keep the original document in a safe place. Local authorities may require you to show this document in order to assure compliance of your equipment.

Translation of this declaration in your own country language is provided on the original document.

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes.

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Guiseppe Gavioli CNH Europe Holding S.A. 24, Boulevard Royal L- 2449 Luxembourg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6]
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorised person: [8]

HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- ROPS PROTECTION is certified according to **EN 15694**.
- FOPS level on your tractor cab is certified according to **OECD Code 10**.
- HVAC (Heating, ventilation Air Conditioning) CAB is certified Category 1 according to **EN 15695-1**.
- HV (Heating, ventilation) cab is certified Category 1 according to **EN 15695-1**.
- NOISE EMISSION LEVELS are rated according to **2009/76/EC**.
- VIBRATION LEVELS are rated according to **78/764/EEC**.

NOTE: See safety section 2 in this manual for further explanation and details on above mentioned standards and specific terminology.

METRIC AND IMPERIAL UNITS ABBREVIATIONS

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m²	square foot	ft²
			square inch	in²
	square millimeter	mm²	square inch	in²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	µF	microfarad	µF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency – Rotational				
	revolution per minute	r/min	revolution per minute	r/min ^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	µm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per Mass				
	milligram per kilogram	mg/ kg		
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH2O
	megapascal	MPa	pound per square inch	psi

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Temperature (other than Thermodynamic)				
	degrees Celsius	°C	degrees Fahrenheit	°F
Time				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
Torque (includes Bending moment, Moment of force, and Moment of a couple)				
	newton meter	N m	pound foot	lb ft
			pound foot	lb in
Velocity				
	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimeter per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
Volume (includes Capacity)				
	cubic meter	m³	cubic yard	yd³
				cu yd
	liter	l	cubic inch	in³
	liter	l	US gallon	US gal
			UK gallon	UK gal
			US quart	US qt
			UK quart	UK qt
	milliliter	ml	fluid ounce	fl oz
Volume per time (includes Discharge and Flow rate)				
	cubic meter per minute	m³/min	cubic foot per minute	ft³/min
	liter per minute	l/min	US gallon per minute	US gal/min
	milliliter per minute	ml/min	UK gallon per minute	UK gal/min
Sound power level and Sound pressure level				
	decibel	dB	decibel	dB

Glossary

Acronym	Definition
DEF	Diesel Exhaust Fluid
ISO	International Organization for Standardization
MSDS	Material Safety Data Sheet
NOx	Nitrogen Oxide
PPE	Personal Protective Equipment
SCR	Selective Catalytic Reduction
ULSD	Ultra Low Sulfur Diesel
%	Percent
<	Less than
>	Greater than

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com