

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1

OPERATOR'S MANUAL

T7.170


T7.185

T7.200

T7.210

Sidewinder II™

Range Command / Power Command Tractors

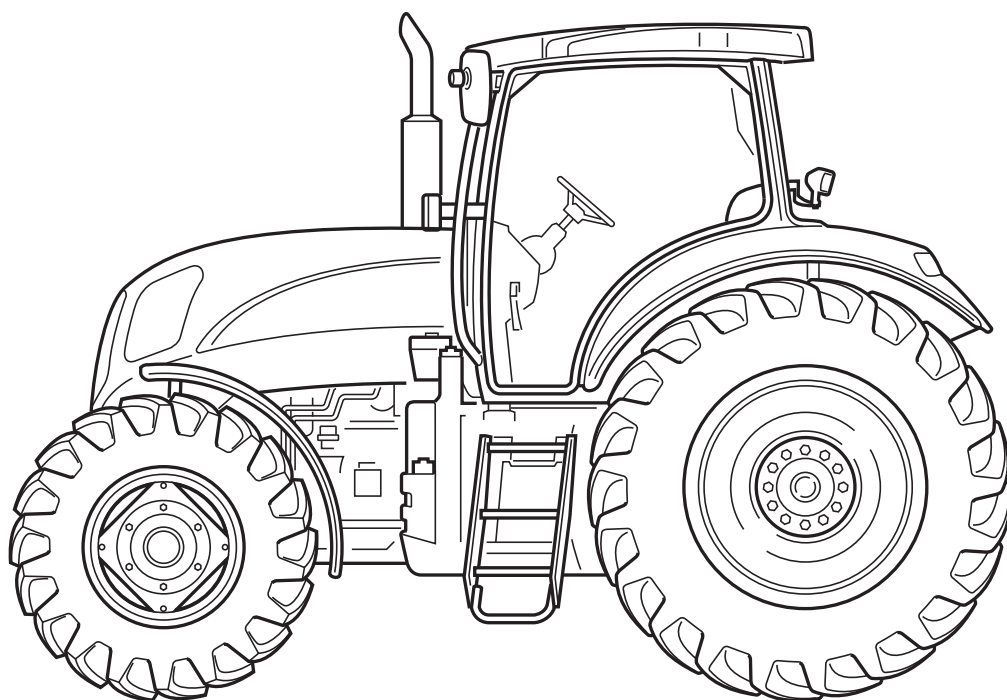

Part Number 84479555

1st edition English
January 2012



Contents

1 GENERAL INFORMATION

CE DECLARATION OF CONFORMITY	1-1
METRIC AND IMPERIAL UNITS ABBREVIATIONS	1-3
TO THE OWNER	1-5
PRODUCT IDENTIFICATION	1-7
ENGINE IDENTIFICATION	1-8
DRIVELINE IDENTIFICATION	1-9
CAB IDENTIFICATION	1-10
PRODUCT IDENTIFICATION PLATE	1-10
ECOLOGY AND THE ENVIRONMENT	1-11
NOISE LEVEL INFORMATION SHEET	1-12
PROGRAMMING TRACTOR FUNCTIONS	1-12
BEFORE OPERATING THE TRACTOR	1-13
INTERNATIONAL SYMBOLS	1-14
VIBRATION LEVEL INFORMATION SHEET	1-15
MACHINE STABILITY	1-16
INSTRUCTOR'S SEAT	1-20
SELECTIVE CATALYTIC REDUCTION (SCR) SYSTEM	1-21

2 SAFETY INFORMATION

SAFETY PRECAUTIONS	2-1
BEFORE DRIVING THE TRACTOR	2-2
DRIVING THE TRACTOR	2-3
OPERATING THE TRACTOR	2-4
OPERATING THE P.T.O.	2-6
OPERATING THE EXTERNAL CONTROLS	2-6
SERVICING THE TRACTOR	2-7
DIESEL FUEL	2-9
PREVENTION OF FIRE OR EXPLOSION	2-10
FIRE EXTINGUISHER	2-11
PROTECTION OFFERED BY THE TRACTOR	2-12
INTENDED USE STATEMENT	2-15
SAFETY ASPECTS	2-17
SAFETY DECALS	2-24

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

INTRODUCTION	3-1
CAB AIR FILTERS	3-5
IN CAB STORAGE (where fitted)	3-6
CABLE AND WIRING ROUTING	3-7
MOBILE TELEPHONE USAGE	3-7
IMPLEMENT MONITOR INSTALLATION	3-8
CAB AIR PRESSURISATION MONITOR (where fitted)	3-8

OPERATOR'S SEAT

AIR SUSPENSION SEAT DELUXE	3-10
SEAT BELT	3-15

INSTRUCTOR'S SEAT	
INSTRUCTIONAL SEAT (where fitted).....	3-16
FORWARD CONTROLS	
KEY- START SWITCH	3-17
HAZARD WARNING LIGHT SWITCH.....	3-17
LIGHT-/ TURN LEVER	3-18
FOLLOW ME HOME LIGHTS.....	3-18
WINDSHIELD WIPER AND WASHER CONTROLS	3-19
ELECTRONIC PARK BRAKE	3-20
CLUTCH/ INCHING PEDAL.....	3-24
FOOT BRAKES	3-24
EXHAUST BRAKE (where fitted).....	3-25
STEERING COLUMN	3-26
LEFT-HAND SIDE CONTROLS	
HANDBRAKE.....	3-27
RIGHT-HAND SIDE CONTROLS	
INTEGRATED CONTROL PANEL	3-28
REARWARD CONTROLS	
SWITCHES ON C-PILLAR	3-29
HYDRAULIC MASTER SWITCH.....	3-30
HEATED SCREENS (where fitted)	3-31
FAST STEERING SYSTEM (where fitted)	3-32
BATTERY ISOLATOR SWITCH	3-34
CLIMATE CONTROLS	3-35
MANUAL TEMPERATURE CONTROL	3-36
AUTOMATIC TEMPERATURE CONTROL (ATC).....	3-37
OVERHEAD CONTROLS	
SWITCH PANEL WORKLIGHTS	3-38
INTERIOR LIGHT	3-39
INSTRUMENT CLUSTER	
ANALOGUE/ DIGITAL INSTRUMENT CLUSTER	3-40
GAUGES	3-40
INDICATOR AND WARNING LIGHTS	3-41
DISPLAYS	3-43
TRANSMISSION DISPLAY.....	3-46
KEYPAD ENHANCED.....	3-47
SELECTING OR CHANGING THE DISPLAY SETTINGS	3-49
GROUND SPEED CALIBRATION.....	3-50
PERFORMANCE MONITOR.....	3-53
ARMREST COLOUR DISPLAY	3-58
POP- UP SCREENS ON COLOUR DISPLAY.....	3-60
PERFORMANCE MONITOR ON COLOUR DISPLAY	3-66
PROGRAMMING THE DISPLAYS	3-69
ALARM FUNCTIONS.....	3-72
ACCESSING STORED ERROR CODES	3-74

WARNING AND ADVISORY SYMBOLS	3-75
------------------------------------	------

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

TRACTOR REFUELLING	4-1
--------------------------	-----

STARTING THE UNIT

STARTING THE ENGINE	4-3
GRID HEATER COLD START AID (where fitted)	4-4
FUEL HEATER (where fitted)	4-5
COOLANT IMMERSION HEATER (where fitted)	4-5
TRANSMISSION OIL HEATER (where fitted).....	4-6
BOOSTING THE BATTERY	4-7

STOPPING THE UNIT

STOPPING THE ENGINE.....	4-8
AUTOMATIC ENGINE SHUTDOWN	4-8
AUTOMATIC ENGINE SHUTDOWN WITH ENHANCED KEYPAD (where fitted)	4-9

MOVING THE UNIT

OPERATING IN COLD TEMPERATURES	4-10
REVERSIBLE ENGINE FAN	4-11

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

CARRYING THE TRACTOR ON A TRANSPORTER	5-1
SECURE THE HIGH VISIBILITY ROOF PANEL	5-1

RECOVERY TRANSPORT

TOWING THE TRACTOR	5-2
--------------------------	-----

6 WORKING OPERATIONS

GENERAL INFORMATION

VARIABLE ENGINE POWER MANAGEMENT	6-1
CONSTANT ENGINE SPEED	6-3
DIFFERENTIAL LOCK	6-6
FOUR WHEEL DRIVE	6-8
FRONT AXLE SUSPENSION (where fitted)	6-10
AUTOMATED HEADLAND FUNCTIONS	6-11
QUICK GUIDE.....	6-11
EXPLANATION OF SYMBOLS.....	6-13
RECORDING AND RE-PLAYING	6-14
RECORDING A SEQUENCE	6-17
RE-PLAYING A SEQUENCE.....	6-19
HEADLAND FUNCTION AND COLOUR DISPLAY SCREENS.....	6-23

DELETING A SEQUENCE WITH COLOUR DISPLAY.....	6-26
--	------

TRANSMISSION

FOOT THROTTLE PEDAL.....	6-27
HAND THROTTLE.....	6-27
SHUTTLE LEVER.....	6-28
ERROR CODES.....	6-31
RANGECOMMAND TRANSMISSION.....	6-32
TRANSMISSION OPERATION.....	6-32
POWERSHIFT CONTROL LEVER.....	6-33
DRIVING THE TRACTOR.....	6-34
SPEED MATCHING.....	6-37
AUTO SHIFT FUNCTION.....	6-38
AUTO SHIFTING IN FIELD MODE.....	6-39
AUTO SHIFTING IN ROAD MODE.....	6-42
PROGRAMMING FORWARD AND REVERSE GEAR RATIOS.....	6-45
SETTING THE SHARP SHUTTLE FUNCTION.....	6-46
CREEPER GEARS (where fitted).....	6-47
POWERCOMMAND TRANSMISSION.....	6-48
TRANSMISSION OPERATION.....	6-48
POWERSHIFT CONTROL LEVER.....	6-49
DRIVING THE TRACTOR.....	6-50
SPEED MATCHING.....	6-52
AUTO SHIFT FUNCTION.....	6-53
AUTO SHIFTING IN FIELD MODE.....	6-54
AUTO SHIFTING IN ROAD MODE.....	6-57
AUTO SHIFTING AND 'GO TO' MODES.....	6-60
PROGRAMMING FORWARD AND REVERSE GEAR RATIOS.....	6-61
CREEPER GEARS (where fitted).....	6-62

REAR POWER TAKE-OFF

P.T.O. OPERATING PRECAUTIONS.....	6-63
CHANGING THE P.T.O. OUTPUT SHAFT.....	6-63
ATTACHING P.T.O. DRIVEN EQUIPMENT.....	6-64
P.T.O. OPERATION.....	6-65
THREE-SPEED P.T.O. SYSTEM.....	6-70
GROUND DRIVE P.T.O. (where fitted).....	6-71
EXTERNAL P.T.O. CONTROLS.....	6-72
AUTO P.T.O. OPERATION.....	6-74

FRONT POWER TAKE OFF

P.T.O. OPERATION.....	6-77
AUTO P.T.O. OPERATION.....	6-79

REAR HITCH

ELECTRONIC DRAFT CONTROL.....	6-81
SETTINGS AND DISPLAY.....	6-85
ELECTRONIC DRAFT CONTROL OPERATION.....	6-87
EXTERNAL HITCH CONTROLS.....	6-92

FRONT HITCH

SETTINGS AND ADJUSTMENTS.....	6-94
HITCH OPERATION.....	6-97

AUXILIARY FRONT COUPLERS (where fitted).....	6-102
EXTERNAL HITCH CONTROLS.....	6-104
FRONT HITCH MANAGEMENT	6-105

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

REMOTE CONTROL VALVES	6-110
SETTINGS AND ADJUSTMENTS	6-117
SETTING THE REMOTE VALVE PRIORITY.....	6-122
CREATING TIMER PROGRAMMES.....	6-123
CONNECTING REMOTE CYLINDERS	6-130
OPERATING WITH REMOTE VALVES	6-132
JOYSTICK OPERATION WITH A FRONT LOADER.....	6-134
MID MOUNT REMOTE VALVES	6-136
EXTERNAL EHR CONTROLS	6-137
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT	6-138

HYDRAULIC POWER BEYOND PORT

HYDRAULIC POWER BEYOND FOR EXTERNAL SERVICES	6-140
--	-------

THREE POINT HITCH

ATTACHING THREE-POINT HITCH EQUIPMENT	6-143
LIFT ROD ADJUSTMENT	6-145
TOP LINK ADJUSTMENT	6-147
FLEXIBLE LINK END ADJUSTMENT	6-148
QUICK HITCH	6-149
LINKAGE STABILISER ADJUSTMENT	6-151

DRAWBARS AND TOWING ATTACHMENTS

DRAWBARS AND TOWING ATTACHMENTS	6-154
SWINGING DRAWBARS.....	6-157
AUTOMATIC PICK-UP HITCH	6-160
REAR TOW HITCH.....	6-162

TRAILER BRAKING SYSTEMS

AIR-OPERATED TRAILER BRAKES	6-168
AIR-OPERATED TRAILER BRAKES (Italy only).....	6-171
TRAILER BRAKE BIAS CONTROL	6-172
AUXILIARY AIR SUPPLY CONNECTOR (where fitted).....	6-172
HYDRAULIC TRAILER BRAKES	6-173
HYDRAULIC TRAILER BRAKES (Italy only).....	6-174

WHEEL TRACK ADJUSTMENT

FRONT WHEEL TRACK ADJUSTMENT	6-175
FRONT WHEEL ALIGNMENT	6-178
STEERING STOPS	6-179
FRONT AXLE OSCILLATION STOPS	6-179
FRONT FENDER.....	6-180
REAR WHEEL TRACK ADJUSTMENT	6-182
FLANGE TYPE AXLE (where fitted)	6-182
BAR TYPE AXLE (where fitted)	6-185

BALLASTING AND TYRES

BALLASTING AND TYRES	6-189
IRON WEIGHTS (where fitted)	6-192
LIQUID BALLAST	6-195
TYRE INFLATION	6-197
TYRE PRESSURES AND PERMISSIBLE LOADS	6-198

AUXILIARY POWER CONNECTIONS

DIAGNOSTIC SOCKET	6-200
TRAILER SOCKET ELECTRICAL	6-200
ELECTRICAL POWER CONNECTORS	6-201
INTERNAL POWER CONNECTORS	6-201
EXTERNAL POWER CONNECTORS	6-203

7 MAINTENANCE

GENERAL INFORMATION

INTRODUCTION	7-1
FUEL REQUIREMENT	7-2
BIODIESEL FUEL	7-4
ENGINE OIL CHANGE	7-5
PROTECTIVE DEVICES	7-6
LUBRICANTS AND COOLANTS	7-8
TRACTOR JACKING POINTS	7-10
GENERAL SPECIFICATIONS	7-10
CAPACITIES	7-11

MAINTENANCE CHART

Maintenance Chart	7-12
-------------------------	------

WHEN THE WARNING LAMP LIGHTS

CHANGE ENGINE AIR CLEANER OUTER ELEMENT	7-14
DRAIN FUEL SYSTEM WATER SEPARATOR	7-15
CHECK BRAKE FLUID LEVEL	7-16

EVERY 10 HOURS OR EACH DAY

CHECK ENGINE COOLANT LEVEL	7-17
CHECK ENGINE OIL LEVEL	7-18
CHECK REMOTE CONTROL VALVE DRAIN BOTTLES	7-18
CHECK WINDSCREEN WASHER RESERVOIR	7-19
DRAIN AIR RESERVOIR ON AIR OPERATED TRAILER BRAKE	7-19

FIRST 50 HOURS

SERVICE OPERATIONS	7-20
--------------------------	------

EVERY 50 HOURS

CLEAN CAB AIR FILTER	7-22
CLEAN SCR COVER AIR DUCTS	7-23
CLEAN COOLER SECTION	7-24
ALL GREASE FITTINGS	7-25

CHECK FRONT AND REAR WHEEL NUTS.....	7-32
CHECK TYRE PRESSURES AND TYRE CONDITION.....	7-32

EVERY 100 HOURS

INSPECT POLY V-BELT	7-33
INSPECT COMPRESSOR DRIVE BELT.....	7-33

EVERY 300 HOURS

CHECK BATTERY FLUID LEVEL.....	7-34
ADJUST HANDBRAKE.....	7-35
CHECK TRANSMISSION/REAR AXLE AND HYDRAULIC OIL LEVEL	7-36
CHECK 4WD FRONT AXLE DIFFERENTIAL AND HUBS OIL LEVEL.....	7-37
CHECK FRONT P.T.O. GEARBOX OIL LEVEL	7-37

EVERY 600 HOURS

CHANGE ENGINE OIL AND FILTER	7-38
CHANGE FUEL PRE-FILTER AND FUEL FILTER ELEMENT.....	7-40
CHANGE ENGINE AIR CLEANER OUTER ELEMENT.....	7-41
CHANGE CHARGE PUMP OIL FILTER	7-42
CHECK ENGINE AIR INTAKE CONNECTIONS	7-43
CHECK TRANSMISSION OIL COOLER PIPE COUPLINGS	7-44
CLEAN DEF/ AdBlue INLINE FILTER.....	7-44

EVERY 1200 HOURS OR ANNUALLY

CHANGE CAB AIR FILTERS.....	7-45
CHANGE MAIN OIL FILTER CARTRIDGE.....	7-46
CHANGE TRANSMISSION/ REAR AXLE AND HYDRAULIC OIL.....	7-47
CHANGE 4WD DIFFERENTIAL OIL	7-48
CHANGE 4WD PLANETARY HUB OIL	7-49
CHANGE FRONT P.T.O. GEARBOX OIL	7-49
GREASE REAR AXLE SHAFT BEARING	7-50

EVERY 1200 HOURS OR EVERY 2 YEARS

CHECK BATTERY FLUID LEVEL.....	7-51
CHANGE DEF/ AdBlue INLINE FILTER.....	7-52
CHANGE ENGINE AIR CLEANER INNER ELEMENT.....	7-53
CHECK VALVE TAPPET CLEARANCE	7-54
CHANGE ENGINE COOLANT FLUID	7-55
CHANGE AIR BRAKE DRIER RESERVOIR.....	7-59
CHANGE POLY V-BELTS.....	7-60

EVERY 1800 HOURS OR EVERY 2 YEARS

CHANGE ENGINE BREATHER FILTER.....	7-62
------------------------------------	------

EVERY 3600 HOURS OR EVERY 2 YEARS

CHANGE DEF/ AdBlue MAIN FILTER	7-63
--------------------------------------	------

EVERY 36 MONTHS

SERVICE AIR CONDITIONER SYSTEM	7-64
CHECK BATTERY FLUID LEVEL.....	7-65

GENERAL MAINTENANCE

CLEANING THE TRACTOR.....	7-67
FUEL SYSTEM PRE- FILTER AND WATER TRAP	7-69
BLEEDING FUEL INJECTION SYSTEM.....	7-69
CHECK BRAKE PEDAL LATCHING/UNLATCHING	7-70
ADJUST CAB SUSPENSION (where fitted)	7-71
ADJUST AUTOMATIC PICK- UP HITCH.....	7-72
HEADLIGHT AND WORKLAMP ADJUSTMENT.....	7-73
BULB REPLACEMENT.....	7-74
FUSES AND RELAYS.....	7-78
PROTECTING ELECTRONIC AND ELECTRICAL SYSTEMS DURING BATTERY CHARGING OR WELDING	7-83
BATTERY REMOVAL AND INSTALLATION	7-84

STORAGE

TRACTOR STORAGE.....	7-85
PREPARATION FOR USE AFTER STORAGE	7-85

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

INTRODUCTION	8-1
--------------------	-----

ALARM(S)

FAULT CODES AND SYMBOLS	8-2
-------------------------------	-----

SYMPTOM(S)

ENGINE	8-4
TRANSMISSION	8-5
HYDRAULICS	8-5
THREE POINT HITCH	8-6
BRAKES.....	8-6
CAB.....	8-7
ELECTRICAL SYSTEM	8-7

9 SPECIFICATIONS

GENERAL DIMENSIONS	9-1
MAXIMUM OPERATING ANGLE	9-4
MAXIMUM OPERATING WEIGHTS	9-5
TRACTOR WEIGHTS	9-5
CAPACITIES	9-6
ENGINE	9-7
FUEL SYSTEM.....	9-7
AIR CLEANER SYSTEM	9-8
COOLING SYSTEM.....	9-8
TRANSMISSION	9-8
REAR POWER TAKE-OFF.....	9-9
FRONT POWER TAKE OFF	9-9
HYDRAULIC SYSTEM	9-10
THREE POINT HITCH	9-10

REMOTE CONTROL VALVES	9-12
THREE POINT HITCH FRONT	9-12
FRONT REMOTE VALVE COUPLERS	9-12
BRAKES.....	9-13
STEERING	9-13
ELECTRICAL EQUIPMENT	9-14
GROUND SPEED CHART SEMI POWERSHIFT TRANSMISSION	9-15
GROUND SPEED CHART FULL POWERSHIFT TRANSMISSION	9-18
MINIMUM HARDWARE TIGHTENING TORQUES	9-21

10 ACCESSORIES

RADIO (where fitted)	10-1
EXTERNAL REAR VIEW MIRRORS.....	10-1
AUXILIARY HEADLIGHTS	10-3
ROTATING BEACON.....	10-4
FRONT- END LOADER FIXATION POINTS	10-5

11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy	11-1
Service record 1st 50 hour, Dealer copy	11-3

1 - GENERAL INFORMATION

1 - GENERAL INFORMATION

CE DECLARATION OF CONFORMITY

Table with 10 columns (BG, CZ, DA, DE, EL, EN, ES, ET, FI, FR, HU, IT, LV, NL, NO, PL, PT, RO, SK, SL, SV, TR) and rows (1A.1 to 1A.10) for various fields like manufacturer name, model, serial number, and date of declaration. Includes a logo for NEW HOLLAND and a signature for Giuseppe Gavioli.

SS12B123 1

Here above is provided copy of the "EC" Declaration of Conformity (EC Declaration of Conformity acc to 2006/42/EC).

The EC Declaration of Conformity is the manufacturer's declaration about equipment compliance to relevant EU provisions.

Please keep the original document in a safe place. Local authorities may require you to show this document in order to assure compliance of your equipment.

Translation of this declaration in your own country language is provided on the original document.

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes.

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Guiseppe Gavioli CNH Europe Holding S.A. 24, Boulevard Royal L- 2449 Luxembourg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6]
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorised person: [8]

HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- ROPS PROTECTION is certified according to **EN 15694**.
- FOPS level on your tractor cab is certified according to **OECD Code 10**.
- HVAC (Heating, ventilation Air Conditioning) CAB is certified Category 1 according to **EN 15695-1**.
- HV (Heating, ventilation) cab is certified Category 1 according to **EN 15695-1**.
- NOISE EMISSION LEVELS are rated according to **2009/76/EC**.
- VIBRATION LEVELS are rated according to **78/764/EEC**.

NOTE: See safety section 2 in this manual for further explanation and details on above mentioned standards and specific terminology.

METRIC AND IMPERIAL UNITS ABBREVIATIONS

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m²	square foot	ft²
	square millimeter	mm²	square inch	in²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency - Rotational				
	revolution per minute	r/min	revolution per minute	r/min^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	μm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per Mass				
	milligram per kilogram	mg/ kg		
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH₂O
	megapascal	MPa	pound per square inch	psi

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com