

ORIGINAL INSTRUCTIONS - according to Directives 2006/42/EC, Annex I 1.7.4.1

OPERATOR'S MANUAL

T6.120

T6.140

T6.150


T6.160

T6.155

T6.165

T6.175

Tractors

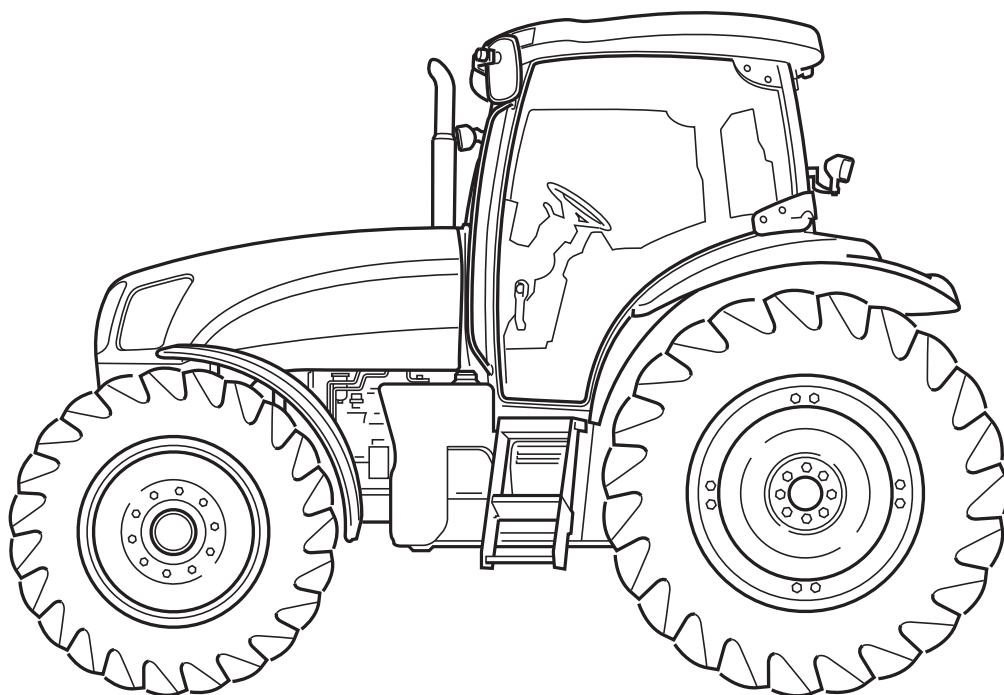

Part Number 84484527

1st edition English
January 2012



Contents

1 GENERAL INFORMATION

CE DECLARATION OF CONFORMITY	1-1
METRIC AND IMPERIAL UNITS ABBREVIATIONS	1-3
TO THE OWNER	1-5
PRODUCT IDENTIFICATION	1-7
ENGINE IDENTIFICATION	1-8
DRIVELINE IDENTIFICATION	1-9
CAB IDENTIFICATION	1-9
PRODUCT IDENTIFICATION PLATE	1-10
ECOLOGY AND THE ENVIRONMENT	1-11
NOISE LEVEL INFORMATION SHEET	1-12
PROGRAMMING TRACTOR FUNCTIONS	1-12
BEFORE OPERATING THE TRACTOR	1-13
INTERNATIONAL SYMBOLS	1-14
VIBRATION LEVEL INFORMATION SHEET	1-15
MACHINE STABILITY	1-16
INSTRUCTOR'S SEAT	1-20
SELECTIVE CATALYTIC REDUCTION (SCR) SYSTEM	1-21

2 SAFETY INFORMATION

SAFETY PRECAUTIONS	2-1
BEFORE DRIVING THE TRACTOR	2-2
DRIVING THE TRACTOR	2-3
OPERATING THE TRACTOR	2-4
OPERATING THE P.T.O.	2-6
OPERATING THE EXTERNAL CONTROLS	2-6
SERVICING THE TRACTOR	2-7
DIESEL FUEL	2-9
PREVENTION OF FIRE OR EXPLOSION	2-10
FIRE EXTINGUISHER	2-11
PROTECTION OFFERED BY THE TRACTOR	2-12
INTENDED USE STATEMENT	2-15
SAFETY ASPECTS	2-17
SAFETY DECALS	2-24

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

INTRODUCTION	3-1
CAB AIR FILTERS	3-5
IN CAB STORAGE (where fitted)	3-6
CABLE AND WIRING ROUTING	3-7
MOBILE TELEPHONE USAGE	3-7
IMPLEMENT MONITOR INSTALLATION	3-8
CAB AIR PRESSURISATION MONITOR (where fitted)	3-8

OPERATOR'S SEAT

MECHANICAL SEAT DELUXE (where fitted)	3-10
AIR SUSPENSION SEAT (where fitted)	3-12
AIR SUSPENSION SEAT DELUXE	3-15

SEAT BELT	3-20
INSTRUCTOR'S SEAT	
INSTRUCTIONAL SEAT (where fitted)	3-21
FORWARD CONTROLS	
KEY- START SWITCH	3-22
HAZARD WARNING LIGHT SWITCH	3-22
LIGHT-/ TURN LEVER	3-23
FOLLOW ME HOME LIGHTS	3-23
WINDSHIELD WIPER AND WASHER CONTROLS	3-24
CLUTCH/ INCHING PEDAL	3-25
FOOT THROTTLE PEDAL	3-25
HAND THROTTLE	3-26
FOOT BRAKES	3-27
STEERING COLUMN	3-28
LEFT-HAND SIDE CONTROLS	
HANDBRAKE	3-29
RIGHT-HAND SIDE CONTROLS	
SWITCH PANEL	3-30
REARWARD CONTROLS	
SWITCHES ON C-PILLAR	3-31
FAST STEERING SYSTEM (where fitted)	3-33
BATTERY ISOLATOR SWITCH	3-35
CLIMATE CONTROLS	3-36
MANUAL TEMPERATURE CONTROL	3-37
AUTOMATIC TEMPERATURE CONTROL (ATC)	3-38
OVERHEAD CONTROLS	
SWITCH PANEL WORKLIGHTS	3-39
RADIO (where fitted)	3-39
INTERIOR LIGHT	3-41
INSTRUMENT CLUSTER	
ANALOGUE/ DIGITAL INSTRUMENT CLUSTER	3-42
GAUGES	3-42
INDICATOR AND WARNING LIGHTS	3-43
DISPLAYS	3-45
KEYPAD ENHANCED	3-48
SELECTING OR CHANGING THE DISPLAY SETTINGS	3-50
GROUND SPEED CALIBRATION	3-51
PERFORMANCE MONITOR	3-56
ALARM FUNCTIONS	3-64
ACCESSING STORED ERROR CODES	3-66
WARNING AND ADVISORY SYMBOLS	3-67

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

TRACTOR REFUELLING	4-1
--------------------------	-----

STARTING THE UNIT

STARTING THE ENGINE	4-3
GRID HEATER COLD START AID (where fitted)	4-5
FUEL HEATER (where fitted)	4-5
COOLANT IMMERSION HEATER (where fitted)	4-6
TRANSMISSION OIL HEATER (where fitted).....	4-6
BOOSTING THE BATTERY	4-7

STOPPING THE UNIT

STOPPING THE ENGINE.....	4-8
AUTOMATIC ENGINE SHUTDOWN	4-8
AUTOMATIC ENGINE SHUTDOWN WITH ENHANCED KEYPAD (where fitted)	4-9

MOVING THE UNIT

OPERATING IN COLD TEMPERATURES	4-10
LOW IDLE SPEED MANAGEMENT	4-11

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

CARRYING THE TRACTOR ON A TRANSPORTER	5-1
SECURE THE HIGH VISIBILITY ROOF PANEL	5-1

RECOVERY TRANSPORT

TOWING THE TRACTOR	5-2
--------------------------	-----

6 WORKING OPERATIONS

GENERAL INFORMATION

VARIABLE ENGINE POWER MANAGEMENT	6-1
CONSTANT ENGINE SPEED	6-3
DIFFERENTIAL LOCK	6-5
FOUR WHEEL DRIVE	6-7
FRONT AXLE SUSPENSION (where fitted)	6-9
AUTOMATED HEADLAND FUNCTIONS	6-10
QUICK GUIDE.....	6-10
EXPLANATION OF SYMBOLS.....	6-12
RECORDING AND RE-PLAYING	6-13
RECORDING A SEQUENCE	6-15
RE-PLAYING A SEQUENCE.....	6-17

TRANSMISSION

SHUTTLE LEVER	6-19
---------------------	------

DUAL COMMAND TRANSMISSION	6-20
TRANSMISSION CONTROLS	6-20
CREEPER GEARS (where fitted)	6-21
ERROR CODES	6-22
ELECTRO COMMAND TRANSMISSION	6-23
TRANSMISSION OPERATION	6-23
TRANSMISSION DISPLAY	6-25
SHUTTLE MODE	6-26
DRIVING THE TRACTOR	6-28
AUTO TAKE OFF	6-29
SPEED MATCHING	6-31
AUTO SHIFT FUNCTION	6-32
AUTO SHIFTING IN FIELD MODE	6-32
AUTO SHIFTING IN ROAD MODE	6-37
CREEPER GEARS (where fitted)	6-39
ERROR CODES	6-40
REAR POWER TAKE-OFF	
P.T.O. OPERATING PRECAUTIONS	6-41
CHANGING THE P.T.O. OUTPUT SHAFT	6-41
ATTACHING P.T.O. DRIVEN EQUIPMENT	6-42
P.T.O. OPERATION	6-43
THREE-SPEED P.T.O. SYSTEM	6-48
GROUND DRIVE P.T.O. (where fitted)	6-49
EXTERNAL P.T.O. CONTROLS	6-50
AUTO P.T.O. OPERATION	6-52
FRONT POWER TAKE OFF	
P.T.O. OPERATION	6-54
REAR HITCH	
ELECTRONIC DRAFT CONTROL	6-56
ELECTRONIC DRAFT CONTROL OPERATION	6-60
EXTERNAL HITCH CONTROLS	6-65
FRONT HITCH	
SETTINGS AND ADJUSTMENTS	6-67
HITCH OPERATION	6-70
AUXILIARY FRONT COUPLERS (where fitted)	6-73
EXTERNAL HITCH CONTROLS	6-74
HYDRAULIC REMOTE CONTROL VALVES	
REMOTE CONTROL VALVES	6-75
CONNECTING REMOTE CYLINDERS	6-79
OPERATING WITH REMOTE VALVES	6-81
JOYSTICK OPERATION WITH A FRONT LOADER	6-84
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT	6-85
ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)	
REMOTE CONTROL VALVES	6-87
SETTINGS AND ADJUSTMENTS	6-89
CREATING TIMER PROGRAMMES	6-91

CONNECTING REMOTE CYLINDERS	6-96
OPERATING WITH REMOTE VALVES	6-98
EXTERNAL EHR CONTROLS	6-100
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT	6-101

HYDRAULIC POWER BEYOND PORT

HYDRAULIC POWER BEYOND FOR EXTERNAL SERVICES	6-103
--	-------

THREE POINT HITCH

ATTACHING THREE-POINT HITCH EQUIPMENT	6-106
LIFT ROD ADJUSTMENT	6-108
TOP LINK ADJUSTMENT	6-110
FLEXIBLE LINK END ADJUSTMENT	6-111
QUICK HITCH	6-112
LINKAGE STABILISER ADJUSTMENT	6-114

DRAWBARS AND TOWING ATTACHMENTS

DRAWBARS AND TOWING ATTACHMENTS	6-117
SWINGING DRAWBARS	6-120
AUTOMATIC PICK-UP HITCH	6-123
REAR TOW HITCH	6-125

TRAILER BRAKING SYSTEMS

AIR-OPERATED TRAILER BRAKES	6-131
AIR-OPERATED TRAILER BRAKES (Italy only)	6-134
TRAILER BRAKE BIAS CONTROL	6-135
AUXILIARY AIR SUPPLY CONNECTOR (where fitted)	6-135
HYDRAULIC TRAILER BRAKES	6-136
HYDRAULIC TRAILER BRAKES (Italy only)	6-137

WHEEL TRACK ADJUSTMENT

FRONT WHEEL TRACK ADJUSTMENT	6-138
FRONT WHEEL ALIGNMENT	6-141
STEERING STOPS	6-142
FRONT AXLE OSCILLATION STOPS	6-142
FRONT FENDER	6-143
REAR WHEEL TRACK ADJUSTMENT	6-145
FLANGE TYPE AXLE (where fitted)	6-145
BAR TYPE AXLE (where fitted)	6-149

BALLASTING AND TYRES

BALLASTING AND TYRES	6-153
IRON WEIGHTS (where fitted)	6-156
LIQUID BALLAST	6-159
TYRE INFLATION	6-161
TYRE PRESSURES AND PERMISSIBLE LOADS	6-162

AUXILIARY POWER CONNECTIONS

DIAGNOSTIC SOCKET	6-164
TRAILER SOCKET ELECTRICAL	6-164

ELECTRICAL POWER CONNECTORS	6-165
INTERNAL POWER CONNECTORS	6-165
EXTERNAL POWER CONNECTORS	6-167

7 MAINTENANCE

GENERAL INFORMATION

INTRODUCTION	7-1
FUEL REQUIREMENT	7-2
BIODIESEL FUEL	7-4
ENGINE OIL CHANGE	7-5
PROTECTIVE DEVICES	7-6
LUBRICANTS AND COOLANTS	7-8
TRACTOR JACKING POINTS	7-10
GENERAL SPECIFICATIONS	7-10
CAPACITIES	7-11

MAINTENANCE CHART

Maintenance Chart	7-12
-------------------------	------

WHEN THE WARNING LAMP LIGHTS

CHANGE ENGINE AIR CLEANER OUTER ELEMENT	7-14
DRAIN FUEL SYSTEM WATER SEPARATOR	7-15
CHECK BRAKE FLUID LEVEL	7-16

EVERY 10 HOURS OR EACH DAY

CHECK ENGINE COOLANT LEVEL	7-17
CHECK ENGINE OIL LEVEL	7-18
CHECK REMOTE CONTROL VALVE DRAIN BOTTLES	7-18
CHECK WINDSCREEN WASHER RESERVOIR	7-19
DRAIN AIR RESERVOIR ON AIR OPERATED TRAILER BRAKE	7-19

FIRST 50 HOURS

SERVICE OPERATIONS	7-20
--------------------------	------

EVERY 50 HOURS

CLEAN CAB AIR FILTER	7-21
CLEAN COOLER SECTION	7-23
ALL GREASE FITTINGS	7-24
CHECK FRONT AND REAR WHEEL NUTS	7-29
CHECK TYRE PRESSURES AND TYRE CONDITION	7-29

EVERY 100 HOURS

INSPECT POLY V-BELT	7-30
INSPECT COMPRESSOR DRIVE BELT	7-30

EVERY 300 HOURS

CHECK BATTERY FLUID LEVEL	7-32
ADJUST HANDBRAKE	7-34
CHECK TRANSMISSION/REAR AXLE AND HYDRAULIC OIL LEVEL	7-34

CHECK 4WD FRONT AXLE DIFFERENTIAL AND HUBS OIL LEVEL	7-35
CHECK FRONT P.T.O. GEARBOX OIL LEVEL	7-35

EVERY 600 HOURS

CHANGE ENGINE OIL AND FILTER	7-36
CHANGE FUEL PRE-FILTER AND FUEL FILTER ELEMENT	7-38
CHANGE ENGINE AIR CLEANER OUTER ELEMENT	7-39
CHANGE CHARGE PUMP OIL FILTER	7-40
CHECK ENGINE AIR INTAKE CONNECTIONS	7-41
CHECK TRANSMISSION OIL COOLER PIPE COUPLINGS	7-42
CLEAN DEF/ AdBlue INLINE FILTER	7-42

EVERY 1200 HOURS OR ANNUALLY

CHANGE CAB AIR FILTERS	7-43
CHANGE MAIN OIL FILTER CARTRIDGE	7-44
CHANGE TRANSMISSION/ REAR AXLE AND HYDRAULIC OIL	7-45
CHANGE 4WD DIFFERENTIAL OIL	7-46
CHANGE 4WD PLANETARY HUB OIL	7-47
CHANGE FRONT P.T.O. GEARBOX OIL	7-47
GREASE REAR AXLE SHAFT BEARING	7-48

EVERY 1200 HOURS OR EVERY 2 YEARS

CHECK BATTERY FLUID LEVEL	7-49
CHANGE ENGINE AIR CLEANER INNER ELEMENT	7-51
CHANGE ENGINE BREATHER FILTER	7-52
CHECK VALVE TAPPET CLEARANCE	7-52
CHANGE DEF/ AdBlue INLINE FILTER	7-52
CHANGE ENGINE COOLANT FLUID	7-53
CHANGE AIR BRAKE DRIER RESERVOIR	7-57
CHANGE POLY V-BELTS	7-58

EVERY 3600 HOURS OR EVERY 2 YEARS

CHANGE DEF/ AdBlue MAIN FILTER	7-60
--------------------------------------	------

EVERY 36 MONTHS

SERVICE AIR CONDITIONER SYSTEM	7-61
CHECK BATTERY FLUID LEVEL	7-62

GENERAL MAINTENANCE

CLEANING THE TRACTOR	7-64
FUEL SYSTEM PRE- FILTER AND WATER TRAP	7-66
BLEEDING FUEL INJECTION SYSTEM	7-66
CHECK BRAKE PEDAL LATCHING/UNLATCHING	7-67
ADJUST CAB SUSPENSION (where fitted)	7-68
ADJUST AUTOMATIC PICK- UP HITCH	7-69
HEADLIGHT AND WORKLAMP ADJUSTMENT	7-70
BULB REPLACEMENT	7-71
FUSES AND RELAYS	7-75
PROTECTING ELECTRONIC AND ELECTRICAL SYSTEMS DURING BATTERY CHARGING OR WELDING	7-80
BATTERY REMOVAL AND INSTALLATION	7-81

STORAGE

TRACTOR STORAGE.....	7-83
PREPARATION FOR USE AFTER STORAGE	7-83

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

INTRODUCTION	8-1
--------------------	-----

ALARM(S)

FAULT CODES AND SYMBOLS	8-2
-------------------------------	-----

SYMPTOM(S)

ENGINE	8-4
TRANSMISSION	8-5
HYDRAULICS	8-5
THREE POINT HITCH	8-6
BRAKES.....	8-6
CAB.....	8-6
ELECTRICAL SYSTEM	8-7

9 SPECIFICATIONS

GENERAL DIMENSIONS	9-1
MINIMUM TURN RADIUS.....	9-3
AXLE DIMENSION	9-4
MAXIMUM OPERATING ANGLE	9-5
MAXIMUM OPERATING WEIGHTS	9-5
TRACTOR WEIGHTS	9-6
CAPACITIES	9-7
ENGINE	9-8
FUEL SYSTEM.....	9-9
AIR CLEANER SYSTEM	9-10
COOLING SYSTEM.....	9-10
TRANSMISSION	9-11
REAR POWER TAKE-OFF.....	9-12
FRONT POWER TAKE OFF	9-12
THREE POINT HITCH	9-14
THREE POINT HITCH FRONT	9-15
HYDRAULIC SYSTEM	9-15
REMOTE CONTROL VALVES	9-16
FRONT REMOTE VALVE COUPLERS	9-16
BRAKES.....	9-18
STEERING	9-18
ELECTRICAL EQUIPMENT.....	9-20
GROUND SPEED CHART	9-21
MINIMUM HARDWARE TIGHTENING TORQUES	9-25

10 ACCESSORIES


EXTERNAL REAR VIEW MIRRORS.....	10-1
AUXILIARY HEADLIGHTS	10-2

ROTATING BEACON..... 10-3

11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy 11-1

 Service record 1st 50 hour, Dealer copy 11-3



1 - GENERAL INFORMATION
CE DECLARATION OF CONFORMITY

Table with multiple columns for different languages: BG, CZ, DA, DE, EL, EN, ES, ET, FI, FR, HU, IT, LT, LV, NL, NO, PL, PT, RO, SK, SL, SV, TR. Each column contains the declaration text in that language, including manufacturer information (CNH Europe Holding SA) and technical specifications.

SS10J190 1

Here above is provided a copy of the "EC" Declaration of Conformity (EC Declaration of Conformity acc to 2006/42/EC).
The EC Declaration of Conformity is the manufacturer's declaration about equipment compliance to relevant EU provisions.
Please keep the original document in a safe place. Local authorities may require you to show this document in order to assure compliance of your equipment.
Translation of this declaration in your own country language is provided on the original document.

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes.

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Guiseppe Gavioli CNH Europe Holding S.A. 13, Rue Aldringen L- 1118 Luxembourg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6]
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorised person: [8]

HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- ROPS PROTECTION is certified according to **EN 15694**.
- FOPS level on your tractor cab is certified according to **OECD Code 10**.
- HVAC (Heating, ventilation Air Conditioning) CAB is certified Category 1 according to **EN 15695-1**.
- HV (Heating, ventilation) cab is certified Category 1 according to **EN 15695-1**.
- NOISE EMISSION LEVELS are rated according to **77/311/EC**.
- VIBRATION LEVELS are rated according to **78/764/EEC**.

NOTE: See safety section 2 in this manual for further explanation and details on above mentioned standards and specific terminology.

METRIC AND IMPERIAL UNITS ABBREVIATIONS

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m²	square foot	ft²
	square millimeter	mm²	square inch	in²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency - Rotational				
	revolution per minute	r/min	revolution per minute	r/min^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	μm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per Mass				
	milligram per kilogram	mg/ kg		
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH₂O
	megapascal	MPa	pound per square inch	psi

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com