

OPERATOR'S MANUAL

T8.275

T8.300


T8.330

T8.360

T8.390

Tractor

from PIN ZBRC07000 and after

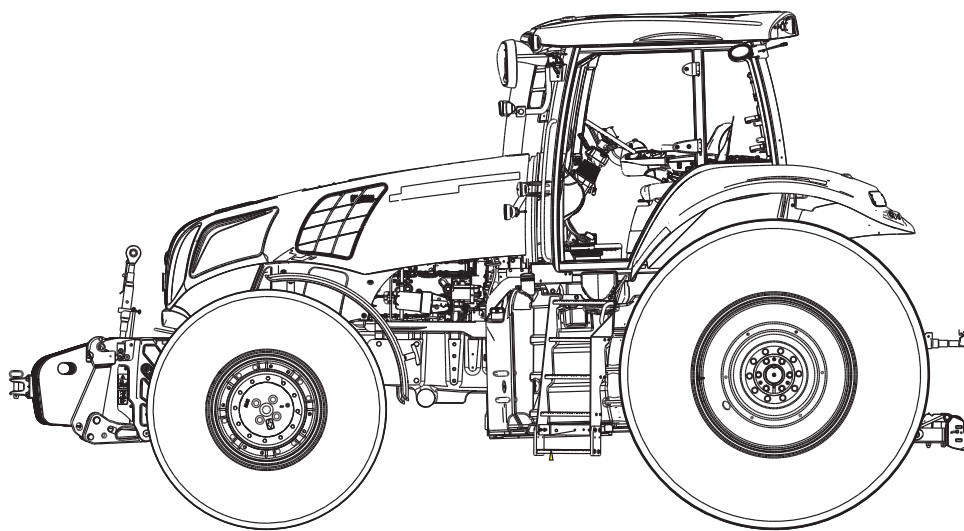

Part number 84516838

1st edition English
September 2011



Contents

1 GENERAL INFORMATION

Your tractor	1-1
Tractor intended use.....	1-2
Manual storage	1-3
Product identification	1-4
Machine orientation.....	1-6
Component location	1-7

2 SAFETY INFORMATION

Safety rules and signal word definitions	2-1
Read the Operators Manual	2-2
Safety rules - General	2-2
Safety rules - Air conditioning system	2-3
Safety rules - Basic operating	2-3
Safety rules - Battery	2-4
Safety rules - Driving on public roads	2-4
Safety rules - Electrical storm safety	2-5
Safety rules - Fire prevention	2-5
Safety rules - General maintenance	2-5
Safety rules - Hazardous chemicals	2-7
Safety rules - Implements, tools and trailers	2-7
Safety rules - Instructional seat	2-8
Safety rules - Mounting and dismounting	2-8
Safety rules - Operator presence system	2-8
Safety rules - PTO operation	2-8
Safety rules - Roll over and tip over	2-9
Safety rules - Utility power lines	2-9
Safety rules - Vehicle vibration	2-10
Safety rules - Wheels and tires	2-10
Roll over protective structure (ROPS).....	2-12
Emergency exit	2-13
Safety decals	2-14
Ecology and the environment	2-24

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Tractor access.....	3-1
---------------------	-----

OPERATOR'S SEAT

Overview	3-2
Control identification.....	3-3

INSTRUCTOR'S SEAT

Overview	3-6
----------------	-----

FORWARD CONTROLS

Steering column	3-7
Front console	3-10
Pedal controls	3-12

LEFT-HAND SIDE CONTROLS

Pneumatic trailer brake	3-14
-------------------------------	------

RIGHT-HAND SIDE CONTROLS

Armrest console	3-15
Multi function handle	3-16
Hand throttle lever	3-19
Control panel	3-20
Remote valve controls	3-28
Joystick	3-29
Rear hitch controls	3-31
Armrest compartment	3-33
Adjusting the armrest console	3-35

REARWARD CONTROLS

Fender console	3-36
Automatic temperature controls	3-39
Automatic temperature control system	3-42
Ventilation	3-43

OVERHEAD CONTROLS

Interior lamps	3-45
----------------------	------

EXTERIOR CONTROLS

Rear fender controls	3-46
Front hitch	3-47

INSTRUMENT CLUSTER

Overview	3-48
Gauges	3-48
Status and warning icons	3-50
Upper display	3-53
Lower display	3-55
Keypad	3-57
Setup menu	3-59
Adjust menu	3-65
Performance instrumentation	3-72

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Before starting the engine	4-1
----------------------------------	-----

STARTING THE UNIT

Normal engine starting	4-3
Cold starting aids	4-7
Cold temperature operation	4-9

STOPPING THE UNIT

Stopping the engine	4-11
---------------------------	------

MOVING THE UNIT

Powershift transmission	4-12
Best practices for prolonged transmission life	4-13
Inching pedal and throttle	4-14
Transmission controls	4-15
Upper display	4-18
Driving the vehicle	4-20
Setting default gears	4-25
Ground speed management (GSM)	4-27
Mechanical front drive (MFD)	4-34
Differential lock system	4-38
Suspended axle	4-41
Ride control	4-49
Constant engine speed	4-51
Headland management system	4-53

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Tractor warning lamps and SMV symbol	5-1
Wide transport marker light	5-2
Tractor warning lamps	5-4
Safe transport speed	5-5
Implement warning lamps and SMV symbol	5-6
Safety chain	5-7

SHIPPING TRANSPORT

Securing the tractor for shipping	5-8
---	-----

RECOVERY TRANSPORT

Safety rules	5-9
Towing the tractor	5-10

6 WORKING OPERATIONS

GENERAL INFORMATION

Product overview	6-1
------------------------	-----

REAR PTO

Safety rules	6-2
Connecting the PTO	6-5
Connecting the PTO	6-6
Interchangeable PTO shaft	6-7
Reversible PTO shaft	6-13
Rear PTO operation	6-15
PTO fender switch operation	6-19
Auto PTO operation	6-20

FRONT PTO

Overview	6-23
Front PTO operation	6-24

REAR HITCH

Identification	6-27
Link adjustment	6-28
Hitch high clearance adjustment	6-32
Hydraulic links	6-35
Sway limiter adjustment	6-37
Lower link block adjustment	6-38
Mechanical float adjustment	6-39
Hitch quick coupler - Category III/IIIN	6-40
Hitch quick coupler - Category IVN	6-45
Hitch operation	6-49
Hitch remote switch operation	6-54
Position control operation	6-55
Load control operation	6-57
Slip control operation	6-59
Hitch set point	6-61

FRONT HITCH

Overview	6-63
Front hitch operation	6-63

DRAWBARS AND TOWING ATTACHMENTS

Rear towing - Safety rules	6-71
Drawbar capacity/position	6-72
Adjusting the drawbar	6-76

AUXILIARY POWER CONNECTIONS

Cab power connections	6-78
-----------------------------	------

HYDRAULIC REMOTE CONTROL VALVES

Valve couplers and connections	6-80
Motor return circuit	6-83
Power beyond circuit	6-84
Flow capacity	6-84
Hydraulic transport lock	6-86
Operating the controls	6-87
Remote valve display screens.....	6-91
Remote hydraulic auto mode.....	6-95
Auto depth control	6-97
Joystick operation	6-99

BALLASTING THE TRACTOR

Guidelines	6-103
Tire load and inflation charts	6-108
Weights, cast metal and liquid.....	6-120
Wheel slip and power hop performance	6-132

MECHANICAL FRONT DRIVE (MFD) AXLES

Tire combinations and tread positions.....	6-135
Steering and oscillation stops	6-142
Tread and fender settings - standard MFD axles.....	6-145
Tread and fender settings - heavy duty MFD axles	6-150
Tread and fender settings - heavy duty class 5 MFD axles	6-162
Tread and fender settings - heavy duty class 5 suspended MFD axles.....	6-175
Tread and fender settings - scissors suspension MFD axles	6-187

REAR AXLE

Rear wheel installation	6-199
Rear wheel tread settings	6-202

7 MAINTENANCE

GENERAL INFORMATION

Safety rules	7-1
Opening the hood	7-2
Closing the hood	7-4
Filling the fuel tank	7-5
Battery disconnect switch	7-6
Battery access and service.....	7-7
Tire and rim service.....	7-9
Tractor jacking points.....	7-11
Capacities	7-13
Consumables - Engine oil	7-15
Consumables - Engine oil	7-17
Consumables - Diesel fuel	7-19
Consumables - Coolant solutions	7-20

Electrical component location	7-21
Lamps and bulbs	7-26
Maintenance chart notes	7-27

MAINTENANCE CHART

Maintenance Chart	7-28
-------------------------	------

At warning message display

Air filter service icon/message.....	7-30
Fuel filter water separator	7-31
Transmission oil filter switch.....	7-32
Hydraulic oil filter switch.....	7-35

First 10 to 50 hours

Differential and planetary oil.....	7-38
Wheel bolt torque.....	7-38
Weight bolt torque	7-38

Every 10 hours or daily

Engine oil level	7-39
Transmission oil level.....	7-40
Engine coolant level	7-41
Engine auxiliary fuel filter	7-42
Air reservoir.....	7-43
Rear hitch and front axle	7-44

Every 50 hours or weekly

Engine fuel pre-filter	7-45
------------------------------	------

Every 100 hours

Front hitch	7-46
Front PTO drive shaft.....	7-48

Every 300 hours

Battery water level (Note E)	7-49
Engine air intake hoses.....	7-51
Engine coolant level - deaeration tank	7-53
Wheel bolt torque.....	7-54
Weight bolt torque	7-54
Front axle (Note A)	7-55
Rear hitch (Note A)	7-64
Fuel tank	7-66
Differential and planetary oil level (Note B).....	7-67
Transmission oil pressure	7-69
Front PTO oil level.....	7-70

Every 400 hours

Cab air filter	7-71
----------------------	------

Every 600 hours

Engine oil and filter	7-74
Engine coolant antifreeze protection	7-76
Engine coolant hoses and clamps	7-76
Engine primary fuel filter	7-79
Engine fuel pre-filter	7-82
Fuel system bleeding	7-85
Changeable PTO internal splines	7-87
Front PTO oil and filter	7-88

Every 1000 hours or annually

Pneumatic brake system dryer	7-89
------------------------------------	------

Every 1200 hours or annually

Differential and planetary oil	7-89
Engine air filters	7-94
Engine air precleaner	7-98

Every 1500 hours

Transmission oil	7-100
Transmission oil filter	7-102
Regulated transmission filter	7-103
Engine crankcase filter	7-104

Every 2000 hours

Engine coolant	7-108
Engine valve adjustment (Note C)	7-110

Every 3000 hours

Engine vibration damper (Note C)	7-111
Emergency steering system	7-112

Every 5000 hours

Fuel injector nozzles (Note C)	7-113
--------------------------------------	-------

As required

Vehicle fire prevention	7-114
Engine primary air filter	7-115
Grille screen and radiator area	7-118
Fuel tank vent filter	7-120
Transmission clutch and accumulator	7-120

Tire pressure	7-120
Fan belt	7-121
Cab suspension, if equipped	7-124
Remote valve collection bottle.....	7-125
Engine auxiliary fuel filter	7-126
Cab fabric and carpet.....	7-128
Seat belt	7-128

STORAGE

Tractor storage	7-129
Removal from storage	7-130

ELECTRICAL SYSTEM

Radio or audio system.....	7-131
Battery removal and installation	7-132
Auxiliary battery connections	7-134
Head light - Replace	7-135
Grille work light	7-139
Fender tail light and warning light	7-141
Roof warning light	7-143
Roof work light.....	7-145
Belt line, roof or fender work light	7-147
High intensity work light	7-149
Wide transport marker light.....	7-151
Rotating beacon light	7-152
Interior light - Replace	7-153

8 TROUBLESHOOTING

ALARM(S)

Display warnings overview	8-1
Display warnings - Level 1	8-2
Display warnings - Level 2	8-5
Display warnings - Level 3	8-8
Display warnings - Level 4	8-10

SYMPTOM(S)

Engine symptoms	8-12
Transmission symptoms.....	8-14
Hydraulic symptoms	8-15
Hitch symptoms	8-16
Brake symptoms.....	8-17
Cab environment symptoms.....	8-18
Electrical power system symptoms.....	8-19

9 SPECIFICATIONS

Engine specifications	9-1
Power train specifications	9-2
Operating speeds.....	9-5
Vehicle dimensions and shipping weight	9-13
Maximum operating weight.....	9-16

10 ACCESSORIES

Front wheel fenders - Dynamic fenders	10-1
Farming system displays	10-8
Chemical tank mounting.....	10-9
Loader connection and operation	10-11
Trailer brake connections.....	10-12
General accessories.....	10-14

11 FORMS AND DECLARATIONS

Delivery report - owner copy	11-1
Delivery report - dealer copy	11-2
First service - owner copy	11-4
First service - dealer copy	11-6

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com