

OPERATOR'S MANUAL

T9.390

T9.450

T9.505

T9.560


T9.615

T9.670

Tier 4

Tractor

From PIN ZCF200001 and above

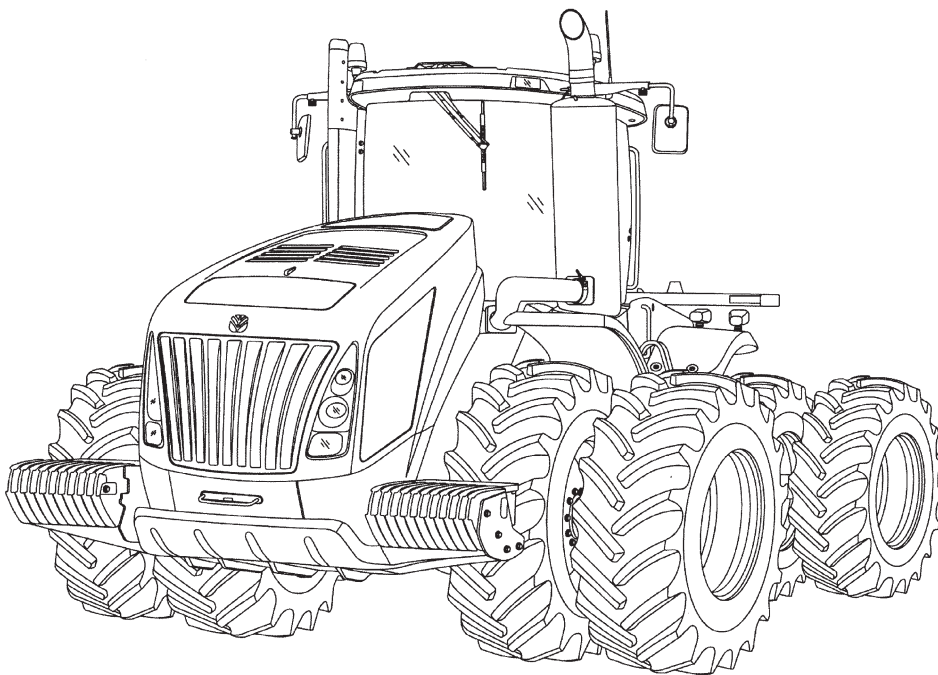

Part number 84548094

1st edition English

December 2011



Contents

1 GENERAL INFORMATION

Read the Operators Manual	1-1
Proposition 65	1-1
Emissions warranty	1-2
Electro-Magnetic Compatibility (EMC)	1-4
CNH America LLC technical manuals	1-5
Your tractor	1-6
Note to the Owner	1-7
Tractor intended use	1-8
Manual storage	1-9
Product identification	1-10
Machine orientation	1-14
Component location	1-16

2 SAFETY INFORMATION

Safety rules and signal word definitions	2-1
Safety rules - General	2-2
Safety rules - Mounting and dismounting	2-3
Safety rules - Implements, tools and trailers	2-3
Safety rules - Instructional seat	2-4
Safety rules - Wheels and tires	2-4
Safety rules - Fire prevention	2-5
Safety rules - PTO operation	2-6
Safety rules - General maintenance	2-7
Safety rules - Battery	2-8
Safety rules - Basic operating	2-9
Safety rules - Hazardous chemicals	2-10
Safety rules - Air conditioning system	2-10
Safety rules - Operator presence system	2-10
Safety rules - Roll over and tip over	2-11
Safety rules - Electrical storm safety	2-11
Safety rules - Driving on public roads	2-12
Safety rules - Utility power lines	2-13
Safety rules - Hydraulic system safety	2-14
FRAME - Foreword - Ecology and the environment	2-15
ROPS and FOPS	2-16
Emergency exit	2-17
Safety signs	2-18
Articulation cylinder locking blocks	2-26
DEF/AdBlue® safety signs	2-27

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Tractor access	3-1
----------------------	-----

OPERATOR'S SEAT

Overview	3-3
Control identification	3-4

INSTRUCTOR'S SEAT

Overview	3-7
----------------	-----

FORWARD CONTROLS

Steering column	3-9
Front console	3-12
Pedal controls	3-13
Ventilation	3-15
Front sun shade	3-15

RIGHT-HAND SIDE CONTROLS

Armrest console	3-16
Multi-function handle	3-17
Throttle control	3-21
Control panel	3-22
Remote valve controls	3-27
Joystick	3-28
Armrest compartment	3-29
Hitch controls	3-31
Adjusting the armrest console	3-32

REARWARD CONTROLS

Rear sun shade	3-33
----------------------	------

OVERHEAD CONTROLS

Overview	3-34
Automatic temperature controls	3-36
Automatic temperature control system	3-40
Center panel controls	3-42
Radio (if equipped)	3-46
Interior and access lights	3-47

EXTERIOR CONTROLS

Exterior hitch control	3-49
------------------------------	------

INSTRUMENT CLUSTER

Overview	3-50
Gauges	3-50
Status and warning icons	3-51
Upper display	3-54
DEF/AdBlue® level	3-55
Lower display	3-56
Keypad	3-58
Instrumentation - setup menu	3-60

Instrumentation - adjust menu	3-67
Performance instrumentation.....	3-74

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Before starting the engine	4-1
----------------------------------	-----

STARTING THE UNIT

Normal engine starting	4-5
Cold temperature operation	4-7

STOPPING THE UNIT

Stopping the engine	4-9
---------------------------	-----

MOVING THE UNIT

Powershift transmission	4-10
Selective catalytic reduction (SCR) system	4-18
SCR inducement strategy - 2011	4-19
SCR inducement strategy - 2012.....	4-23
Ground speed management (GSM)	4-26
Differential lock system	4-35
Constant engine speed	4-36
Headland management system	4-39
Engine compression brake (if equipped)	4-49

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Tractor warning lamps and SMV symbol	5-1
Wide transport marker light.....	5-2
Operating the tractor warning lamps	5-3
Safe transport speed	5-4
Implement warning lamps and SMV symbol	5-4
Safety chain	5-5

SHIPPING TRANSPORT

Securing the tractor for shipping	5-6
---	-----

RECOVERY TRANSPORT

Safety rules.....	5-7
Towing the tractor.....	5-8

6 WORKING OPERATIONS

GENERAL INFORMATION

Product overview	6-1
------------------------	-----

REAR PTO

Safety rules	6-2
Connecting the PTO	6-4
PTO operation	6-5

THREE POINT HITCH

Identification	6-8
Link adjustment	6-9
Sway block adjustment	6-12
Mechanical float adjustment	6-13
Hitch quick coupler - Category IVN	6-14
Transport lock	6-18
Hitch operation	6-19
Rear remote hitch switch	6-24
Position control operation	6-25
Slip control operation	6-27

DRAWBARS AND TOWING ATTACHMENTS

Safety rules	6-28
Rear towing - Capacities	6-28
Scraper operation	6-32

TRAILER BRAKE COUPLER

Safety rules	6-33
Trailer brake connections	6-33

AUXILIARY POWER CONNECTIONS

External power and lighting connections	6-34
Cab power connections	6-36

HYDRAULIC REMOTE CONTROL VALVES

Valve couplers and connections	6-39
Optional circuits	6-46
Hydraulic remote valve transport lock	6-47
Operating the controls	6-48
Remote valve display screens	6-52
Joystick operation	6-55
Auto auxiliary mode operation	6-59
Auto depth control operation	6-62

BALLASTING THE TRACTOR

Guidelines	6-65
Weights, cast metal and liquid Front Ballast	6-69

Wheel slip and power hop	6-75
--------------------------------	------

FRONT AND REAR AXLE

Tire safety	6-76
Pressure and load ratings	6-77
Wheel installation	6-84
Wheel tread settings	6-90

7 MAINTENANCE

GENERAL INFORMATION

Safety rules	7-1
Engine hood	7-2
Removing the engine side shields	7-3
Opening the right hand service door	7-4
Power cut-off switch (if equipped)	7-4
Filling the fuel tank	7-6
Fuel tank capacity	7-7
Filling the DEF/AdBlue® tank	7-8
DEF/AdBlue® tank capacity	7-9
Tire and rim service	7-10
Tractor jacking points	7-12
Capacities	7-14
Consumables - Engine oil	7-15
Consumables - Diesel fuel	7-17
Consumables - Biodiesel fuels	7-18
Consumables - Diesel exhaust fluid (DEF)/AdBlue®	7-20
Consumables - Coolant solutions	7-22
Electrical specifications and service	7-23
Fuse and relay locations	7-25
Maintenance chart notes	7-33

MAINTENANCE CHART

Maintenance Chart	7-34
-------------------------	------

AT WARNING MESSAGE DISPLAY

Air cleaner	7-36
Primary fuel filter	7-37

EVERY 10 HOURS OR EACH DAY

Engine oil level	7-38
Wheel bolt torque	7-38
Wheel weight bolt torque	7-38
Transmission oil level	7-39
Hydraulic/axle oil level	7-40
Engine coolant level	7-41
Fuel level	7-42
General tractor inspection (see Note 1)	7-43

EVERY 50 HOURS

Fuel tank and fuel filter	7-44
Articulation hinge - upper front	7-46
Oscillation hinge - rear	7-46
Articulation hinge - lower	7-46
Articulation cylinder - front, left hand, right hand	7-47
Articulation cylinder - rear, left hand and right hand	7-47
Hitch cylinder pin - upper, left hand and right hand	7-48
Hitch cylinder pin - lower, left hand and right hand	7-48
Hitch rockshaft - left hand and right hand	7-49
Hitch lift links and top link	7-49

EVERY 250 HOURS

Cab air filter, outside (see Note 2)	7-50
Cab recirculation filter	7-51
Windshield washer fluid level	7-52
Driveshaft carrier bearing	7-52

EVERY 500 HOURS

Air tubing - engine	7-53
Alternator - water pump belt	7-53
Battery electrolyte level	7-54
PTO carrier bearing	7-55
PTO slip joint	7-56
Radiator and coolers	7-57

EVERY 600 HOURS

Engine oil and filter (see note 5)	7-59
Engine fuel filter (see note 6)	7-62
Engine fuel pre-filter	7-66
DEF/AdBlue® in-line filter	7-71
Fuel tank vent (see note 8)	7-73

EVERY 1200 HOURS

Engine crankcase breather filter	7-74
DEF/AdBlue® supply module filters	7-76

EVERY 1500 HOURS

Engine air tubing	7-81
Engine air filters (see Note 3)	7-82
Hydraulic oil and filters (see note 6)	7-88
Hydraulic reservoir breather	7-90
Transmission oil and filter (see note 6)	7-91
Transmission vent	7-92
Cab air filter, outside (see Note 2)	7-93
Door lock and hinges (see Note 4)	7-94

EVERY 2000 HOURS OR 2 YEARS

Engine coolant drain and flush	7-95
--------------------------------------	------

AS REQUIRED

Vehicle fire prevention	7-98
Pressure cooling system hoses	7-99
Hydraulic system hoses	7-99
Tire pressure	7-99
Engine fan belt	7-99
Viscous fan drive	7-100
Cab fabric and carpet.....	7-101
Seat belt	7-101

STORAGE

Placing in storage	7-102
Removing from storage.....	7-102

ELECTRICAL SYSTEM

Battery removal and installation	7-103
Auxiliary battery connections	7-104
Hood lamp replacement	7-106
Flood and work lamp replacement	7-111
Fender tail lamp and warning lamp replacement	7-116
Cab roof warning lamp replacement	7-119
Wide transport marker lamp replacement	7-121
Rotating beacon lamp replacement	7-121
Interior lights lamp replacement	7-122

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

Fault code retrieval	8-1
----------------------------	-----

ALARM(S)


Display warnings	8-4
------------------------	-----

9 SPECIFICATIONS

Engine specifications	9-1
Power train and hydraulics	9-3
Speed charts	9-6
Vehicle dimensions and shipping weight	9-9
Maximum tractor operating weights	9-11

10 ACCESSORIES

Farming system Monitor - Install	10-1
Chemical tank mounting	10-2
General accessories.....	10-5

 

1 - GENERAL INFORMATION

Read the Operators Manual



Improper operation of this vehicle can cause death or serious injury. Before using the vehicle, make certain that every operator:

- Is instructed in safe and proper use of the machine.
- Reads and understands the manual(s) pertaining to the machine.
- Reads and understands all safety decals on the machine.

- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow CNH America LLC instructions on machine operation and maintenance.

Proposition 65

**CALIFORNIA
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery post, terminals and related accessories contain lead and lead compounds.

Wash hands after handling

BT09A213 1

Emissions warranty

U.S. EPA and California Emissions Control Warranty Statement

NEW HOLLAND AGRICULTURE warrants to the ultimate purchaser and each subsequent purchaser that the engine is designed, built and equipped so as to conform with U.S. Environmental Protection Agency regulations applicable at the time of manufacture and that it is free from defects in workmanship or material which would cause it not to meet these regulations for a period of:

- 2 years or 1,500 hours of operation, whichever occurs first, for engines less than 19kW/25HP
- 5 years or 3,000 hours of operation, whichever occurs first, for engines greater than or equal to 19kW/25HP

NOTE: *This warranty applies to all units operated in the United States or Canada.*

Coverage

The model year, class of diesel engine, and emission application determination for your engine are identified on the Emission Control Information Label. This label is affixed to one of the following areas of the engine: the top of engine's rocker arm cover, the right-hand side of the oil pan, and the right-hand side of the engine front gear cover. The warranty period begins on the date the new equipment is sold to the first retail purchaser. The presence of the emission control label is the indication that the engine conforms to the applicable standards. Any emission control system parts which are proven defective during normal use will be repaired or replaced during the warranty period.

The engine owner has responsibility to perform all the required maintenance listed in the Owner's Manual. NEW HOLLAND AGRICULTURE will not deny an emission warranty claim solely because no record of maintenance exists; however, a claim may be denied if failure to perform maintenance resulted in the failure of a warranted part.

It is recommended that replacement parts used for maintenance or repairs be NEW HOLLAND AGRICULTURE Service Parts to maintain the quality originally designed into your emission certified engine. The use of non- NEW HOLLAND AGRICULTURE parts does not invalidate the warranty on other components unless the use of such parts causes damage to warranted parts.

The manufacturer is liable for damages to other engine components caused by the failure of any warranted emission control system part. NEW HOLLAND AGRICULTURE is not responsible for failures resulting from improper repair or the use of parts that are not genuine NEW HOLLAND AGRICULTURE or NEW HOLLAND AGRICULTURE approved parts.

Component coverage

New engines certified for sale and registered will have the following items covered by the emission warranty, depending on the emission level of the engine, if the items were first installed on the new engine as original equipment:

Fuel injection system	Exhaust after treatment Devices (if applicable)
<ul style="list-style-type: none">• Fuel injection pump• Fuel injectors• Fuel injection lines	<ul style="list-style-type: none">• Catalytic converter (DOC)• Diesel particulate filter (DPF)• Selective catalytic reduction (SCR)• Diesel Exhaust Fluid (DEF) tank and dispensing systems
Air induction system	Exhaust Gas Recirculation Systems (EGR)
<ul style="list-style-type: none">• Intake manifold• Turbocharger system (includes exhaust manifold)• Charge air cooler	<ul style="list-style-type: none">• EGR valve assembly• EGR cooler
Positive crankcase ventilation system (if applicable)	Cold Start Enrichment Systems
<ul style="list-style-type: none">• PVC valve• Oil fill cap	Electronic Control Units, Sensors, Solenoids, and Wiring harnesses used in above systems

Emissions warranty does not cover

- Repairs arising from storage deterioration, failure to maintain the equipment, negligence, alteration, improper use of the equipment, collision or other accident, vandalism, or other casualty, or operation beyond rated capacity or specification.
- Repairs arising from abuse or neglect, including but not limited to: operation without adequate coolant or lubricants, adjustments to the fuel system outside equipment specifications, over-speeding, improper storage, starting, warm-up, or shutdown practices, incorrect fuel or contaminated fuel, oil or other fluids.
- Normal maintenance services, such as engine tune-ups, engine fuel system cleaning, checks, adjustments, shimming, etc.
- Items replaced due to customer demand.
- Labor charges performed by anyone except a dealer authorized by contract to repair the equipment, unless they qualify under special provisions (i.e. outside labor).
- Any and all travel costs for items such as towing, service calls, or transporting a unit to and from the place where the warranty service is performed.
- Normal maintenance costs, including but not limited to: lubricants, coolants, fluids, fuel, filters, and associated labor. Lubricants, filters, and coolants may qualify for warranty reimbursement if they require replacement as a DIRECT RESULT of a defect in material or workmanship.
- Claims involving the inspection or reconditioning of units after storage or prior use.
- Repairs arising from service performed by agents not approved by NEW HOLLAND AGRICULTURE.
- Repairs arising from any unauthorized modification to the product or the use of non- NEW HOLLAND AGRICULTURE parts, implements or attachments.
- Removal, replacement, or installation of non- NEW HOLLAND AGRICULTURE optional equipment, attachments or components.
- Premiums charged for overtime labor costs or out of shop expenses.
- Economic loss including lost profits, crop loss, equipment rental, or other expense.
- Unauthorized modification or updating machines without a warrantable failure.
- Any and all costs of dealer shop supplies incurred with repairs, including but not limited to: solvents, cleaners, anti-seize lubricants, loctite, sealant, adhesive, oil-dry, shop towels, etc.
- Failure of the machine, its implements or attachments caused by improper field application or loading.
- Any and all costs for coolant, fuel, or lube (oil) analysis including supplies and lab recommendations.
- Cost associated with cleaning of machine in preparation for servicing.

Electro-Magnetic Compatibility (EMC)

Interference may arise as a result of add-on equipment which may not necessarily meet the required standards. As such interference can result in serious malfunction of the unit and/or create unsafe situations, you must observe the following:

- The maximum power of emission equipment (radio, telephones, etc.) must not exceed the limits imposed by the national authorities of the country where you use the machine.
- The electro-magnetic field generated by the add-on system should not exceed 24 V/m at any time and at any location in the proximity of electronic components.
- The add-on equipment must not interfere with the functioning of the on board electronics.

Failure to comply with these rules will render the NEW HOLLAND AGRICULTURE warranty null and void.

CNH America LLC technical manuals

Manuals are available from your dealer for your machine. Your dealer can expedite your order for operator manuals and parts catalogs.

Always give the machine name, model and S.N. (serial number) of your machine so your dealer can provide the correct manuals for your machine.

The company is continually striving to improve its products and therefore reserves the right to make improvements and changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

Manual scope and required training level

This manual provides information on the intended use of your tractor under the conditions foreseen by the manufacturer during normal operation, routine service and maintenance and periodic service and maintenance.

Normal operation is use of the tractor for the purpose intended by the manufacturer by an owner/operator who is familiar with the tractor and the mounted or towed equipment, and who is complying with the information on operation and safe practices, provided in this manual and by the decals on the tractor and the equipment.

Normal operation includes such actions as preparing the tractor for storage and removing the tractor from storage, adding or removing ballast, connecting and disconnecting mounted or towed equipment, raising and lowering components into or out of work position, adjusting tractor settings for specific field or crop settings, etc.

Routine service and maintenance are those actions which must be performed daily to maintain proper tractor function by an owner/operator who is familiar with tractor characteristics, and who is complying with the information on routine service and safe practices in this manual and in the decals on the tractor.

Routine service and maintenance includes such actions as fueling, cleaning, washing, topping off fluid levels, greasing, and replacing consumable articles such as lamp bulbs.

Periodic service and maintenance are those actions which must be performed at regularly defined intervals

All data given in this manual is subject to production variations.

NOTICE: *Operating and service messages displayed on the electronic operating panel may vary from what is shown in the manual. If this occurs, heed the latest instructions on the electronic operating panel.*

Dimensions and weights are approximate only and the illustrations do not necessarily show the machine in standard condition. For exact information about any particular machine, please consult your dealer.

to maintain proper tractor function by an owner/operator who is familiar with tractor characteristics, and who is complying with the information on periodic service and safe practices in this manual and in the decals on the tractor.

Periodic service and maintenance includes such actions as checking, cleaning and changing air filters, changing engine oil and filters, changing transmission oil and filters, changing front axle and wheel hub fluids, changing coolant, etc.

Some actions in the periodic service and maintenance chart are beyond the knowledge and skills of the owner/operator: for example, engine valve adjustment, fuel injector nozzles. For these actions, the manual instructs the owner/operator to have the action performed by their authorized dealer.

This manual does not contain all the information related to periodical service and maintenance, converting and repairs to be carried out by professional service personnel. These actions require special facilities, technical skills, and/or tools which are not supplied with the machine.

Converting is changing the tractor configuration for a specific crop or soil condition and requires rebuilding or adding components to the vehicle: for example, installation of dual wheels. Repairing is the disassembly and assembly of the tractor to restore proper operation after a component failure or degradation of performance.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com