

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1

OPERATOR'S MANUAL

Boomer 3040 CVT


Boomer 3045 CVT

Boomer 3050 CVT

With Cab and (EasyDrive™) CVT Transmission

Compact Tractor

from PIN ZCMB11001

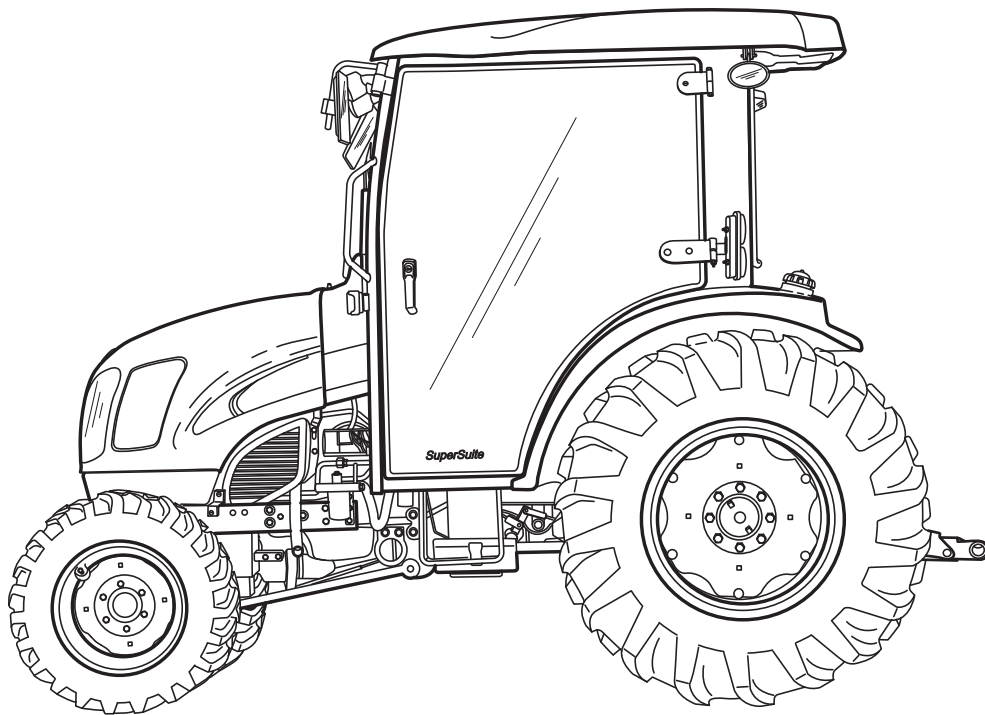

Part number 84551016

1st edition English

July 2012



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
Intended use.....	1-3
About this manual	1-5
Product overview	1-7
Vibration levels	1-8
Machine stability.....	1-9
Declaration of conformity	1-13
Metric and Imperial units abbreviations	1-16
Cab identification	1-18
Machine orientation.....	1-20
Product Identification Number (PIN).....	1-21
Electro-Magnetic Compatibility (EMC)	1-22

2 SAFETY INFORMATION

Safety rules and signal word definitions	2-1
Safety rules.....	2-2
Tractor jacking points.....	2-13
Ecology and the environment	2-14
Safety features	2-15
Safety aspects.....	2-15
Safety signs	2-22
Instructional signs	2-33
Road travel signs and decals.....	2-37
International symbols.....	2-38

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Doors	3-1
-------------	-----

OPERATOR'S SEAT

Mechanically - adjusted operator seat.....	3-1
Seat restraints - Adjust	3-2

FORWARD CONTROLS

Steering wheel - Adjust.....	3-3
Instrument panel.....	3-4
Analog Digital Instrument Cluster (ADIC) programming.....	3-10
Instrument cluster Analog-Digital Instrument Cluster (ADIC) - Fault code index - Transmission related	3-24
Hand throttle lever	3-26
Front window wiper/washer	3-27

LEFT-HAND SIDE CONTROLS

Transmission shuttle shift lever	3-28
Continuously Variable Transmission (CVT) external controls - Control identification .	3-29
Four-Wheel Drive (4WD) system - Control	3-34
Differential lock hydraulic control - Control	3-37

RIGHT-HAND SIDE CONTROLS

Throttle pedal - Control identification	3-38
Fuel shutoff solenoid - Control.....	3-38
Power Take-Off (PTO) controls	3-39
Hydraulic Power Lift (HPL)	3-42
Rear remote control valve(s)	3-42
Mid mount two -- spool remote control valve	3-42

REARWARD CONTROLS

Rear window.....	3-43
Auxiliary power outlet.....	3-43
Rear window wiper/washer (optional)	3-44

OVERHEAD CONTROLS

Cab climate control - Overview	3-45
Air conditioning - Adjust	3-46
Sun shades.....	3-50
Cab internal lighting	3-50

EXTERIOR CONTROLS

Hood latch - Hood Latch	3-51
Rearview outside mirrors - Adjust	3-52

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Continuously Variable Transmission (CVT) controls - Settings and adjustments	4-1
Suggested operating mode settings - Basic user interface	4-18
Suggested operating mode settings - Enhanced user interface	4-20
Power Take-Off (PTO) operation	4-22
Extendable drawbar	4-23
Deluxe three-point linkage.....	4-24

STARTING THE UNIT

Ignition switch - Control identification.....	4-25
Pre-heating the system.....	4-25
Engine starting system - Dynamic description	4-26

STOPPING THE UNIT

Stopping the engine	4-30
Service brakes.....	4-31
Park brake	4-31

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

External lighting - Identification	5-1
External lighting - Control - Multifunction stalk switch	5-2
External lighting - Control.....	5-3

RECOVERY TRANSPORT

Preparation for towing	5-6
------------------------------	-----

6 WORKING OPERATIONS

GENERAL INFORMATION

Fuel tank - Fill	6-1
Running-in procedure	6-2
Driving the tractor.....	6-2

Tractor hydraulics

Hydraulic systems - Safety rules	6-3
Hydraulic Power Lift (HPL)	6-3
Position control	6-4
Hydraulic lift rocker	6-4
Hydraulic Power Lift (HPL) drop rate control valve	6-5
Hydraulic manifold block/diverter valve.....	6-5
Rear remote control valve(s)	6-5
Rear remote valve configuration	6-6
Mid mount two -- spool remote control valve	6-7

7 MAINTENANCE

GENERAL INFORMATION

Hood latch	7-1
Safety rules	7-2
Diesel fuel	7-3
Biodiesel fuel - Biodiesel Fuels	7-4
Toolbox	7-5

MAINTENANCE CHART

Maintenance chart.....	7-6
------------------------	-----

LUBRICATION POINTS

Grease fittings	7-8
Steering - Lubricate.....	7-9

ENGINE

Engine oil level	7-10
Engine oil	7-10
Engine cooling system Coolant level	7-11
Engine cooling system	7-12
Coolant thermostat - Replace	7-13
Fan belt	7-14
Fan belt	7-14
Clutch - Check	7-14

FUEL SYSTEM

Fuel filter	7-15
Fuel filter	7-16
Bleeding air in fuel system	7-16
Fuel injector lines	7-18

ENGINE AIR INTAKE

Air cleaner - Check	7-18
Air cleaner - Cleaning Primary element	7-19
Air cleaner - Replace Inner safety element	7-20

TRANSMISSION

Transmission oil	7-20
Transmission oil	7-21
Hydraulic filter replace	7-21
Transmission pressure filter replace	7-22
G-Rotor pump inner filter cleaning	7-22
Transmission control valve filter replace	7-23

ELECTRICAL SYSTEM

Battery - Check	7-23
Alternator - Check	7-25
Fuse and relay box - Replace	7-26

LIGHTING SYSTEM

Headlight - Replace	7-30
Taillight	7-30
Turn signal/hazard lights - Replace	7-31
Cab work lights	7-32

WHEELS AND TIRES

Tire pressure	7-33
Wheel bolts	7-35
Toe-in adjustment	7-36

BRAKES

Service brakes - Adjust	7-38
-------------------------------	------

Park brake - Adjust	7-40
---------------------------	------

FRONT AXLE

Differential - Check Front Axle Differential Case and Final Reduction Gear	7-40
Differential - Change fluid Front Axle Differential Case and Final Reduction Gear Case Oil	7-41

CAB

Cab frame - Check	7-43
Seat restraints - Check	7-44
Air conditioning - Check	7-45
Air conditioning - Adjust	7-46
Windshield washer reservoir	7-47
Cab air filter	7-48

STORAGE

Storage - Storing - Tractor	7-49
Storage - Check - Tractor	7-50

8 SPECIFICATIONS

Consumables	8-1
General specifications - Biodiesel Fuels	8-2
Wheel tread settings	8-3
Brakes and controls - Wheel spacing	8-4
Front wheels - Weight	8-5
General specifications	8-6
Frame - Dimension	8-12

9 ACCESSORIES

Front ballast - Install	9-1
Counterweight - Install	9-3
Rear wheel ballasts - Install	9-5
Grille guard	9-6
Radio/CD player	9-6
Mid mount two -- spool remote control valve	9-6
Window grille guard	9-7
Roof beacon	9-7
Falling Object Protective Structure (FOPS)	9-8

10 FORMS AND DECLARATIONS

Delivery report - Owner Copy	10-1
Delivery report - Dealer Copy	10-3

1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

Your NEW HOLLAND AGRICULTURE dealer will instruct you in the general operation of your new equipment. (Refer to the 'Delivery Report' at the back of this manual.) Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your machine.

Your NEW HOLLAND AGRICULTURE dealer carries a complete line of genuine NEW HOLLAND AGRICULTURE service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION

Model


Product Identification Number (PIN)

Date Purchased

Header Width (As Applicable)

Engine Model (As Applicable)

Engine PIN (As Applicable)

	<p>This is the safety alert symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.</p>
---	---

WARNING

Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.

Replace all shields before operating the machine.

Failure to comply could result in death or serious injury.

W0012A


ATTENTION: *The engine and fuel system on your machine is designed and built to government emission standards. Tampering by dealer, customers, operators, and end users is strictly prohibited by law. Failure to comply*

could result in government fines, rework charges, invalid warranty, legal action, and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!

IMPROVEMENTS

CNH is continually striving to improve its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

1 - GENERAL INFORMATION

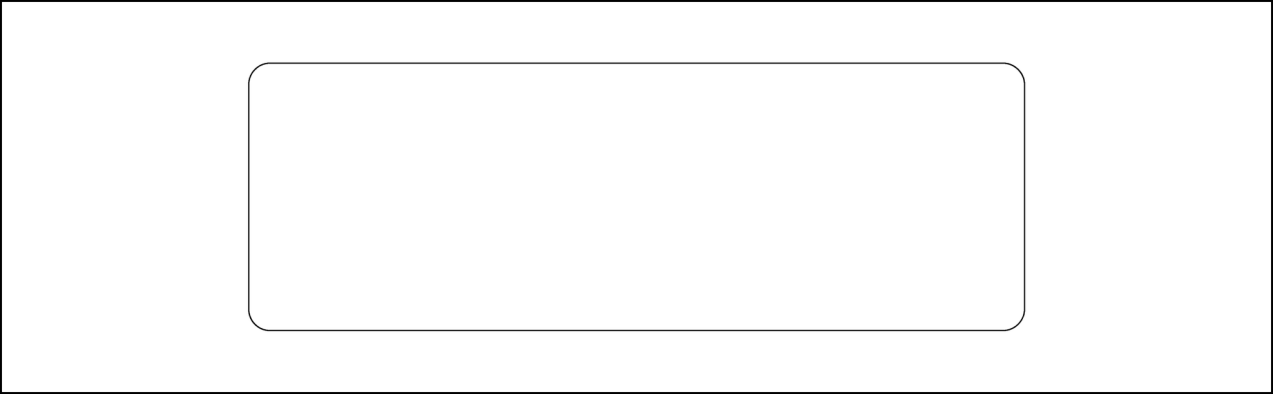

201001599 1

Dealer's stamp

Intended use

INTENDED USE OF YOUR TRACTOR

Your tractor is designed and made to pull, to carry, and to power a variety of mounted or towed equipment, although within some physical limits. The working speed and performance may depend on a number of various parameters, such as weather and terrain conditions. Though the tractor is designed to perform in combination with a variety of equipment in most crops and conditions, there may be a number of combinations of above parameters, for which there is severe degradation of performance of the tractor and/or its mounted or trailed equipment. If you notice degradation of performance, contact your dealer for assistance. He may have useful information for improvements, or a kit may be available to enhance the performance.

- Do not use the tractor for another purpose than intended by the manufacturer and outlined in this manual.
- Do not use the tractor beyond its limits of terrain gradient and stability as outlined further in this manual. Using the tractor beyond these limits may result in roll-over or tip-over. Observe the recommendations in this manual.
- Do not use the tractor on higher speeds than allowed by the load and the environment. A wet surface or other low adherence conditions may increase the braking distance or result in vehicle instability. Always adapt your traveling speed according to the load of the vehicle and the characteristics of the road.
- Do not use the tractor near or on soft verges of canals and brooks or banks and verges that are undermined by rodents. The tractor may sink sideways and roll-over.
- Do not use the tractor on brittle bridge heads and poor bridge floors. These constructions may collapse and cause roll-over of the tractor. Always check out the condition and carrying capacity of bridges and ramps prior to engage.
- Do not use the tractor without wearing the seat restraint system during activities where roll-over or tip-over hazards exist. The ROPS cab or ROPS structure will only be fully effective when the driver remains attached to his seat.
- Do not use equipment mounted on the tractor which is not correctly matching and firmly fixed. Such equipment may increase the risk for roll-over and hit the tractor when coming loose. Ensure that the dimensions of the three-point linkage interface of both the tractor and the equipment are matching according to the categories defined in ISO 730. Ensure that the dimensions and speed of the PTO shaft on the tractors are matching those of the equipment.
- Do not use the tractor in combination with equipment, without having consulted the specific Operators Manual provided with the equipment. The tractor is a universal tool to carry, tow, and drive a variety of equipment. This manual alone cannot provide you with all the information required for the safe operation of the combination.
- Do not use the tractor beyond its limits of dynamic stability. High speed, abrupt maneuvers, and fast and short cornering will increase the risk of roll-over.
- Do not use the tractor for pulling work, in cases where you do not know whether the load will yield, for instance when pulling stumps. The tractor may flip over when the stump is not yielding.
- Be extremely cautious when working with the tractor on forage silos without lateral concrete walls. Dual wheels or a wide track setting may improve the lateral stability of the tractor.
- Be cautious that the center of gravity of the tractor may increase when loads on the front-end loader or the three-point linkage are raised. In these conditions, the tractor may roll-over earlier than expected.
- Do not step down from the tractor without shutting down the PTO, shifting the transmission to park or neutral and applying the park brake, unless continued PTO operation is required for some equipment, such as pumps or wood chippers. The latter equipment may have an emergency stop device on the equipment itself, as human intervention is needed during operation. But other equipment, engaged and driven by the tractor will have no means to stop the power transmission, other than the PTO clutch of the tractor.
- You shall take the necessary precautions to always be aware of the possible presence of bystanders, certainly when maneuvering in confined areas, such as the farm yard and sheds. Keep people away from the tractor during work; ask bystanders to leave the field. There is not only the risk to be overrun by the tractor, but objects ejected by some equipment mounted on the tractor, such as a rotary mower, may cause harm. Stones may be thrown further than the mowed crop. Pay the necessary attention while operating next to public roads or footpaths. Thrown objects can get projected outside the field and hit unprotected people like bikers or pedestrians. Wait to cut the edge of the field till it is clear of bystanders.
- Do not allow riders on the tractor; do not allow people standing on the access way or step to the cab when the tractor is moving. Your view to the left will be obstructed and a rider risks to fall from the tractor during unforeseen or abrupt movements.
- Always stay clear from implements operating area and especially do not stand between tractor and trailed vehicle either three-point linkage when operating lift controls; ensure no bystanders are near these operating areas.

- Certain functions of your tractor, if equipped with a CVT transmission, are controlled by software and some of them are safety related. Do not attempt to modify or download software from spurious sources. Settings and logics may be destroyed and affect seriously the function of the tractor. This may result in unpredictable and unsafe behavior of the tractor. Only your dealer is entitled to intervene on the software of the tractor. He has the appropriate tools and data sets for it and owns the officially released software versions and updates for your tractor.
- Your tractor may be equipped with a number of sensors to control safety functions. Tripping these sensors will result in a safe operation mode. Do not attempt to bypass any function on the tractor. You will be exposed to serious hazards, and moreover, the behavior of the tractor may become unpredictable.
- A tractor has only one operator station and is a one man operated vehicle. Other people on or around the tractor during normal operation are not allowed.
- The machine is designed and produced exclusively for agricultural use.
- The machine is not designed for light/heavy forestry applications; usage is prohibited for forestry applications.
- All other use will be considered to be contrary to the use specified by CNH AMERICA LLC, who cannot be held liable for damage to property or the machine, or for personal injuries which may result.
- Persons who risk improper use will therefore assume the responsibility for any consequences arising from such use.
- Compliance with the instructions for use, maintenance and repairs described in this manual, are the essential preconditions for the use specified by CNH AMERICA LLC.
- The machine must only be used, serviced, or repaired by personnel trained in the relevant working methods and safety regulations and who have been authorized to work on the machine.
- The user must also observe the rules concerning general safety and accident prevention, including the Highway Code when driving on public highways.
- Any arbitrary modifications made to this machine will release CNH AMERICA LLC from any liability resulting from damage or injury.
- CNH AMERICA LLC and all its distribution organizations, inclusive of, but not restricted to, national, regional, or local distributors, cannot be held liable for damage resulting from the malfunction of parts and/or components not approved by CNH AMERICA LLC.
- Under no circumstances will a guarantee be issued for products made or sold by CNH AMERICA LLC that are damaged as a result of the malfunction of parts and/or components not approved by CNH AMERICA LLC.


About this manual

This manual gives information for use of this tractor, as intended and under the conditions foreseen by the manufacturer during normal operation and routine service and maintenance.

- Normal operation means the use of the tractor for the purpose intended by the manufacturer by an operator familiar with the tractor and the mounted or towed equipment and complying with the information for operation and safe practices, as specified by the manufacturer in this manual and by the signs on the tractor and the equipment.
- Normal operation includes the preparation and storage of the tractor, swinging components into work position and vice versa, adding or removing ballast and picking up and setting off attachments.
- Normal operation includes the adjustment and setting of the tractor and equipment, for the specific condition of the field and/or the crop.
- Routine service and maintenance means activities that must be done daily by an operator familiar with the tractor characteristics and complying with the information for routine service and safe practices, as specified by the manufacturer in this manual and by signs on the tractor, in order to maintain its proper function. Routine service includes activities such as fueling, cleaning, washing, topping up fluid levels, greasing, replacing of consumable articles such as lamp bulbs.
- This manual does not give all the information related to periodical service, converting and repairs to be carried out by professional service personnel. For some of the latter activities, there may be a need for appropriate facilities, technical skills and tools which are not supplied with the tractor, please refer to your dealer or authorized workshop.
- Periodical service means activities that must be done at defined intervals by trained personnel familiar with the tractor characteristics and which are complying with the information for periodical service and safe practices, as partly specified by the manufacturer in this manual and in other Company literature, in order to maintain the expected life time of the tractor.
- Converting means activities that must be done by professional service personnel familiar with the tractor characteristics and complying with the information for converting, as partly specified by the manufacturer in this manual, in assembly instructions or other Company literature, in order to fit the tractor to a specific configuration.
- Repair means activities that must be done by professional service personnel only familiar with the tractor characteristics and complying with the information for repair, as specified by the manufacturer in the dealer's workshop manual, in order to restore the proper function of the tractor after a failure or degradation of performance.

MANUAL STORAGE

The Operator's Manual is located in the toolbox, which is mounted behind the step (1). Keep the Operator's Manual in the toolbox. The Operator's Manual must be available for use by all operators.

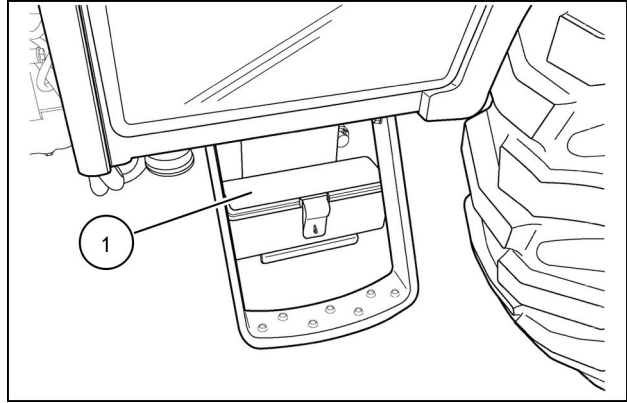

86064813N 1

Product overview

Electro-magnetic Interference (EMC)

This product complies with the EEC directive 2004/108/EC and its amendments on Electromagnetic Interferences on electronic equipment if it is used in conjunction with equipment which bears the CE mark.

NEW HOLLAND AGRICULTURE will take no liability for any problem arising as a result of its product working in an environment of other equipment which does not comply with the EEC directive.

This machine complies strictly with the European Regulations on electro-magnetic emissions. However, interference may arise as a result of add-on equipment which may not necessarily meet the required standards. As such interference can result in serious malfunction of the unit and/or create unsafe situations, you must observe the following:

- Ensure that each piece of non- NEW HOLLAND AGRICULTURE equipment fitted to the machine bears the CE mark.

- The maximum power of emission equipment (radio, telephones, etc.) must not exceed the limits imposed by the national authorities of the country where you use the machine.
- The electro-magnetic field generated by the add-on system should not exceed 24 V/m at any time and at any location in the proximity of electronic components. Failure to comply with these rules will render the NEW HOLLAND AGRICULTURE warranty null and void.

AIRBORNE NOISE EMISSION

In line with the European directive (2003/10/EC) and national legislation, the noise levels at the operator's ear are measured in dBa, according to the ISO 5131 standard. The noise is measured with the engine and all mechanisms engaged and running at normal operating speed for the specified use of the product and without crop flow through the machine. These are maximum values which in normal operating conditions will never be exceeded.

Model	Drive line	Noise level at operator's ear - dB(A)*	External noise level - dB(A)**
3040	CVT transmission	82***	80
3045	CVT transmission	82***	80
3050	CVT transmission	82***	82

* Test results are in accordance with directive 77/311/EEC Annex I.

** Test results are in accordance with directive 74/151/EEC Annex VI 1.4.2, with tractor stationary.

*** Test results are in accordance with directive 77/311/EEC Annex II.

EXHAUST EMISSION LEVELS

(To Directive 97/68/EC as amended by 2004/26/EC)

Model	Engine Horsepower	Nox + HC g/kwh	CO g/kwh	PM g/kwh
3040	40	4.261	1.596	0.344
3045	45	4.261	1.596	0.344
3050	50	4.261	1.596	0.344

Vibration levels

HAZARDS RELATED TO VIBRATION EXPOSURE

NOTE: The Whole Body Vibration level will depend on a lot of parameters, some of them machine related, others terrain related and many driver related. The properties of the track or field surface and the driving speed will be the predominant parameters.

⚠ WARNING

Machine vibration caused by improper machine maintenance could injure an operator. Follow ALL of the precautions listed below. Failure to comply could result in death or serious injury.

W0443A

- Make sure the machine is in good condition and that the service interval work has been carried out correctly.
- Check the tyre pressure, the steering and the brake system.
- Check that the operator's seat and adjustment controls are in good condition and then adjust the seat to suit the operator's size and weight.
- Operate all controls consistently so the machine works smoothly and modify your driving to suit working conditions.
- During travel, adjust your speed and slow down if necessary.

In compliance with EU standard, **78/764/EEC** the vibration levels measured on seat for tractors described in this manual are as specified below.

Input Vibration:

Category A Class III

Ambient Temperature:

22 °C

Seat model / type	Vibration* m/s ² at (testing mass)	
	Light weight operator	Heavy weight operator
Sears MCS3000	1.24 m/s ² (4.07 ft/s ²) at (59 kg)	1.06 m/s ² (3.48 ft/s ²) at (95 kg)

*Corrected weight vibration acceleration 0.21.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com