

PUMA 170 / 170 CVT
PUMA 185 / 185 CVT
PUMA 200 / 200 CVT
PUMA 215 / 215 CVT
PUMA 230 CVT
Tractors

OPERATOR'S MANUAL

Part number 84571707
3rd edition English
January 2012





OPERATOR'S MANUAL



**PUMA 170 CVT , PUMA 170 , PUMA 185 CVT , PUMA 185 , PUMA 200 CVT ,
PUMA 200 , PUMA 215 CVT , PUMA 215 , PUMA 230 CVT**

Contents

1 GENERAL INFORMATION

METRIC AND IMPERIAL UNITS ABBREVIATIONS	1-1
Note to the Owner	1-3
PRODUCT IDENTIFICATION	1-5
ENGINE IDENTIFICATION	1-6
DRIVELINE IDENTIFICATION	1-7
Part identification	1-7
CAB IDENTIFICATION	1-8
ECOLOGY AND THE ENVIRONMENT	1-9
NOISE LEVEL	1-10
PROGRAMMING TRACTOR FUNCTIONS	1-10
BEFORE OPERATING THE TRACTOR	1-11
INTERNATIONAL SYMBOLS	1-12
VIBRATION LEVEL INFORMATION SHEET	1-13
MACHINE STABILITY	1-14
INSTRUCTOR'S SEAT	1-18
SELECTIVE CATALYTIC REDUCTION (SCR) SYSTEM	1-19

2 SAFETY INFORMATION

SAFETY DECALS	2-1
SAFETY PRECAUTIONS	2-8
BEFORE DRIVING THE TRACTOR	2-9
DRIVING THE TRACTOR	2-10
OPERATING THE TRACTOR	2-11
OPERATING THE P.T.O.	2-13
OPERATING THE EXTERNAL CONTROLS	2-13
SERVICING THE TRACTOR	2-14
PREVENTION OF FIRE OR EXPLOSION	2-17
DIESEL FUEL	2-18
FIRE EXTINGUISHER	2-19
PROTECTION OFFERED BY THE TRACTOR	2-20
INTENDED USE STATEMENT	2-23
SAFETY ASPECTS	2-25

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

INTRODUCTION	3-1
USER PLATFORM - Localisation overview	3-5
CAB AIR FILTERS	3-7
IN CAB STORAGE (where fitted)	3-8
CABLE AND WIRING ROUTING	3-9
MOBILE TELEPHONE USAGE	3-10
IMPLEMENT MONITOR INSTALLATION	3-11
CAB AIR PRESSURISATION MONITOR (where fitted)	3-11

OPERATOR'S SEAT

AIR SUSPENSION SEAT	3-13
AIR SUSPENSION SEAT DELUXE	3-15
ARMREST CONTROLS	3-20
SEAT BELT	3-21

INSTRUCTOR'S SEAT	
INSTRUCTIONAL SEAT (where fitted).....	3-22

FORWARD CONTROLS

KEY- START SWITCH	3-23
HAZARD WARNING LIGHT SWITCH.....	3-23
LIGHT-/ TURN LEVER	3-24
FOLLOW ME HOME LIGHTS.....	3-24
WINDSHIELD WIPER AND WASHER CONTROLS	3-25
SHUTTLE LEVER	3-26
ELECTRONIC PARK BRAKE	3-28
CLUTCH/ INCHING PEDAL.....	3-32
FOOT THROTTLE PEDAL	3-32
FOOT BRAKES	3-33
EXHAUST BRAKE (where fitted).....	3-34
STEERING COLUMN	3-35
ADJUSTABLE AIR VENTS.....	3-35

LEFT-HAND SIDE CONTROLS

HANDBRAKE.....	3-36
----------------	------

RIGHT-HAND SIDE CONTROLS

INTEGRATED CONTROL PANEL	3-37
INTEGRATED CONTROL PANEL	3-38
HAND THROTTLE	3-39
Multi Function Handle	3-40
Armrest controller Tractor Multi-Function (TMF) - Operating.....	3-40

REARWARD CONTROLS

SWITCHES ON C-PILLAR	3-41
HYDRAULIC MASTER SWITCH.....	3-42
HEATED SCREENS (where fitted).....	3-43
FAST STEERING SYSTEM (where fitted)	3-44
BATTERY ISOLATOR SWITCH	3-46
CLIMATE CONTROLS	3-47
MANUAL TEMPERATURE CONTROL	3-49
AUTOMATIC TEMPERATURE CONTROL (ATC).....	3-50

OVERHEAD CONTROLS

SWITCH PANEL WORKLIGHTS.....	3-52
RADIO/CASSETTE/CD PLAYER (where fitted).....	3-53
INTERIOR LIGHT	3-54

INSTRUMENT CLUSTER

INTEGRATED CONTROL UNIT.....	3-55
GAUGES	3-55
INDICATOR AND WARNING LIGHTS	3-57
DISPLAYS.....	3-60
TRANSMISSION DISPLAY.....	3-61

KEYPAD BASIC	3-62
KEYPAD ENHANCED	3-63
SELECTING OR CHANGING THE DISPLAY SETTINGS	3-65
ADJUST MENU	3-66
CONFIGURE MENU	3-68
PERFORMANCE MONITOR	3-71
ARMREST COLOUR DISPLAY	3-76
POP- UP SCREENS ON COLOUR DISPLAY	3-78
PERFORMANCE MONITOR ON COLOUR DISPLAY	3-84
PROGRAMMING THE DISPLAYS	3-87
ALARM FUNCTIONS	3-90
ACCESSING STORED ERROR CODES	3-92
WARNING AND ADVISORY SYMBOLS	3-93

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

TRACTOR REFUELLING	4-1
--------------------------	-----

STARTING THE UNIT

STARTING THE ENGINE	4-3
GRID HEATER COLD START AID (where fitted)	4-4
FUEL HEATER (where fitted)	4-5
COOLANT IMMERSION HEATER (where fitted)	4-5
TRANSMISSION OIL HEATER (where fitted)	4-6
TRANSMISSION - Operating Cold weather	4-7
BOOSTING THE BATTERY	4-8

STOPPING THE UNIT

STOPPING THE ENGINE	4-9
AUTOMATIC ENGINE SHUTDOWN	4-9
AUTOMATIC ENGINE SHUTDOWN WITH ENHANCED KEYPAD (where fitted)	4-10

MOVING THE UNIT

OPERATING IN COLD TEMPERATURES	4-11
REVERSIBLE ENGINE FAN	4-13
FULL POWERSHIFT TRANSMISSION	4-14
TRANSMISSION OPERATION	4-14
DRIVING THE TRACTOR	4-15
TRANSMISSION Powershift - Operating	4-17

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

CARRYING THE TRACTOR ON A TRANSPORTER	5-1
SECURE THE HIGH VISIBILITY ROOF PANEL	5-1

RECOVERY TRANSPORT

TOWING THE TRACTOR	5-2
--------------------------	-----

6 WORKING OPERATIONS

GENERAL INFORMATION

VARIABLE ENGINE POWER MANAGEMENT	6-1
CONSTANT ENGINE SPEED	6-3
DIFFERENTIAL LOCK	6-6
FOUR WHEEL DRIVE	6-8
FRONT AXLE SUSPENSION (where fitted)	6-10
AUTOMATED HEADLAND FUNCTIONS	6-11
QUICK GUIDE	6-11
RECORDING AND RE-PLAYING	6-13
EXPLANATION OF SYMBOLS	6-17
RECORDING A SEQUENCE	6-18
RE-PLAYING A SEQUENCE	6-20
HEADLAND FUNCTION AND COLOUR DISPLAY SCREENS	6-25
DELETING A SEQUENCE WITH COLOUR DISPLAY	6-28

TRANSMISSION

TRANSMISSION OPERATION	6-29
Command - Operating	6-30
TRANSMISSION Powershift - Operating Ground speeds	6-31
DRIVE PEDAL	6-36
ENGINE SPEED CONTROL	6-37
SHUTTLE LEVER	6-39
SPEED MATCHING	6-40
TRANSMISSION CONTROLS	6-41
PROGRAMME THE MAXIMUM SPEED	6-43
STATIONARY CONTROL	6-44
ANTI JACK KNIFE	6-45
TRANSMISSION DISPLAY	6-46
MANUAL MODE	6-47
AUTOMATIC MODE	6-48
ERROR CODES	6-49

REAR POWER TAKE-OFF

P.T.O. OPERATING PRECAUTIONS	6-50
CHANGING THE P.T.O. OUTPUT SHAFT	6-50
ATTACHING P.T.O. DRIVEN EQUIPMENT	6-51
P.T.O. OPERATION	6-52
TWO-SPEED P.T.O. SYSTEM	6-57
MULTI-SPEED, SHIFTABLE P.T.O.	6-59
EXTERNAL P.T.O. CONTROLS	6-61
Auto PTO operation	6-63

FRONT POWER TAKE OFF

P.T.O. OPERATION	6-66
AUTO P.T.O. OPERATION	6-68
HITCH Front hitch - Operating	6-70

REAR HITCH

ELECTRONIC DRAFT CONTROL	6-75
SETTINGS AND DISPLAY	6-79
ELECTRONIC DRAFT CONTROL OPERATION	6-81
EXTERNAL HITCH CONTROLS	6-87

FRONT HITCH

SETTINGS AND ADJUSTMENTS	6-89
HITCH OPERATION.....	6-92
AUXILIARY FRONT COUPLERS (where fitted).....	6-98
EXTERNAL HITCH CONTROLS	6-100

HYDRAULIC REMOTE CONTROL VALVES

REMOTE CONTROL VALVES	6-101
OPERATING WITH REMOTE VALVES	6-104
CONNECTING REMOTE CYLINDERS	6-107

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

REMOTE CONTROL VALVES	6-109
SETTINGS AND ADJUSTMENTS	6-117
SETTING THE REMOTE VALVE PRIORITY.....	6-123
CREATING TIMER PROGRAMMES.....	6-125
CONNECTING REMOTE CYLINDERS	6-132
OPERATING WITH REMOTE VALVES	6-134
JOYSTICK OPERATION WITH A FRONT LOADER.....	6-136
MID MOUNT REMOTE VALVES	6-139
EXTERNAL EHR CONTROLS	6-141
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT	6-142

HYDRAULIC POWER BEYOND PORT

HYDRAULIC POWER BEYOND PORT FOR EXTERNAL SERVICES	6-144
Power beyond - Static description.....	6-144
ISO POWER BEYOND COUPLINGS	6-146

THREE POINT HITCH

ATTACHING THREE-POINT HITCH EQUIPMENT	6-147
LIFT ROD ADJUSTMENT	6-149
TOP LINK ADJUSTMENT	6-151
FLEXIBLE LINK END ADJUSTMENT	6-153
QUICK HITCH	6-154
LINKAGE STABILISER ADJUSTMENT	6-156

DRAWBARS AND TOWING ATTACHMENTS

DRAWBARS AND TOWING ATTACHMENTS	6-160
SWINGING DRAWBARS.....	6-162

TRAILER BRAKING SYSTEMS

AIR-OPERATED TRAILER BRAKES	6-165
TRAILER BRAKE BIAS CONTROL	6-169
AUXILIARY AIR SUPPLY CONNECTOR (where fitted).....	6-169
HYDRAULIC TRAILER BRAKES	6-170

WHEEL TRACK ADJUSTMENT

FRONT WHEEL TRACK ADJUSTMENT	6-171
FRONT WHEEL ALIGNMENT	6-174
STEERING STOPS	6-175
FRONT AXLE OSCILLATION STOPS	6-175
FRONT FENDER.....	6-176
REAR WHEEL TRACK ADJUSTMENT	6-178
FLANGE TYPE AXLE (where fitted)	6-178
BAR TYPE AXLE (where fitted)	6-182
DUAL REAR WHEELS (where fitted)	6-188

BALLASTING AND TYRES

BALLASTING AND TYRES	6-191
IRON WEIGHTS (where fitted)	6-194
LIQUID BALLAST	6-197
TYRE INFLATION	6-199
TYRE PRESSURES AND PERMISSIBLE LOADS	6-200

AUXILIARY POWER CONNECTIONS

DIAGNOSTIC SOCKET	6-202
TRAILER SOCKET ELECTRICAL	6-203
ELECTRICAL POWER CONNECTORS	6-204
INTERNAL POWER CONNECTORS	6-204
EXTERNAL POWER CONNECTORS	6-206

7 MAINTENANCE

GENERAL INFORMATION

INTRODUCTION	7-1
FUEL REQUIREMENT	7-2
BIODIESEL FUEL - Biodiesel fuels	7-4
ENGINE OIL CHANGE	7-6
PROTECTIVE DEVICES	7-7
LUBRICANTS AND COOLANTS	7-9
TRACTOR JACKING POINTS	7-11
GENERAL SPECIFICATIONS.....	7-12
CAPACITIES	7-13

MAINTENANCE CHART

Maintenance Chart	7-14
-------------------------	------

WHEN THE WARNING LAMP LIGHTS

CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT	7-16
DRAIN FUEL SYSTEM WATER SEPARATOR.....	7-17

EVERY 10 HOURS OR EACH DAY

CHECK ENGINE COOLANT LEVEL	7-18
CHECK ENGINE OIL LEVEL.....	7-19
CHECK REMOTE CONTROL VALVE DRAIN BOTTLES	7-19
CHECK WINDSCREEN WASHER RESERVOIR	7-20

DRAIN AIR RESERVOIR ON AIR OPERATED TRAILER BRAKE	7-20
---	------

FIRST 50 HOURS

SERVICE OPERATIONS	7-21
--------------------------	------

EVERY 50 HOURS

CLEAN THE CAB AIR FILTER	7-23
CLEAN THE SCR COVER AIR DUCTS	7-25
CLEAN THE COOLER SECTION	7-26
ALL GREASE FITTINGS	7-27
CHECK FRONT AND REAR WHEEL NUTS	7-34
CHECK TYRE PRESSURES AND TYRE CONDITION	7-34

EVERY 100 HOURS

INSPECT POLY V-BELT	7-35
INSPECT COMPRESSOR DRIVE BELT	7-35

EVERY 300 HOURS

CHECK BATTERY FLUID LEVEL	7-36
CHECK TRANSMISSION/REAR AXLE AND HYDRAULIC OIL LEVEL	7-38
ADJUST HANDBRAKE	7-39
CHECK FRONT P.T.O. GEARBOX OIL LEVEL	7-39
CHECK 4WD FRONT AXLE DIFFERENTIAL AND HUBS OIL LEVEL	7-40

EVERY 600 HOURS

CHANGE ENGINE OIL AND FILTER	7-41
CHANGE FUEL PRE-FILTER AND FUEL FILTER ELEMENT	7-43
CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT	7-44
CHANGE CHARGE PUMP OIL FILTER	7-45
CHANGE CHARGE PUMP AND GEAR PUMP OIL FILTER	7-46
CHECK ENGINE AIR INTAKE CONNECTIONS	7-47
CHECK TRANSMISSION OIL COOLER PIPE COUPLINGS	7-48
CLEAN DEF/ AdBlue INLINE FILTER	7-48

EVERY 1200 HOURS OR ANNUALLY

CHANGE CAB AIR FILTERS	7-49
CHANGE MAIN OIL FILTER CARTRIDGE	7-50
CHANGE TRANSMISSION/ REAR AXLE AND HYDRAULIC OIL	7-51
CHANGE 4WD DIFFERENTIAL OIL	7-52
CHANGE 4WD PLANETARY HUB OIL	7-53
CHANGE FRONT P.T.O. GEARBOX OIL	7-53
GREASE REAR AXLE SHAFT BEARING	7-54

EVERY 1200 HOURS OR EVERY 2 YEARS

CHECK BATTERY FLUID LEVEL	7-55
CHANGE DEF/ AdBlue INLINE FILTER	7-56
CHANGE ENGINE AIR CLEANER INNER ELEMENT	7-57
CHANGE ENGINE BREATHER FILTER	7-58
CHECK VALVE TAPPET CLEARANCE	7-58
CHANGE ENGINE COOLANT FLUID	7-59
CHANGE AIR BRAKE DRIER RESERVOIR	7-63
CHANGE POLY V-BELTS	7-64

EVERY 3600 HOURS OR EVERY 2 YEARS

CHANGE DEF/ AdBlue MAIN FILTER	7-65
--------------------------------------	------

EVERY 36 MONTHS

SERVICE THE AIR CONDITIONER SYSTEM	7-65
CHECK BATTERY FLUID LEVEL	7-67

GENERAL MAINTENANCE

CLEANING THE TRACTOR	7-69
FUEL SYSTEM PRE- FILTER AND WATER TRAP	7-71
BLEEDING THE FUEL INJECTION SYSTEM	7-71
CHECK BRAKE PEDAL LATCHING/UNLATCHING	7-72
ADJUST CAB SUSPENSION (where fitted)	7-73
TRANSMISSION CLUTCH CALIBRATION	7-74
TRANSMISSION - Check	7-76
HEADLIGHT AND WORKLAMP ADJUSTMENT	7-81
BULB REPLACEMENT	7-82
FUSES AND RELAYS	7-86
PROTECTING THE ELECTRONIC AND ELECTRICAL SYSTEMS DURING BATTERY CHARGING OR WELDING	7-91
BATTERY REMOVAL AND INSTALLATION	7-92

STORAGE

TRACTOR STORAGE	7-93
PREPARATION FOR USE AFTER STORAGE	7-94

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

INTRODUCTION	8-1
--------------------	-----

ALARM(S)

FAULT CODES AND SYMBOLS	8-2
-------------------------------	-----

SYMPTOM(S)

ENGINE	8-4
TRANSMISSION	8-5
HYDRAULICS	8-5
THREE POINT HITCH	8-6
BRAKES	8-6
CAB	8-7
ELECTRICAL SYSTEM	8-7

9 SPECIFICATIONS

GENERAL DIMENSIONS	9-1
FRAME AND CAB - General specification	9-1
CAPACITIES	9-4

TRANSMISSION - Capacity	9-5
FRONT AXLE - Capacity	9-5
ENGINE	9-6
TRANSMISSION	9-7
REAR POWER TAKE-OFF	9-8
FRONT POWER TAKE OFF	9-8
HYDRAULIC SYSTEM	9-9
THREE POINT HITCH	9-12
REMOTE CONTROL VALVES	9-13
THREE POINT HITCH FRONT	9-13
BRAKES.....	9-14
STEERING	9-14
ELECTRICAL EQUIPMENT	9-15
MINIMUM HARDWARE TIGHTENING TORQUES	9-16

10 ACCESSORIES

EXTERNAL REAR VIEW MIRRORS.....	10-1
AUXILIARY HEADLIGHTS	10-2
ROTATING BEACON.....	10-3

11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy	11-3
Service record 1st 50 hour, Dealer copy	11-5

1 - GENERAL INFORMATION

METRIC AND IMPERIAL UNITS ABBREVIATIONS

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m²	square foot	ft²
	square millimeter	mm²	square inch	in²
			square inch	in²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency - Rotational				
	revolution per minute	r/min	revolution per minute	r/min^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	μm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per Mass				
	milligram per kilogram	mg/ kg		
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH₂O
	megapascal	MPa	pound per square inch	psi

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Temperature (other than Thermodynamic)				
	degrees Celsius	°C	degrees Fahrenheit	°F
Time				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
Torque (includes Bending moment, Moment of force, and Moment of a couple)				
	newton meter	N m	pound foot	lb ft
			pound foot	lb in
Velocity				
	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimeter per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
Volume (includes Capacity)				
	cubic meter	m³	cubic yard	yd³
				cu yd
	liter	l	cubic inch	in³
	liter	l	US gallon	US gal
			UK gallon	UK gal
			US quart	US qt
			UK quart	UK qt
	milliliter	ml	fluid ounce	fl oz
Volume per time (includes Discharge and Flow rate)				
	cubic meter per minute	m³/min	cubic foot per minute	ft³/min
	liter per minute	l/min	US gallon per minute	US gal/min
	milliliter per minute	ml/min	UK gallon per minute	UK gal/min
Sound power level and Sound pressure level				
	decibel	dB	decibel	dB

Glossary

Acronym	Definition
DEF	Diesel Exhaust Fluid
ISO	International Organization for Standardization
MSDS	Material Safety Data Sheet
NOx	Nitrogen Oxide
PPE	Personal Protective Equipment
SCR	Selective Catalytic Reduction
ULSD	Ultra Low Sulfur Diesel
%	Percent
<	Less than
>	Greater than

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com