

ORIGINAL INSTRUCTIONS - according to Directives 2006/42/EC, Annex I 1.7.4.1

OPERATOR'S MANUAL

T4020

 
T4030

T4040

T4050

Deluxe

Supersteer

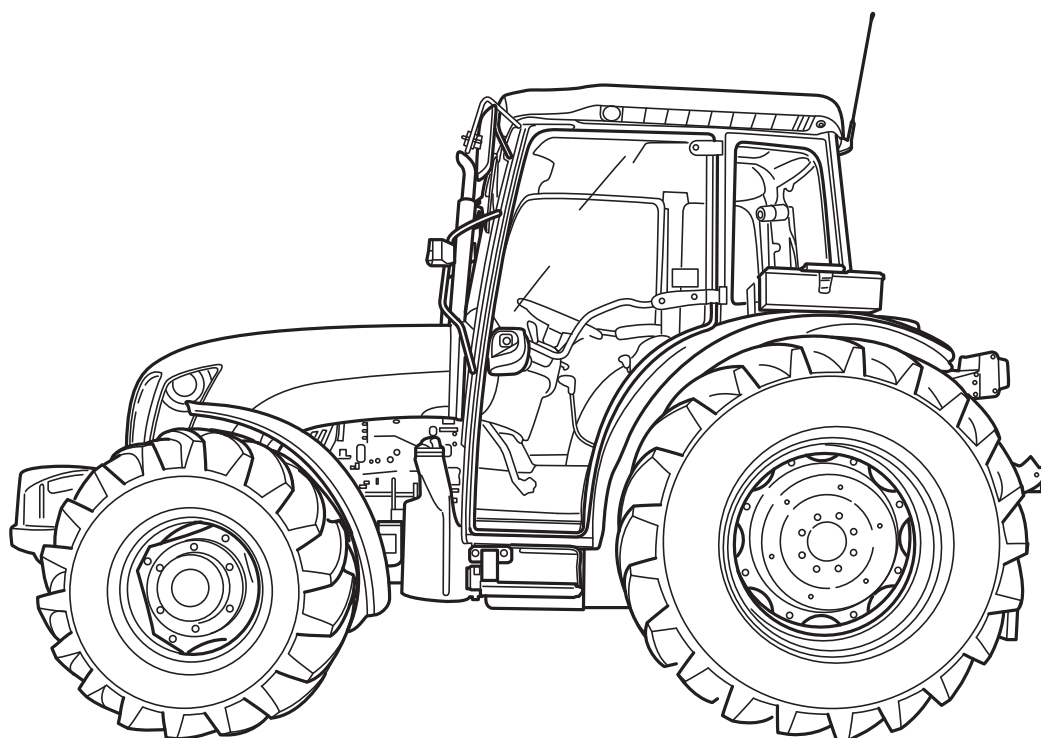

Print No. 84576030

From serial No. "ZCJA12001"

English 05/2012



NEW HOLLAND

AGRICULTURE

SECTION SUMMARY

- 1 – Introduction and safety measures**
- 2 – General information, controls and instruments**
- 3 – Field operation**
- 4 – Lubrication and Maintenance**
- 5 – Troubleshooting**
- 6 – Vehicle storage**
- 7 – Accessories**
- 8 – Specifications and Data**
- 9 – Alphabetical Index**

CE DECLARATION OF CONFORMITY DOCUMENT

Class of 2006/42/EC Annex II	BG Декларация ЕС за съответствие според Директива 2006/42/ЕО	CZ Prohlášení o shodě ES Podlé směrnice 2006/42/ES	DA EU-overensstemmelserklæring i henhold til direktivet 2006/42/EF	DE EG-Konformitätserklärung laut Richtlinie 2006/42/EG	EL Δήλωση Έπισημοσύνης ΕΚ Σύμφωνα με την Οδηγία 2006/42/ΕΚ
1.A.1	№№: [1]	№№: [1]	№№: [1]	№№: [1]	№№: [1]
1.A.2	Представители на Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg	Zastupovatel Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg	repræsentent af Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg	vertreten durch Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg	επισημοσύνη από τον Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg
1.A.3	Декларация, поставяйки пълна отговорност, че výrobek: Traktor s povozom: (2) Model: (3) Typ: (4) Seriennummer: (5)	Prohlášení, jímž prohlašuji, že výrobek: Zemědělský traktor: (2) Model: (3) Typ: (4) Seriennummer: (5)	erklærer på eget ansvar, at produktet: Landbrugsmaskine: (2) Model: (3) Seriennummer: (5)	erkläre auf unsere alleinige Verantwortung, dass das Produkt: Landwirtschaftliche Zugmaschine: (2) Model: (3) Seriennummer: (5)	Δήλωση, υπό αποκλειστική ευθύνη, ότι το προϊόν: Γεωργικό εξοπλισμό: (2) Μοντέλο: (3) Τύπος: (4) Αριθμός σειράς: (5)
1.A.4	за която се отнася настоящата декларация, е съобразен с изискванията на Директива 2006/42/ЕО, променена с: (6)	Pro relevantní implementaci ustanovení této Směrnice byly aplikovány následující harmonizované normy: (7)	hvorel denne erklæring henviser, opfylder alle de relevante krav i direktivet 2006/42/EF, ændret ved: (8)	auf das sich diese Erklärung bezieht, allen einschlägigen Bestimmungen der Richtlinie 2006/42/EG entspricht, abgeändert durch: (8)	στο οποίο αναφέρεται η δήλωση αυτή, είναι σύμφωνα με τις ορισμένες διατάξεις της Οδηγίας 2006/42/ΕΚ, όπως τροποποιήθηκε με: (8)
1.A.7	За реализация на изискванията от Директива 2006/42/ЕО, са приложени следните технически стандарти: (7) • ISO 26322-1 част 1 и 2 Други стандарти: вж. Ръководството за употреба.	Pro relevantní implementaci ustanovení této Směrnice byly aplikovány následující harmonizované normy: (7) • ISO 26322-1 část 1 a 2 • Ostatní normy: viz Návod na používání a přílohy.	ISO 26322-1, del 1 eller 2 Andre Normer: sehe in der Gebrauch- und Wartungsanleitung.	Zu sachgesprochen Umsetzung der Forderungen in der Richtlinie wurden folgende harmonisierte Normen herangezogen: (7) • ISO 26322-1 Teil 1 oder 2 • Andere Normen: siehe in der Gebrauchs- und Wartungsanleitung.	Για την υλοποίηση των διατάξεων της Οδηγίας, έχουν εφαρμοστεί τα ακόλουθα προτυπικά πρότυπα: (7) • ISO 26322-1 μέρος 1 & 2 Άλλοι πρότυποι: αναφέρεται στο Εγχειρίδιο Χρήστη και Λειτουργίας.
1.A.9	Место и дата на декларацията: (7)	Место и дата на прохлáшението: (7)	Sted og dato for erklæringen: (7)	Ort und Datum der Erklärung: (7)	Τόπος και ημερομηνία της δήλωσης: (7)
1.A.10	Име и подпис на упълномощеното лице: (8)	Име и подпис овлаштеното лице: (8)	Bemyndigedes navn og underskrift: (8)	Name und Unterschrift des Befugten: (8)	Όνομα και υπογραφή του εξουσιοδοτημένου προσώπου: (8)
1.A.1	№№: [1]	№№: [1]	№№: [1]	№№: [1]	№№: [1]
1.A.2	Represented by Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg	representados por Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg	Esindatuna Giuseppe Gavio pool, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg	edustajannamme Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg	représentes par Giuseppe Gavio, CNH Europe Holding S.A., 13, Rue Aldringen L-1118 Luxembourg
1.A.3	declared under our sole responsibility, that the product: Tractor agrícola Trade Name: (2) Model: (3) Type: (4) Serial Number: (5)	declaramos, bajo nuestra exclusiva responsabilidad, que el producto: Tractor agrícola Denominación comercial: (2) Modelo: (3) Tipo: (4) Número de serie: (5)	kiinaitame omal vastutusele, et toode: Põllusõiduk Äärmis: (2) Mudeli: (3) Tüüpi: (4) Seeriainumber: (5)	valikustamme omalla vastuullamme, että tuote: Maatalouskoneet Kauppaläsnä: (2) Malli: (3) Tyyppi: (4) Sarjanumero: (5)	declaenr sous laur propre responsabilité, que le produit: Tracteur agricole Dénomination Commerciale: (2) Modèle: (3) Type: (4) Numéro de série: (5)
1.A.4	to which this declaration refers, fulfil all the relevant provisions of the Directive 2006/42/EC, amended by (6)	el cual se refiere la presente declaración, en conforme a las disposiciones pertinentes de la Directiva 2006/42/EC, modificada por (6)	millä kiinnitetyllä deklaratsioon viitab, täidab kõik direktiiv 2006/42/EÜ ja selle paranduste (6) nõuded.	johon tään valustus viitab, vastab direktiiv 2006/42/EÜ vaatusteks ja muudost (6).	à laquelle se réfère la présente déclaration en conforme aux dispositions pertinentes de la Directive 2006/42/CE, amendée par (6)
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonized) standards have been applied: (7) • ISO 26322-1 part 1 & 2 Other standards: see Operator Manual	Para la implementación de las disposiciones pertinentes de la Directiva se han aplicado las siguientes normas armonizadas: (7) • ISO 26322-1 parte 1 & 2 Otras normativas: véase el Manual de Uso y Mantenimiento.	Direktiivi nõuete aegkohasuse tähtsuse os rakendatud järgnevaid (ühendustund) standardeid: (7) • ISO 26322-1 osa 1 ja 2 Muud standardid: vt Kasutus- ja hooldusjuhend.	Direktiivi vaatimusten täytännölläpönnänsä on käytetty seuraavia yhdenmukaistettuja standardeja: (7) • ISO 26322-1 osan 1 ja 2 Muut standardit: ks. käyttö- ja huolto-opas.	Pour mettre en œuvre les dispositions de la Directive, on a appliqué les normes harmonisées: (7) • EN 26322-1 partie 1 ou 2 Autres normes: voir Manuel d'Utilisation et d'Entretien.
1.A.9	Place and date of the declaration: (7)	Lugar y fecha de la declaración: (7)	Deklaratsiooni viijandamine koht ja aeg: (7)	Vaikutuksen antopaikka ja -päivä: (7)	Lieu et date de la déclaration: (7)
1.A.10	Name and signature of the authorized person: (8)	Nombre y firma de la persona autorizada: (8)	Võitlõidus isikunimi ja allkiri: (8)	Vaikutuksen henkötön nimi ja allekirjoitus: (8)	Nom et signature de la personne autorisée: (8)
1.A.1	№№: [1]	№№: [1]	№№: [1]	№№: [1]	№№: [1]
1.A.2	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)
1.A.3	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)
1.A.4	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)
1.A.7	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)
1.A.9	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)
1.A.10	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)
1.A.1	№№: [1]	№№: [1]	№№: [1]	№№: [1]	№№: [1]
1.A.2	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)
1.A.3	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)
1.A.4	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)
1.A.7	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)
1.A.9	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)
1.A.10	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)	Alkalmazottak: (1)



CNH Europe Holding S.A.
Rue Aldringen, 13
L-1118 LUXEMBOURG
(Luxembourg)

[1] [2] [3] [4] [5] [6] [7] [8]

Here above is provided copy of the "EC" Declaration of Conformity (EC Declaration of Conformity according to 2006/42/EC).

The EC Declaration of Conformity is the manufacturer's declaration about equipment compliance to relevant EU provisions.

Please keep the original document in a safe place. Local authorities may require you to show this document in order to assure compliance of your equipment.

Translation of this declaration in your own country language is provided on the original document

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Giuseppe Gavioli, CNH Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6].
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: <ul style="list-style-type: none"> • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorised per- son: [8]

HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- FOPS level on your tractor cab is certified according to **OECD Code 10**.
- BLUE CAB is certified **Category 2** according to **EN 15695-1**.
- HVAC (Heating, ventilation Air Conditioning) CAB is certified **Category 1** according to **EN 15695-1**.
- HV (Heating, ventilation) cab is certified **Category 1** according to **EN 15695-1**.
- NOISE EMISSION LEVELS are rated according to **77/311/EEC**.
- VIBRATION LEVELS are rated according to **78/764/EEC**.
- ROPS PROTECTION is certified according to **EN 15694**.

NOTE: See safety section 1 in this manual for further explanation and details on above mentioned standards and specific terminology.

METRIC AND IMPERIAL UNITS ABBREVIATIONS

TYPICAL APPLICATIONS	RECOMMENDED SI (METRIC) UNITS		IMPERIAL UNIT	
	NAME	SYMBOL	NAME	SYMBOL
AREA				
Land area	hectare	ha	acre	
	square meter	m ²	square foot square inch	ft ² in ²
	square millimetre	mm ²	square inch	in ²
ELECTRICITY				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
FORCE				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
FORCE PER LENGTH				
	newton per metre	N/m	pound per inch	lb/in
FREQUENCY				
	megahertz	MHz	Megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
FREQUENCY - ROTATIONAL				
	revolution per minute	r/min rpm	revolution per minute	r/min ^(a) rpm
LENGTH				
	kilometre	km	mile	mi
	meter	m	foot	ft
	centimetre	cm	inch	in
	millimetre	mm	inch	in
	micrometer	μm		
MASS				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		

TYPICAL APPLICATIONS	RECOMMENDED SI (METRIC) UNITS		IMPERIAL UNIT	
	NAME	SYMBOL	NAME	SYMBOL
POWER				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour Btu per minute	Btu/hr Btu/min
PRESSURE or STRESS (FORCE PER AREA)				
	kilopascal	kPa	pound per square inch inch of mercury	psi inHg
	pascal	Pa	inch of water	inH ₂ O
	megapascal	Mpa	pound per square inch	psi
TEMPERATURE (other than THERMODYNAMIC)				
	degrees Celsius	°C	degrees Fahrenheit	°F
TIME				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
TORQUE (includes BENDING MOMENT, MOMENT OF FORCE, and MOMENT OF A COUPLE)				
	newton meter	N m N m	pound foot pound inch	lb ft lb in
VELOCITY				
	kilometre per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimetre per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
VOLUME (includes CAPACITY)				
	cubic meter	m ³	cubic yard	yd ³ cu yd
	litre	l	cubic inch	in ³
	litre	l	US gallon UK gallon US quart UK quart	US gal UK gal US qt UK qt
	millilitre	ml	fluid ounce	fl oz

TYPICAL APPLICATIONS	RECOMMENDED SI (METRIC) UNITS		IMPERIAL UNIT	
	NAME	SYMBOL	NAME	SYMBOL
VOLUME PER TIME (includes DISCHARGE and FLOW RATE)				
	cubic meter per minute	m ³ /min	cubic foot per minute	ft ³ /min
	litre per minute	l/min	US gallon per minute	US gal/min
	millilitre per minute	ml/min	UK gallon per minute	UK gal/min
SOUND POWER LEVEL and SOUND PRESSURE LEVEL				
	decibel	dB	decibel	dB

CONTENTS

CE DECLARATION OF CONFORMITY DOCUMENT	1
HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR	2

SECTION 1

Communications for the user	1-1
Identification plates	1-2
Important ecological considerations	1-5
Safety messages used in this manual	1-6
Working safely	1-7
Safety decals	1-13
Guards and safety covers	1-19
Tractor noise level information sheet	1-21
Tractor vibration level information sheet	1-22
Protection offered by the tractor	1-23
Machine stability	1-26
Fire or explosion prevention	1-29
Intended use of your tractor	1-30
Tractors main components	1-33

SECTION 2

General notes, controls and instruments	2-1
Analog control panel	2-2
Digital instrument control panel	2-8
Multifunction display	2-13
Light control lever	2-30
Operating controls	2-31
Cab	2-41
Mechanical transmission (16F+16R) 18.64/24.35 mph (30/40 km/h)	2-52
Mechanical transmission (28F+16R) 18.64/24.35 mph (30/40 km/h)	2-56
Mechanical transmission (32F+16R) 18.64/24.35 mph (30/40 km/h)	2-58
Electrohydraulic transmission (32fwd+16rev) 30/40 km/h	2-60
Electrohydraulic transmission (44fwd+16rev) 30/40 km/h	2-64
Fast transmissions 24.35 mph (40 km/h)	2-69

SECTION 3

Field operation	3-1
Starting and stopping	3-2
Brakes	3-6
Mechanical 4WD	3-8
Electrohydraulically controlled four-wheel drive	3-9
Differential lock	3-10
Lim-Slip front differential lock	3-11
Electrohydraulic differential lock	3-12
Power Take- Off	3-14
Hydraulic lift with mechanical control	3-19
Electronically controlled hydraulic lift	3-23
Rear three-point linkage	3-30
Implement linkage points	3-34
Rear remote auxiliary control valves	3-39
Front 2 WD wheel track adjustment	3-42
4WD wheel track adjustment	3-44
Tyres	3-51
Metal ballast	3-66
Liquid ballasting	3-67
Permitted maximum weights	3-70

SECTION 4

Lubrication and maintenance	4-1
Running in period	4-2
Fuelling the tractor	4-3
Access for inspection and maintenance	4-7
Lubrication and maintenance table	4-8
Instrument panel warning lights	4-8
Flexible maintenance	4-11
EVERY 10 HOURS OF WORK	4-20
EVERY 50 HOURS OF WORK	4-21
EVERY 100 HOURS OF WORK	4-26
EVERY 300 HOURS OF WORK	4-29
EVERY 500/600 HOURS OF WORK	4-34
EVERY 1200 HOURS OR EVERY YEAR	4-38
EVERY 1200 HOURS OF WORK OR EVERY 2 YEARS	4-40
EVERY 1800 HOURS OF WORK	4-46
Electrical System	4-47
Fuelling	4-80

SECTION 5

Troubleshooting, causes and solutions	5-1
---	-----

SECTION 6

Storing the tractor	6-1
---------------------------	-----

SECTION 7

Accessories	7-1
Front Power Take Off	7-2
Mechanically controlled front hydraulic lift	7-4
Electronically controlled front hydraulic lift	7-5
Front three-point linkage	7-11
Quick fit implement linkage	7-20
Towing equipment	7-22
Hydraulically operated towing hitch	7-26
Joystick	7-28
Control valve for trailer hydraulic brakes	7-29

SECTION 8

Specifications and data	
-------------------------	--

SECTION 9

Alphabetical index	
--------------------	--

SECTION 1

GENERAL INFORMATION AND SAFETY PRECAUTIONS

SPARE PARTS

“Non-original” spare parts have not been tested or authorised by the Manufacturer.

Installment and/or use of such products may adversely affect the tractor’s design specifications, thereby compromising operational safety. The manufacturer cannot be held responsible for any damage resulting from the use of “non-original” spare parts.

No modifications may be made to the tractor without written authorisation from the Manufacturer.

WARRANTY

The tractor is guaranteed in accordance with current legislation in your country and in line with contractual agreements reached with the dealer at the time of sale.

However, the warranty is no longer valid if the rules and instructions for the use and maintenance of the tractor, described in this Manual, are not observed.

CLEANING THE TRACTOR

Your tractor is an advanced machine, fitted with an electro-hydraulic control system. Care must be taken when cleaning the tractor, especially if a pressurised water cleaner is used.

- When using a pressure washer, never stand too close to the tractor or direct the water jet on electrical components, seals or intake openings, etc..
- Never direct jets of cold water at the hot engine or exhaust. See also Section 4 (Recommendations for bodywork maintenance).

TRACTOR IDENTIFICATION PLATES

 
Serial numbers identify the tractor and its main components. The identification data must be supplied by the dealer for requests for spare parts or service operations. Identification data is of fundamental importance in the event of theft of the tractor. The location of the various identification data is shown below.

TRACTOR CHASSIS FRAME IDENTIFICATION DATA PLATE – Fig. 1

The tractor's frame number is stamped over the front support (1). It gives the safety frame identification data.

Indicate below the corresponding serial number.

No. _____

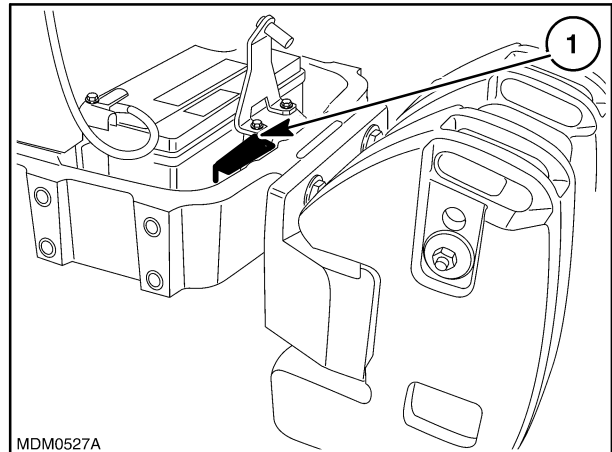

MDM0527A

 
1

TRACTOR TYPE-APPROVAL SUMMARY DATA PLATE FOR MODELS WITH ROLL BAR – Fig. 2

The plate (1) is on the right-hand side.

Indicate below the corresponding serial number.

No. _____

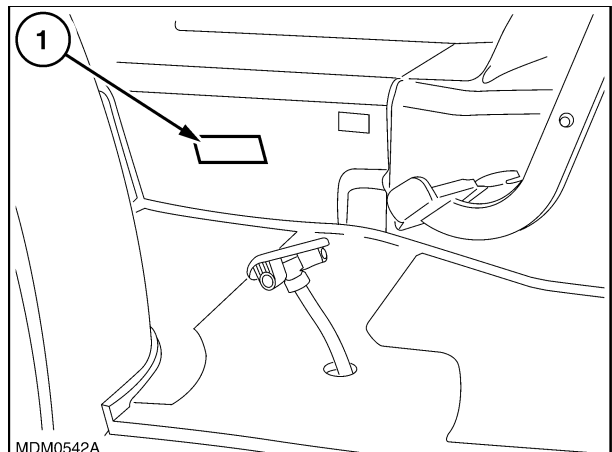

MDM0542A

 
2

TRACTOR TYPE-APPROVAL SUMMARY DATA PLATE FOR MODELS WITH CAB

The plate (1) is inside the cab on the right-hand side.

Indicate below the corresponding serial number.

No. _____

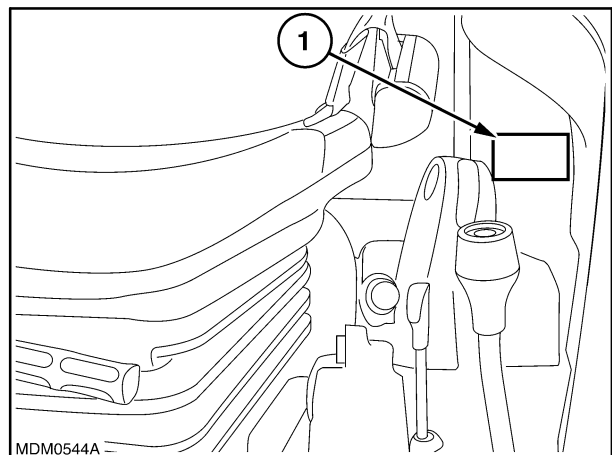

MDM0544A

 
3

**ENGINE IDENTIFICATION DATA PLATE
(models T4040 and T4050) – Fig. 4**

The serial number of the engine fitted on the tractor is stamped on the right-hand side of the engine body (1).

Indicate below the corresponding serial number.

No.

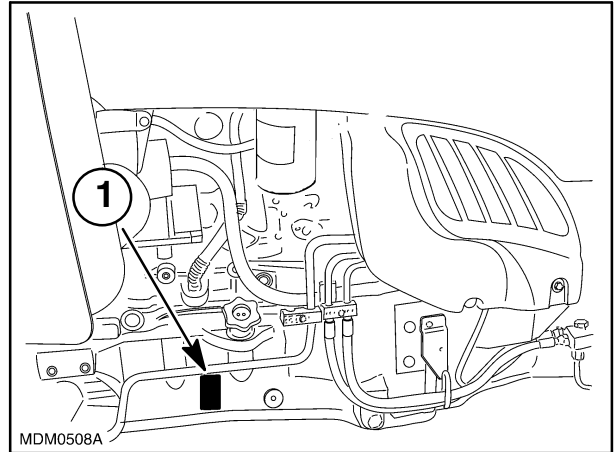


4

**ENGINE IDENTIFICATION DATA PLATE
(models T4020 and T4030) FIG – 5**

The serial number (1) of the engine fitted on the tractor is stamped on the left-hand side of the engine body near the hydraulics pumps.

Indicate below the corresponding serial number.

 N^o

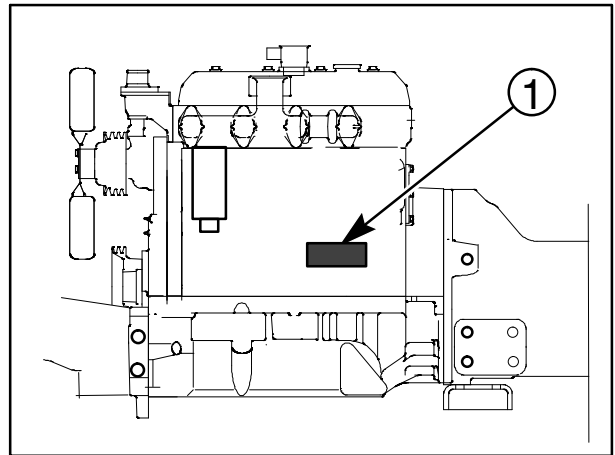


ROLL BAR IDENTIFICATION PLATE – Fig. 6

The plate (1) is inside the right-hand upright of the frame.

Indicate below the corresponding serial number.

 No.

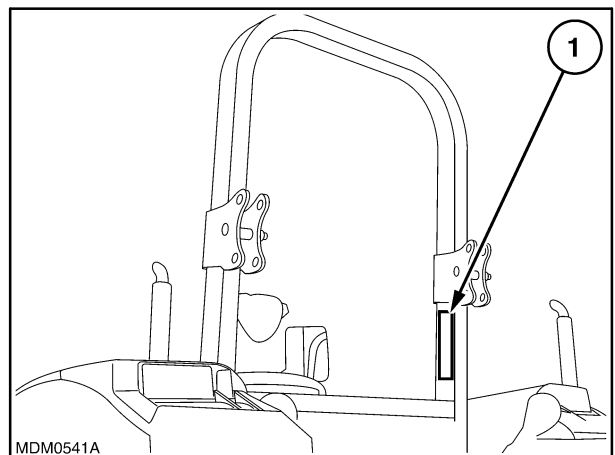

6

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com