

LX232

Front End Loader

Operator's Manual

For JX, JXC and JX1U Series Tractors

87056721
(Replaces 6-39582)

CASE *III*






THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF DEATH OR SERIOUS INJURY.

M171C

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation that, if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE DEATH OR SERIOUS INJURY. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

 
- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow CNH America LLC instructions on machine operation and maintenance.

GENERAL TABLE OF CONTENTS

1 - TO THE OWNER	1
LX232 FRONT END LOADER	1
TO THE OWNER	2
2 - IDENTIFICATION NUMBER AND MAIN MACHINE COMPONENTS	3
PRODUCT IDENTIFICATION NUMBER	3
MACHINE MAIN COMPONENTS	4
3 - SAFETY/DECALS	5
SAFETY	5
SERVICE AREA, FIRE EXTINGUISHER, FIRST AID KIT	9
CONNECT QUICK ATTACH	9
SAFETY DECALS	11
4 - GENERAL/SETUP INFORMATION	13
ECOLOGY AND THE ENVIRONMENT	13
TORQUE SPECIFICATIONS	14
HYDRAULIC FITTINGS	15
GENERAL INFORMATION	17
BUCKET MOUNTING INSTRUCTIONS	18
AXLE OSCILLATION STOPS	23
5 - TRACTOR/LOADER CONNECTIONS	25
MOUNTING THE LOADER	25
6 - OPERATION	55
MACHINE OPERATION	55
GRAPPLE OPERATION	66
7 - TROUBLESHOOTING	79
TROUBLESHOOTING	79
8 - LUBRICATION AND MAINTENANCE	83
ENVIRONMENT	83
PLASTIC AND RESIN PARTS	83
GENERAL SAFETY AND TRACTOR MAINTENANCE INFORMATION	83
LOADER LUBRICATION	84
BUSHING REPLACEMENT	86
HYDRAULIC CYLINDER REMOVAL AND INSTALLATION	92
LOADER FRAME DRAIN HOLES	94
9 - STORAGE	95
STORING THE LOADER	95
REMOVING FROM STORAGE	96
10 - SPECIFICATIONS	97
SPECIFICATIONS	97
DETAIL INDEX	109

LX232 FRONT END LOADER

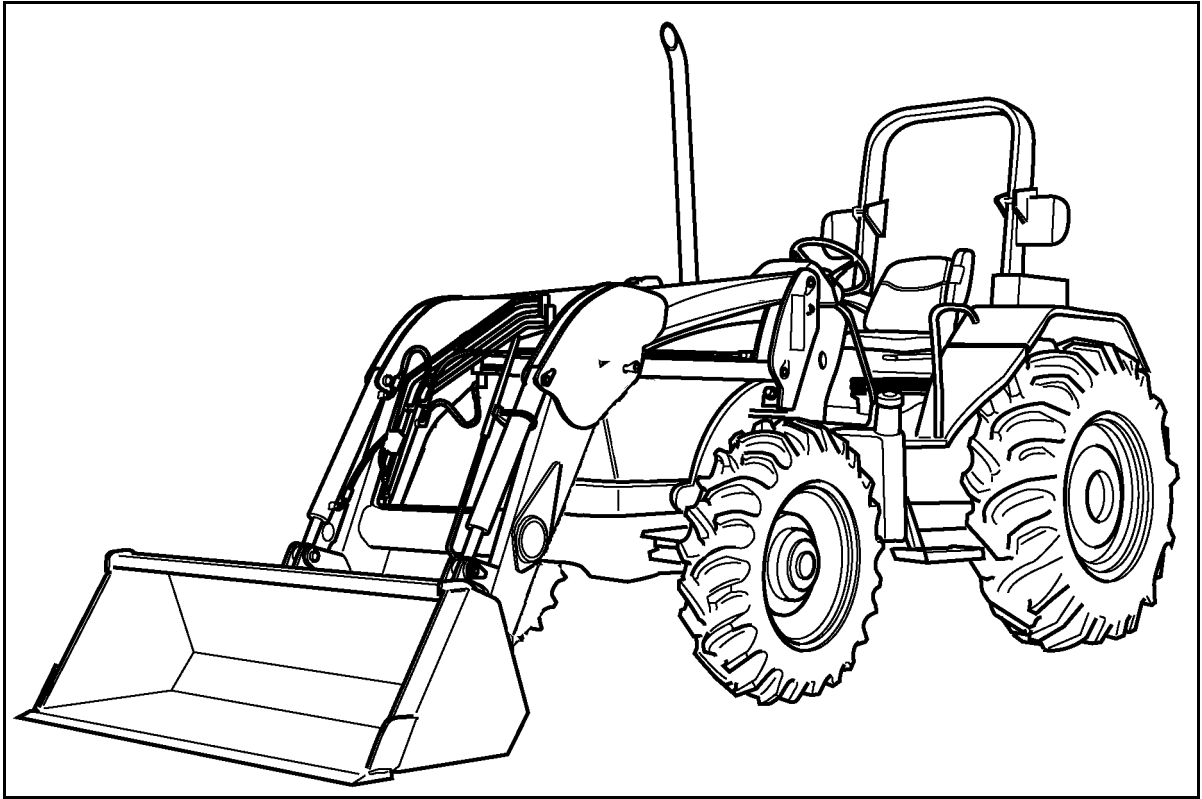

20033349

NOTE: *The Left and Right sides of the machine are the same as your Left and Right hand while seated in the Tractor Operator's Seat facing forward.*

TO THE OWNER

 
This manual contains important information about the safe operation, adjustment and maintenance of your Front End Loader. Refer to the Detail Index at the end of this manual for locating specific items about your machine.

DO NOT operate or permit anyone to operate or service this machine until you or the other persons have read this manual. Use only trained operators who have demonstrated the ability to operate and service this machine correctly and safely.

This Front End Loader, with standard equipment and authorized attachments, is intended to be used for above ground digging, land leveling, loading and material handling.

DO NOT use this machine for any application or purpose other than those described in this manual. Consult an authorized dealer or the manufacturer on changes, additions or modifications that can be required for this machine to comply with various country regulations and safety requirements. Unauthorized modifications may cause serious injury or death. Anyone making such unauthorized modifications is responsible for the consequences.

This Operator's Manual is to be stored in the Tractor Operator's Manual Storage Compartment. Make sure this manual is complete and in good condition. Contact your dealer to obtain additional manuals. Use only manufacturer approved service parts. Your dealer has technicians and staff with special training who knows the best methods of operation, repair and maintenance of your Front End Loader and your particular application.

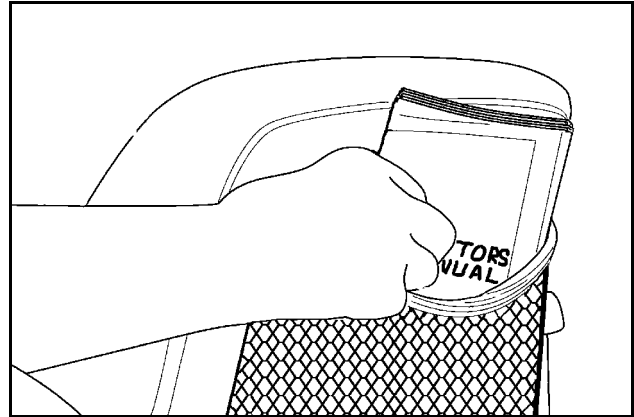


20033351

PRODUCT IDENTIFICATION NUMBER

When ordering parts or when requesting information or assistance always give the following information:

 1. Machine Name
2. Model Number
3. Product Identification Number (P.I.N.)

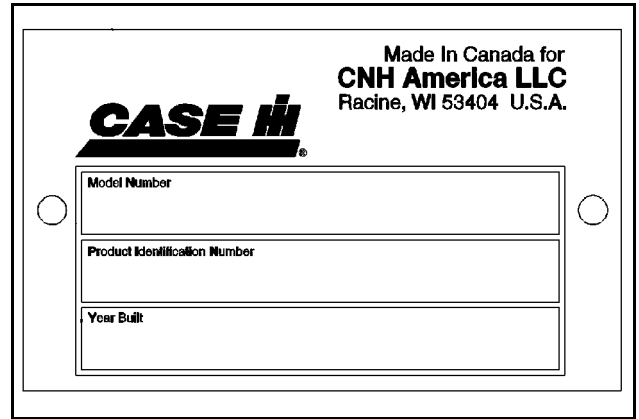

The diagram shows a rectangular plate with the CASE IH logo on the left and manufacturing information on the right. The manufacturing information includes 'Made In Canada for CNH America LLC' and 'Racine, WI 53404 U.S.A.'. Below the logo is a table with three rows for identifying information.

Model Number
Product Identification Number
Year Built

 
86988678

P.I.N. PLATE

Write the model and Product Identification Number of your Front End Loader on the lines below:

MODEL NUMBER

LOADER PRODUCT IDENTIFICATION NUMBER

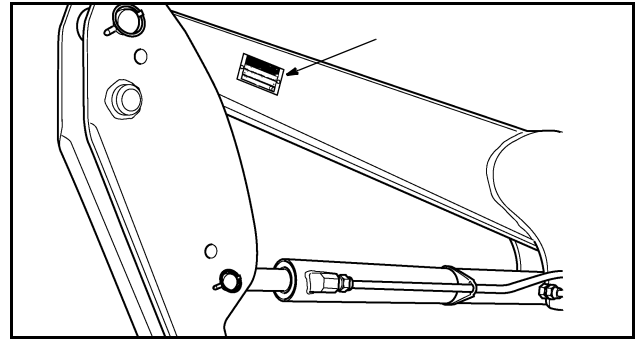


10022534

P.I.N. LOCATION

MACHINE MAIN COMPONENTS

 Standard Loader

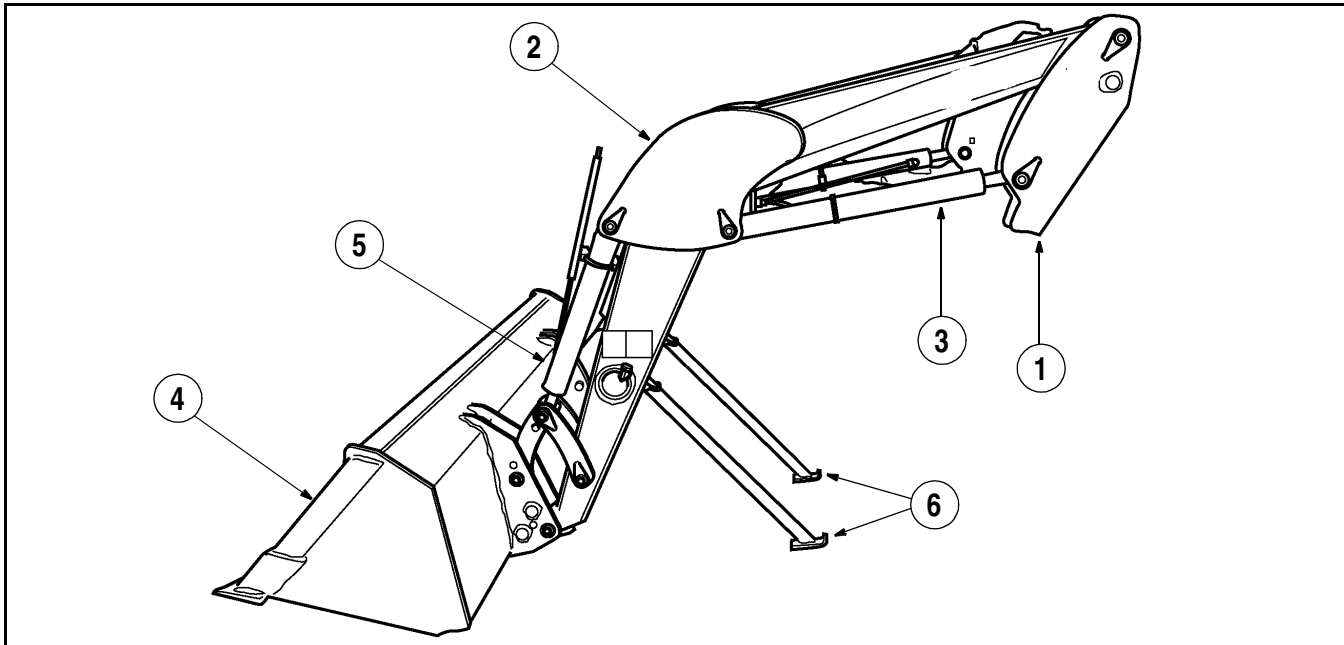


10022565

1. LOADER TOWER
2. LOADER BOOM

3. LIFT CYLINDER
4. LOADER BUCKET

5. BUCKET CYLINDER
6. PARK STANDS

 Mechanical Self-Leveling (MSL) Loader

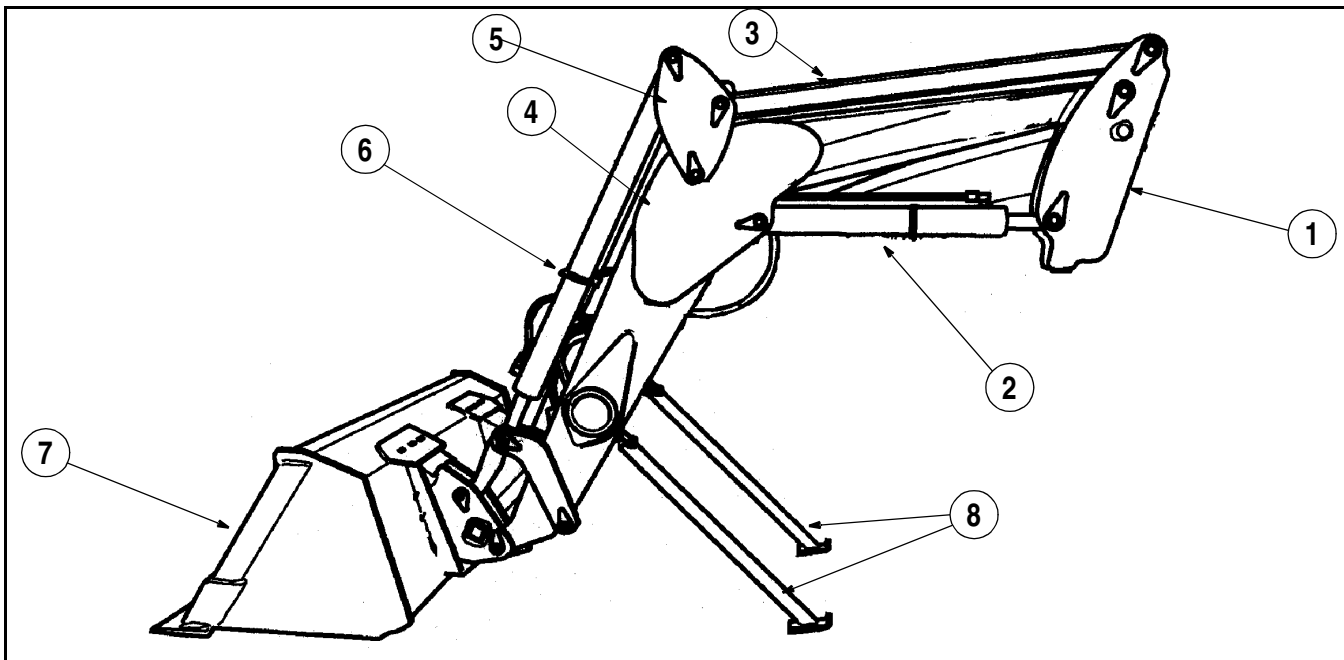

20033350

1. LOADER TOWER
2. LIFT CYLINDER
3. MSL LINK

4. LOADER BOOM
5. LOADER PIVOT PLATE
6. BUCKET CYLINDER

7. LOADER BUCKET
8. PARK STANDS

SAFETY

Understand that your safety and the safety of other persons is measured by how you service and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

READ THIS MANUAL COMPLETELY and make sure you understand the controls. All equipment has a limit. Make sure you understand the stability and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

CNH America LLC is continuing to work for your safety by making machines with better protection and by giving these rules for safe operation.



THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF DEATH OR SERIOUS INJURY. M171C



GENERAL SAFETY RULES



- Before starting engine study Operator's Manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating. It is your responsibility to understand and follow manufacturers instructions on machine operation, service, and to observe pertinent laws and regulations. Operator and Service Manuals may be obtained from your equipment dealer. R103A
 - DO NOT modify the machine. Unauthorized modifications may cause operational malfunction or safety hazard.
 - ALWAYS make sure working area is clear of other persons, pets, tools, etc. before you start operating this machine. NEVER allow anybody in work area during machine operation.
 - Keep service area clean and dry. Wet or oily floors are slippery. Wet areas can be dangerous when working with electrical equipment. Be sure all electrical outlets and tools are properly grounded.
 - Before leaving the machine, stop the engine, place all controls in neutral, engage the parking brake and remove the key. M581A
 - A frequent cause of personal injury or death is persons falling off and being run over. DO NOT permit anyone to ride on the machine. M265A
 - Hydraulic oil or diesel fuel leaking under pressure can penetrate the skin and cause infection or other injury.
- To Prevent Personal Injury:
Relieve all pressure before disconnecting fluid lines or performing work on the hydraulic system. Before applying pressure, make sure all connections are tight and components are in good condition.
NEVER use your hand to check for suspected leaks under pressure.
Use a piece of cardboard or wood for this purpose.
If injured by leaking fluid, see your doctor immediately. M149C



PERSONAL SAFETY



RH02F040




Throughout this manual and on the machine's safety decals, you will find precautionary statements: **DANGER**, **WARNING** or **CAUTION** followed by specific instructions or ISO two-panel safety pictorial symbols. These precautions are intended for your personal safety.

Failure to follow the **DANGER**, **WARNING** or **CAUTION** instructions may result in death or serious bodily injury.

DANGER, **WARNING** or **CAUTION** are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation that, if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

ISO two panel **pictorial symbol decals** are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



GENERAL TRACTOR SAFETY RULES



- Operate the Tractor only from the operator's seat.
- Use approved rollover protection and seat belt for safe operation. Overturning a Tractor without an approved roll bar could result in death or serious injury. If the Tractor is not equipped with the proper rollover protection, see your dealer to obtain the proper parts. If the Tractor is equipped with a cab, make certain the cab is approved for rollover protection.
- Always use the seat belt on Tractors equipped with a roll bar or cab. DO NOT use a seat belt if operating the Tractor without a roll bar or cab.
- Add wheel ballast and/or rear weights as recommended in the Operator's Manual to provide adequate stability when using a Loader.
- Position the wheels to the Tractor manufacturer's widest recommended settings to increase stability.
- Move and turn the Tractor at low speeds.
- Before starting the engine, be sure all operating controls are in the NEUTRAL or PARK position. This will eliminate accidental movement of the machine or start up of power driven equipment.
- Before leaving the Tractor, stop the engine, put all controls in NEUTRAL or PARK, engage the park brake and remove the key.
- When transporting the Loader, engage the Loader control joystick neutral lock ring to prevent accidental cycling of the Loader.



GENERAL LOADER SAFETY RULES



- Improper use of a Loader can cause death or serious injury.
- NEVER use the Loader to lift or carry anyone within the bucket, frame or attachment. Death or serious injury could result from falling off the Tractor or Loader during transport or operation.
- NEVER allow anyone to get under the Loader bucket or reach through the lift arms when the bucket is in the raised position.
- DO NOT walk or work under a raised Loader, bucket or attachment unless it is securely blocked or held in position. Accidental movement of a control lever or a leak in the hydraulic system could cause the main frame to drop or attachment to dump causing death or serious injury.
- Make sure all dismounted Loaders on park stands are on a hard level surface with all safety devices engaged to prevent the parked Loader from falling and being damaged or injuring someone.
- DO NOT repair, remove or replace any parts of the Loader while in the dismounted, parked position.
- ELECTROCUTION HAZARD - Avoid overhead wires and obstacles when the Loader is raised. Contacting overhead electrical lines can cause severe electrical burns or death from electrocution. Make sure sufficient clearance is available before raising the Loader.



GENERAL OPERATING SAFETY RULES

 


- The equipment owner is responsible to make sure all operators read this manual thoroughly and understand the safety precautions and proper operating procedures. Be sure all operators are qualified before allowing operation of the equipment.
- Always check with proper authorities for underground utilities before digging.
- Exercise caution when operating the Loader with a raised bucket or attachment.
- Avoid loose fill, rocks and holes. These are dangerous conditions for Loader operation or transport.
- Use caution when operating on steep grades. Always carry the bucket or attachment in the lowest possible position to maintain maximum stability. Select the proper gear BEFORE attempting to travel on a steep grade. Avoid shifting on grades and never “free wheel”.
- Be sure to allow for the length of the Loader when making turns or working in confined areas.
- Stop the Loader arms gradually when raising or lowering the Loader.
- Carry the bucket or attachment as low as possible to increase visibility during transport.
- When parked or during servicing of the Loader, lower the bucket to the ground, stop the engine, set the park brake and remove the key. Special care should be taken to park or store attachments with sharp points or edges in a safe manner.
- DO NOT operate Loader controls unless properly seated in the Operator’s seat.
- NEVER attempt to handle large, heavy objects such as large round or rectangle bales, logs or oil drums unless the specific special attachments are used. Handling such objects is not recommended without special equipment.
- Handling large heavy objects can be dangerous due to the following:
 - A. Danger of overturning the Tractor
 - B. Danger of upending the Tractor
 - C. Danger of the object rolling or sliding down the Loader arms onto the operator
- If handling large heavy objects must be performed adhere to the following:
 - A. Always use the proper attachment
 - B. Never lift the load higher than necessary to clear the ground while moving
 - C. Ballast the rear of the Tractor to compensate for the weight of the load
 - D. Never lift large or heavy objects with equipment that does not have an anti-rollback device (grapple)
 - E. Move slowly and carefully, avoiding rough or uneven terrain
- Loader lift capacity and break-away capacity diminish as the Loader height is increased. Use care not to grasp more material than the loader is designed to handle.


SERVICE AREA, FIRE EXTINGUISHER, FIRST AID KIT

IMPORTANT: *Keep the area used for servicing the machine clean and dry. Wet or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment. Be sure all electrical outlets and tools are properly grounded.*

It is recommended that you have a Fire Extinguisher and a First Aid Kit in your maintenance area.

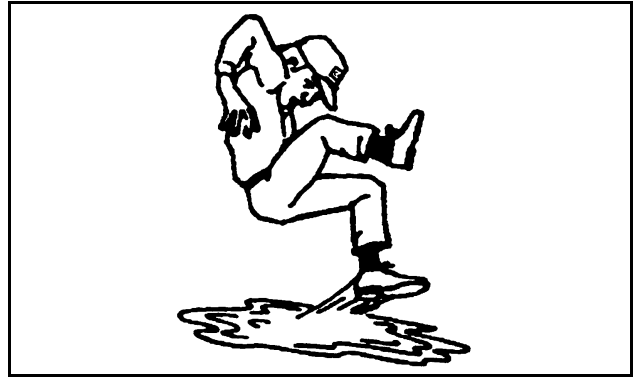


RH01N064

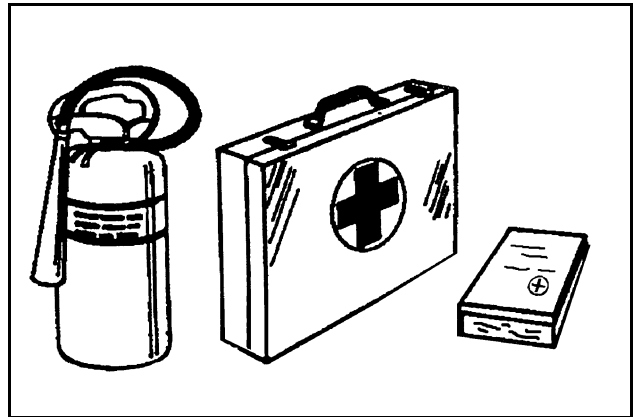 

RH99E028

CONNECT QUICK ATTACH

 ATTENTION: *DO NOT operator the Loader without having the quick attach connected to the front linkage.*

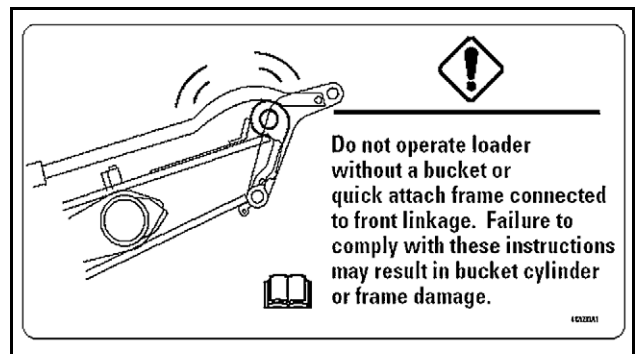

RH05E001



Our support email:

ebooklibonline@outlook.com