NEW HOLLAND TG210 TG230 TG255 TG285

(Replaces 87056058)







THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF DEATH OR SERIOUS INJURY.

M171C

If Safety Decals on this machine use the words **Danger**, **Warning or Caution**, which are defined as follows:

- DANGER: Indicates an immediate hazardous situation that, if not avoided, will
 result in death or serious injury. The color associated with Danger is RED.
- WARNING: Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.
- CAUTION: Indicates an potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as





and

if used, are RED.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE DEATH OR SERIOUS INJURY. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow CNH America LLC instructions on machine operation and maintenance.

87059621 Issued May, 2005

477 (Replaces 87056058) © 2005 CNH America LLC

New Holland Technical Manuals

Manuals are available from your Dealer for the operation, service and repair of your machine. For prompt, convenient service, contact your Dealer for assistance in obtaining the manuals for your machine.

Always give the Machine Name, Model and Serial Number of your machine so your Dealer can provide the correct manuals for your machine.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds. Wash hands after handling.

CNH America LLC is continually striving to improve its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

GENERAL TABLE OF CONTENTS

	ACTOR INTENDED USE	
	L STORAGE COMPARTMENT	
	CATION AND SERIAL NUMBERS	
	ENTS	
BUSINESS BAND RA	ADIOS	7
	,	
INSTRUCTIONAL SE	EAT SAFETY	12
MAINTENANCE SAF	ETY	13
FIRE SAFETY		13
MACHINE OPERATION	ON AND ROLL-OVER SAFETY	14
HAZARDOUS CHEM	IICALS	15
SAFETY DECALS		16
ROLL OVER PROTE	CTIVE STRUCTURE (ROPS)	20
	IDOWS	
	EW MIRROR	
	G LAMPS AND SMV SYMBOL	
	NG LAMPS AND SMV SYMBOL	
3 - OPERATING CONT	ROLS	29
	WITH AIR SUSPENSION	
	EAT (IF EQUIPPED)	
	C (IF EQUIPPED)	
	CONTROLS	
	CONTROLS	
	OLE CONTROLS	
	E CONTROLS	
	ER CONTROLS	
	RATURE SYSTEM CONTROLS (IF EQUIPPED)	
	RATURE CONTROL SYSTEM (IF EQUIPPED)	
	RATURE CONTROL OPERATION	
	PPED)	
	D)	
	JIPPED)	
	EW MIRROR	
	ORS (IF EQUIPPED)	
J JJ., JJ., JJ., J., J., J., J., J		
4 - INSTRUMENTATIO	N	69
	MENTATION (EARLY VERSION)	
	TER (PANEL 1)	
FUNCTIONAL DATA	AND PROGRAMMABLE DISPLAY (PANEL 2)	71
	E DISPLAY MONITOR	
WARNING DISPLAY	S (PROGRAMMABLE DISPLAY)	92
	ONITOR (PANEL 3)	
. Litt Still at the		07

4	- INSTRUMENT CLUSTER (LATER VERSION) PROGRAMMING THE DISPLAY MONITOR CHANGING TIRE RADIUS TIRE AVERAGE ROLLING RADIUS CHART RADAR SENSOR CALIBRATION RADAR CALIBRATION PROCEDURE OLD HOURS OPERATOR ADJUSTED MENU PROGRAM WARNING/FAULT DISPLAYS	112 118 119 120 121 121 122 123
5	- OPERATING INSTRUCTIONS	
	BEFORE STARTING THE ENGINE	
	SERVICE INDICATOR LAMPS AND BAR GRAPH DISPLAYS	
	SEAT BELTS	
	NORMAL ENGINE STARTING PROCEDURE	
	STOPPING THE ENGINE	
	COLD TEMPERATURE OPERATION	
	TRANSMISSION	
	SHUTTLE SHIFTING	
	AUTOSHIFT OPERATION	
	CREEPER SPEED OPERATION (IF EQUIPPED)	
	SUSPENDED FWD AXLE OPERATION (IF EQUIPPED)	167
	DYNAMIC RIDE CONTROL OPERATION (IF EQUIPPED)	
	CONSTANT ENGINE SPEED OPERATION (ELECTRONIC ENGINES ONLY)	
	TOWING THE TRACTOR	
	HOW TO TRANSPORT THE TRACTOR	1/4
	FIELD OPERATION GENERAL PROCEDURES FOR CONNECTING IMPLEMENTS POWER TAKEOFF (PTO) THREE POINT HITCH HITCH OPERATION DRAWBAR PREPARATION ZUIDBERG FRONT HITCH (IF EQUIPPED) REMOTE HYDRAULICS LOADER OPERATION CHEMICAL TANK MOUNTING AUXILIARY POWER CONNECTIONS MONITOR MOUNTING GROUND SPEED SENSOR CONNECTOR TRAILER BRAKE CONNECTOR (IF EQUIPPED) CAB STEPS	175 177 192 208 224 230 235 252 253 255 258 259 260 262
	GENERAL PROCEDURES FOR CONNECTING IMPLEMENTS POWER TAKEOFF (PTO) THREE POINT HITCH HITCH OPERATION DRAWBAR PREPARATION ZUIDBERG FRONT HITCH (IF EQUIPPED) REMOTE HYDRAULICS LOADER OPERATION CHEMICAL TANK MOUNTING AUXILIARY POWER CONNECTIONS MONITOR MOUNTING GROUND SPEED SENSOR CONNECTOR TRAILER BRAKE CONNECTOR (IF EQUIPPED)	175 177 192 208 224 230 235 252 253 255 258 259 260 262
	GENERAL PROCEDURES FOR CONNECTING IMPLEMENTS POWER TAKEOFF (PTO) THREE POINT HITCH HITCH OPERATION DRAWBAR PREPARATION ZUIDBERG FRONT HITCH (IF EQUIPPED) REMOTE HYDRAULICS LOADER OPERATION CHEMICAL TANK MOUNTING AUXILIARY POWER CONNECTIONS MONITOR MOUNTING GROUND SPEED SENSOR CONNECTOR TRAILER BRAKE CONNECTOR (IF EQUIPPED) CAB STEPS - IN-FIELD PERFORMANCE DIFFERENTIAL LOCK FWD OPERATION	175 177 192 208 224 230 235 252 253 255 258 260 262 265 265 265
	GENERAL PROCEDURES FOR CONNECTING IMPLEMENTS POWER TAKEOFF (PTO) THREE POINT HITCH HITCH OPERATION DRAWBAR PREPARATION ZUIDBERG FRONT HITCH (IF EQUIPPED) REMOTE HYDRAULICS LOADER OPERATION CHEMICAL TANK MOUNTING AUXILIARY POWER CONNECTIONS MONITOR MOUNTING GROUND SPEED SENSOR CONNECTOR TRAILER BRAKE CONNECTOR (IF EQUIPPED) CAB STEPS - IN-FIELD PERFORMANCE DIFFERENTIAL LOCK FWD OPERATION BALLASTING YOUR TRACTOR FOR OPTIMUM PERFORMANCE	175 177 192 208 224 230 235 252 253 255 258 260 262 265 265 268 272
	GENERAL PROCEDURES FOR CONNECTING IMPLEMENTS POWER TAKEOFF (PTO) THREE POINT HITCH HITCH OPERATION DRAWBAR PREPARATION ZUIDBERG FRONT HITCH (IF EQUIPPED) REMOTE HYDRAULICS LOADER OPERATION CHEMICAL TANK MOUNTING AUXILIARY POWER CONNECTIONS MONITOR MOUNTING GROUND SPEED SENSOR CONNECTOR TRAILER BRAKE CONNECTOR (IF EQUIPPED) CAB STEPS - IN-FIELD PERFORMANCE DIFFERENTIAL LOCK FWD OPERATION BALLASTING YOUR TRACTOR FOR OPTIMUM PERFORMANCE WHEEL SLIP	175 177 192 208 224 230 252 253 255 258 260 262 265 268 272 300
	GENERAL PROCEDURES FOR CONNECTING IMPLEMENTS POWER TAKEOFF (PTO) THREE POINT HITCH HITCH OPERATION DRAWBAR PREPARATION ZUIDBERG FRONT HITCH (IF EQUIPPED) REMOTE HYDRAULICS LOADER OPERATION CHEMICAL TANK MOUNTING AUXILIARY POWER CONNECTIONS MONITOR MOUNTING GROUND SPEED SENSOR CONNECTOR TRAILER BRAKE CONNECTOR (IF EQUIPPED) CAB STEPS - IN-FIELD PERFORMANCE DIFFERENTIAL LOCK FWD OPERATION BALLASTING YOUR TRACTOR FOR OPTIMUM PERFORMANCE WHEEL SLIP POWER HOP	175 177 192 208 224 230 252 253 255 258 260 262 265 268 272 300 302
	GENERAL PROCEDURES FOR CONNECTING IMPLEMENTS POWER TAKEOFF (PTO) THREE POINT HITCH HITCH OPERATION DRAWBAR PREPARATION ZUIDBERG FRONT HITCH (IF EQUIPPED) REMOTE HYDRAULICS LOADER OPERATION CHEMICAL TANK MOUNTING AUXILIARY POWER CONNECTIONS MONITOR MOUNTING GROUND SPEED SENSOR CONNECTOR TRAILER BRAKE CONNECTOR (IF EQUIPPED) CAB STEPS - IN-FIELD PERFORMANCE DIFFERENTIAL LOCK FWD OPERATION BALLASTING YOUR TRACTOR FOR OPTIMUM PERFORMANCE WHEEL SLIP POWER HOP TIRE COMBINATIONS FOR FWD TRACTORS	175 177 192 208 224 230 235 252 253 255 258 259 260 262 265 268 272 300 302 303
	GENERAL PROCEDURES FOR CONNECTING IMPLEMENTS POWER TAKEOFF (PTO) THREE POINT HITCH HITCH OPERATION DRAWBAR PREPARATION ZUIDBERG FRONT HITCH (IF EQUIPPED) REMOTE HYDRAULICS LOADER OPERATION CHEMICAL TANK MOUNTING AUXILIARY POWER CONNECTIONS MONITOR MOUNTING GROUND SPEED SENSOR CONNECTOR TRAILER BRAKE CONNECTOR (IF EQUIPPED) CAB STEPS - IN-FIELD PERFORMANCE DIFFERENTIAL LOCK FWD OPERATION BALLASTING YOUR TRACTOR FOR OPTIMUM PERFORMANCE WHEEL SLIP POWER HOP TIRE COMBINATIONS FOR FWD TRACTORS STEERING AND OSCILLATION STOPS	175 177 192 208 224 230 235 252 253 255 258 269 262 265 268 272 300 302 303 315
	GENERAL PROCEDURES FOR CONNECTING IMPLEMENTS POWER TAKEOFF (PTO) THREE POINT HITCH HITCH OPERATION DRAWBAR PREPARATION ZUIDBERG FRONT HITCH (IF EQUIPPED) REMOTE HYDRAULICS LOADER OPERATION CHEMICAL TANK MOUNTING AUXILIARY POWER CONNECTIONS MONITOR MOUNTING GROUND SPEED SENSOR CONNECTOR TRAILER BRAKE CONNECTOR (IF EQUIPPED) CAB STEPS - IN-FIELD PERFORMANCE DIFFERENTIAL LOCK FWD OPERATION BALLASTING YOUR TRACTOR FOR OPTIMUM PERFORMANCE WHEEL SLIP POWER HOP TIRE COMBINATIONS FOR FWD TRACTORS STEERING AND OSCILLATION STOPS FRONT WHEEL FENDERS (IF EQUIPPED)	175 177 192 208 224 230 235 252 253 255 258 260 262 265 265 268 272 300 302 303 315 328
	GENERAL PROCEDURES FOR CONNECTING IMPLEMENTS POWER TAKEOFF (PTO) THREE POINT HITCH HITCH OPERATION DRAWBAR PREPARATION ZUIDBERG FRONT HITCH (IF EQUIPPED) REMOTE HYDRAULICS LOADER OPERATION CHEMICAL TANK MOUNTING AUXILIARY POWER CONNECTIONS MONITOR MOUNTING GROUND SPEED SENSOR CONNECTOR TRAILER BRAKE CONNECTOR (IF EQUIPPED) CAB STEPS - IN-FIELD PERFORMANCE DIFFERENTIAL LOCK FWD OPERATION BALLASTING YOUR TRACTOR FOR OPTIMUM PERFORMANCE WHEEL SLIP POWER HOP TIRE COMBINATIONS FOR FWD TRACTORS STEERING AND OSCILLATION STOPS	175 177 192 208 224 230 235 252 253 255 260 262 265 268 272 300 302 303 315 328 343

REAR WHEEL TREAD SETTING - DUALS	350
REAR WHEEL TREAD SETTING - TRIPLES	
8 - LUBRICATION/FILTERS/FLUIDS/MAINTENANCE	363
ENVIRONMENT	
PLASTIC AND RESIN PARTS	
TOOL BOX (IF EQUIPPED)	
SYSTEM CAPACITIES	
HOOD ACCESS	
LUBRICATION/MAINTENANCE CHART	
9 - ELECTRICAL SYSTEM	427
SPECIFICATIONS	427
RADIO REGIONAL PROGRAMMING	
BATTERY SYSTEM SERVICING	
BULB AND LAMP REPLACEMENT	
10 - SPECIFICATIONS	451
DIESEL ENGINE	451
POWER TRAIN	452
TRAVEL SPEEDS	455
MAXIMUM RECOMMENDED OPERATING WEIGHTS	460
INDEX	463
DELIVERY REPORT	469
FIRST 50-HOUR SERVICE	473

TO THE OWNER

This manual contains important information about the safe operation, adjustment and routine maintenance of your New Holland TG Series Tractor. The manual is divided into ten sections as outlined in the General Table of Contents Page(s). Refer to the Detail Index at the end of this manual for locating specific items about your tractor.

DO NOT operate or permit anyone to operate or service this machine until you or the other persons have red this manual. Use only trained operators who have demonstrated the ability to operate and service this machine correctly and safely.


This Operator's Manual is to be stored in the manual compartment equipped on this machine. Make sure this manual is in good condition. Contact your New Holland dealer to obtain additional manuals. Contact your dealer for any further information or assistance about your machine. Your dealer has New Holland approved service parts. Your dealer has technicians with special training that know the best methods of repair and maintenance for your tractor.

STATEMENT OF TRACTOR INTENDED USE

The New Holland TG Series Tractor, with standard equipment and authorized attachments, is intended to be used for customary farming, land leveling and related agriculture operations. Do not use this machine for any purpose other than those described in this manual.

Consult an authorized dealer or New Holland on changes, additions or modifications that can be required for this machine to comply with various regulations and safety requirements. Unauthorized modifications will cause serious injury or death. Anyone making such unauthorized modifications is responsible for the consequences.


OPERATOR MANUAL STORAGE COMPARTMENT

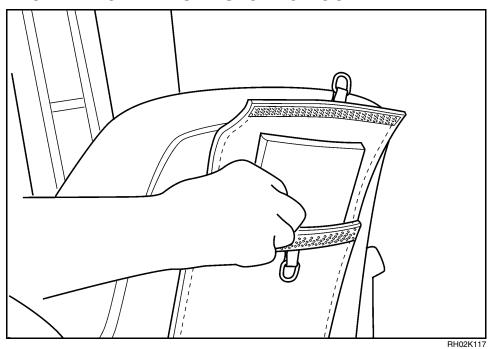

Keep the Operator's Manual in the storage compartment provided on your tractor. The Operator's Manual must be available for use by all operators.

NOTE: The right hand and left hand side of the tractor used in this manual are the same as your right hand and left hand when sitting in the tractor seat looking forward.

TG SERIES TRACTOR

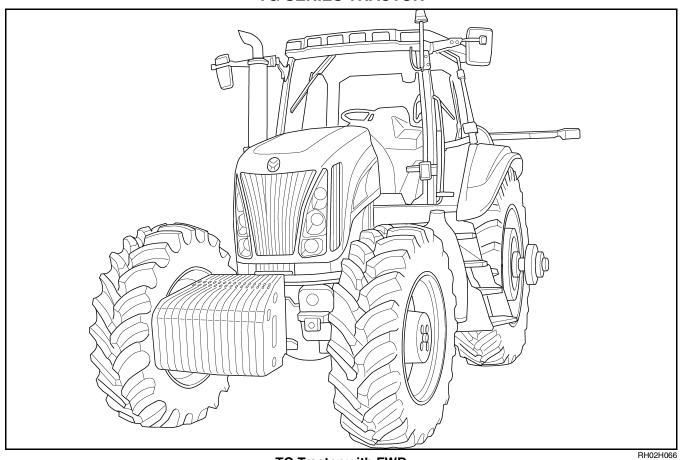

TG Tractor with FWD



TG SuperSteer Tractor with Front and Rear Duals

RH02H314

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com