


# **400 Series Tractor**

## **Operators Manual**

9-251

Reprinted



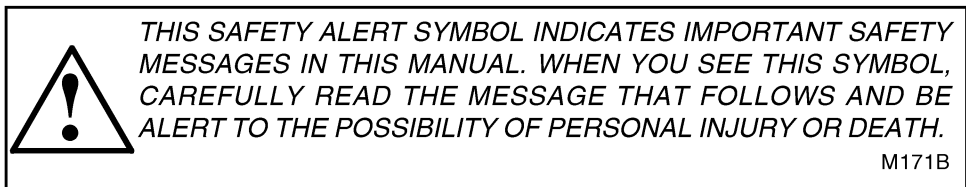




If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



# WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

## **TO PURCHASERS OF CASE DIESEL TRACTORS**

Congratulations on your purchase of a Case Diesel Tractor and welcome to the ever-increasing number of satisfied Case Owners.

The dependability and economical performance of your new Case Tractor will prove that you were wise in making this choice.

The organization back of your tractor has been building quality farm equipment for more than a century. Your Case Diesel Tractor was built in one of the largest and best equipped plants in the world. In this factory quality materials, precision machinery, high grade workmanship, thorough inspection, and complete testing equipment are combined to give you the best in performance and economical operation.

The care which you give your tractor will have a great deal to do with the service and satisfaction you get from it. By observing the precautions and suggestions in this manual, your Case Tractor will serve you well for many years. Make this manual your guide. Should you need information not covered here, or should your tractor require special servicing, contact your Case Dealer. He has trained men who are kept informed on the best methods of servicing Case Farming Equipment in the field or in his shop.

 
When it becomes necessary, after long use, to replace certain parts on your tractor, be sure to use only genuine Case Parts, which insure proper fit and continued good service. These may be obtained from your Case Dealer. It is always helpful to provide him with the Model and Serial Number of your tractor in addition to a description and part number, if available, of the parts required.

# TABLE OF CONTENTS

	Page
<b>Serial Number</b> .....	7
<b>General Specifications</b> .....	9
<b>Diesel Engine Fuel</b> .....	27
Fuel Specifications for a Suitable Number 2 Diesel Fuel.....	29
Fuel Recommendations for Cold Weather Operation.....	32
Fuel Handling and Storage.....	33
<b>Lubrication</b> .....	39
Recommended Lubricants and Approximate Capacities.....	41
Lubricating Point Locations.....	42 thru 48
Engine Lubrication.....	49
Transmission Lubrication.....	55
Rear Axle Drive Housing (Model 403 High Clearance).....	57
Hydraulic Control System.....	58
Independent Power Take-Off.....	60
Rockshaft Housing.....	60
Hydraulic Power Steering.....	61
<b>Operating Instructions</b> .....	63
Run-In Procedure.....	64
Operating Controls and Instrument Guide.....	66 thru 71
Diesel Engine Starting Procedure.....	72
Stopping Engine.....	73
Cold Weather Operation.....	74
Ether Starting Aid.....	76
Gear Selection.....	78, 79
Differential Brakes.....	80
Tire Sizes, Pressures, Rear Wheel and Front End Weights.....	81, 82
Drawbar.....	83
Belt Pulley.....	86
Independent Power Take-off.....	89
Constant Hydraulic Control.....	93
Eagle Hitch.....	100

## TABLE OF CONTENTS Continued

	Page
Rear Wheel Tread Spacing.....	105
Front Wheel Tread Spacing.....	114
Implement Warning Lamp.....	120
<b>Important Checks During Operation.....</b>	<b>122</b>
<b>Service Suggestions.....</b>	<b>125</b>
<b>Preventive Maintenance.....</b>	<b>137</b>
Fuel System.....	139
Bleeding Fuel System.....	142
Checking Condition of Fuel Filters.....	144
Servicing Fuel Filters.....	148
Air Cleaner.....	152
Crankcase Breathers.....	156
Cooling System.....	157
Power Steering Drive Belt.....	163
Starting and Lighting Equipment.....	164
Adjusting Differential Brakes.....	172
Foot Clutch Adjustment.....	173
Hand Clutch Adjustment.....	174
Valve Tappet Clearance.....	176
Power Take-off Clutch Adjustment.....	178
Repacking and Adjusting Front Wheel, Bearings.....	180
Storing the Tractor.....	183
<b>Index.....</b>	<b>185</b>
<b>Warranty.....</b>	<b>187</b>

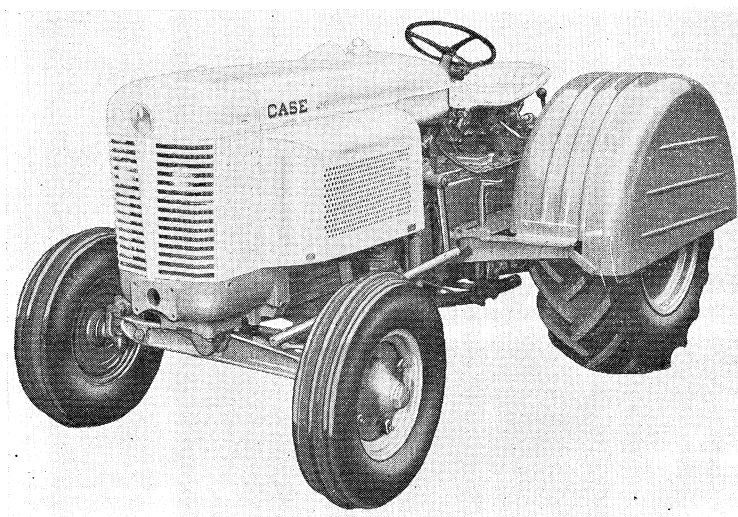


Model 405 Orchard-Grove Tractor



**MODEL 401  
GENERAL  
PURPOSE  
TRACTOR**

**3** *Tractors In* **1**

 
Adjustable  
Front Axle  
Attachment

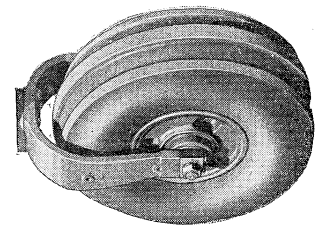


Single  
Front  
Wheel  
Attachment

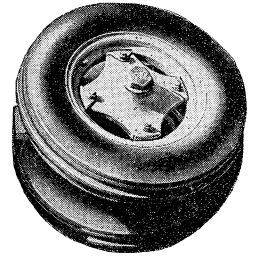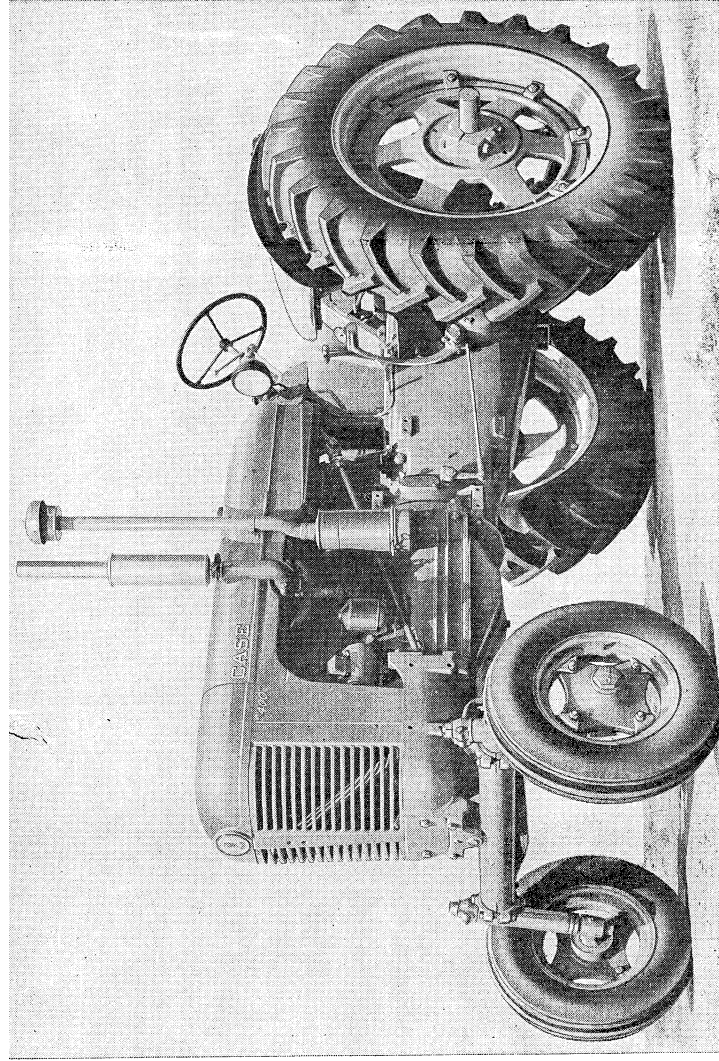  


Dual  
Front  
Wheel  
Attachment

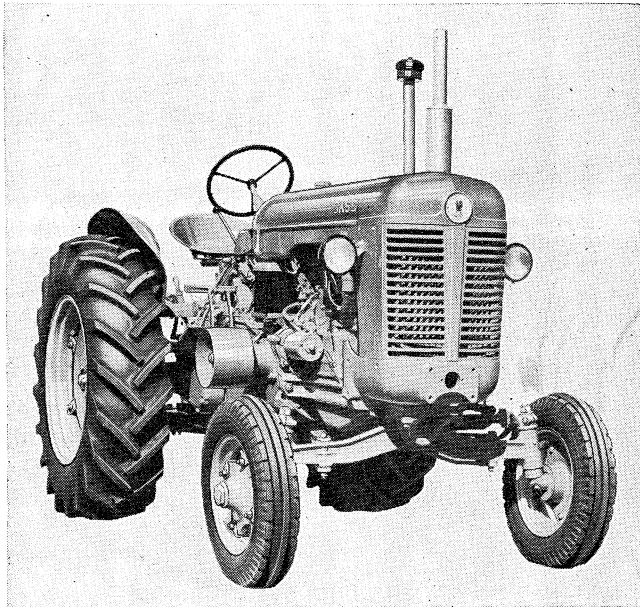 

**Model 400 Standard 4 Wheel Tractor**

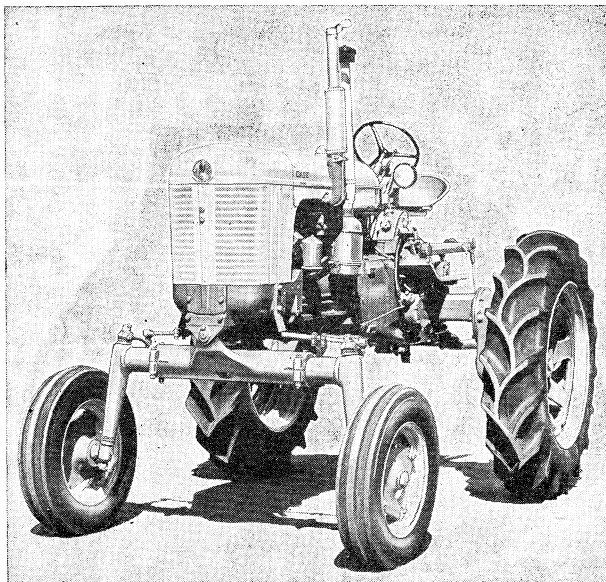 

**Model 403 High Clearance Tractor**

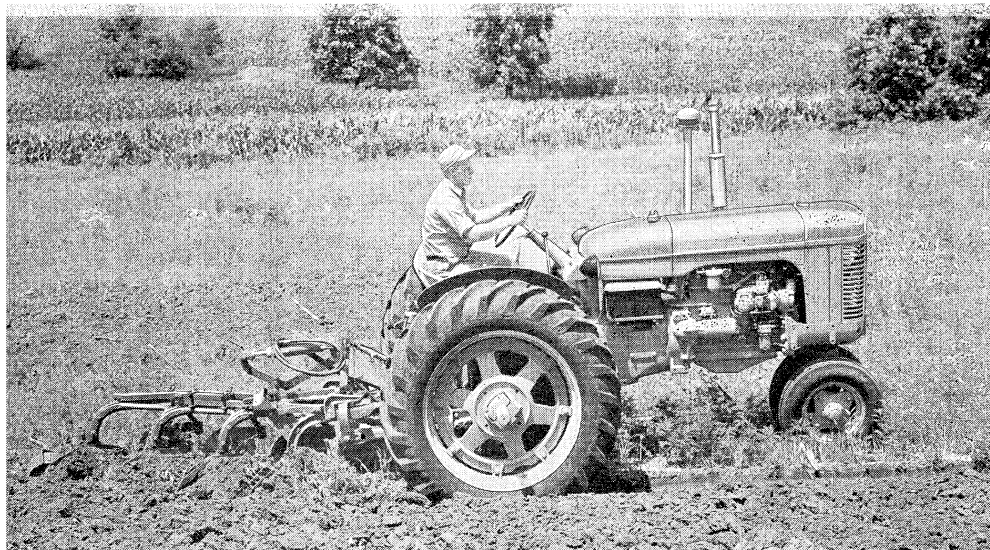 

## INTRODUCTION

Case 400 Series *Super Diesel* Tractors are powered by a rugged four cylinder full diesel engine that is noted for its quiet operating characteristics and economy of operation.

The "Powr-range" transmission, 8 Speeds forward and 2 reverse, provides a full range of working speeds to handle all implements and tools in any type or condition of soil. The high speed (8th) road gear brings your fields closer to the farm yard in terms of non productive time spent on the road.

Advanced engineering includes the CASE POWRCEL combustion system which produces all of the available power out of each charge of injected fuel. To protect the closely fitted precision parts, the finest filters available have been provided to clean the fuel, the intake air and the crankcase oil.

The four basic rules of Diesel Engine operation, which are the deciding factors in determining the service life and economy of operation that you will receive from your tractor, are as follows:

### 1. CLEAN FUEL

- (a) Use only Number 2 Diesel Fuel that meets the specifications listed in this manual.
- (b) Follow the instructions regarding the recommended precautions when handling and storing fuel.

### 2. AIR CLEANER

Service the air cleaner regularly.

### 3. CRANKCASE OIL

Diesel Engines require the use of a heavy duty engine oil. Select oil that meets the proper service designations recommended in the lubrication section of this manual.



Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)